

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

710547 <u>End Table</u>

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A TOP 1PC

B LEG 4PCS

C BOTTOM SHELF


HARDWARE IDENTIFICATION

1	BOLT (Ø1/4" x 2-1/4" - BLK)	12PCS
2	LOCK WASHER (1/4 x 16mm - BLK)	12PCS
3	FLAT WASHER (Ø1/4" - BLK)	12PCS
4	ALLEN WRENCH (4mm - BLK)	1PC


ASSEMBLY INSTRUCTIONS



STEP 1

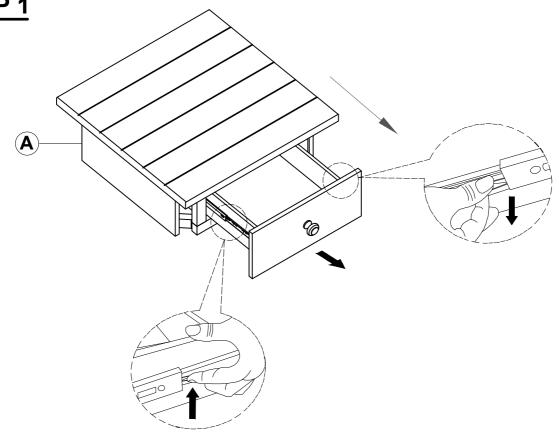


STEP 2

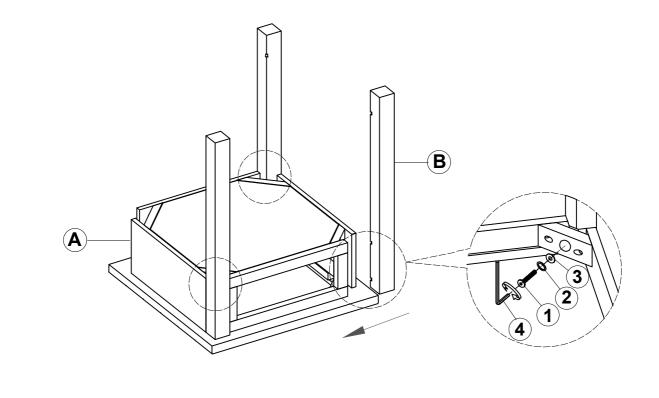


ASSEMBLY INSTRUCTIONS

COASTER

STEP 3

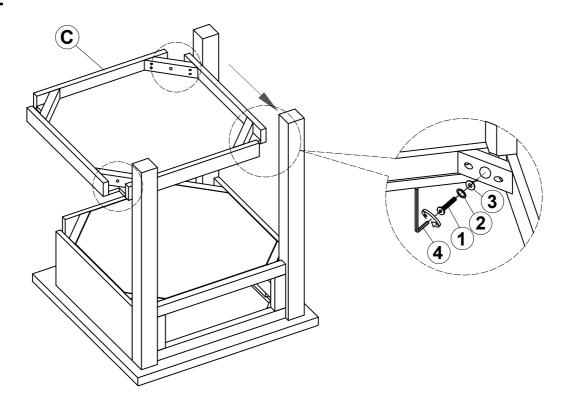


STEP 4

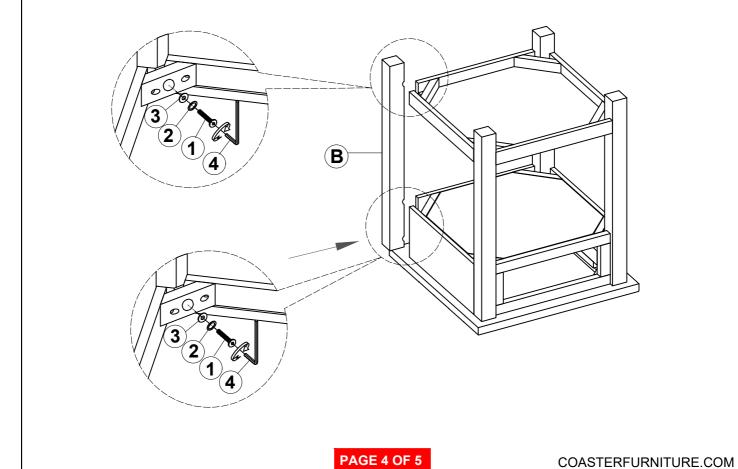


ASSEMBLY INSTRUCTIONS

COASTER

STEP 5

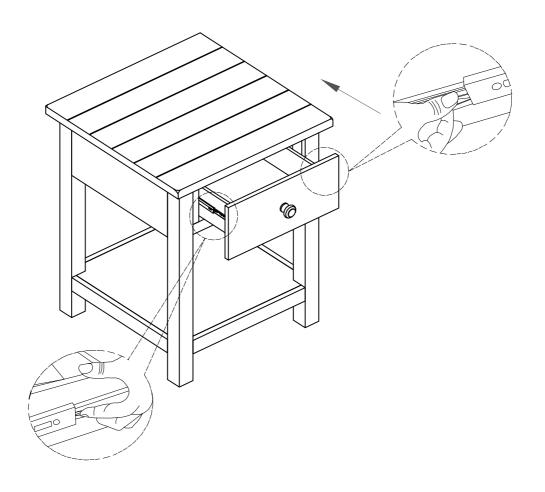

STEP 6 COMPLETE

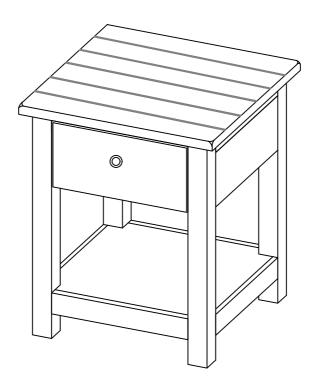




PAGE 5 OF 5

COASTERFURNITURE.COM



Inner Size of Drawer: 10.50"W x 13.50"D X 2.75"H X 0.25"T

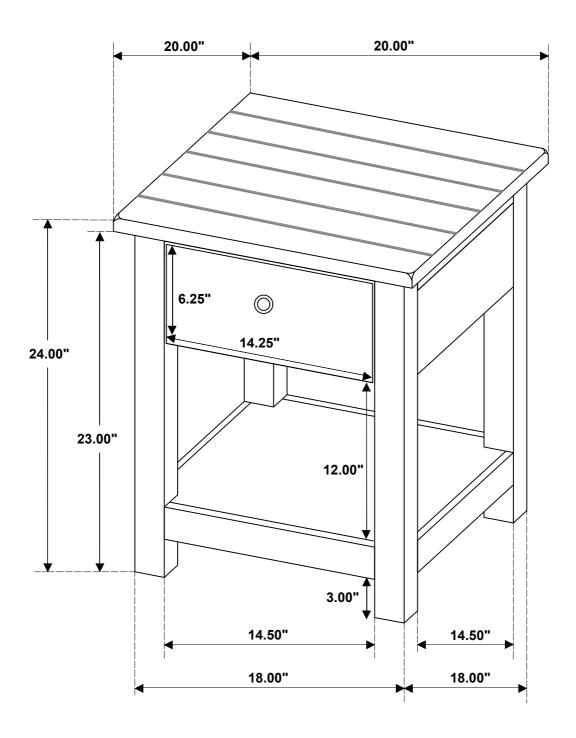

Note: Dimension tolerance ± 5%



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

710548 <u>Coffee Table</u>

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A TOP 1PC

B LEG 4PCS

C BOTTOM SHELF 1PC


HARDWARE IDENTIFICATION

1	BOLT (Ø1/4" x 2-1/4" - BLK)	8PCS
2	LOCK WASHER (1/4 x 16mm - BLK)	8PCS
3	FLAT WASHER (Ø1/4" - BLK)	8PCS
4	ALLEN WRENCH (4mm - BLK)	1PC


ASSEMBLY INSTRUCTIONS

STEP 1



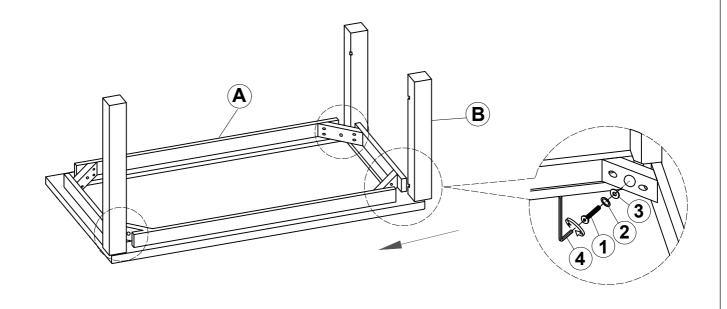


STEP 2

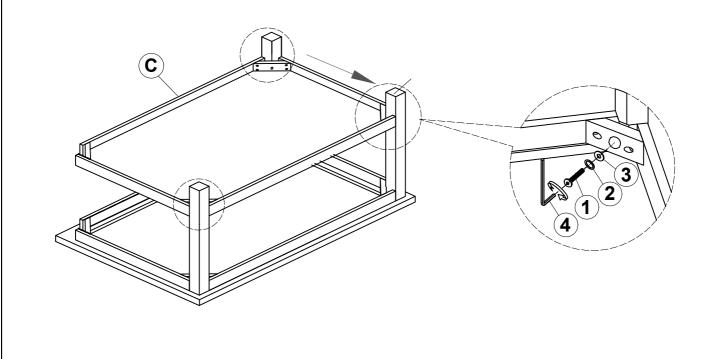


ASSEMBLY INSTRUCTIONS

COASTER

STEP 3

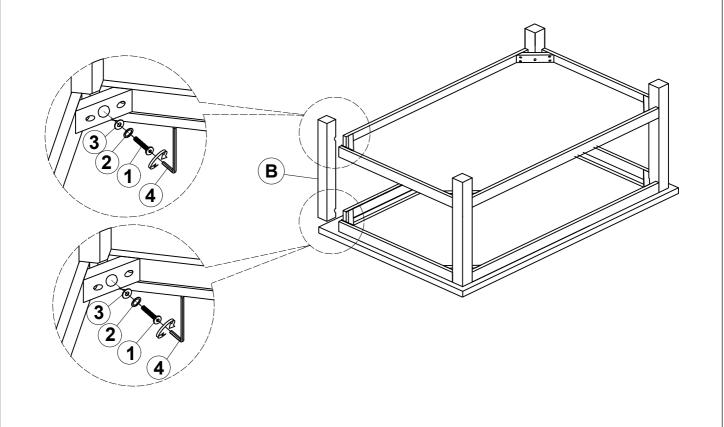


STEP 4 COMPLETE

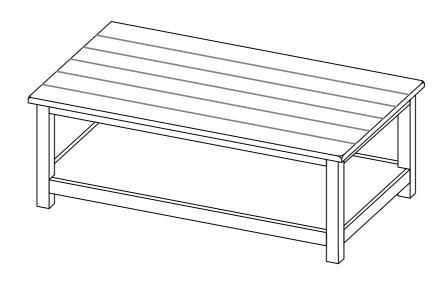

COASTERFURNITURE.COM

PAGE 4 OF 4



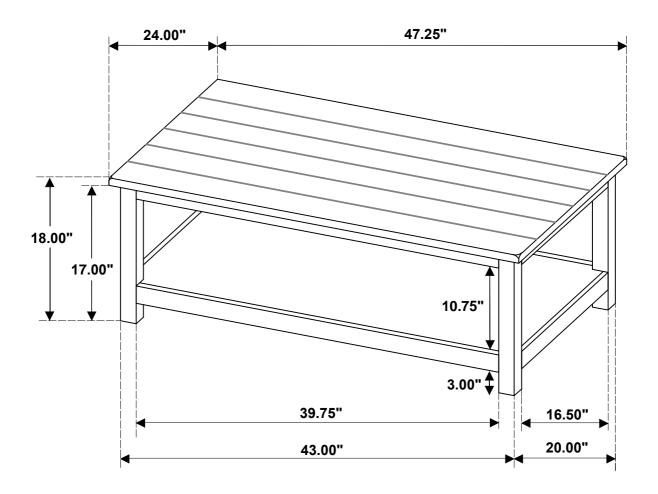

Note: Dimension tolerance ± 5%