

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

722938(B1&B2) Coffee Table

ITEM: 722938(B1&B2)

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A TOP



1PC

B2 (BOX 2)

B LEG FRAME



3PCS

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 722938(B1)

1 BOLT WITH WASHER (M6 x 50mm - BLK)

12PCS

2 ALLEN WRENCH (M4 x 55mm - GD)


1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ASSEMBLY INSTRUCTIONS STEP 1 B Protective surface

STEP 2 COMPLETE

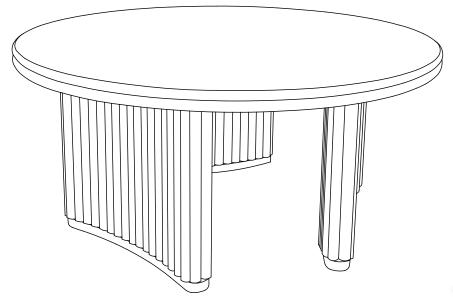




COASTERFURNITURE.COM

ITEM: **722938(B1&B2)**



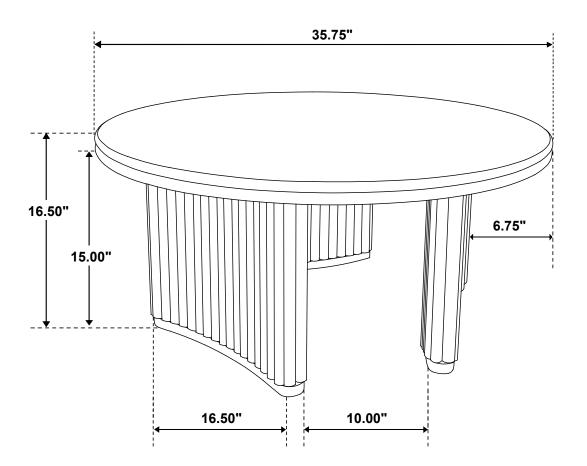

Note: Dimension tolerance ±5%