



Getting started:

- Make sure to have enough space to unpack your turntable.
- Always unpack and setup in a clean environment.
- Important for warranty: Do not throw packaging away.
- Setup is demonstrated with T1 Phono SB.

T1 Setup Guide

Please read before unpacking.

- 1** Unpack all items from accessory bag.



- a) Connect it E (RCA cable)
Detachable cable only included with T1 Phono SB & T1 BT
- b) Drive belt
- c) Stylus pressure gauge
- d) Adapter for 7" singles


- 2** Remove dust cover carton from the box.



- 3** Lift the wrapped turntable out of the box.



- 4** Remove the protection covering.

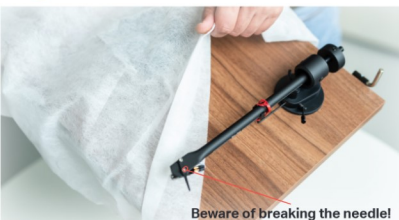

- 5** Unpack the power supply.



- 6** Unpack the platter.



- 7** Put the drive belt on the pulley & sub-platter.




- 8** Put the platter on the turntable.



- 9** Put the felt mat on the platter.



- 10** Remove tonearm twist tie.


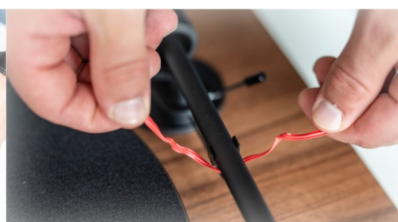


- 11** Connect to your hifi-system and enjoy your music!



T1


Connect to any amp with integrated phono amplifier or use an external phono preamp.
Pre-mounted Connect it E (RCA cable) included.
Possible set: Pro-Ject Speaker Box 5 (bookshelf speaker) and Pro-Ject MaIA S2 (stereo integrated amplifier).

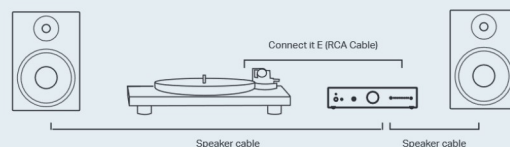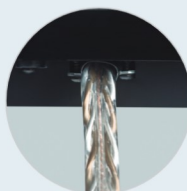

T1 Phono SB

Select **Line Out** to connect to an amplifier without a phono stage. Select **Phono Out** if you have an amplifier with a phono stage.

Possible set: Pro-Ject Speaker Box 5 (bookshelf speaker) and Pro-Ject Stereo Box S2 (smallest audiophile integrated amp).

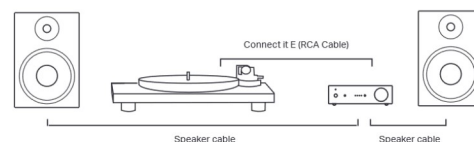

T1 BT

Select **Line Out** to connect to an amplifier without a phono stage. Select **Phono Out** if you have an amplifier with a phono stage.



