



Assembly Instruction

Item No: U7005-13P1

NIKKO GLIDER RECLINER W/PWR FR

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose during shipment. Identify and count all items and compare with the parts list shown below.


It is recommended to have two people during unpacking and assembling of the backs and base of the furniture out from the box.

Parts List			
NO.	DESCRIPTION	SKETCH	QTY
A	Seat		1PC
B	Backrest		1PC
C	Left Side Facing (LSF) Wing		1PC
D	Right Side Facing (RSF) Wing		1PC
E	Power Cable 29V		1PC


WEIGHT CAPACITY (PER SEAT) : 350 LBS

Please follow the drawings below to assemble the item

STEP 1: Cut the zip ties on the frame at the bottom of the seat with scissors.

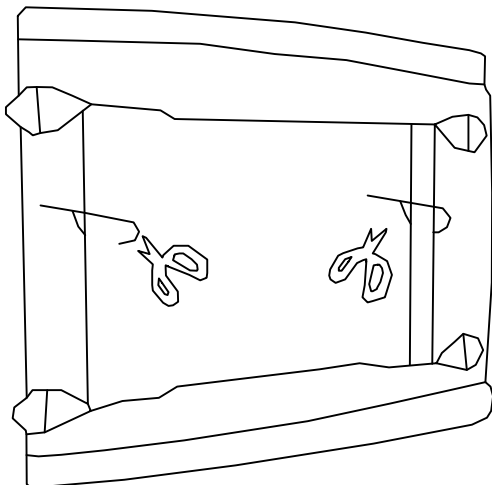

STEP 2: Install the backrest (B) by align and insert the metal bracket on the backrest (B) to the metal bracket of the seat (A). Please make sure the brackets are inserted all the way and secured into position.

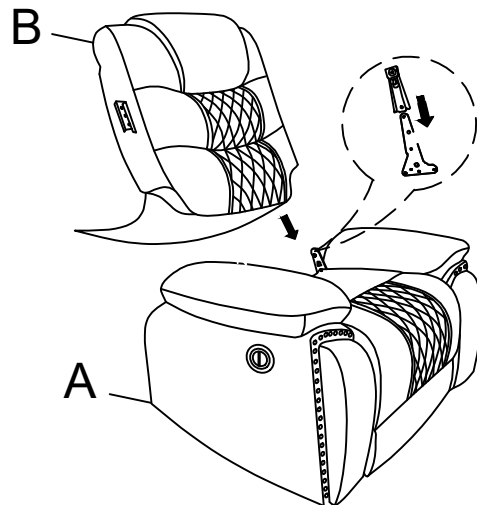




Assembly Instruction


Item No: U7005-13P1

NIKKO GLIDER RECLINER W/PWR FR

STEP 3: Install the wings by inserting metal bracket on the LSF wing (C) and RSF wing (D) into the metal bracket on the backrest (B). Please make sure the brackets are inserted all the way and secured into position.

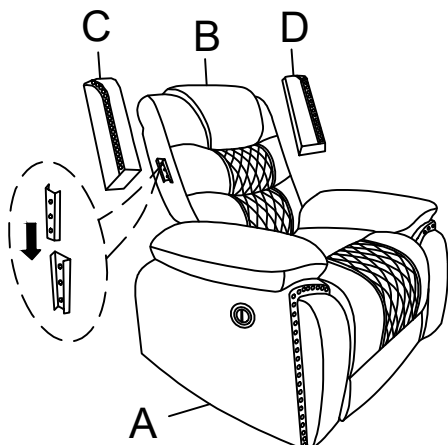

STEP 4: Connect the Power Cable 29v (E) to cable on seat (A).

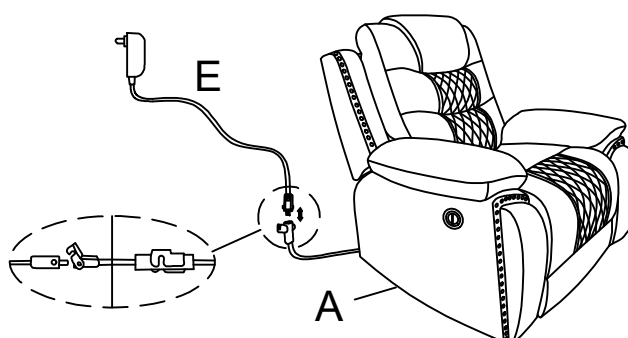

STEP 5: Open/close the footrest by pressing the power buttons.

