

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

106596 Dining Side Chair

REVISION 0: 05/08/2019 REVISION 1: 11/30/2023

**PAGE 1 OF 7** 

### **ASSEMBLY INSTRUCTIONS**



### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### **WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.





15 MINUTES

## **PARTS IDENTIFICATION**

Α	RIGHT LEG FRAME		1PC
В	LEFT LEG FRAME		1PC
С	FRONT RAIL (LONG)		1PC
D	BACK RAIL (SHORT)		1PC
E	BACKREST	0.0	1PC
F	BACK CUSHION (SMALL)		1PC
G	SEAT CUSHION (BIG)		1PC

### **ASSEMBLY INSTRUCTIONS**



#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### **WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

### HARDWARE IDENTIFICATION

1	ALLEN WRENCH (M4 x 110mm - BLK)		1PC
2	BOLT (M6 x 40mm - RBW)		4PCS
3	LOCK WASHER (1/4" - BLK)		4PCS
4	LONG PAN HEAD SCREW (#8 x 1-1/4" - BLK)	<b>(1)</b>	4PCS
5	SHORT PAN HEAD SCREW (#8 x 1" - BLK)	<b>#)::::::::::::::::::::::::::::::::::::</b>	4PCS
6	CAM BOLT (263.20.847 - ZB)	<b>D</b>	2PCS
7	WOOD DOWEL (M8 x 30mm)		1PC


### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item. Quantities shown are for one chair.


### **ASSEMBLY INSTRUCTIONS**



### STEP 1

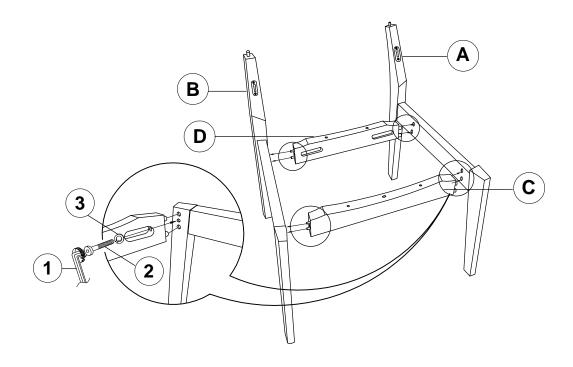

## STEP 2

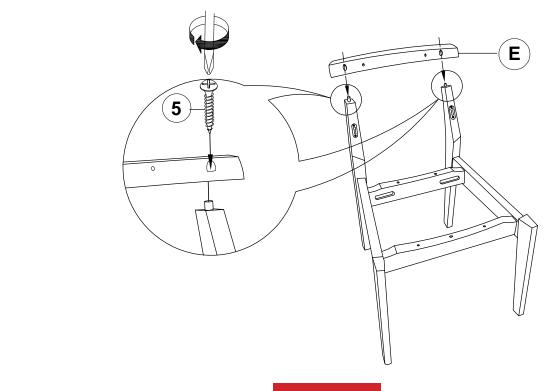


PAGE 4 OF 7


### **ASSEMBLY INSTRUCTIONS**



## STEP 3

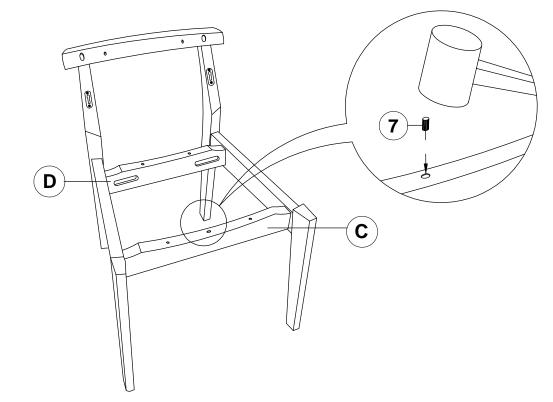


## STEP 4

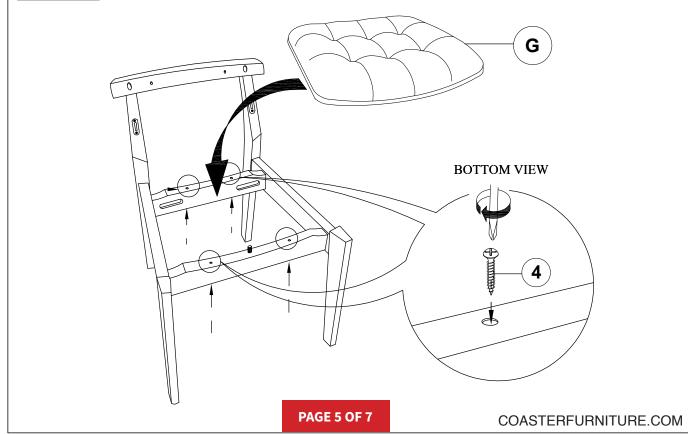


### **ASSEMBLY INSTRUCTIONS**



### STEP 5

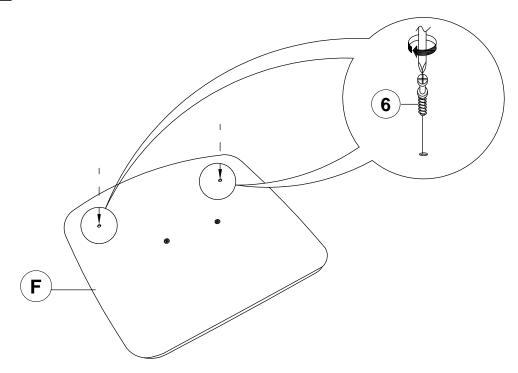

### STEP 6

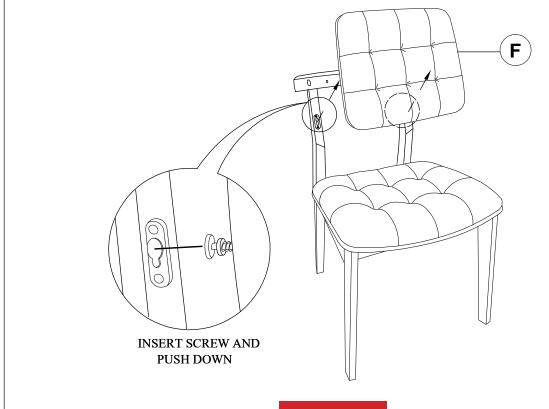


PAGE 6 OF 7


### **ASSEMBLY INSTRUCTIONS**



## STEP 7

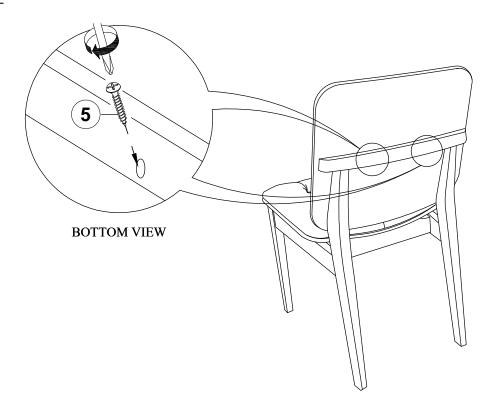


# STEP 8 COMPLETE

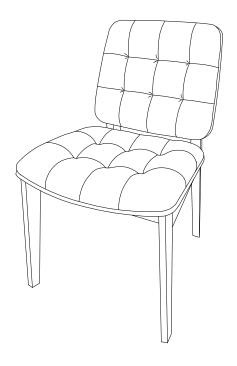





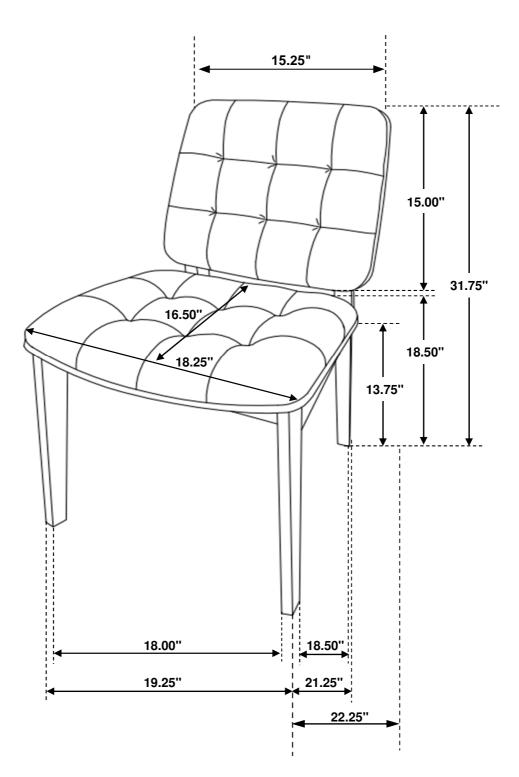

Note: Dimension tolerance ±5%



# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

# 122180BG Dining Table

REVISION 0: 03/01/2024 REVISION 1: 03/11/2024 REVISION 2: 04/22/2024 REVISION 3: 08/27/2025

PAGE 1 OF 4

### ITEM: 122180BG

### **ASSEMBLY INSTRUCTIONS**



### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

### **PARTS IDENTIFICATION**

AN LEG SUPPORT FRAME

BN LEG

4PCS

CN DISC WITH BOLT

D GLASS TOP FROM BOX ITEM# CB48RD-6

1PC

### **HARDWARE IDENTIFICATION**

1	BOLT (M6 x 60mm - RBW)	8PCS
2	LOCK WASHER (1/4" - RBW)	8PCS
3	FLAT WASHER (1/4" - RBW)	8PCS
4	ALLEN WRENCH (4mm - BLK)	1PC

#### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# IТЕМ:**122180ВG**


# COASTER

### **ASSEMBLY INSTRUCTIONS**

## STEP 1

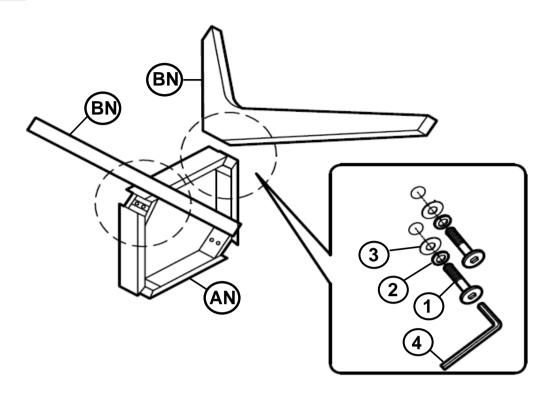

## STEP 2

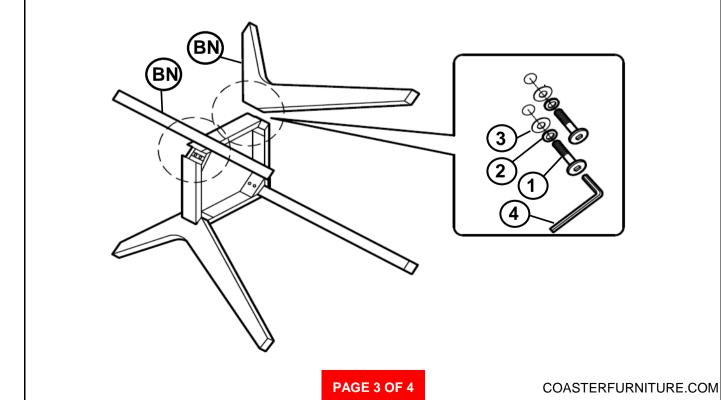


# ITEM: 122180BG


# COASTER

### **ASSEMBLY INSTRUCTIONS**


## STEP 3

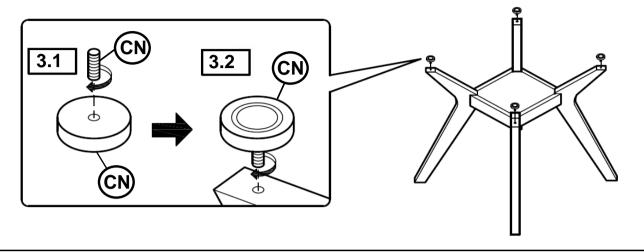

## STEP 4

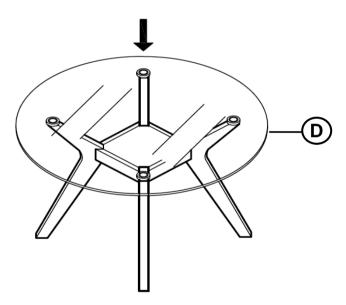


# STEP 5 COMPLETE

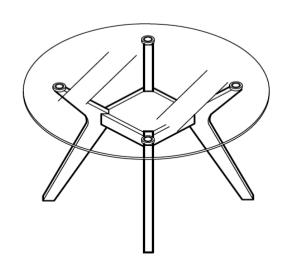



# ITEM:**122180BG**



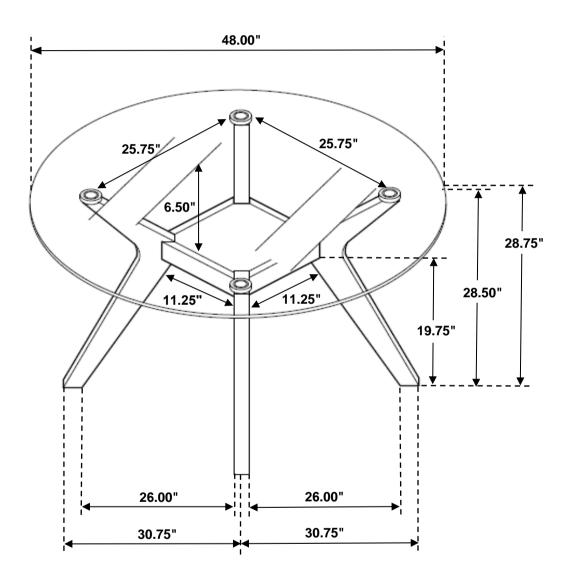

Note: Dimension tolerance ±5%