 







CROSLEY

FURNITURE


Entryway Shelf
CF6028

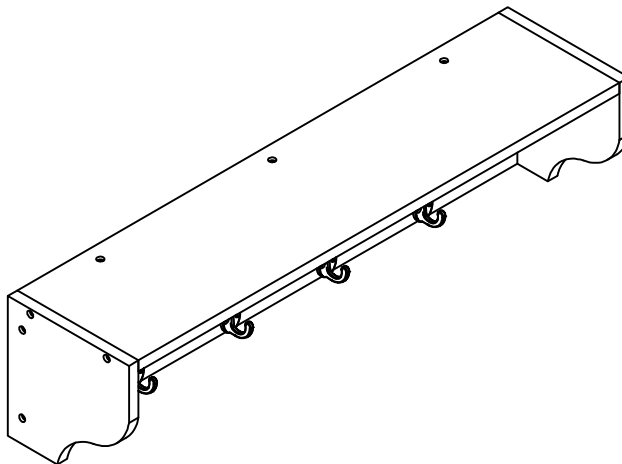

     PART LIST

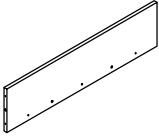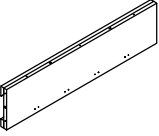A2	B2	C2	D2	E2
				
Top Panel	Left Panel	Right Panel	Hanger Rod	Back Panel
1 PC	1 PC	1 PC	1 PC	1 PC

 
HARDWARE LIST

#1		#2		#3		#4		#5	
Ø3.5*15mm		Ø4*30mm				Ø4*50mm		Ø8*30mm	
Short Screw		Screw		Wall Anchor		Long Screw		Wood Dowel	
8 PCS (Extra 1)		11 PCS (Extra 1)		3 PCS		3 PCS		6 PCS	

#6	
Hook	
4 PCS	

ADDITIONAL TOOLS (Not Provided)

 
Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

 Step 1. Attach hooks (part #6) to back panel (part E2) using short screws (part #1) and phillips head screwdriver.

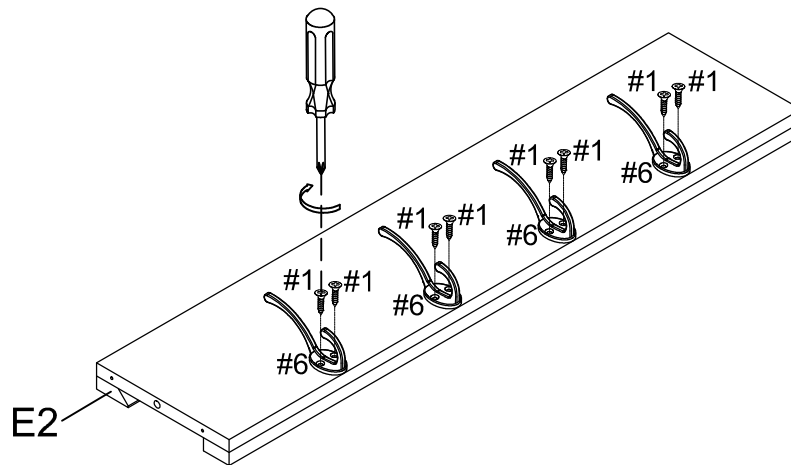


#1		x 8
#6		x 4

 Step 2. Attach top panel (part A2) to back panel (part E2) using wood dowels (part #5), screws (part #2) and phillips head screwdriver.

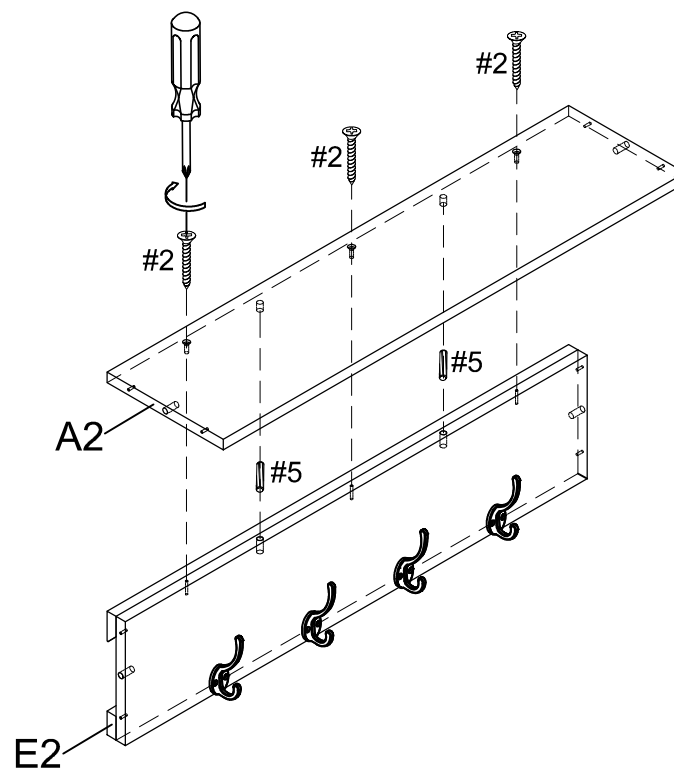


#2		x 3
#5		x 2

Step 3. Attach left panel (part B2) and right panel (part C2) to assembled unit (parts A2 & E2) using wood dowels (part #5), screws (part #2) and phillips head screwdriver.

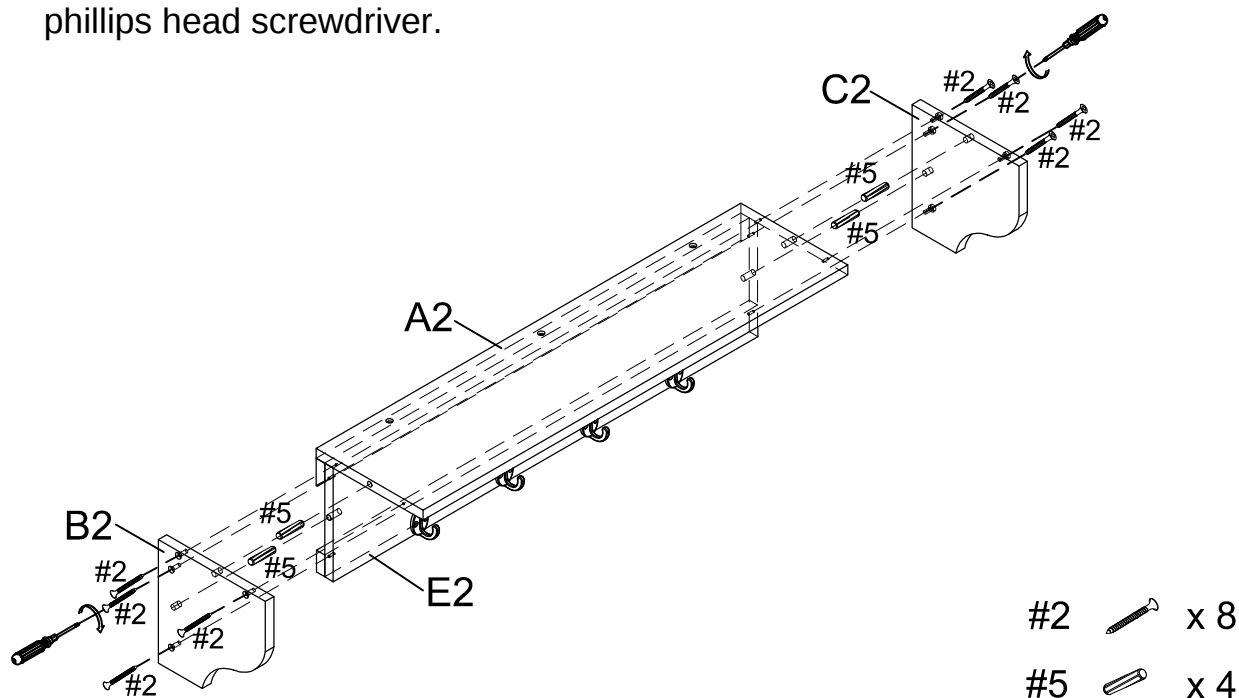

Step 4. Hold hanger rod (part D2) in the desired location of shelf. The hanger rod (part D2) will be about 2" lower than the top of shelf. Level hanger rod (part D2) using a leveler to make sure it's oriented correctly. Use a pencil to mark wall anchors location using hanger rod (part D2) screw holes as a guide. Drill three 11/32" holes in these marked spots and tap wall anchors (part #3) into the drilled holes. Secure hanger rod (part D2) to wall anchors (part #3) using long screws (part #4) and phillips head screwdriver.

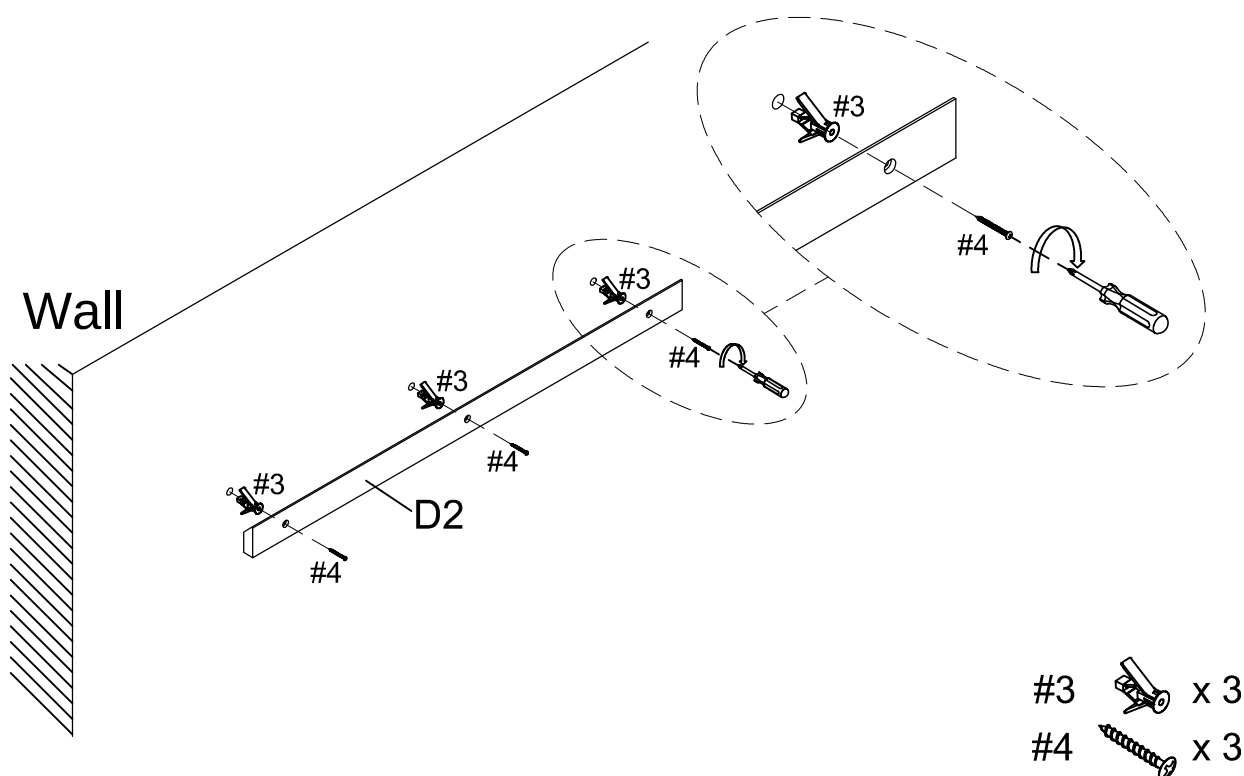

Step 5. Mount shelf by hooking back panel (part E2) onto hanger rod (part D2).

