 

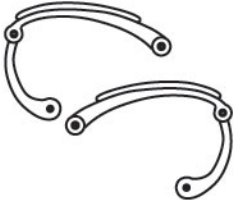
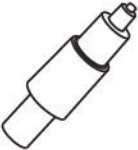
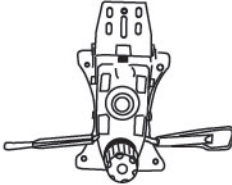


IMPORTANT NOTICE:
HARDWARE PACKAGE IS ATTACHED
ON THE BOTTOM OF SEAT CUSHION.

MODEL:B8871

(1)x1	(2)x1	(3)x1 (L)x1 (R)															
																	
Back Cushion	Seat Cushion	Left- Arm Right- Arm															
(4)x 5	(5)x1	(6)x1															
																	
Caster	Gas Lift W/ Cover	Base															
(7)x1	<table><tr><td>(A)x4</td><td></td><td>M8*22 Mechanism Screw</td></tr><tr><td>(B)x3</td><td></td><td>M8*18 L-bar Screw</td></tr><tr><td>(C)x4</td><td></td><td>M8*55 Arm Screw</td></tr><tr><td>(D)x4</td><td></td><td>Arm Cap</td></tr><tr><td>(E)x1</td><td></td><td>Allen Key</td></tr></table>		(A)x4		M8*22 Mechanism Screw	(B)x3		M8*18 L-bar Screw	(C)x4		M8*55 Arm Screw	(D)x4		Arm Cap	(E)x1		Allen Key
(A)x4		M8*22 Mechanism Screw															
(B)x3		M8*18 L-bar Screw															
(C)x4		M8*55 Arm Screw															
(D)x4		Arm Cap															
(E)x1		Allen Key															
	Mechanism																

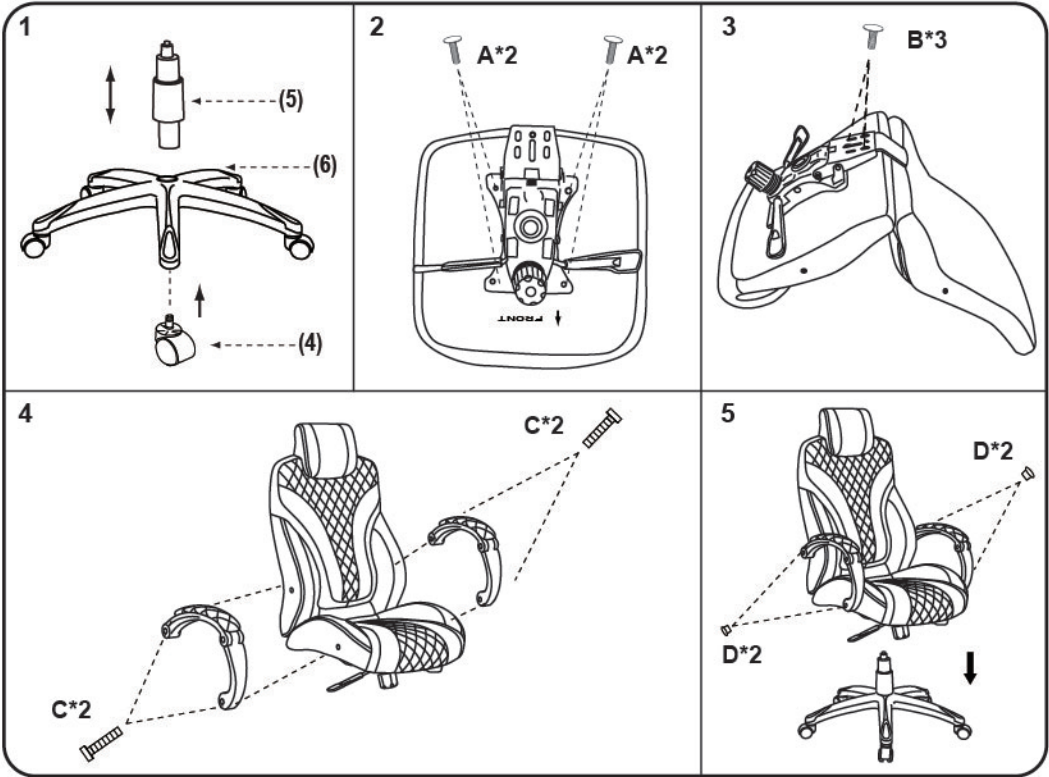

Insert and loosely tighten all screws. When assembly is completed, fully tighten all screws before using.
This chair is only intended for sitting. Any other use will void the warranty.

