

# GEOHOME®

ART WITH AN ATTITUDE

## ASSEMBLY INSTRUCTIONS

Item No : B118-23 + B118-50

Description : DRESSER + MIRROR

MODEL : B118-23 + B118-50


REVISION : C

### Component List

No	Descriptions	Qty
A	Mirror	1
B	Dresser	1
C	Mirror Support	2

### Hardware List

No	Descriptions	Qty
1	JCBC M6 x 40mm	8
2	Spring Washer Ø1/4"	8
3	Flat Washer Ø1/4" x 20mm	8
4	L Key M4	1

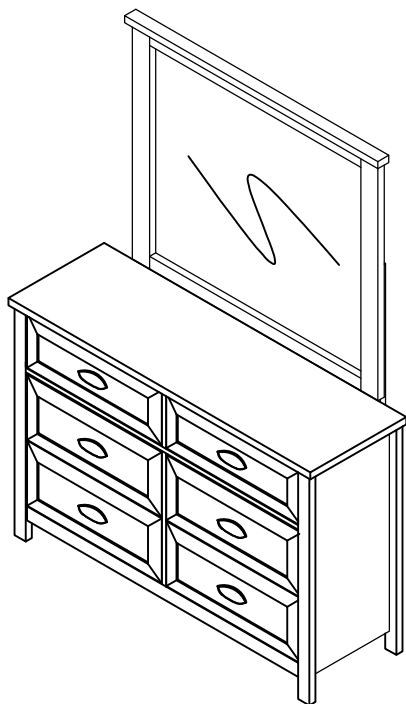


ASSEMBLY COMPLETED

### IMPORTANT NOTE :

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children !
- Tighten screws periodically ! With the use of this product bolts and screws may become loose over time !
- Don't attempt to modify parts !

### STEP 1

Attach Mirror Support (C) to the Mirror back (A), then tighten with JCBC screw (1), Spring Washer (2) and Flat Washer (3) and fully tighten with L Key M4 (4).

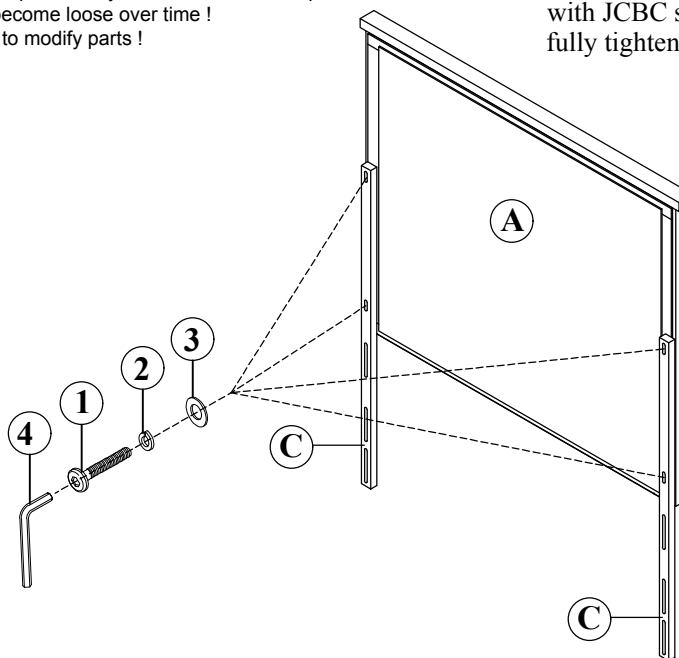

### STEP 2

Place the mirror with support on the top of Dresser (B). Then align center as shown and tighten with JCBC screw (1), Spring Washer (2), Flat Washer (3). Tighten using L Key M4 (4).

