UTTERMOST ASSEMBLY INSTRUCTIONS



P.O. Box 558 | 3325 Grassy Hill Road | Rocky Mount, VA | 24151 www.uttermost.com

UTTERMOST ASSEMBLY INSTRUCTIONS

IMPORTANT: FOR A SAFE AND SECURE INSTALLATION, THESE FIXTURES MUST BE INSTALLED BY MEANS OF SUPPORTS THAT ARE INDEPENDENT OF THE OUTLET BOX. YOU SHOULD USE A QUALIFIED ELECTRICIAN TO INSTALL THIS FIXTURE.

NOTE: ALWAYS TURN POWER OFF BEFORE INSTALLING LIGHTING FIXTURES!

Installation (see Fig. A)

- 1. Disconnect power at main electrical panel before installation.
- 2. Drill two holes (diameter 8mm) on the ceiling (Load-bearing structure) reference mounting strap and knock the expansion bolt into the holes.
- 3. Attach mounting strap to heavy duty electrical box and secure with the washer and nut.
- 4. Assemble the fixture as shown in reference diagram.
- 5. Raise the fixture to ceiling and place the safety cable through the mounting strap and secure with lock and screws.

Wiring (see Fig. B)

- 6. Attach the fixture's wires to the power supply wires from the ceiling. Connect black to black (or smooth); white to white (or ribbed); ground to ground (green or copper). Twist the ends of the wire pairs together, then twist on a wire connector. Make sure all twists are in the same direction.
- 7. Place the canopy on the fixture over the mounting strap and onto the fixture screws, and secure into place using the decorative nuts.





P.O. Box 558 | 3325 Grassy Hill Road | Rocky Mount, VA | 24151 www.uttermost.com