



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

701713
TV Stand

ITEM : 701713

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES


PARTS IDENTIFICATION

A TV STAND

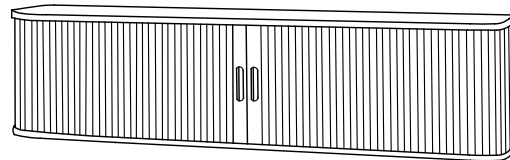

1PC

 
B LEG FRAME



2PCS

HARDWARE IDENTIFICATION

 1 BOLT WITH WASHER
(M6 x 40mm - BLK)



10PCS

2 FLAT HEAD SCREW
(M5 x 32mm - BLK)



4PCS

3 ALLEN WRENCH
(M4 x 55mm - GD)



1PC

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM : 701713

ASSEMBLY INSTRUCTIONS




STEP 1

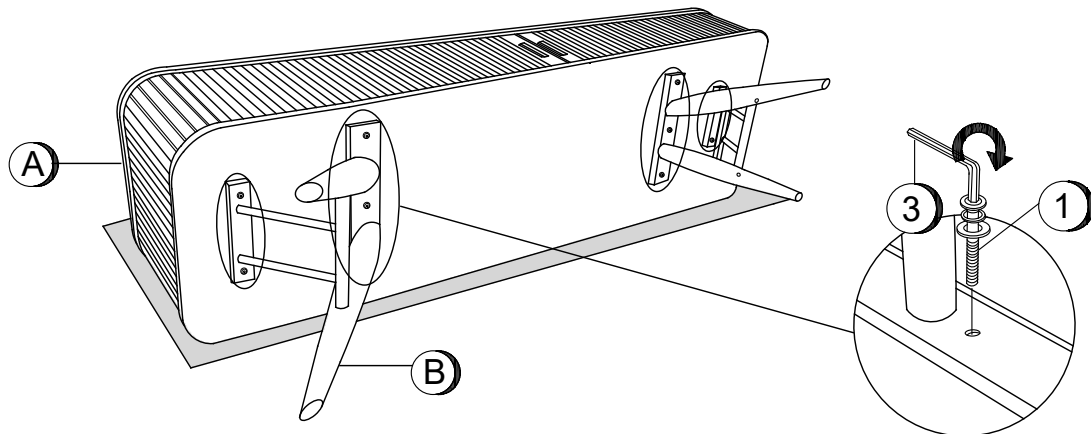

BOTTOM VIEW



STEP 2

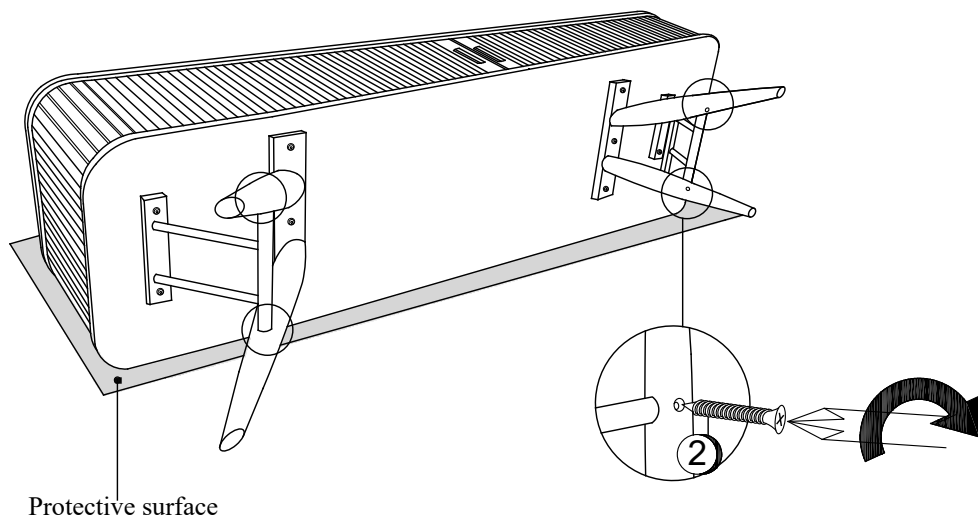



Protective surface

STEP 3

COMPLETE

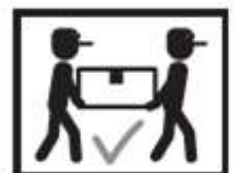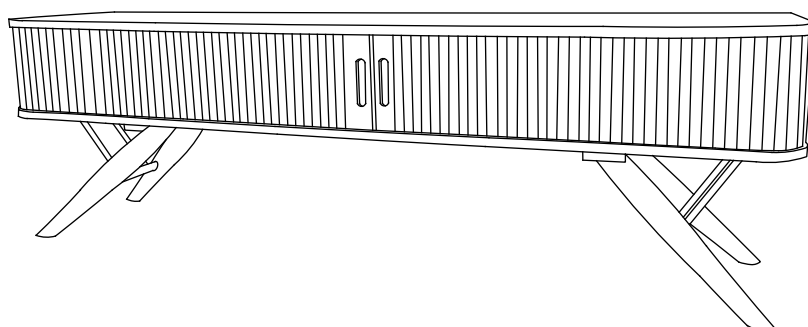

ITEM : 701713

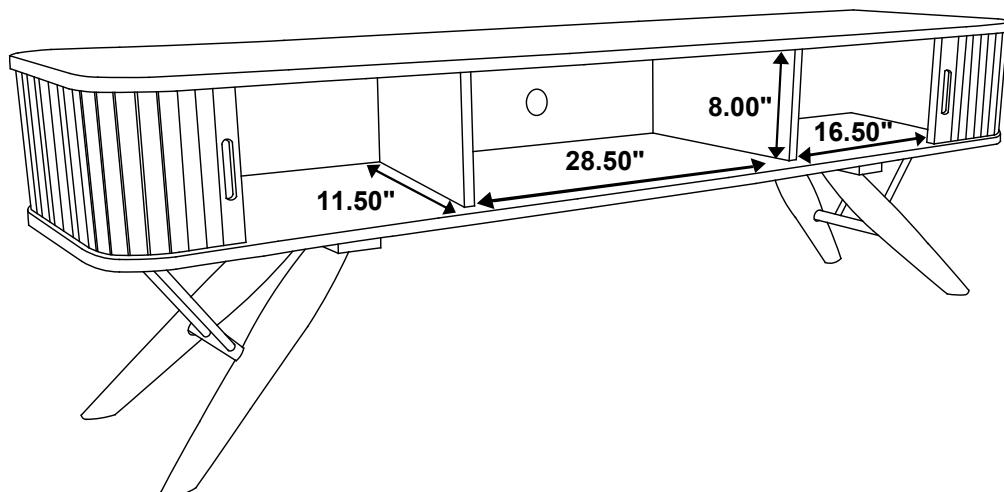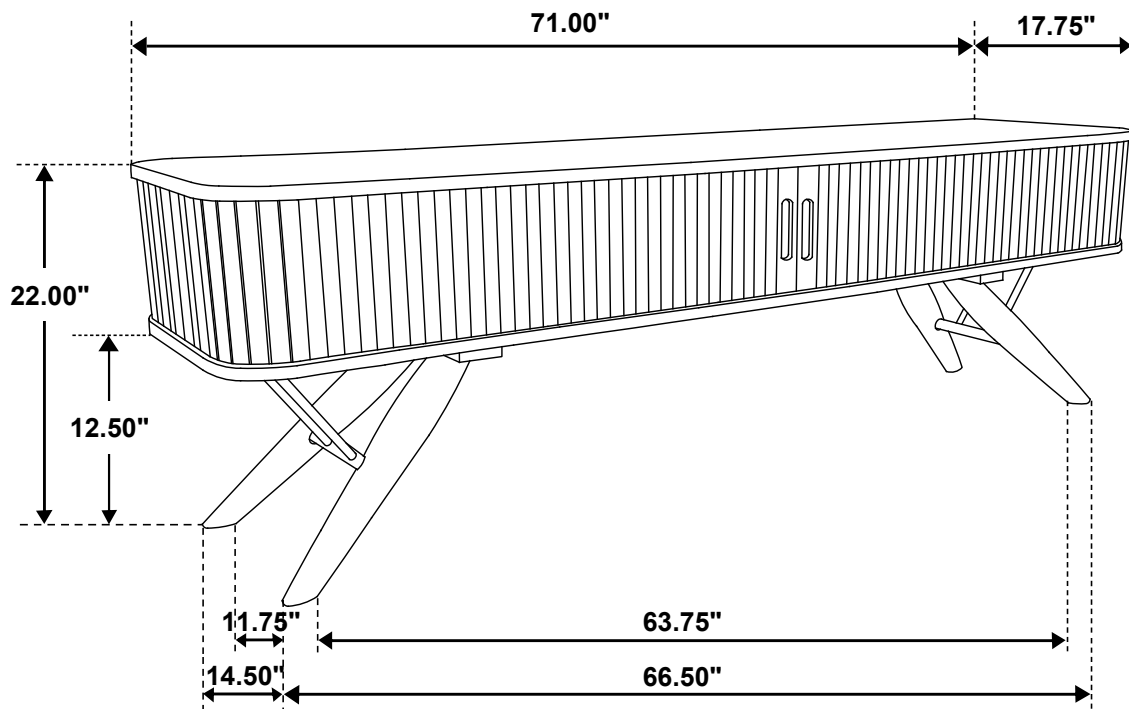

Note : Dimension tolerance $\pm 5\%$