


VICTROLA

**QUICK START
GUIDE**


HI-RES

VPT-1500
VPT-2500

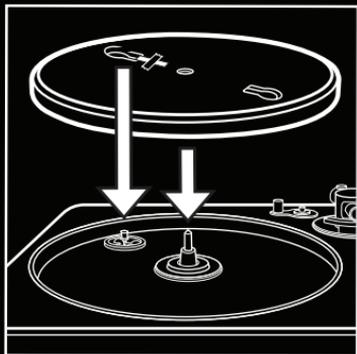

**SET THE SLIPMAT ASIDE
AND PLACE THE PLATTER
ONTO THE TURNTABLE.**


**ROTATE THE PLATTER
UNTIL THE HOLE WITH THE
GUIDE STRING IS DIRECTLY
OVER THE MOTOR SPINDLE
AS SHOWN.**

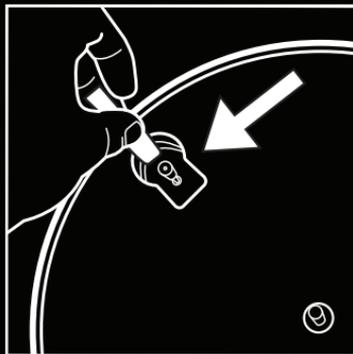


**CAREFULLY REMOVE THE
TAPED GUIDE STRING
AND USE THE STRING TO
STRETCH THE BELT OVER
THE MOTOR SPINDLE.**

**ONCE THE BELT IS
INSTALLED AROUND THE
MOTOR SPINDLE, DISCARD
THE GUIDE STRING AND
PLACE THE SLIPMAT ON
THE PLATTER.**


TURNTABLE SETUP

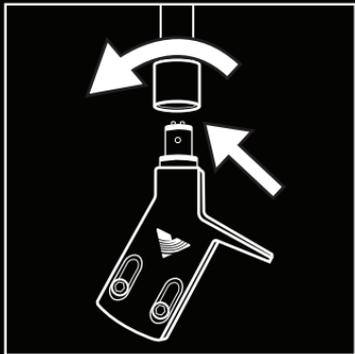

**INSERT THE HEADSHELL
INTO THE TONEARM
AND TIGHTEN THE
TONEARM COLLAR
COUNTER-CLOCKWISE
UNTIL THE HEADSHELL
IS SECURE.**

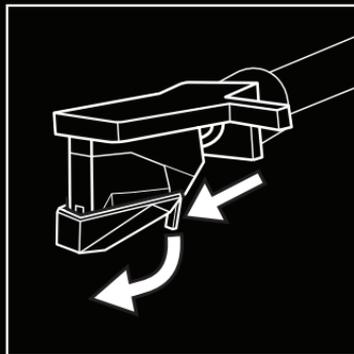


**ORTOFON 2M SERIES:
(VPT-2500)
PUSH THE STYLUS
COVER TAB DOWN /
FORWARD AND GENTLY
SLIDE THE COVER OFF.**

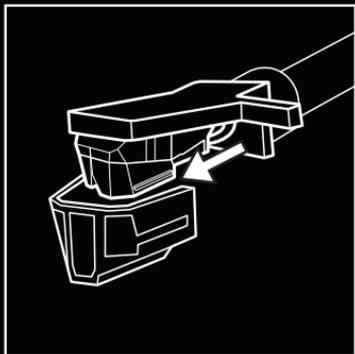

AUDIO TECHNICA
VM95 SERIES:
(VPT-1500)

**GENTLY PULL THE COVER
OFF OF THE CARTRIDGE.**

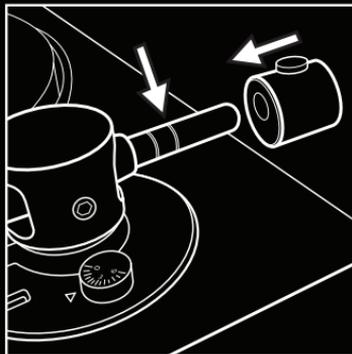


**SLIDE THE COUNTERWEIGHT
ONTO THE TONEARM
UNTIL THE FRONT OF THE
COUNTERWEIGHT IS
ALIGNED WITH THE BACK
GROOVE ON THE TONEARM.**

**Note: Remove the two
foam blocks from the
tonearm before installing
the counterweight.**



**ONCE ALIGNED WITH THE
CORRECT GROOVE, TURN
THE TOP SCREW
CLOCKWISE TO TIGHTEN
THE COUNTERWEIGHT.**

**Note: You may need to
adjust the anti-skate if you
notice distortion, skipping,
or looping during playback.**

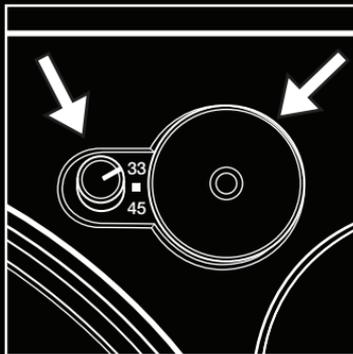

**USE THE SPEED SELECTOR
KNOB TO SELECT YOUR
RECORD SPEED.**

**PLACE THE 45 RPM
ADAPTER ON THE SPINDLE
NEXT TO THE SPEED
CONTROL TO STORE
WHEN NOT IN USE.**

OPERATION GUIDE



POWER ON
single press button



SWITCH OUTPUT
single press button

switch between RCA output
and Bluetooth output



POWER OFF
press and hold button
(1 sec)



LED COLOR GUIDE

RCA MODE

flashes white (3x)
then solid white



BLUETOOTH MODE

Ready To Pair
flashing blue

Connected
solid blue (2 sec)
then solid white



TURNTABLE QUICK START