



# EPSON LS500 PROJECTOR CABINET


MODEL # X3/EPS2/237S




## WARNING

Installation requires two people.

1. Place shelf on the rear shelf peg with the front of the shelf resting on the base.
2. Continuing holding the back end of shelf while a 2nd person sets the projector, centering it on the width of the shelf front with the rear of the projector 1.5" (38mm) in from the shelf edge as shown in figure 1.

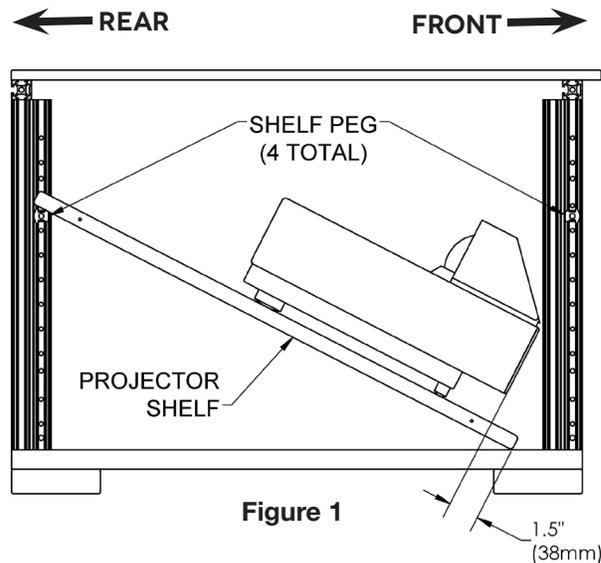

3. Continuing holding the back end of shelf, while a 2nd person lifts the shelf up and slightly forward until the projector lens housing goes through the opening in the top and the shelf can be rested on the front shelf peg as shown in figure 2.

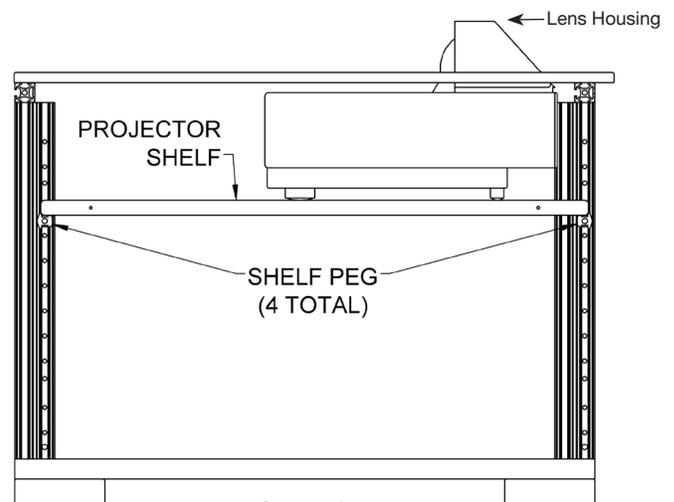

**SALAMANDER**  
DESIGNS

### LIMITED WARRANTY

Salamander is proud to stand behind our products with industry-leading warranties. Should you ever encounter any problem with your Salamander product, let us know. We are here to make it right. 1.800.535.5659 - 860.761.9500

Full warranty including limitations and warranty claim information may be found at <http://www.salamanderdesigns.com/customerservice/warranty>

## Reverse Door (Speaker Grill to Bottom of Door)

Remove the four screws from the Hinge Base as shown below.

Leaving the hinges and base attached to the door, remove the four screws from the hinge base as shown below, starting from the bottom and working up.

**Note the location of the hole positions used as removing.**

Flip the door and attach to the Right Post as it was removed from the Left Post.

Minor door alignment may be necessary, please follow cabinet instruction steps to make these adjustments.

