 


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

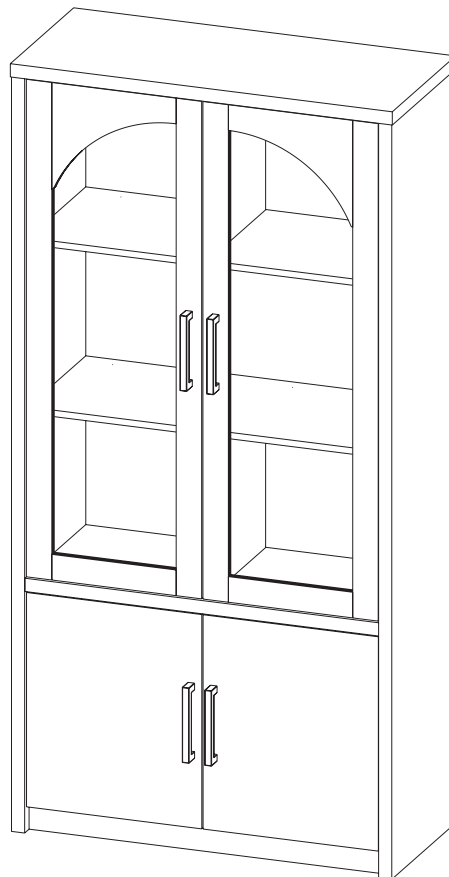

Fine Furniture for every stage of life

950432 **TALL ACCENT CABINET**

ITEM:950432

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

60 MINUTES












PARTS IDENTIFICATION

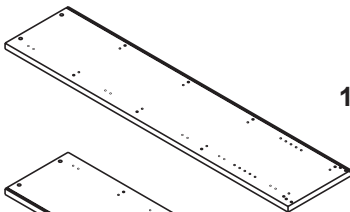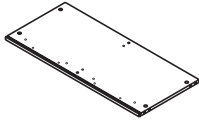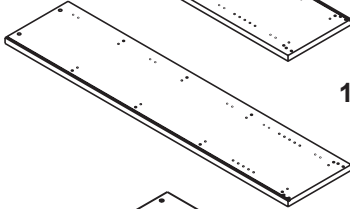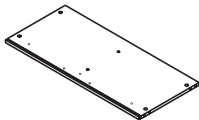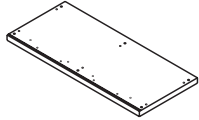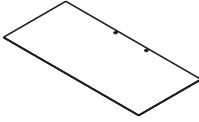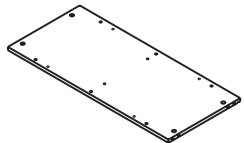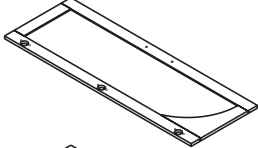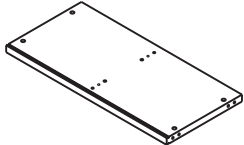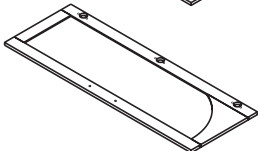A	LEFT SIDE PANEL		1 PC	J	MIDDLE PANEL		1 PC
B	RIGHT SIDE PANEL		1 PC	K	LONG DECORATIVE STRIP		1 PC
C	LOWER DIVIDER PANEL		1 PC	L	UPPER CROSS PANEL		1 PC
D	UPPER DIVIDER PANEL		2 PCS	M	TOP PANEL		1 PC
E	LOWER FRONT TOP BAR		2 PCS	N	UPPER BACK PANEL		3 PCS
F	BOTTOM PANEL		1 PC	O	LOWER BACK PANEL		2 PCS
G	ADJUSTABLE SHELF		2 PCS	P	LEFT DOOR		1 PC
H	LOWER CROSS PANEL		1 PC	Q	RIGHT DOOR		1 PC
I	SHORT DECORATIVE STRIP		4 PCS	R	LOWER DOOR		2 PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

           ITEM: **950432****HARDWARE IDENTIFICATION****Z**


NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	11	BOLT M4x25mm BLK		8 PCS
2	WOODEN DOWEL Ø8 x 30mm		46 PCS	12	BACK PANEL SUPPORT		6 PCS
3	CAM BOLT Ø7 x 35.5mm SR		30 PCS	13	BACK PANEL SUPPORT SCREW Ø3 x 19mm SR		6 PCS
4	CAM LOCK Ø15 x 12mm SR		30 PCS	14	LED LIGHT		5 PCS
5	SCREW Ø4.5x42mm SR		6 PCS	15	LED FIXING PLATE		10 PCS
6	PLASTIC FEET Ø15mm		4 PCS	16	GLIDES SCREW Ø 3x12mm BLK		10 PCS
7	PIN FOR ADJUSTABLE SHELF Ø4.9 x 15mm SR		8 PCS	17	CABLE HOLDER		1 PC
8	HINGE Ø35mm SR		10 PCS	18	STICKER Ø20mm		5 PCS
9	HINGE SCREW Ø4 x 15mm SR		40 PCS	19	STICKER Ø15mm		2 PCS
10	HANDLE L= 160mm BLK		4 PCS	20	SCREW Ø4.3x35mm SR		11 PCS

Z8, Z10, Z14 not included in blister packaging.**NOTE:**


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **950432**

 STEP 1

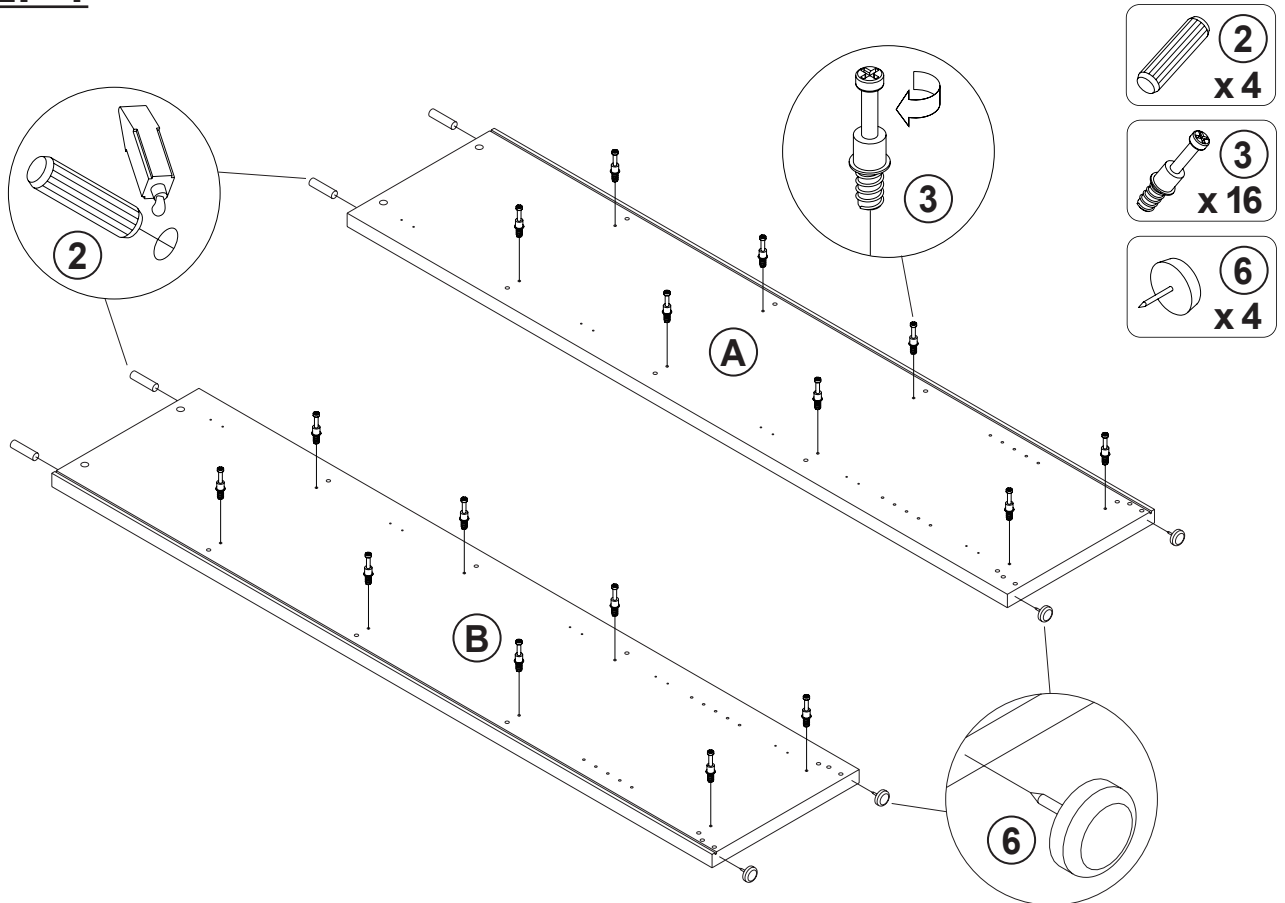

 
STEP 2

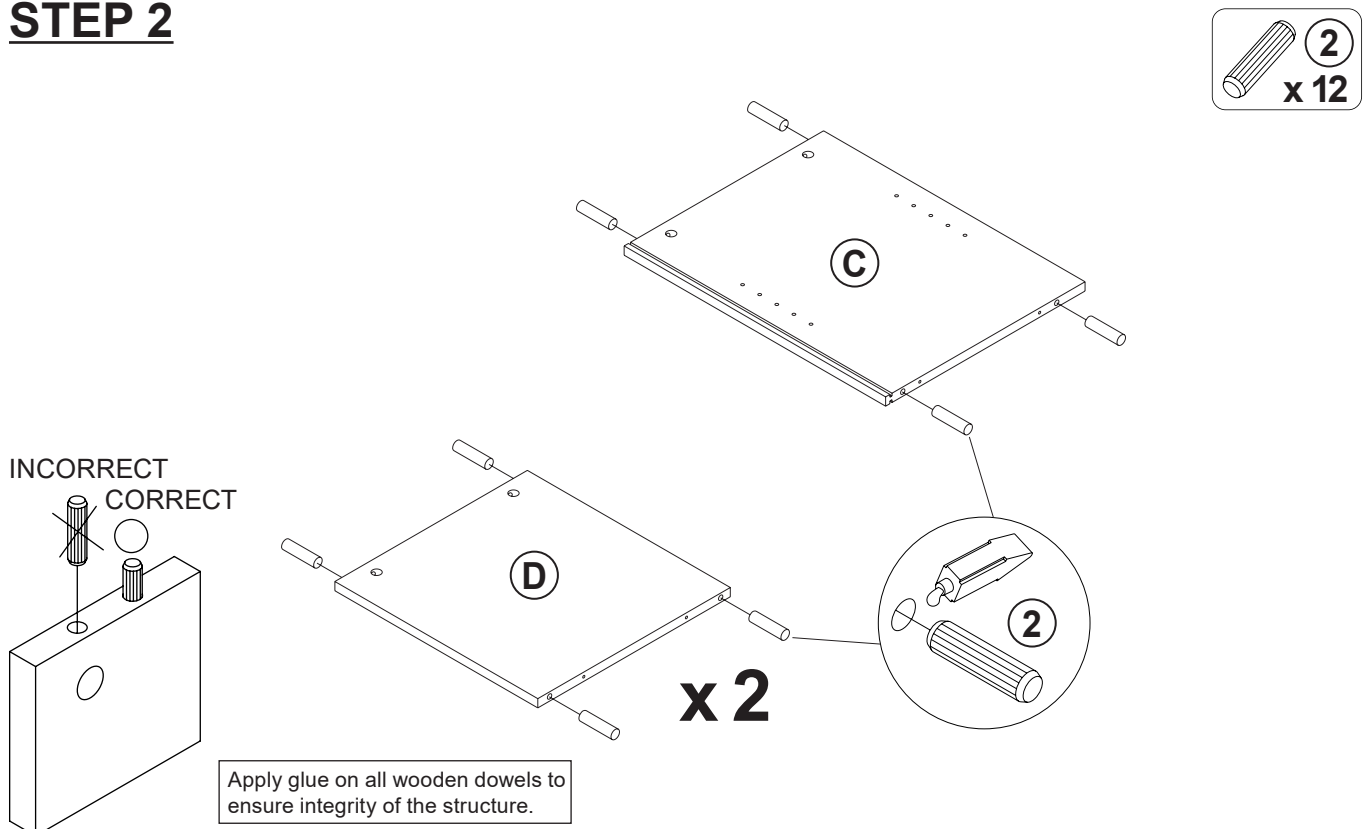


ITEM: **950432**

COASTER
FINE FURNITURE

 STEP 3

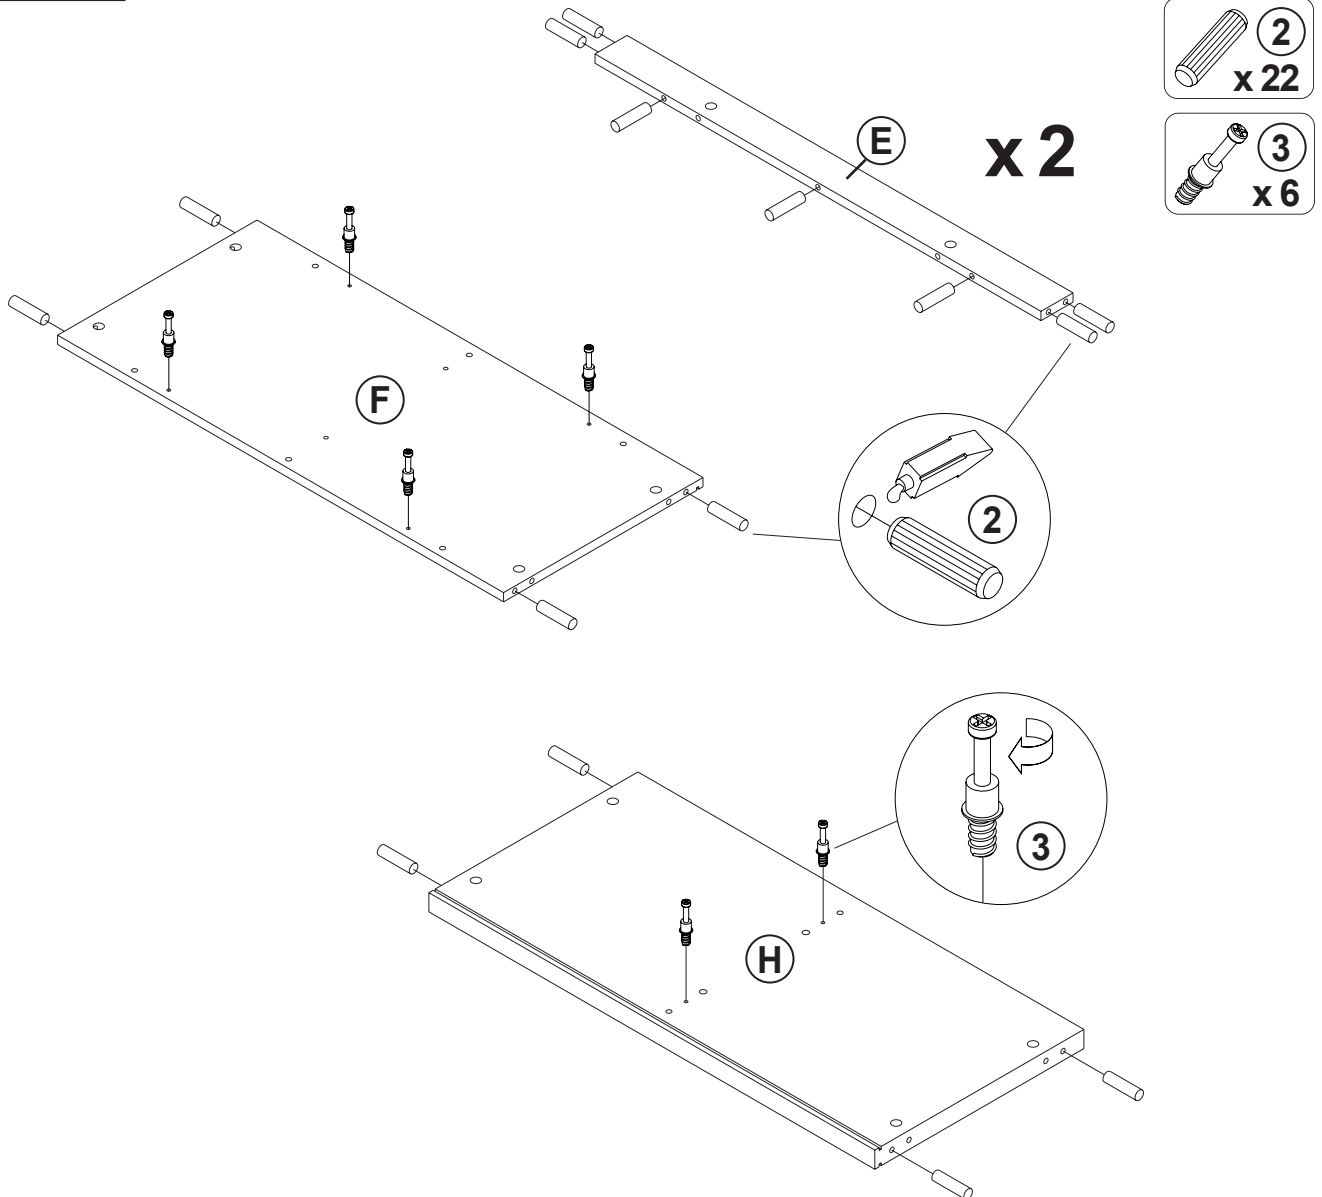

 
STEP 4

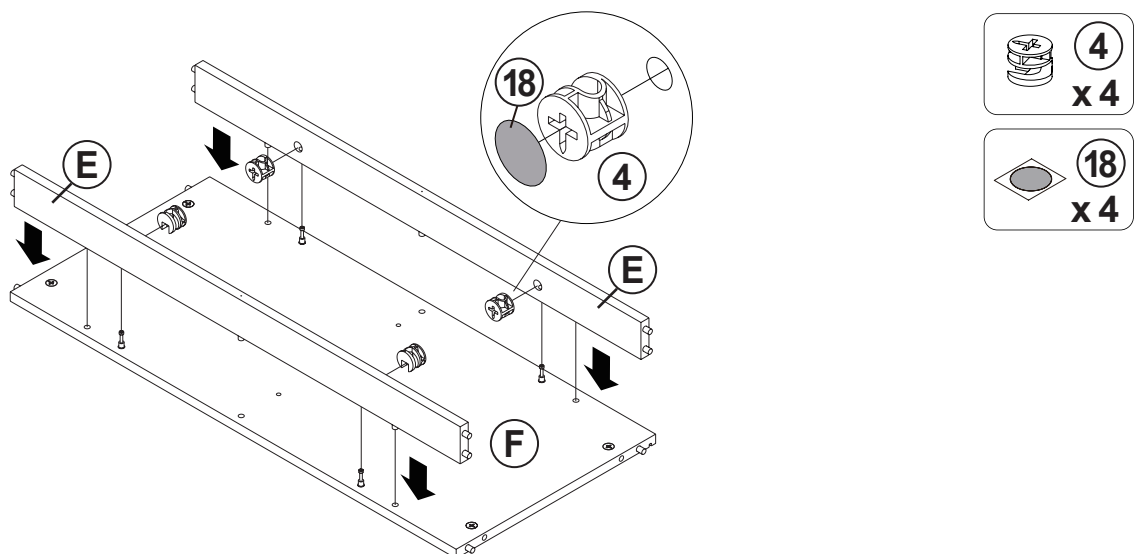


ITEM: **950432**

COASTER
FINE FURNITURE

 STEP 5

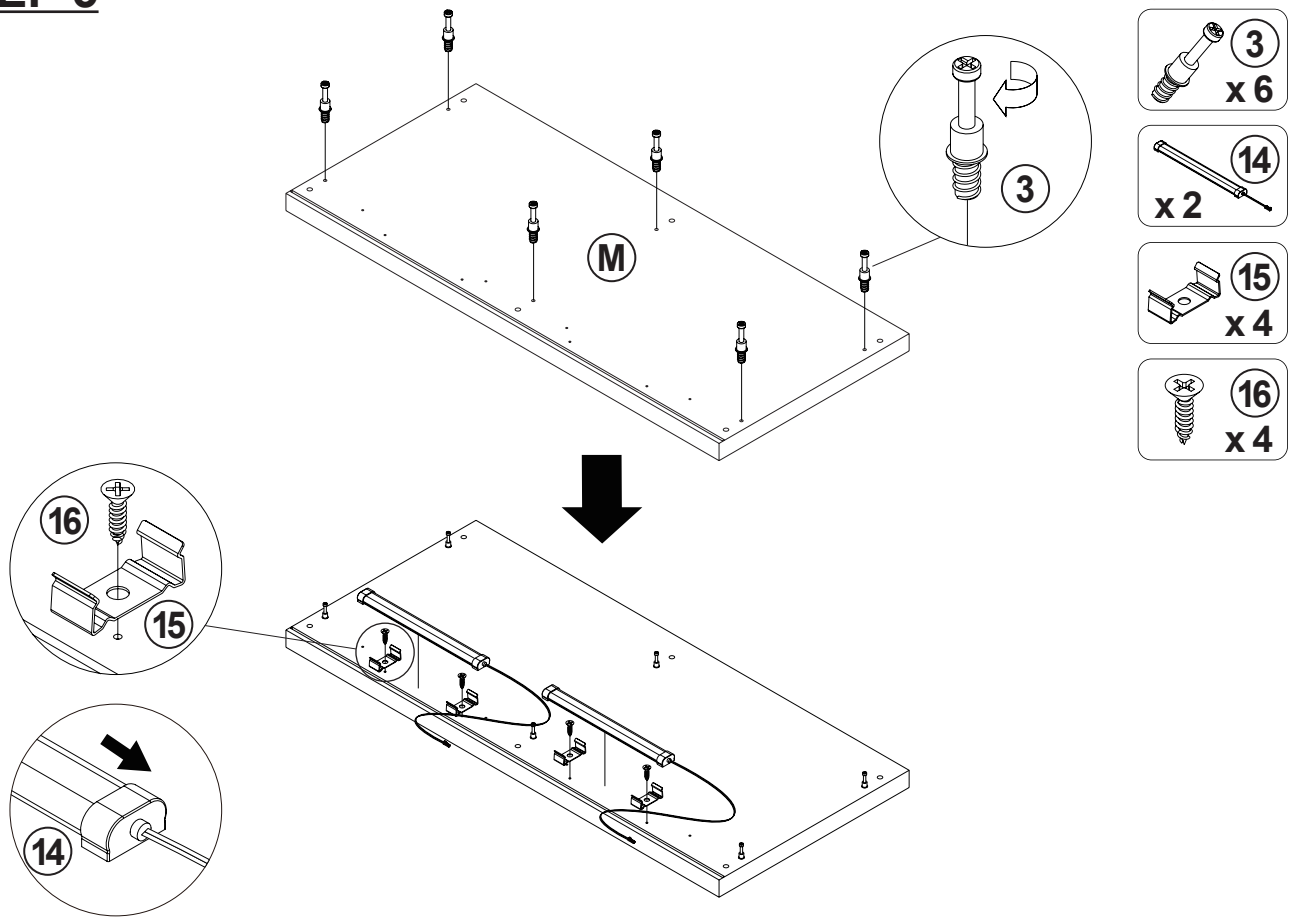

 
STEP 6

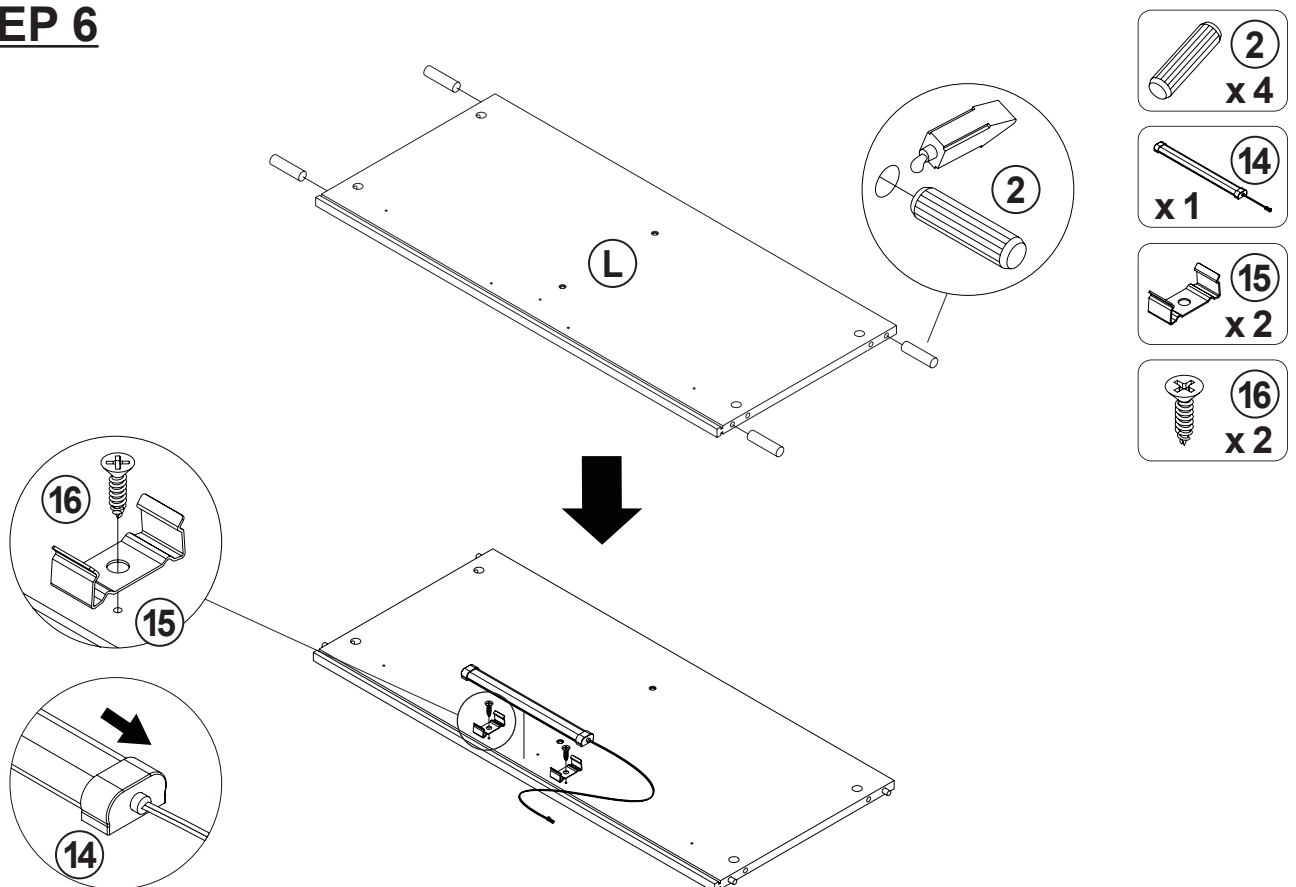


ITEM: **950432**

COASTER
FINE FURNITURE

 STEP 7

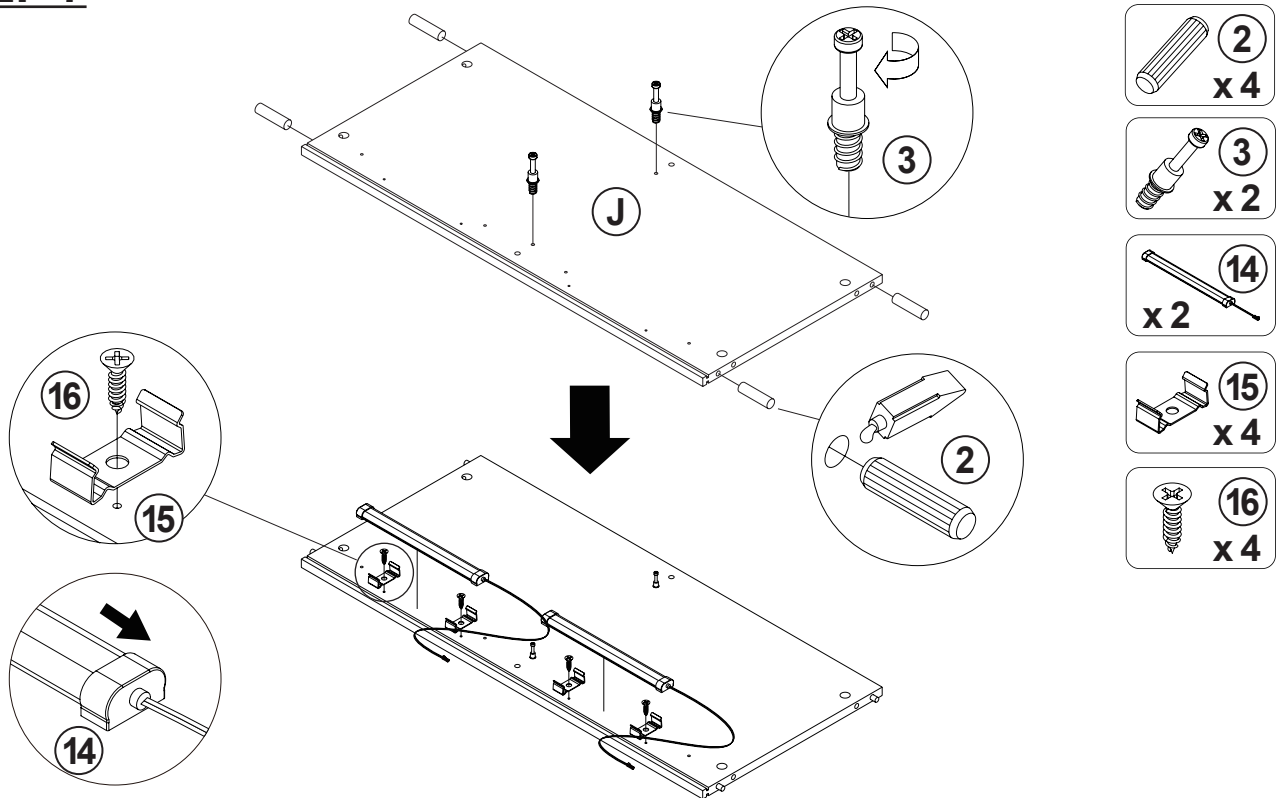


 
STEP 8

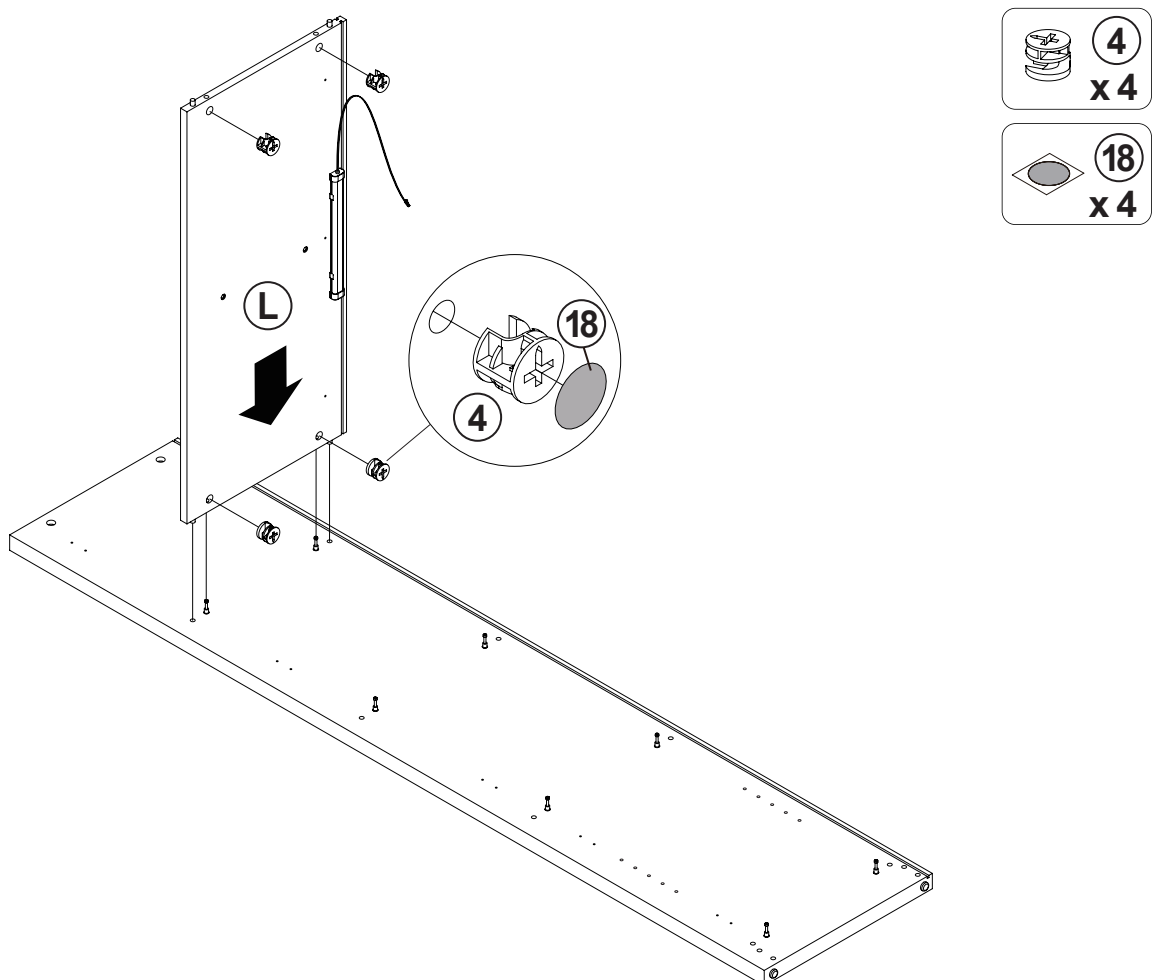




ITEM: **950432**

COASTER
FINE FURNITURE

  STEP 9

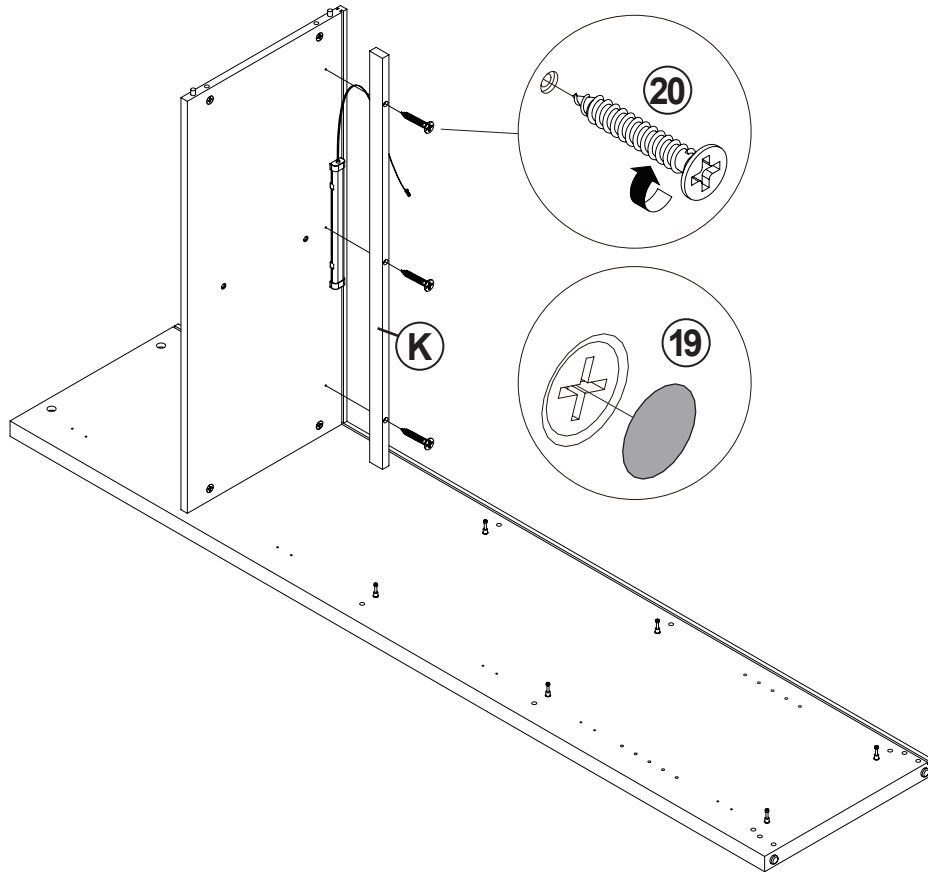


   STEP 10

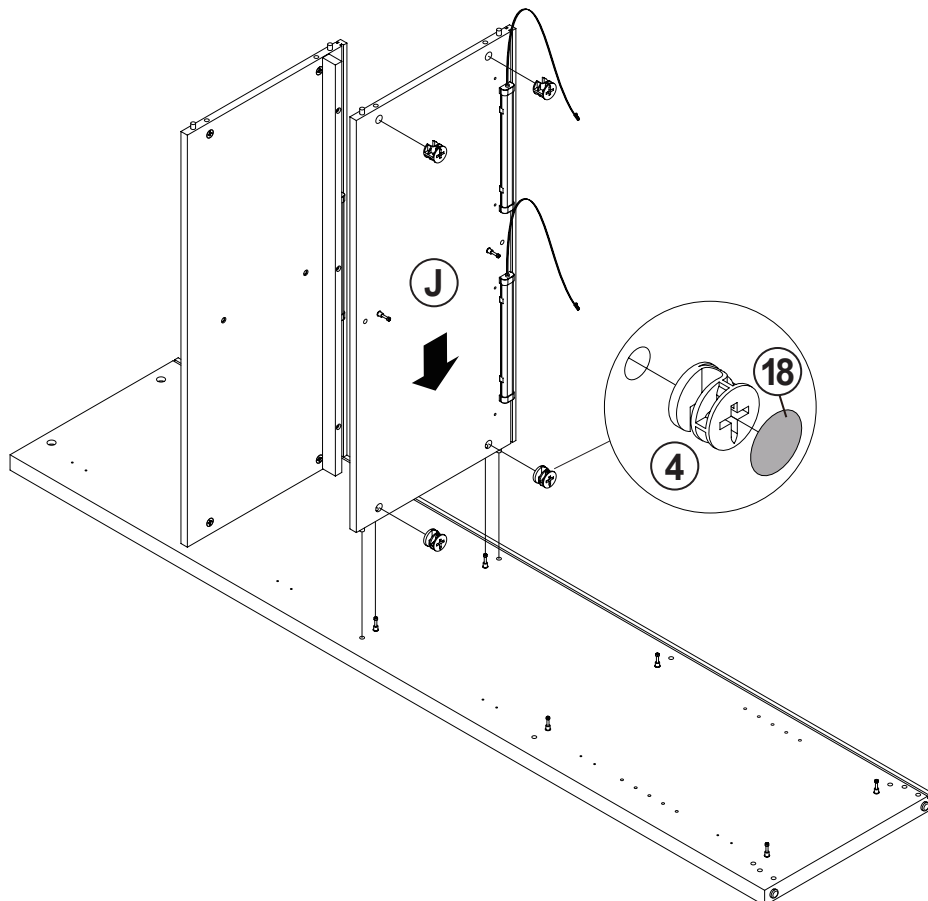


ITEM: **950432**

 STEP 11

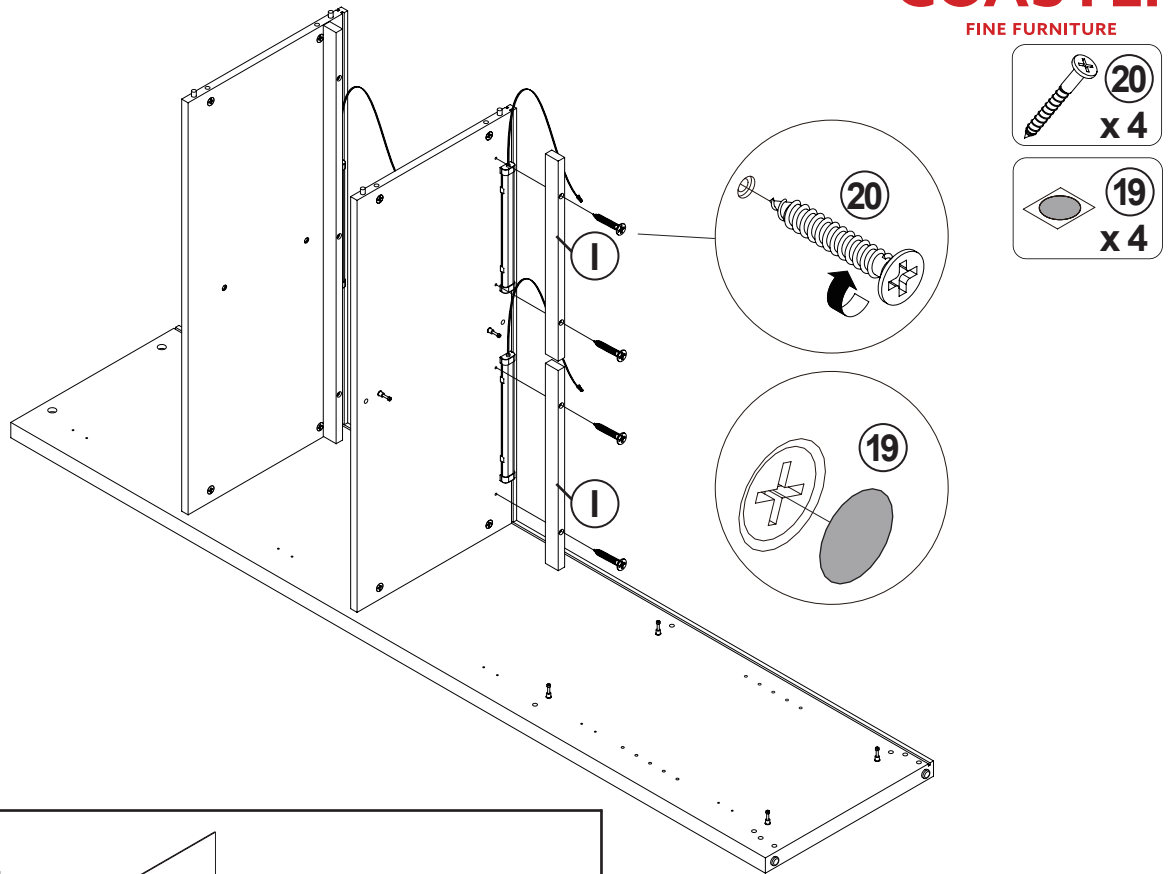


 
STEP 12

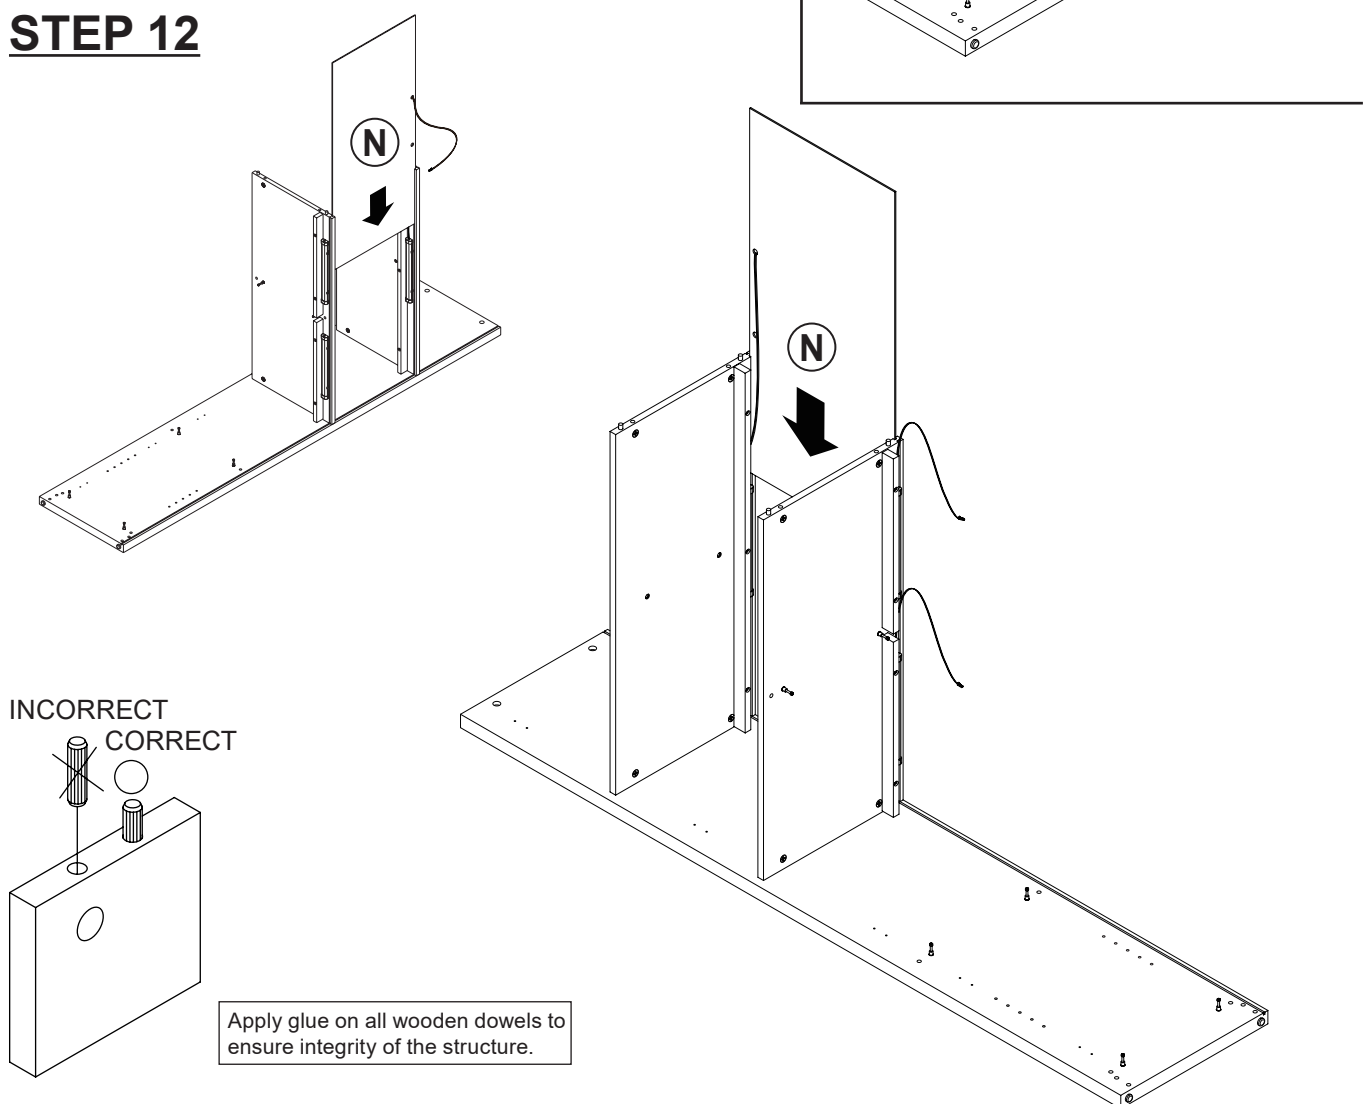


ITEM: **950432**

STEP 13

  COASTER
FINE FURNITURE

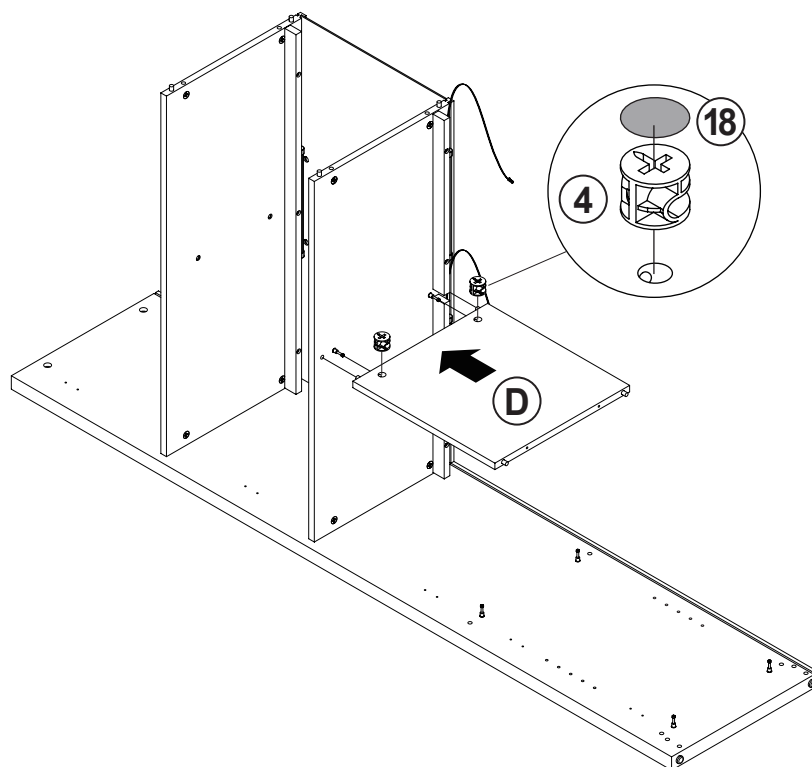



 
STEP 14

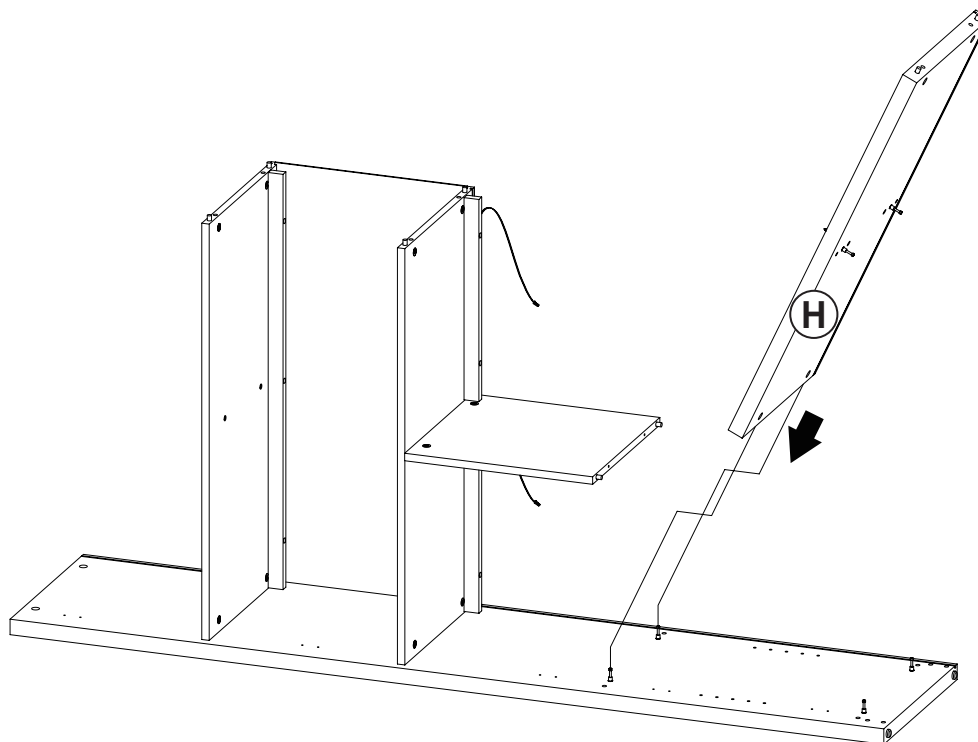



ITEM: **950432**

STEP 15

   COASTER
FINE FURNITURE

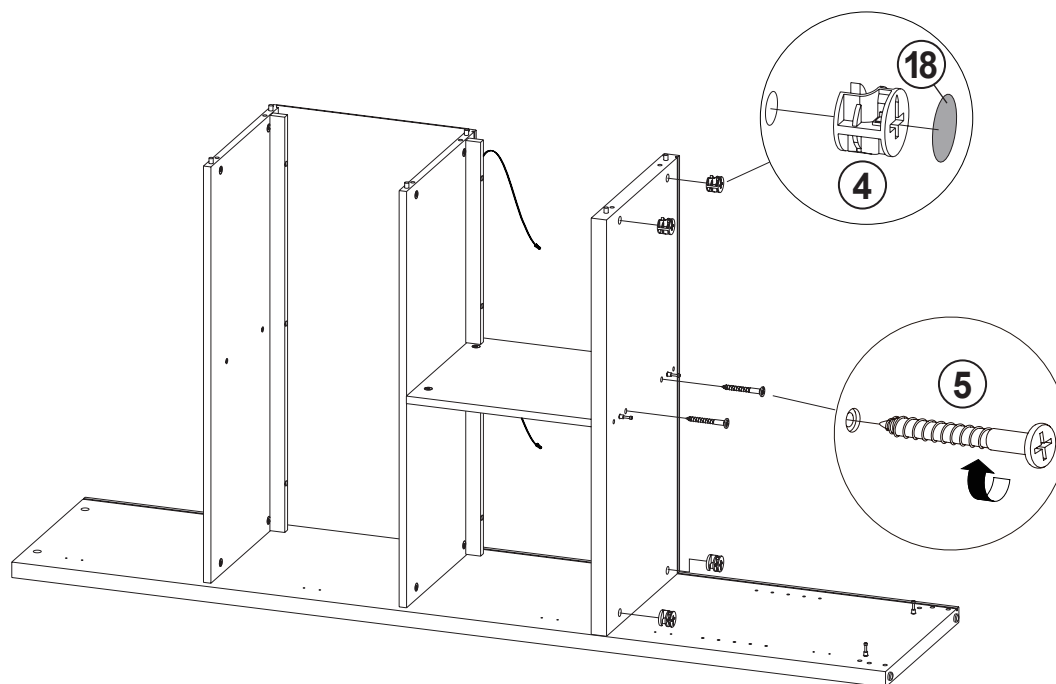


 
 
STEP 16

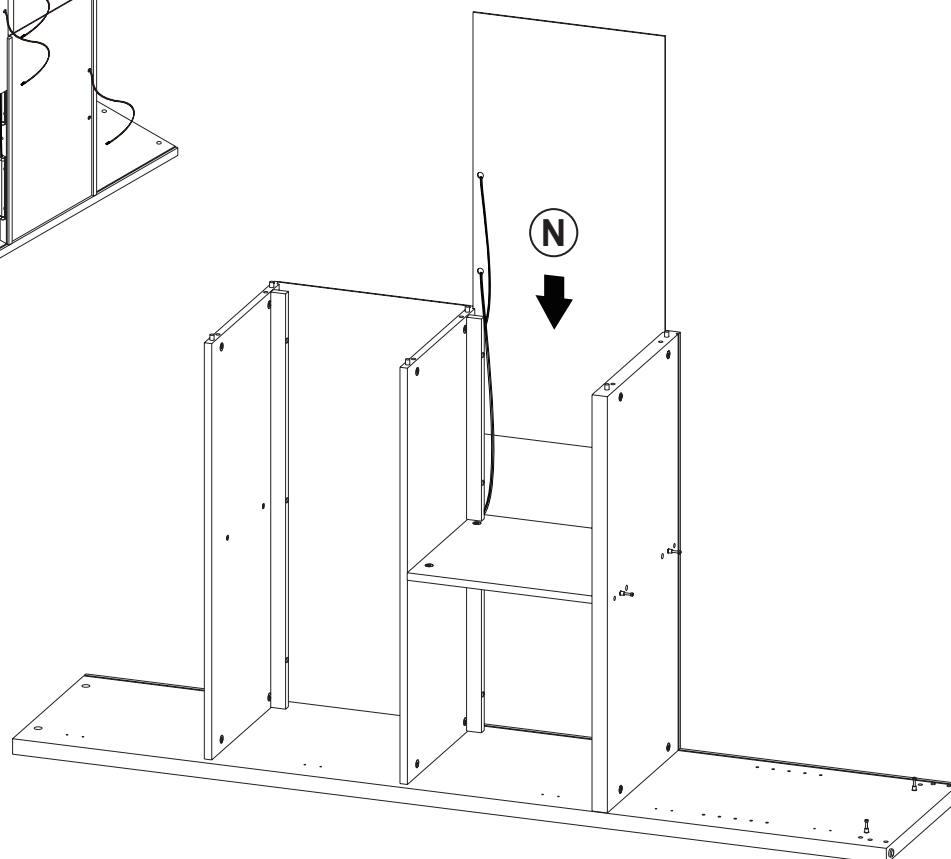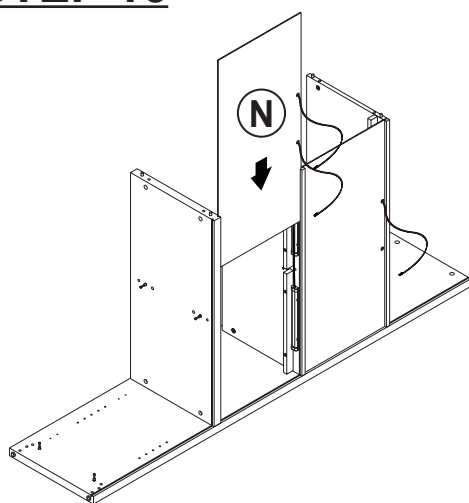


ITEM: **950432**

STEP 17

   COASTER
FINE FURNITURE

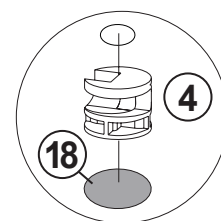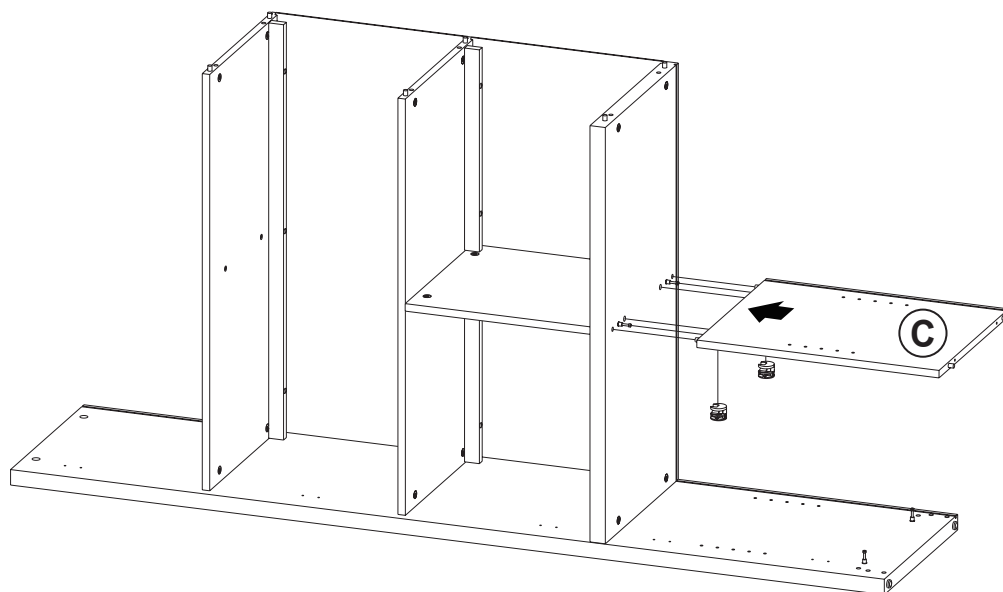


 STEP 18

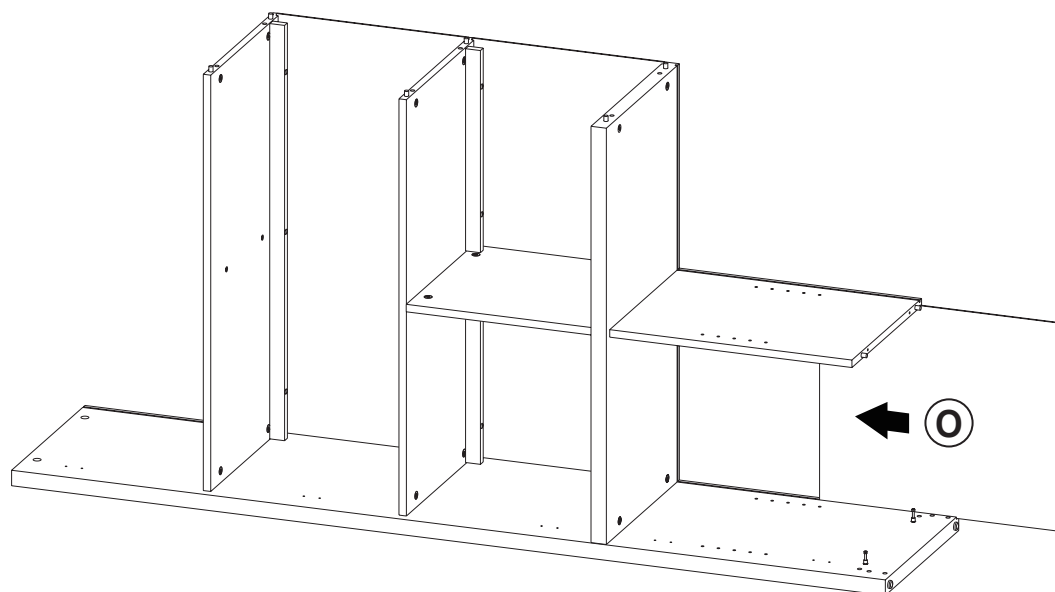


ITEM: **950432**

 STEP 19

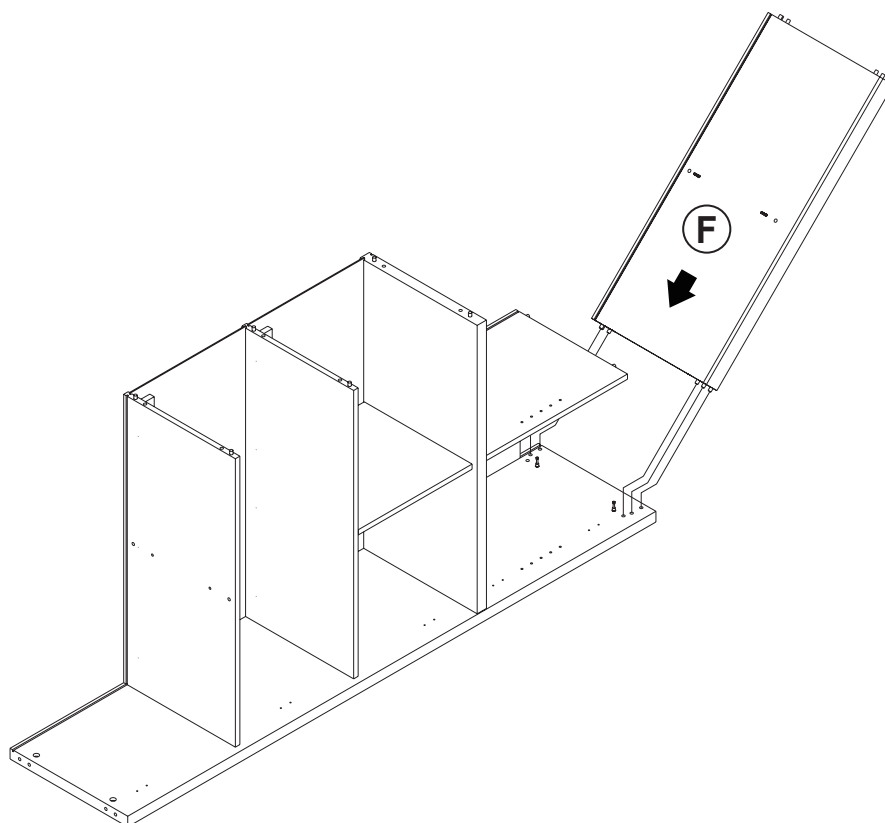


 STEP 20

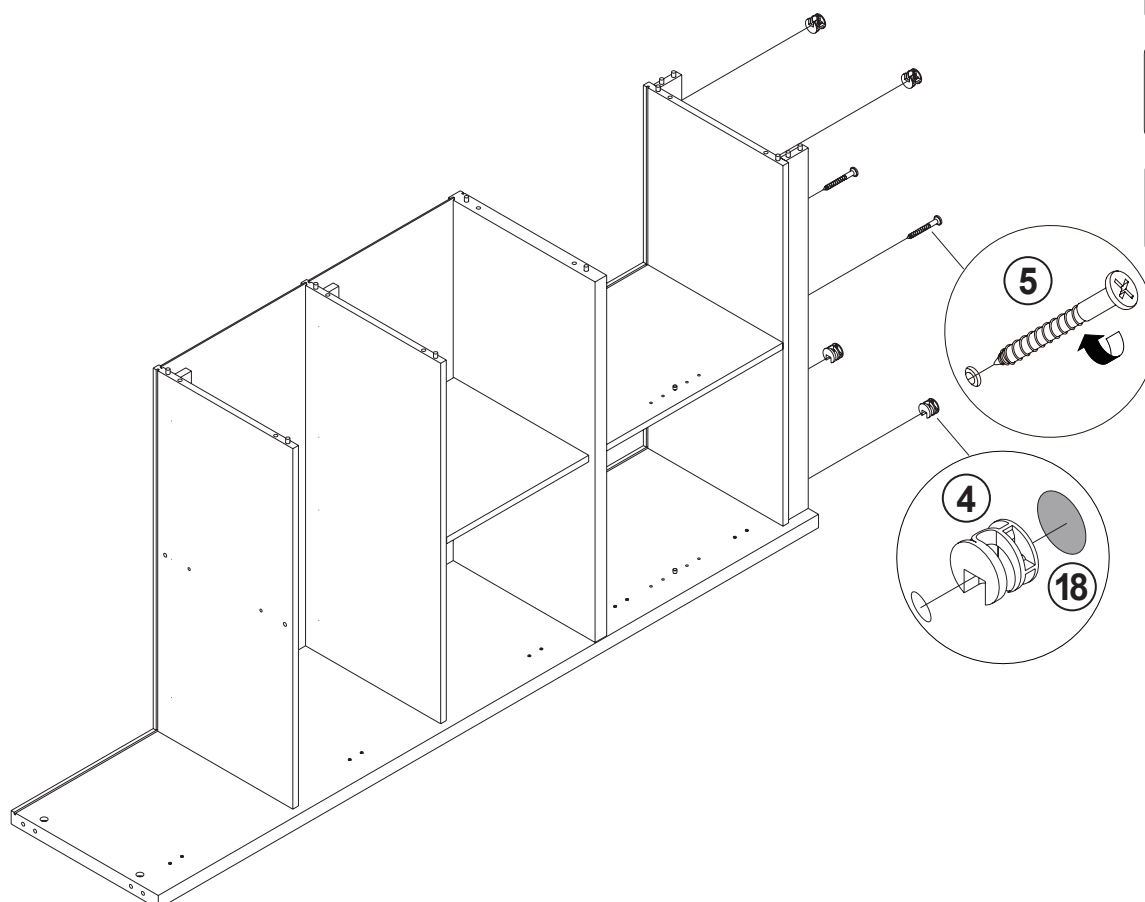


ITEM: **950432**

 STEP 21


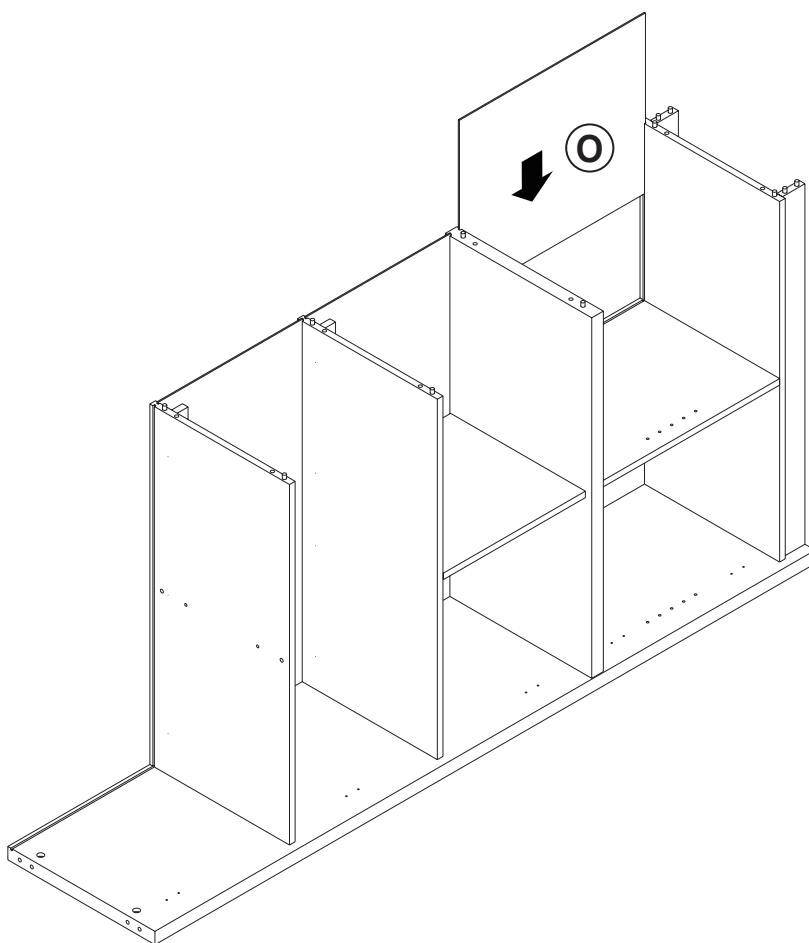


 STEP 22

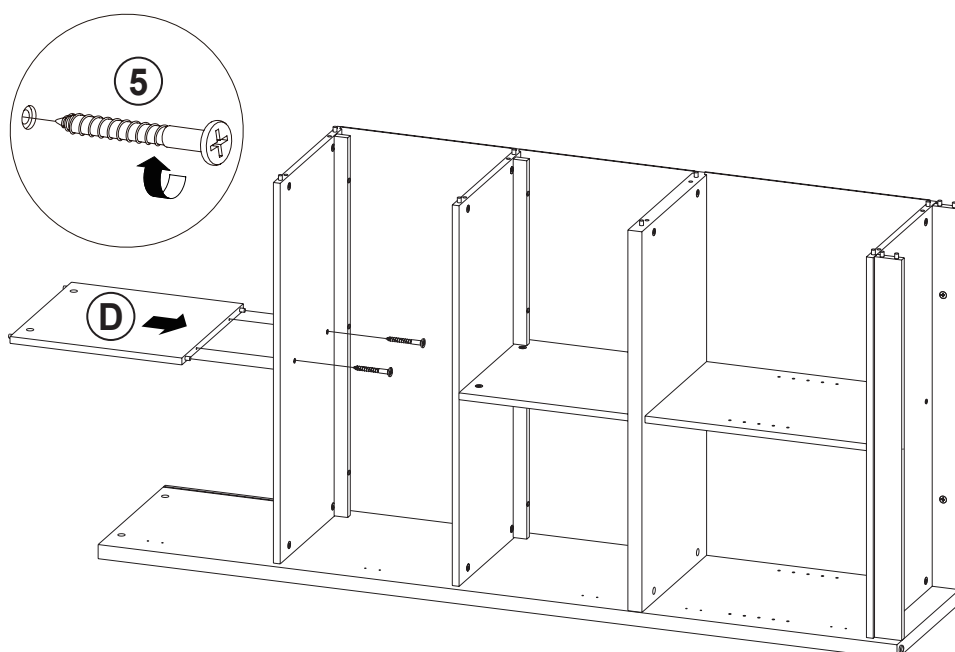


ITEM: **950432**

  STEP 23

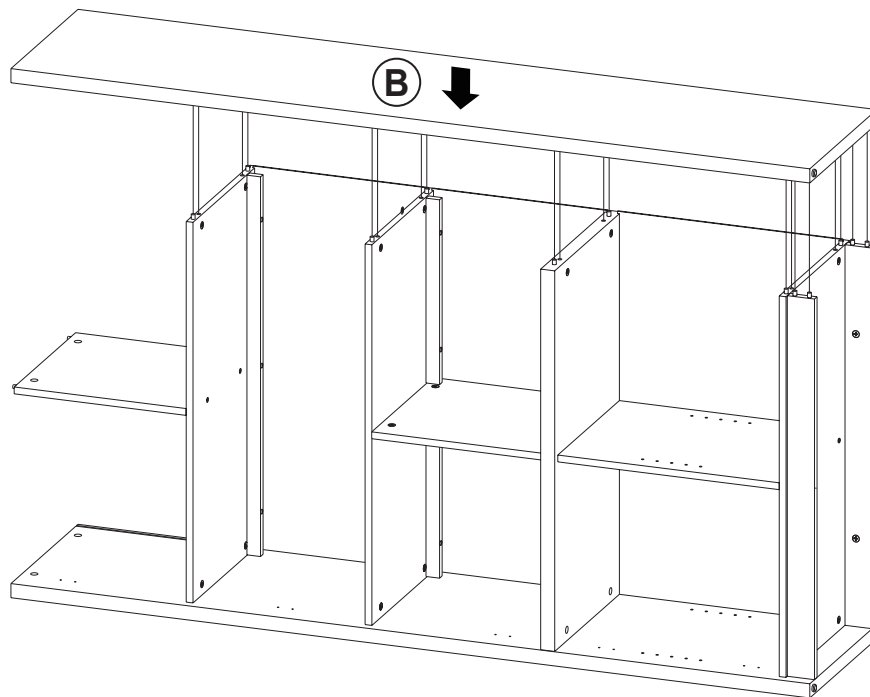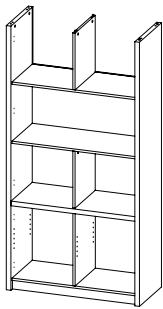

 
STEP 24

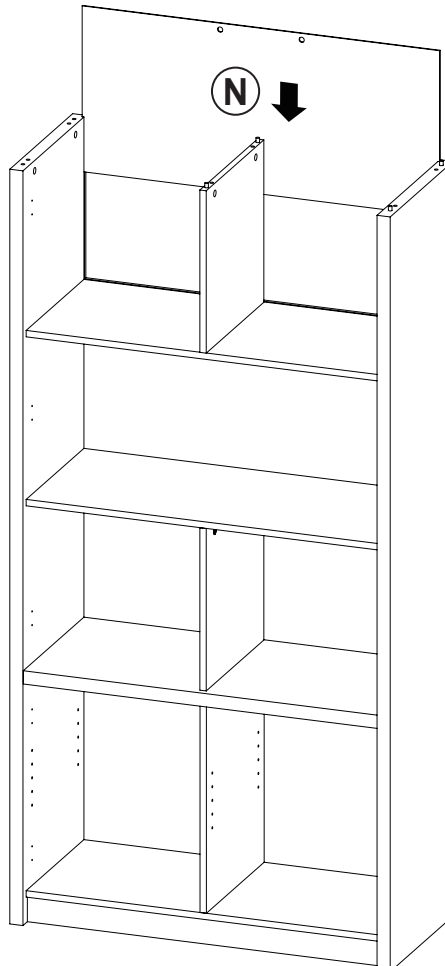





ITEM: **950432**

STEP 25

 COASTER
FINE FURNITURE




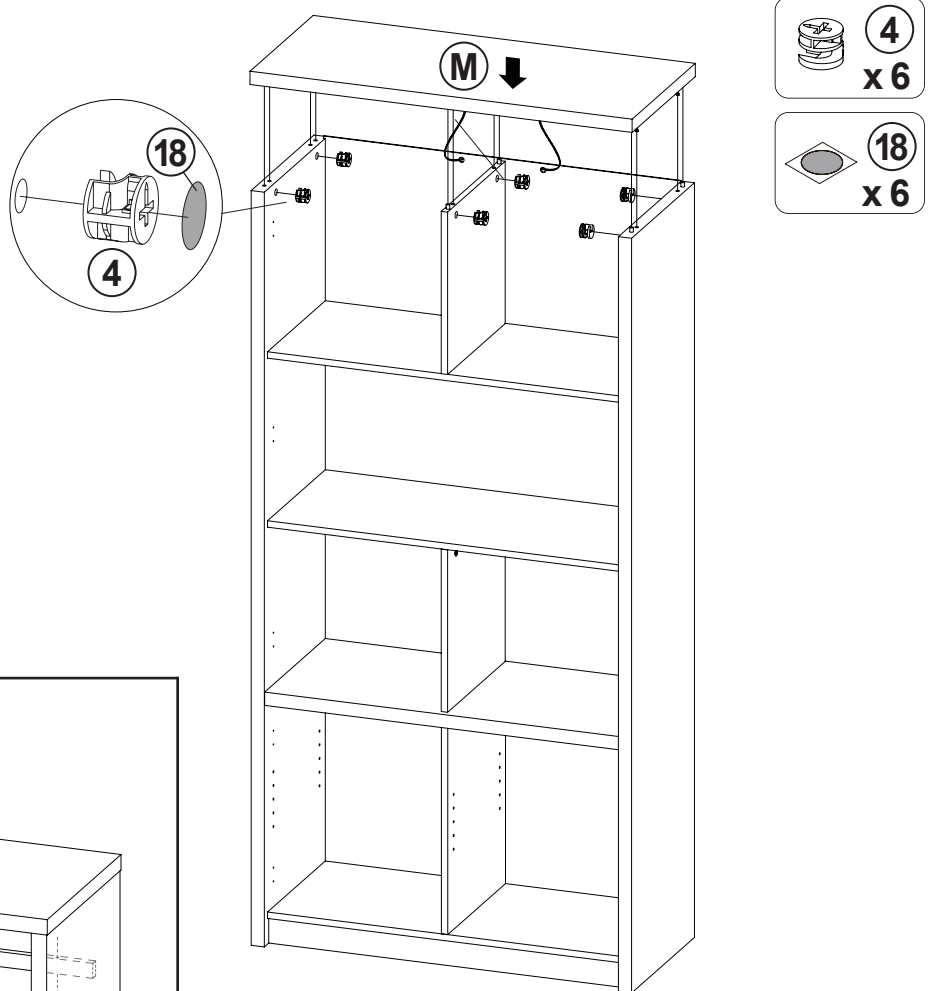


    STEP 26

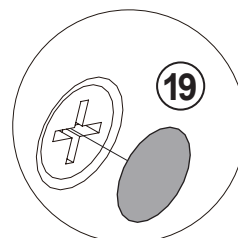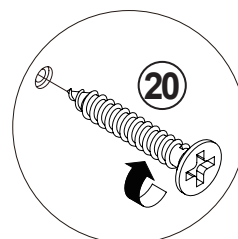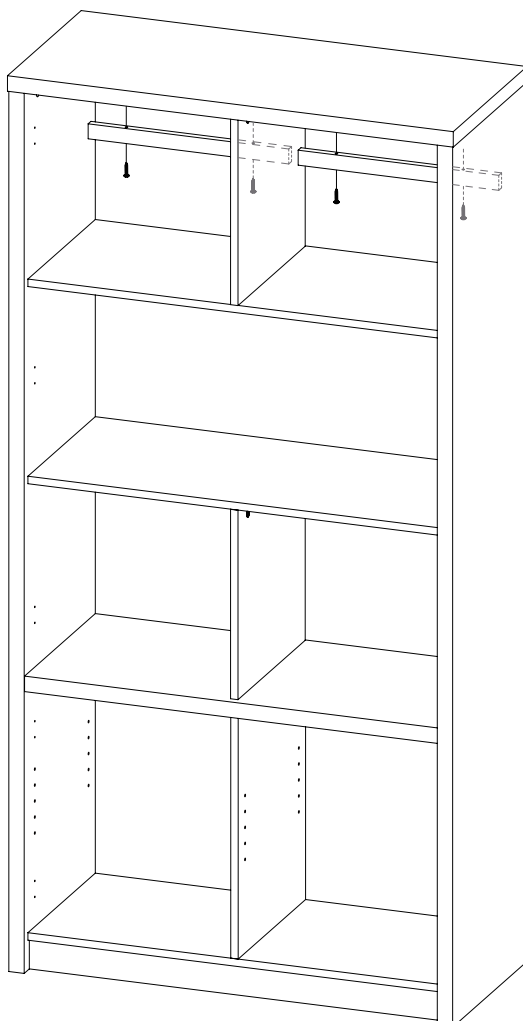


ITEM: **950432**

    
STEP 27

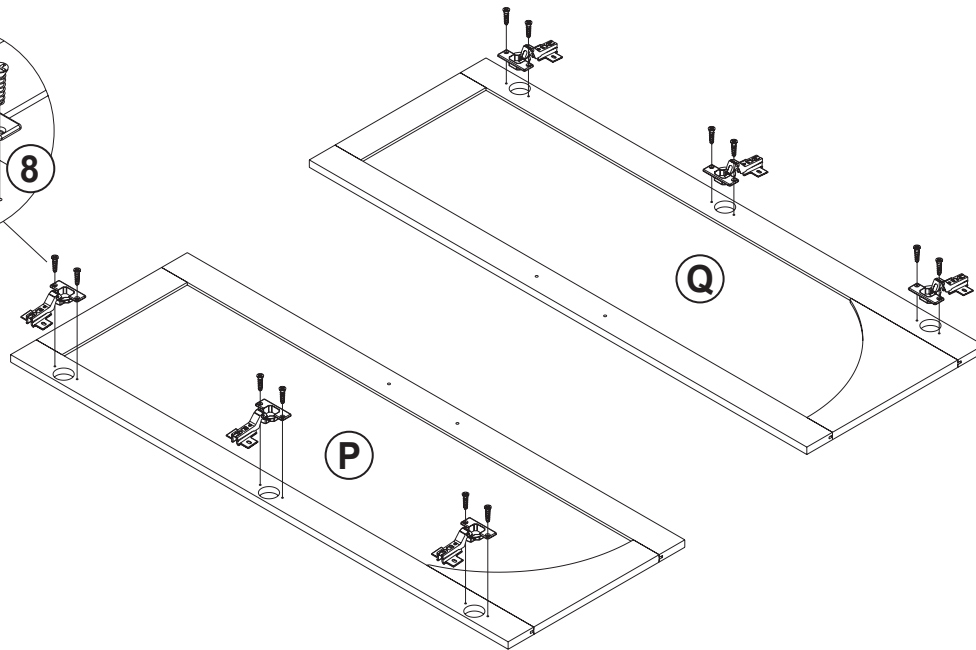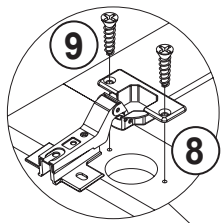

 
STEP 28

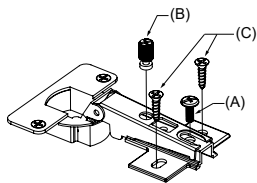





HORIZONTAL BY
SCREW A ADJUSTMENT

 

LATERAL BY
SCREW B ADJUSTMENT

 





VERTICAL BY
SCREW C ADJUSTMENT

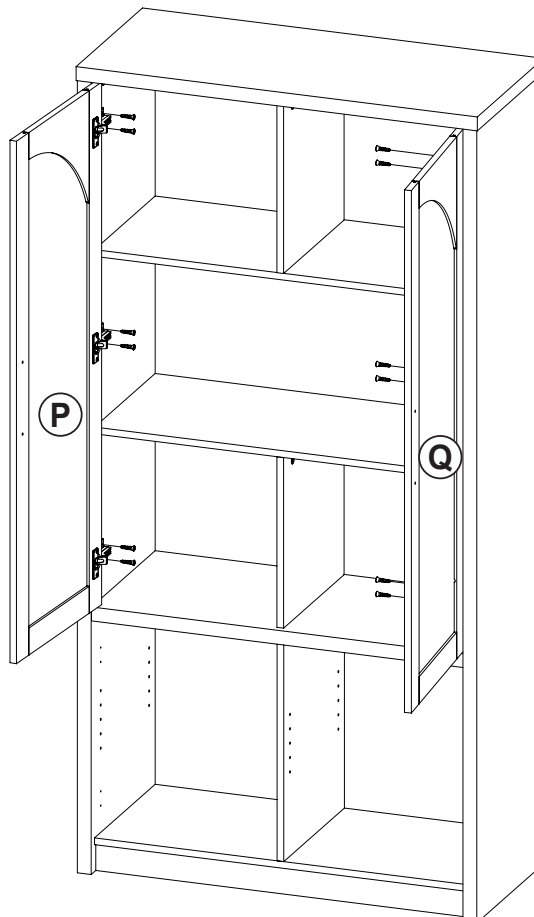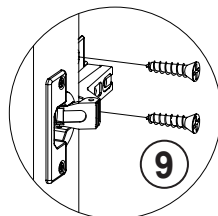    

ITEM: **950432**

STEP 29

   
 
COASTER
FINE FURNITURE

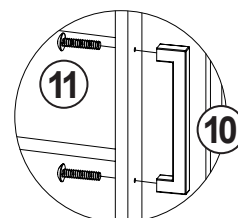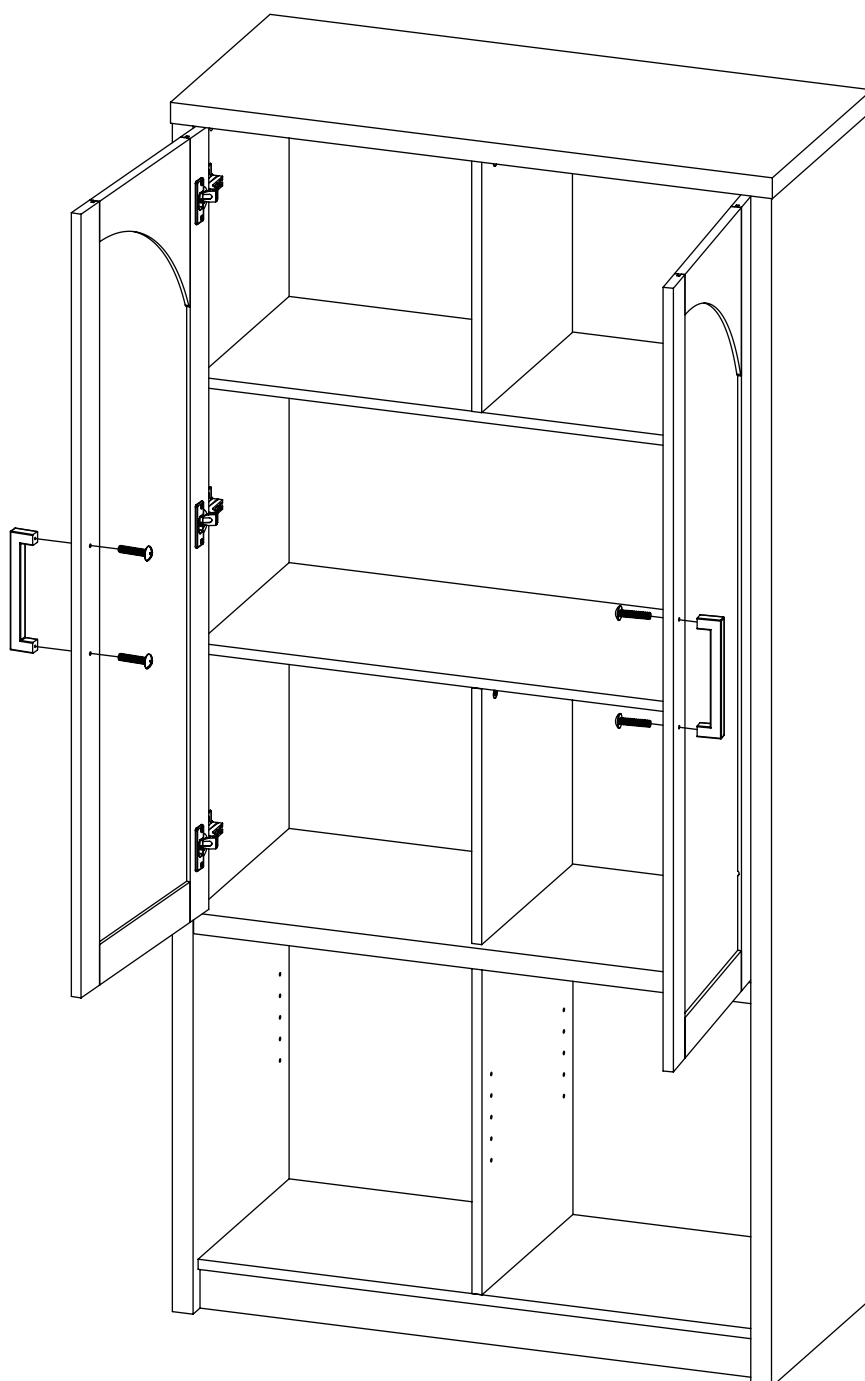




ITEM: **950432**

STEP 30

  COASTER
FINE FURNITURE

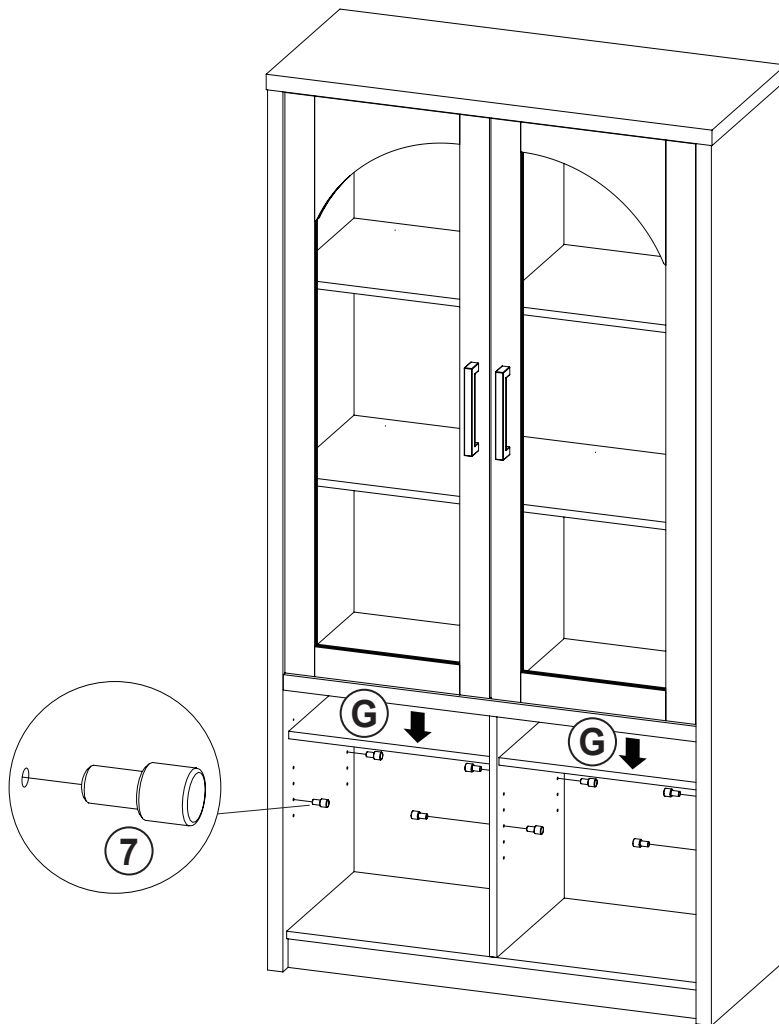

 
 
 
STEP 31

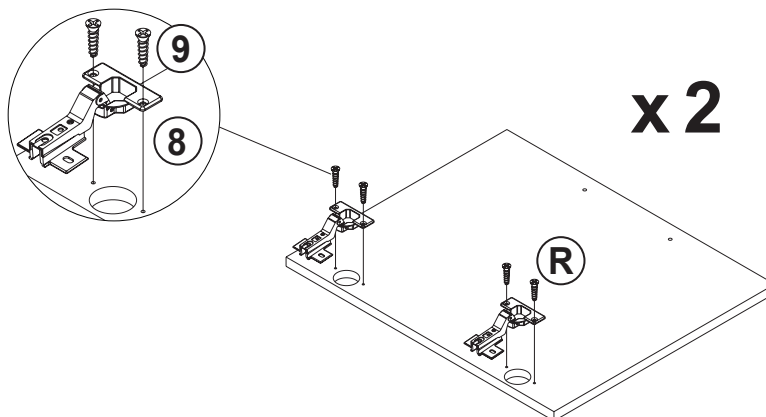






ITEM: **950432**

STEP 32

   COASTER
FINE FURNITURE

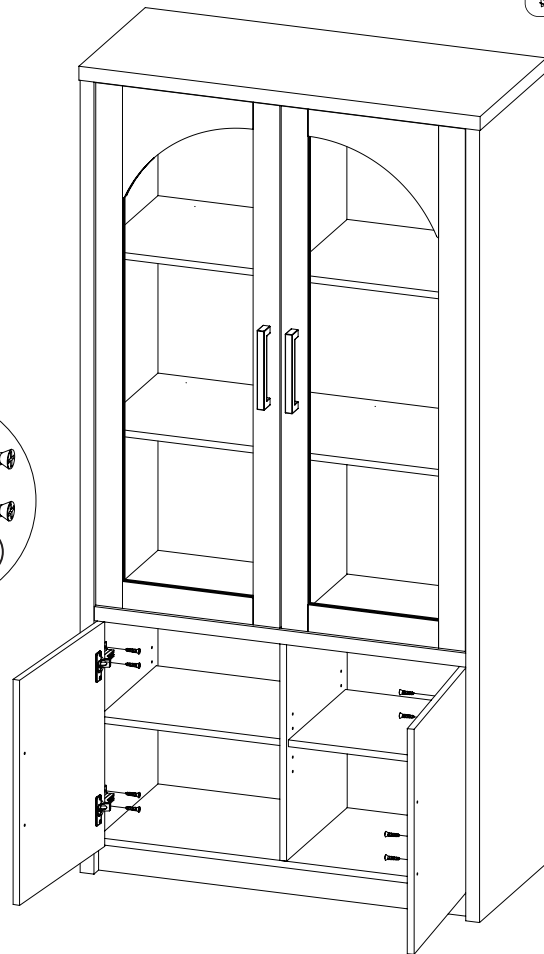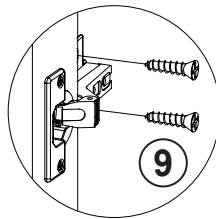

  
 
 
 
STEP 33

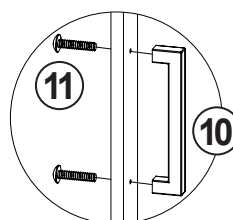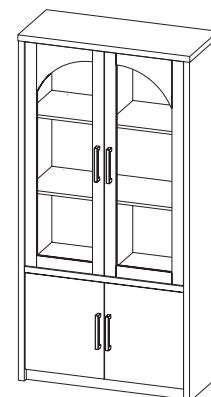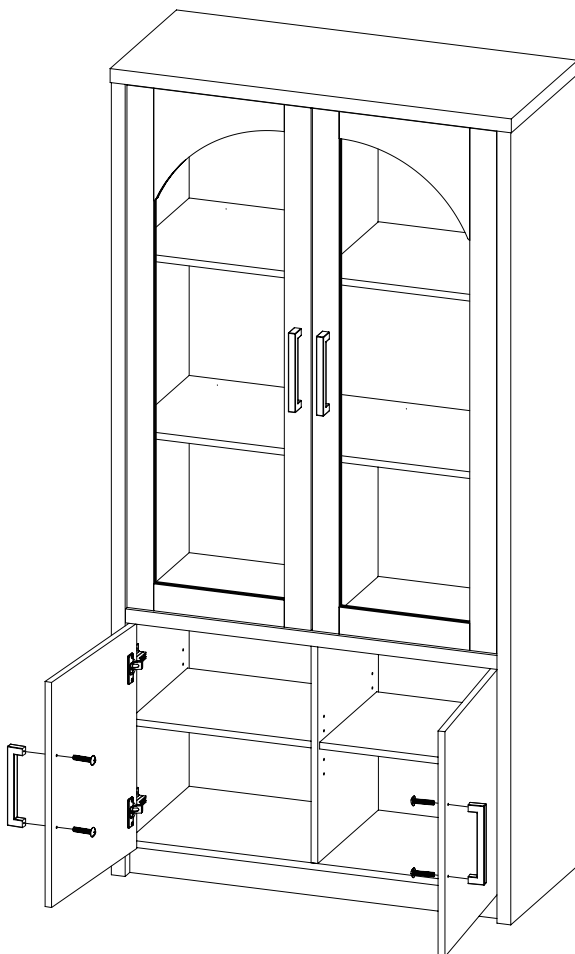











ITEM: **950432**

STEP 34

    COASTER
FINE FURNITURE

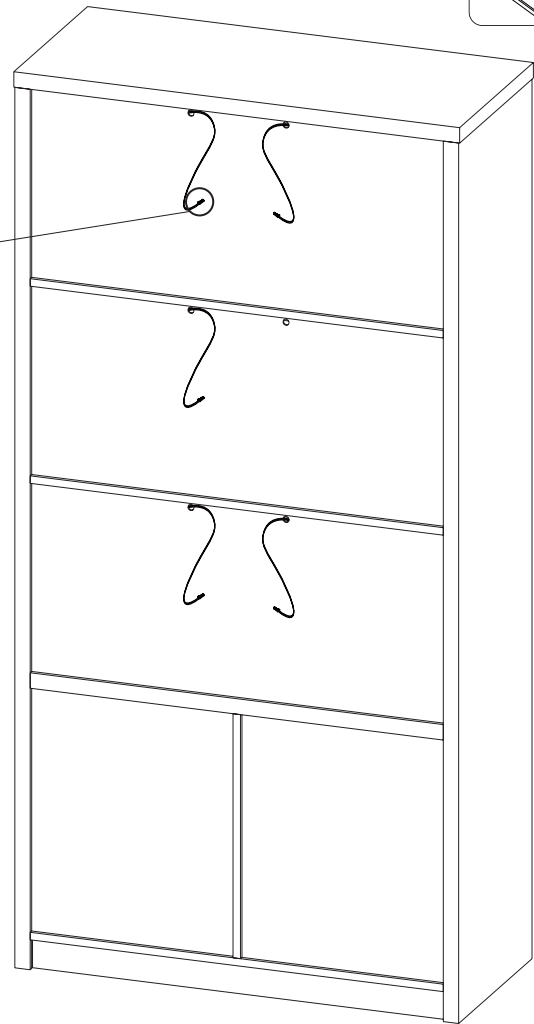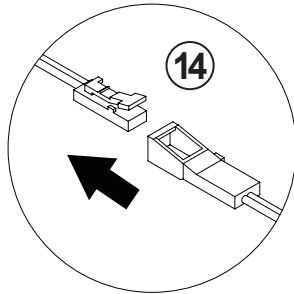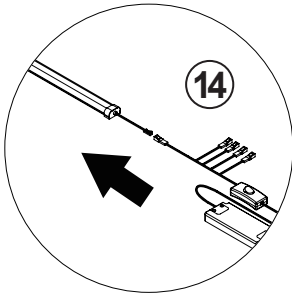

          STEP 35

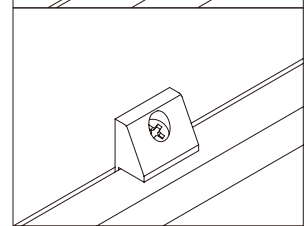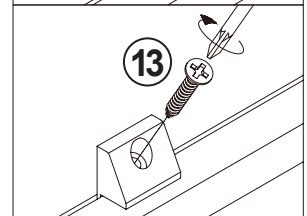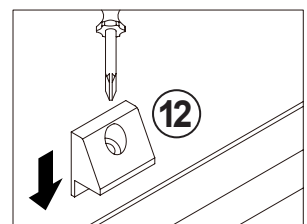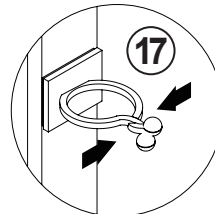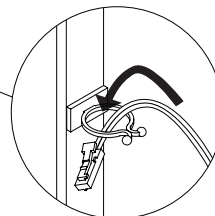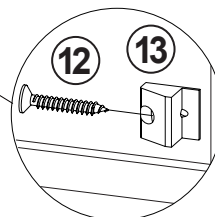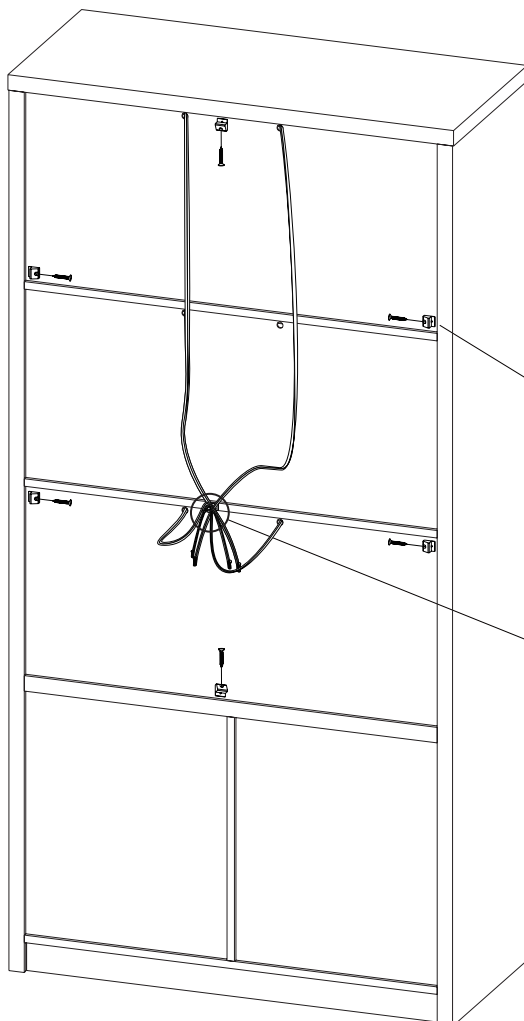



ITEM: **950432**


STEP 36

COMPLETE

  COASTER
FINE FURNITURE

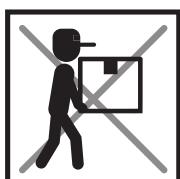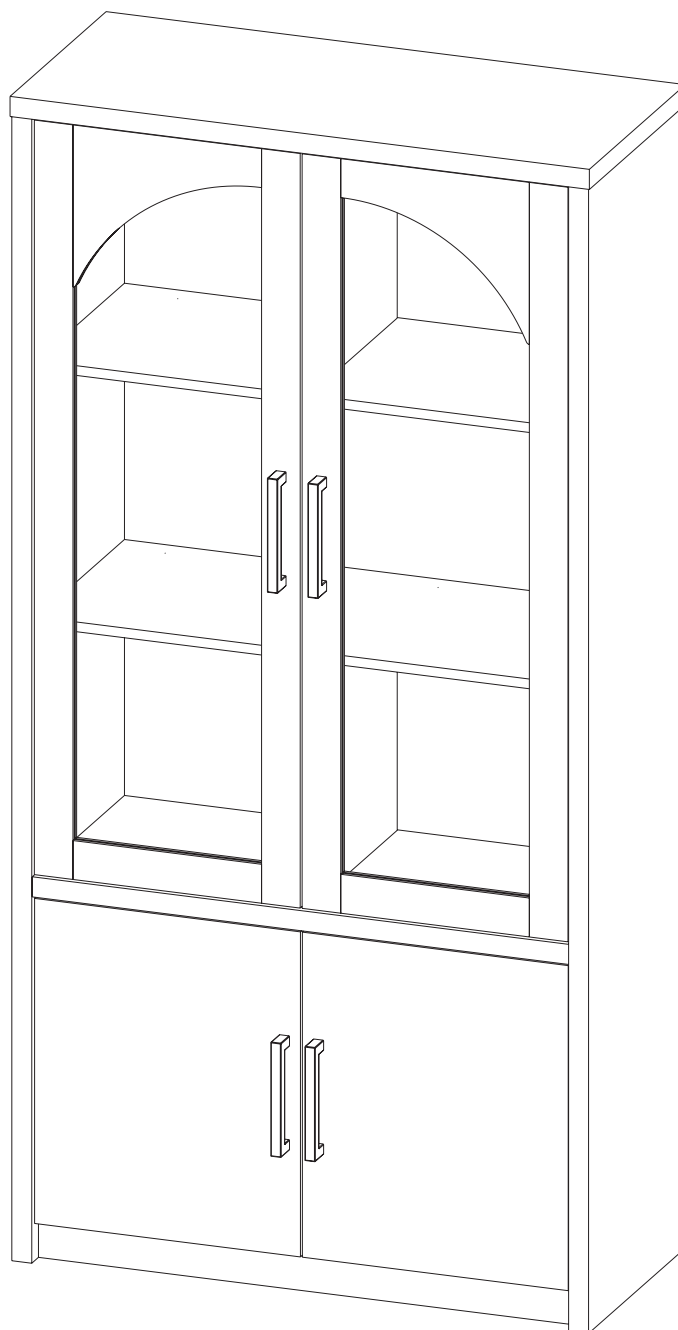

ITEM: **950432**

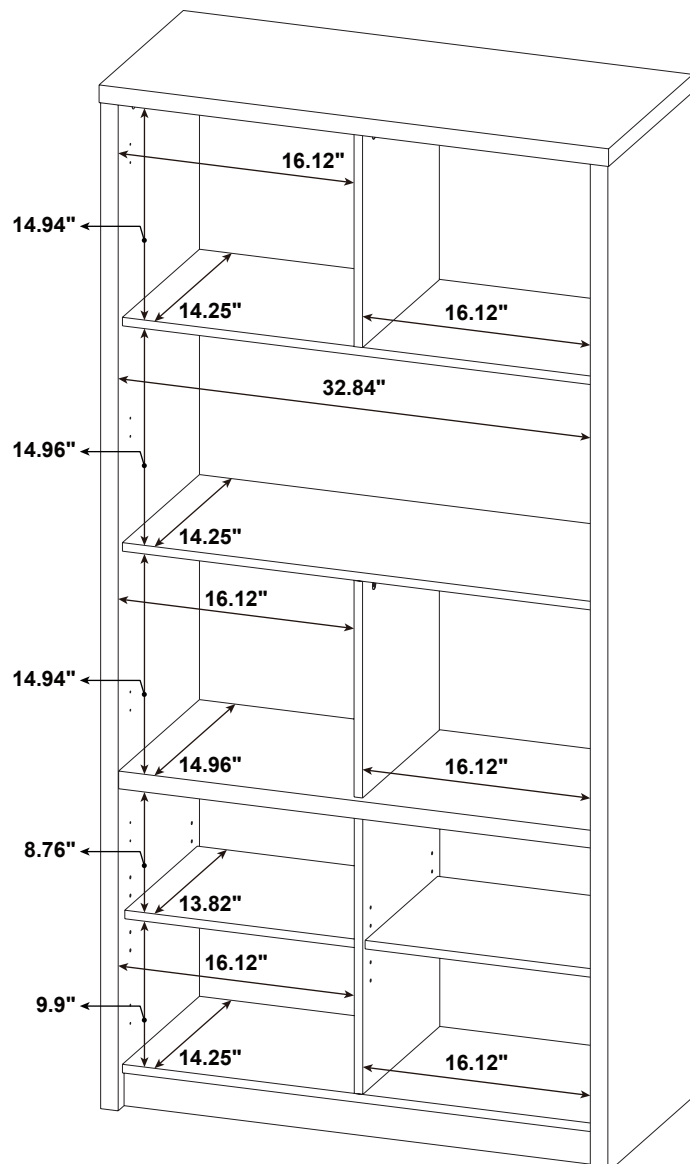 

Note : Dimension tolerance $\pm 5\%$

 
ANTI-TIPPING INSTALLMENT INSTRUCTIONS
FURNITURE TIPPING RESTRAINT**WARNING**

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture may result in injury and damage.


This restraint must be screwed to a wood stud on the wall, using the long screw provided.

STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

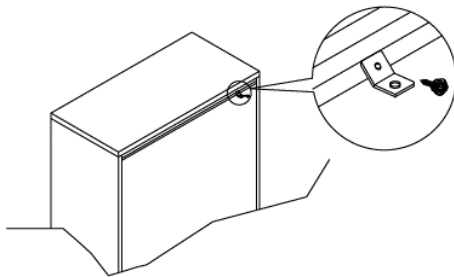**STEP 2**

 Locate the wood stud on the wall, and secure the other bracket, 2 inches below the back of the unit.

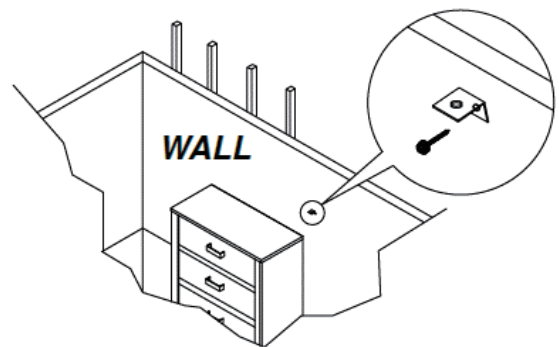**STEP 3**

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end, and drag it through, until the slack is removed. Ensure that the strap is securely laced and locked.

