

*ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE*



Fine Furniture for every stage of life

722863
TV STAND

ITEM:722863

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 


ASSEMBLY TIME

60 MINUTES

MAX TV SIZE : 75"











PARTS IDENTIFICATION

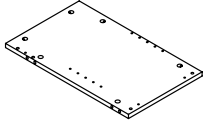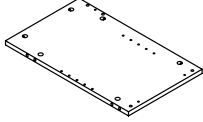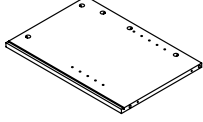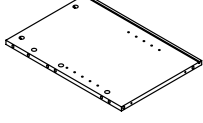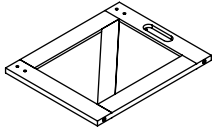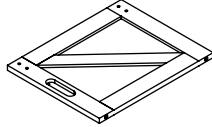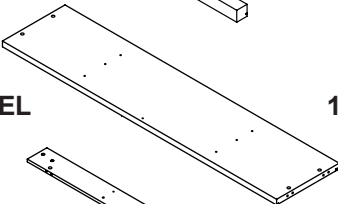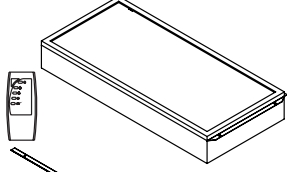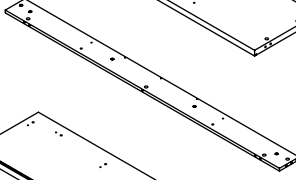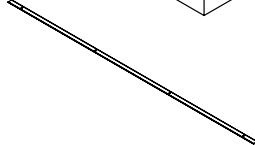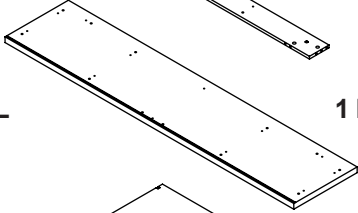A	LEFT SIDE PANEL		1 PC	K	MIDDLE BACK PANEL		1 PC
B	RIGHT SIDE PANEL		1 PC	L	UPPER BACK PANEL		2 PCS
C	LEFT DIVIDER PANEL		1 PC	M	BACK PANEL		2 PCS
D	RIGHT DIVIDER PANEL		1 PC	N	LEFT DOOR		1 PC
E	DECORATIVE STRIP		2 PCS	O	RIGHT DOOR		1 PC
F	BACK LEG		2 PCS	P	FRONT LEG		2 PCS
G	BOTTOM PANEL		1 PC	Q	LED FIREPLACE		1 PC
H	UPPER DECORATIVE STRIP		1 PC	R	TRACK BAR		1 PC
I	TOP PANEL		1 PC	S	MIDDLE LEG		2 PCS
J	ADJUSTABLE SHELF		2 PCS	T	BACK VERTICAL BAR		2 PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

          ITEM: **722863****HARDWARE IDENTIFICATION**


Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	10	HANDLE BOLT Ø4x13mm BLK		4 PCS
2	WOODEN DOWEL Ø8 x 30mm		40 PCS	11	RAIL SCREW Ø 3x15mm BLK		7 PCS
3	CAM BOLT Ø7 x 35.5mm SR		32 PCS	12	BOLT M6x43mm BLK		4 PCS
4	CAM LOCK Ø15 x 12mm SR		32 PCS	13	BOLT M6x19mm BLK		8 PCS
5	BOLT Ø9.5x55mm SR		7 PCS	14	ALLEN WRENCH 4mm SR		1 PC
6	PIN FOR ADJUSTABLE SHELF Ø4.9x8mm SR		8 PCS	15	PLASTIC COVER Ø 52mm		2 PCS
7	PIN Ø5.8x25mm SR		4 PCS	16	TRACK SPACER Ø25x25mm BLK		4 PCS
8	PLASTIC FEET Ø15mm		6 PCS	17	ROLLER Ø40.5x160mm BLK		4 PCS
9	HANDLE L=115mm BLK		2 PCS	18	STICKER Ø20mm		6 PCS

Z9, Z10, Z15, Z16, Z17 not included in blister packaging.**NOTE:**


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **722863**

 STEP 1

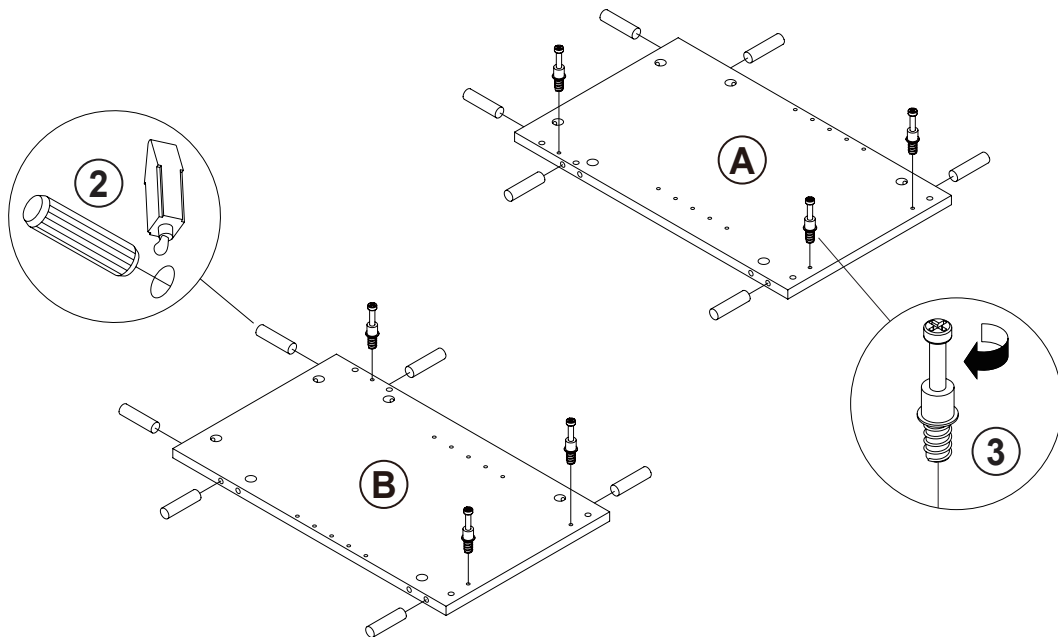


 STEP 2

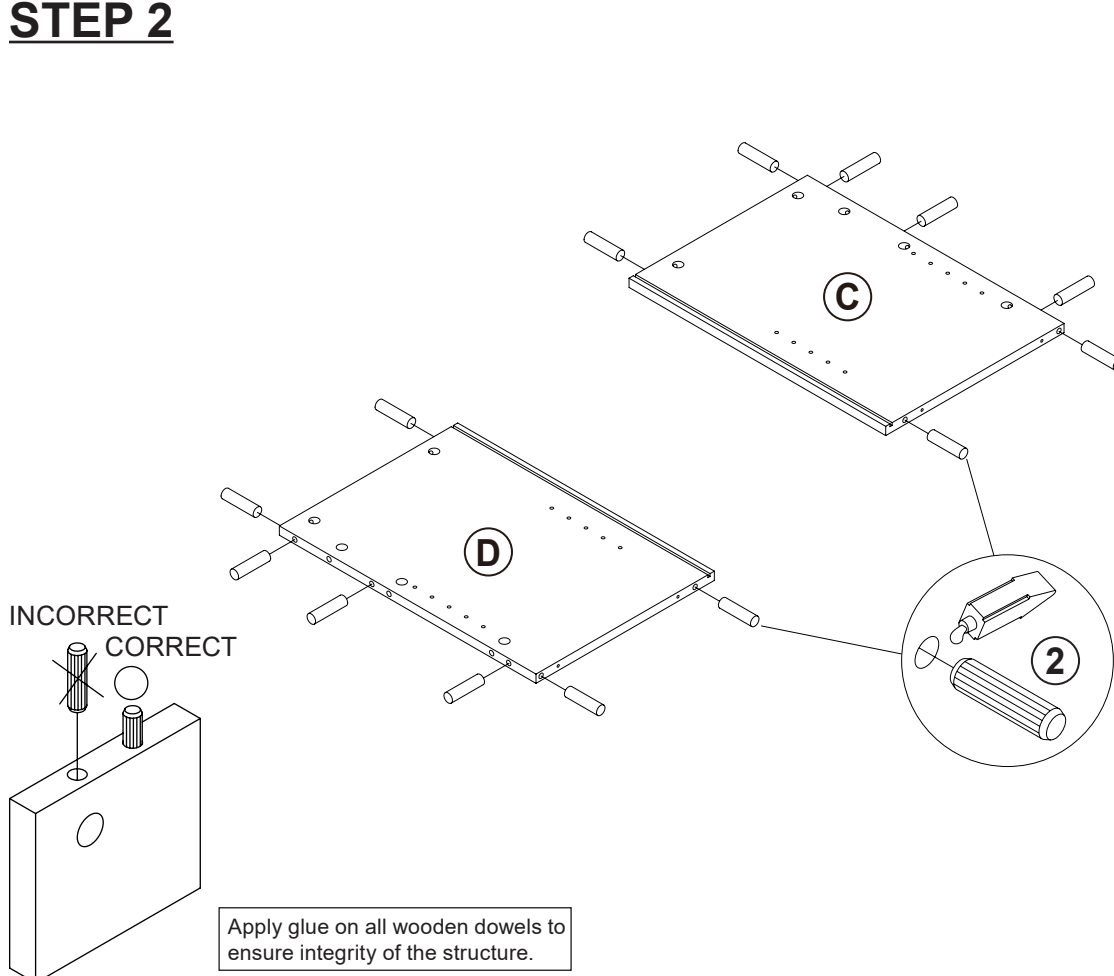


ITEM: **722863**

 STEP 3

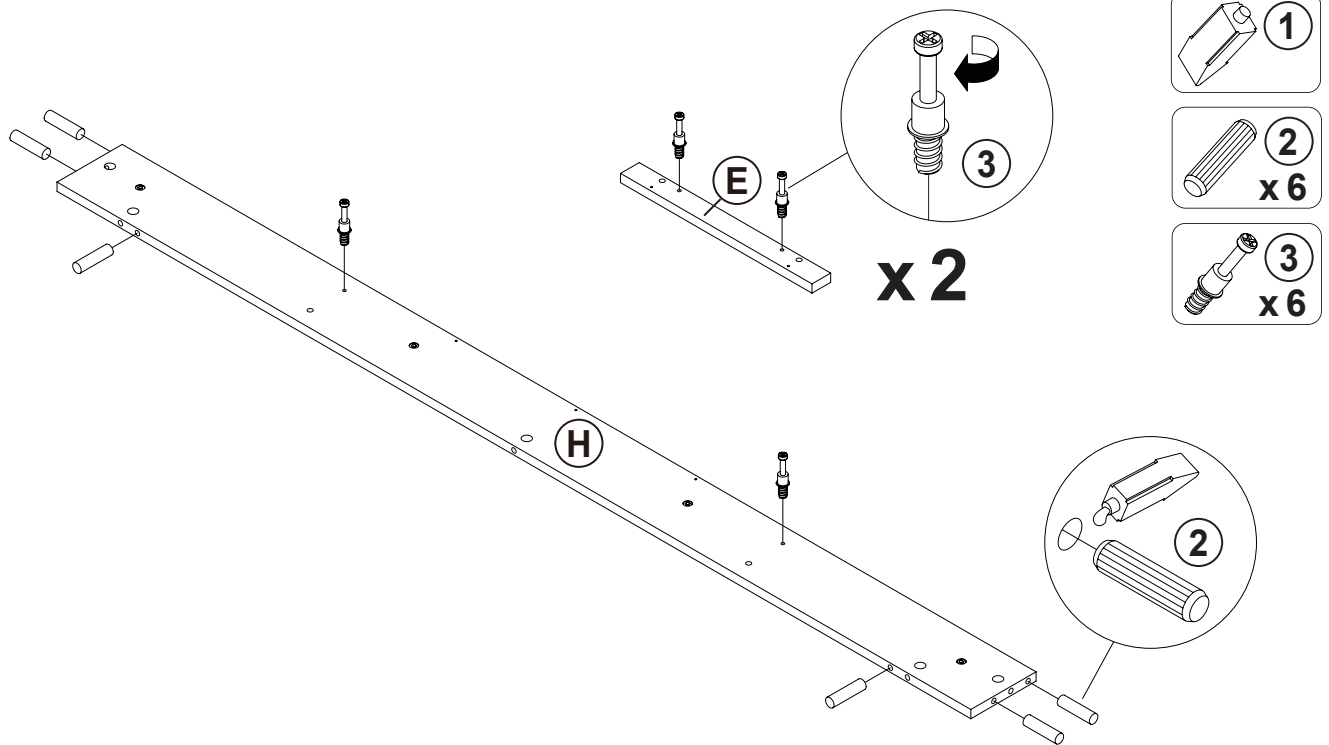

 
STEP 4

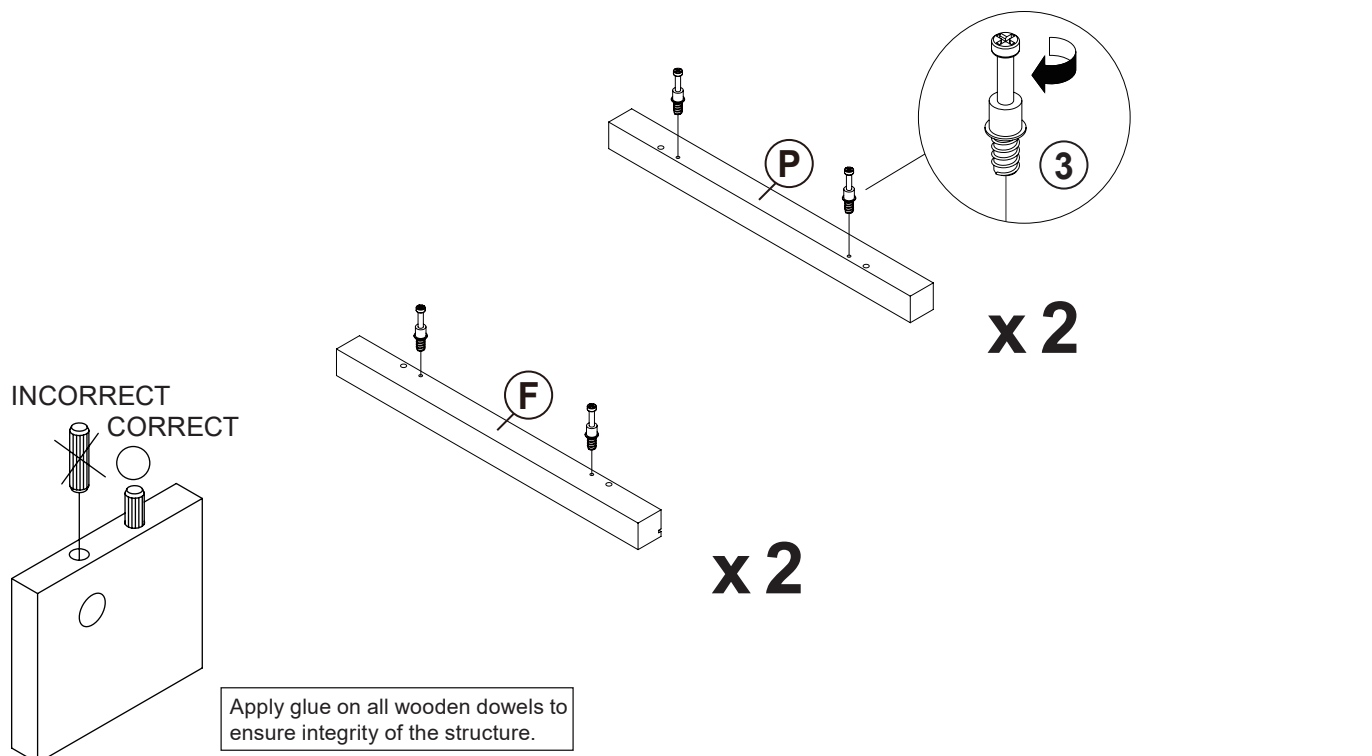


ITEM: **722863**

COASTER
FINE FURNITURE

 STEP 5




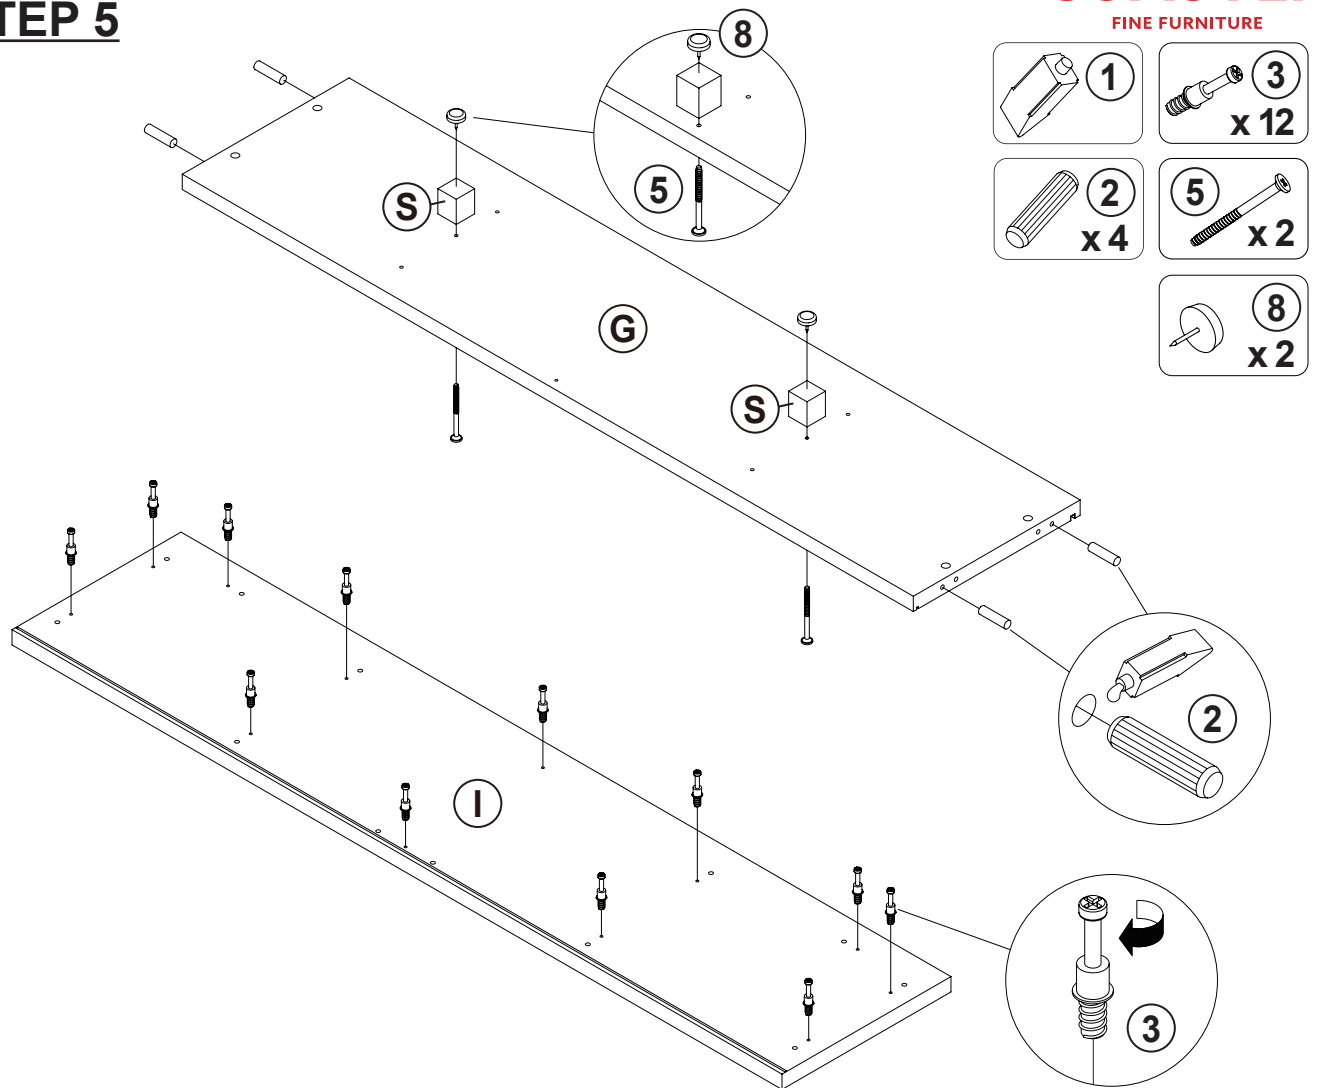


 STEP 6


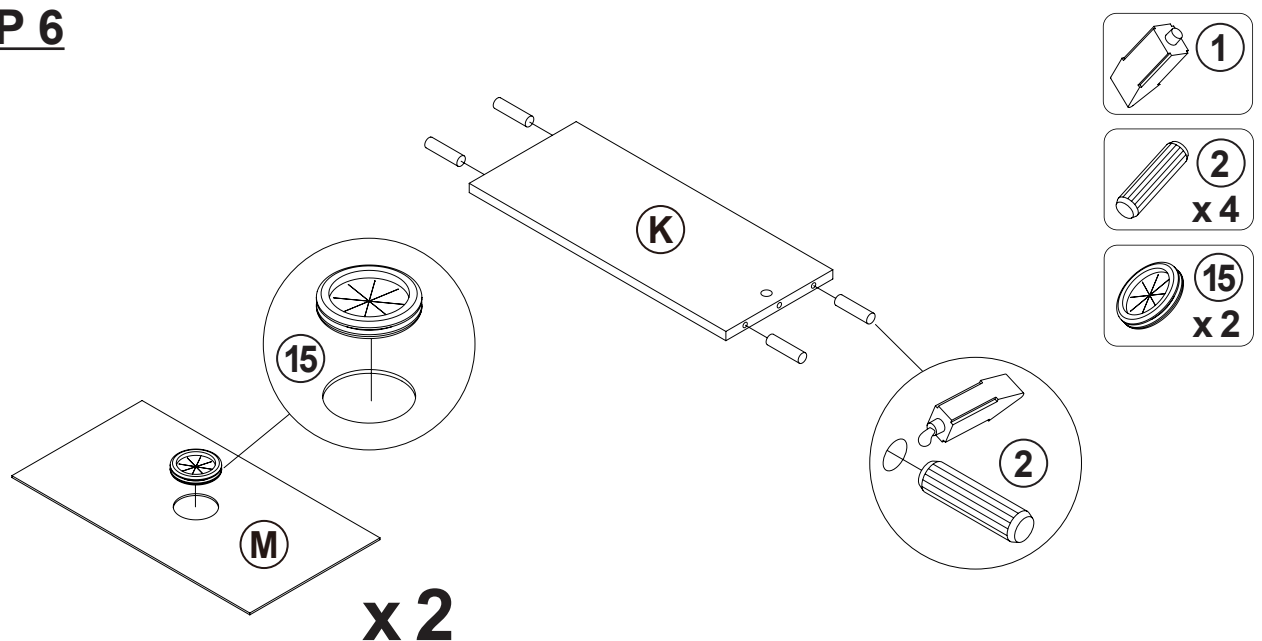


ITEM: **722863**

    STEP 7

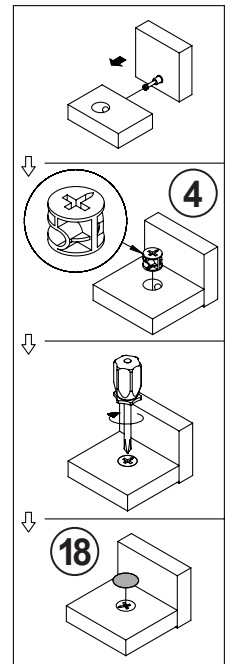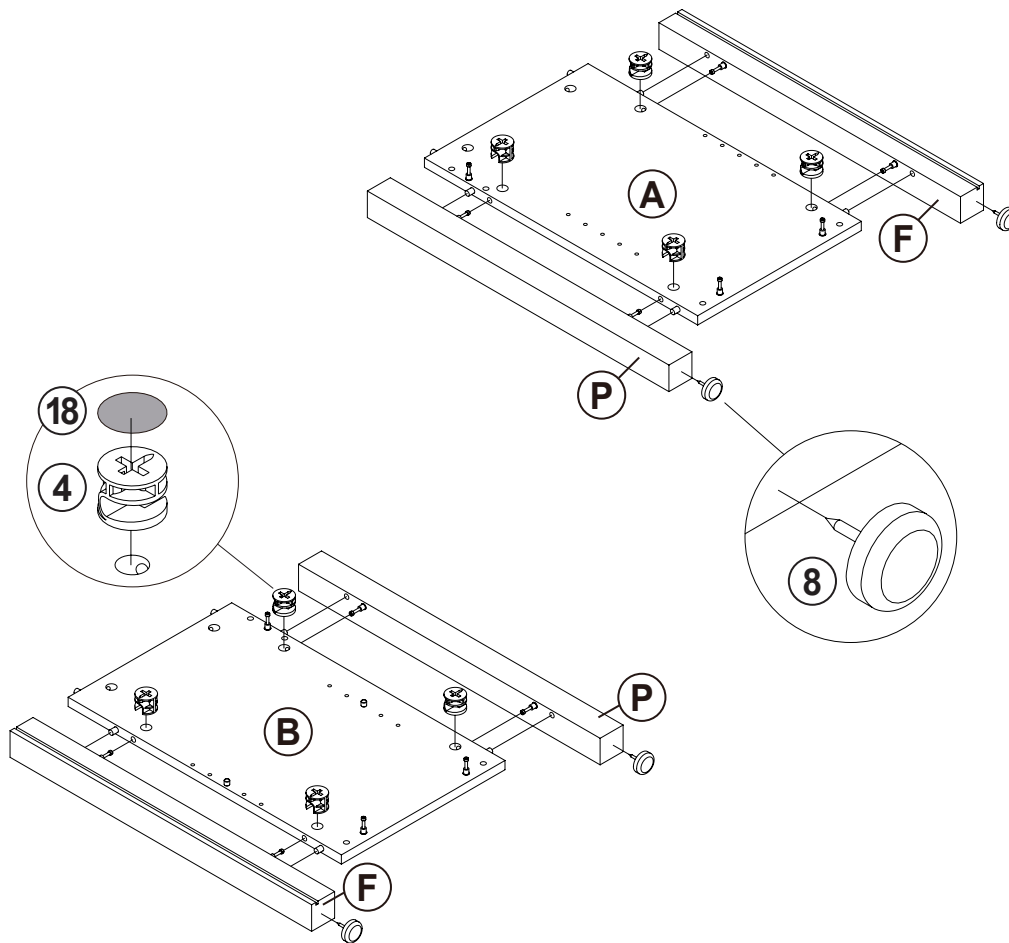

 
 
STEP 8

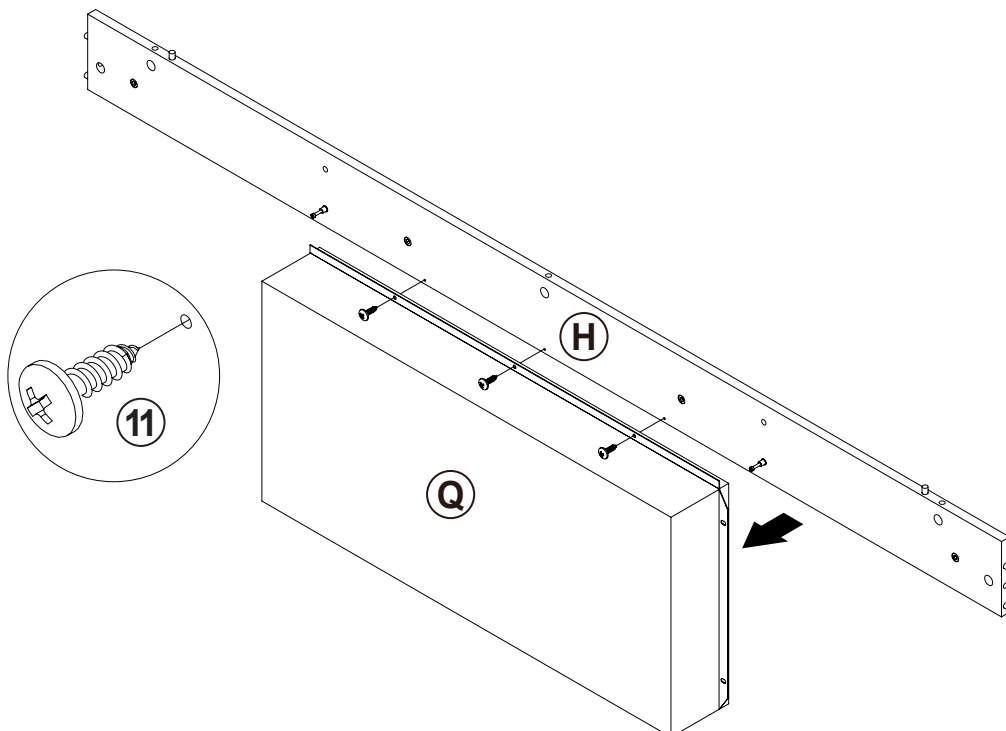




ITEM: **722863**

COASTER
FINE FURNITURE

  STEP 9

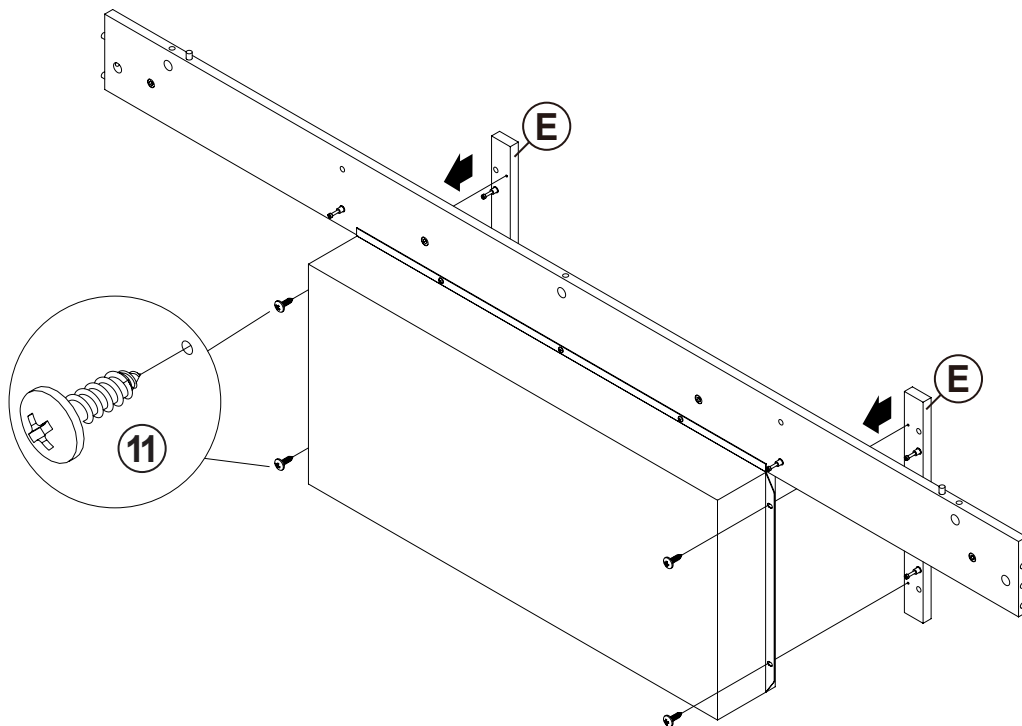

   
STEP 10

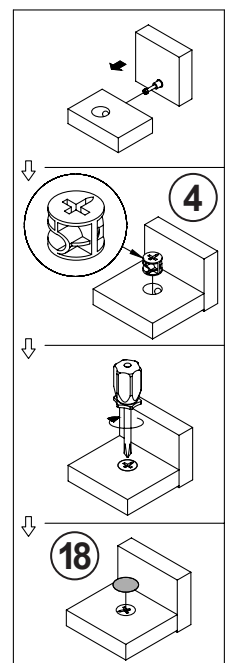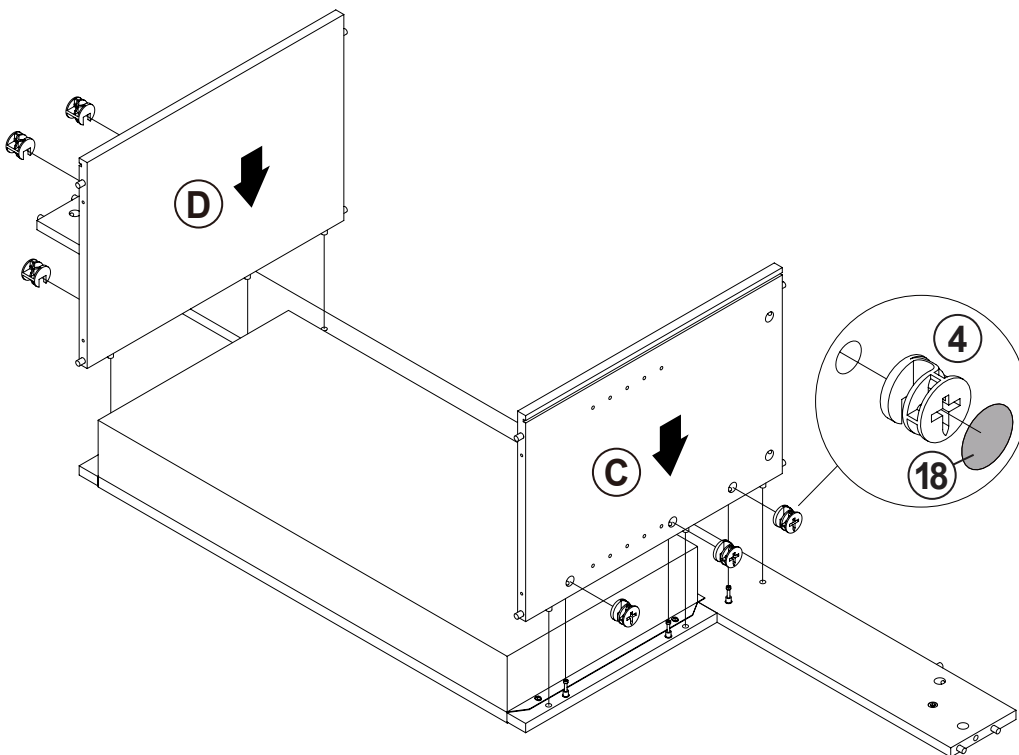

ITEM: **722863**


COASTER
FINE FURNITURE

 STEP 11

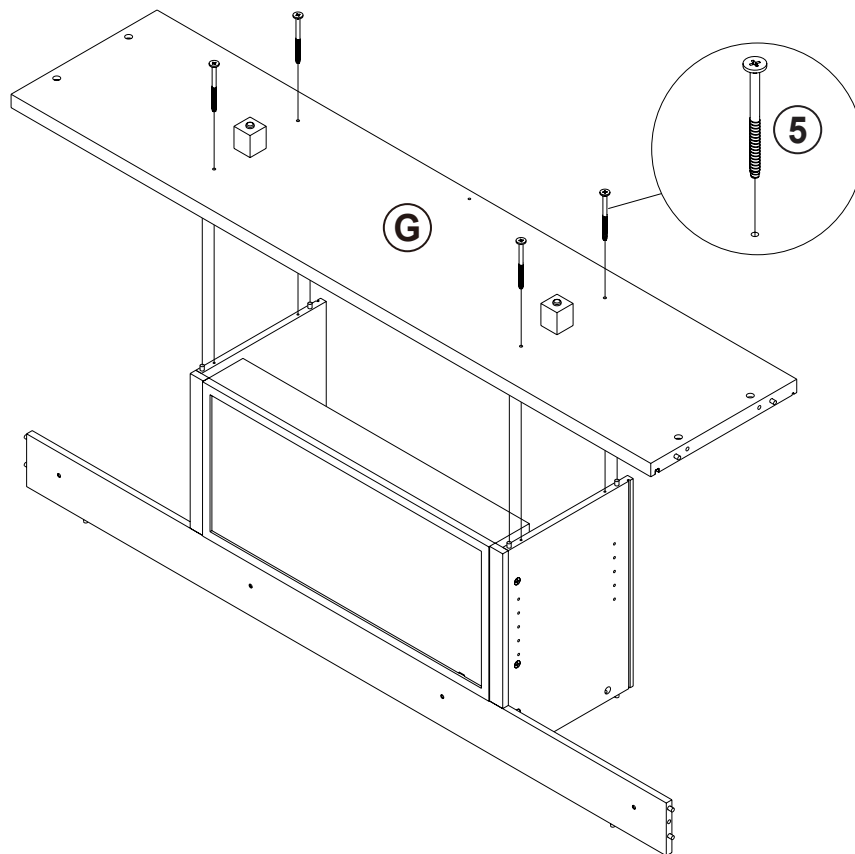


5
x 4

 STEP 12

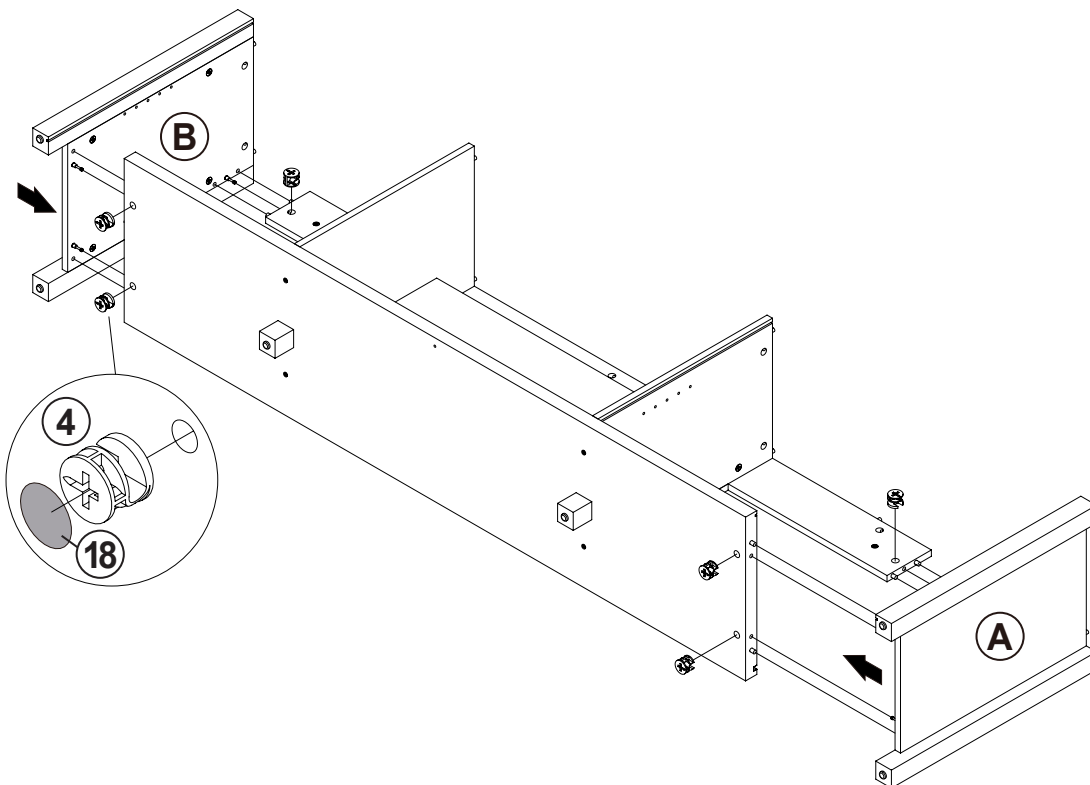

4
x 6


 
18
x 6

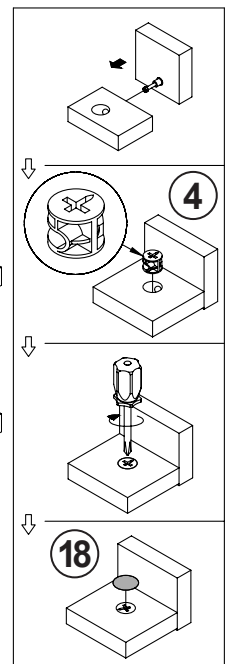




ITEM: **722863**

COASTER
FINE FURNITURE

  STEP 13

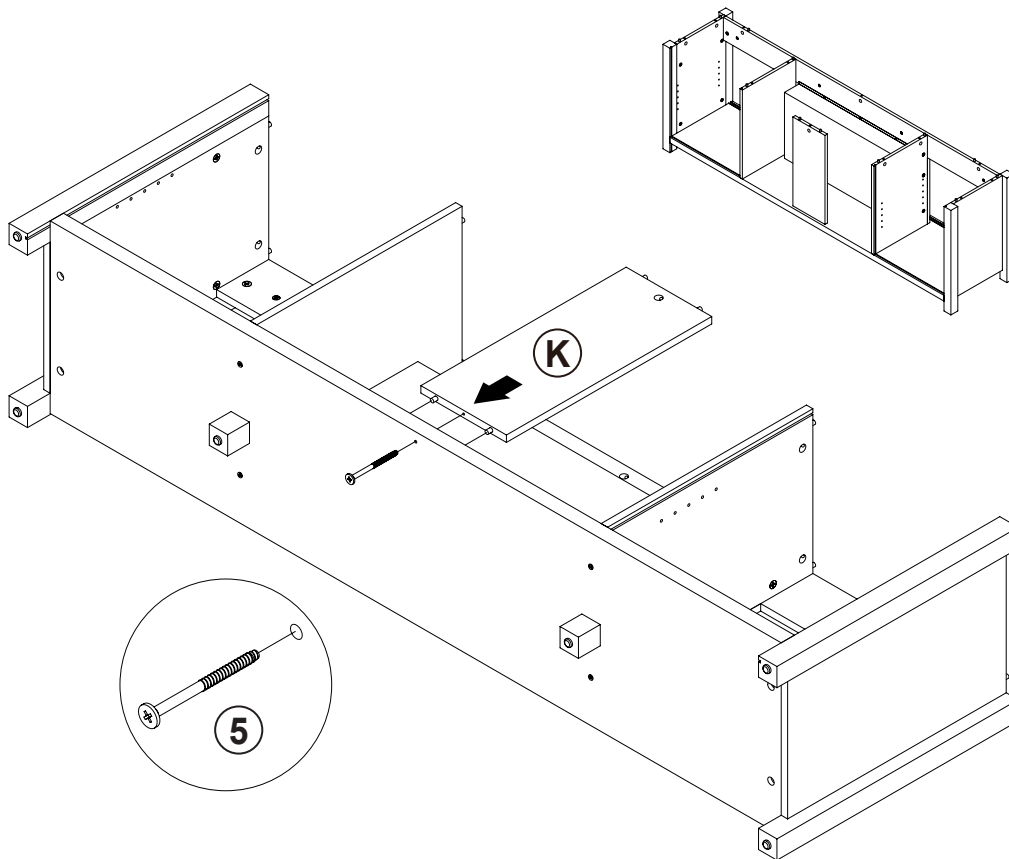


   STEP 14


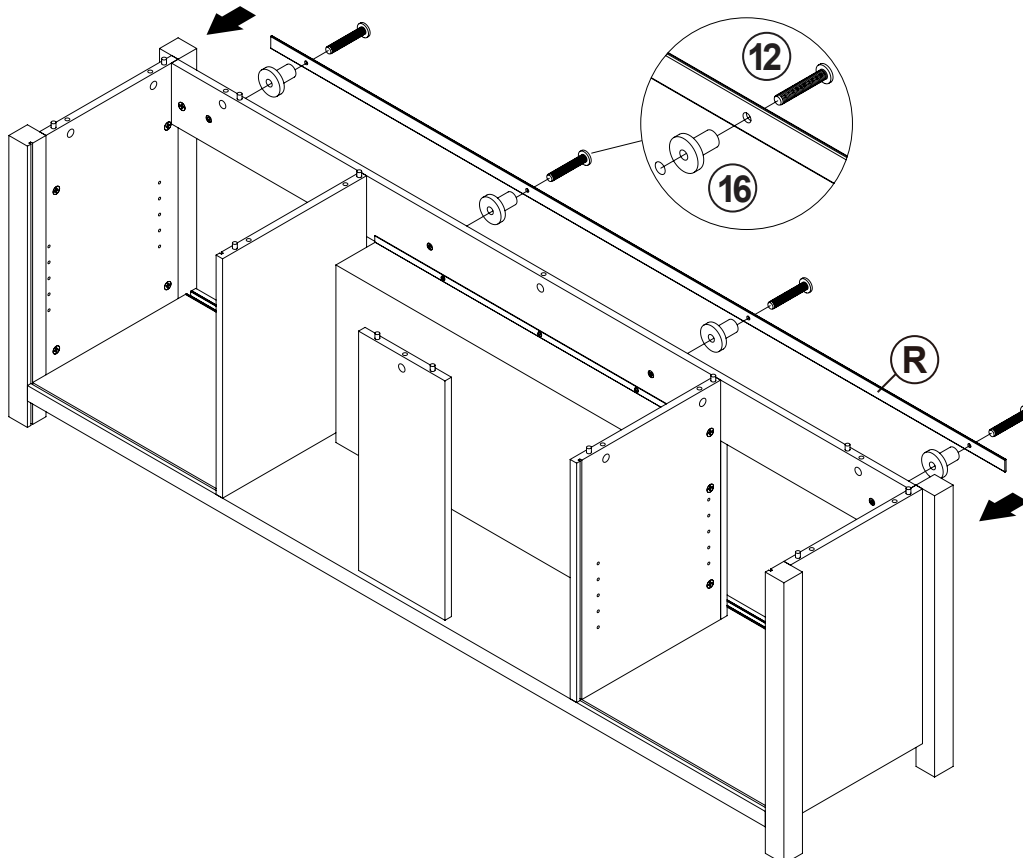




ITEM: **722863**

 STEP 15

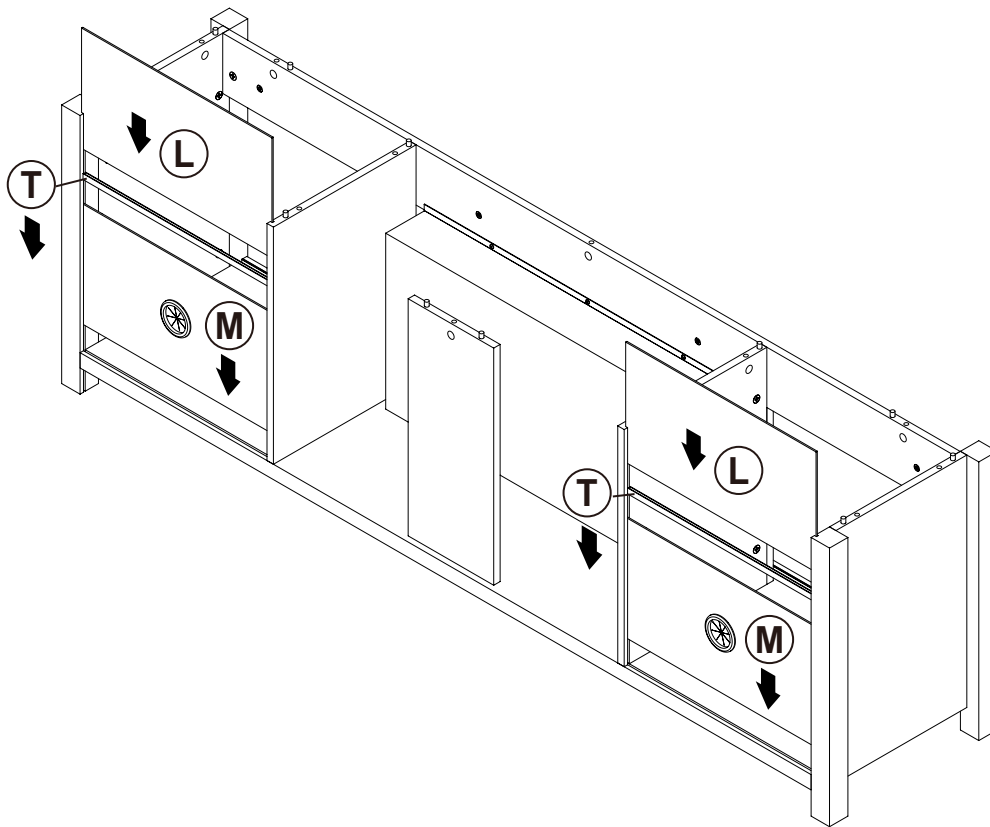

  
 
 
STEP 16

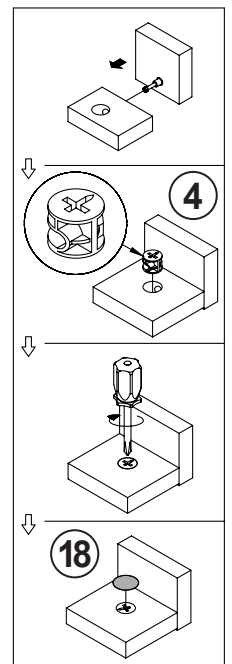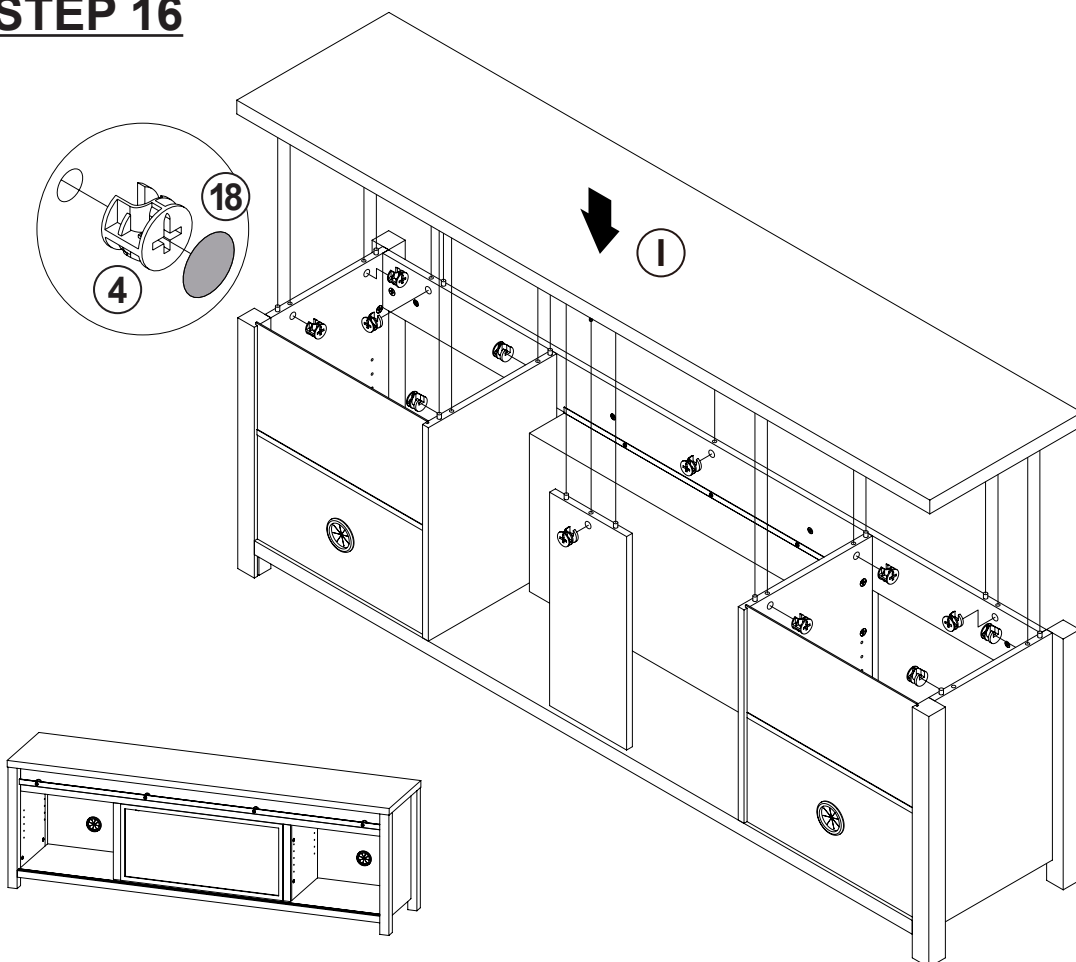


ITEM: **722863**

STEP 17

   COASTER
FINE FURNITURE

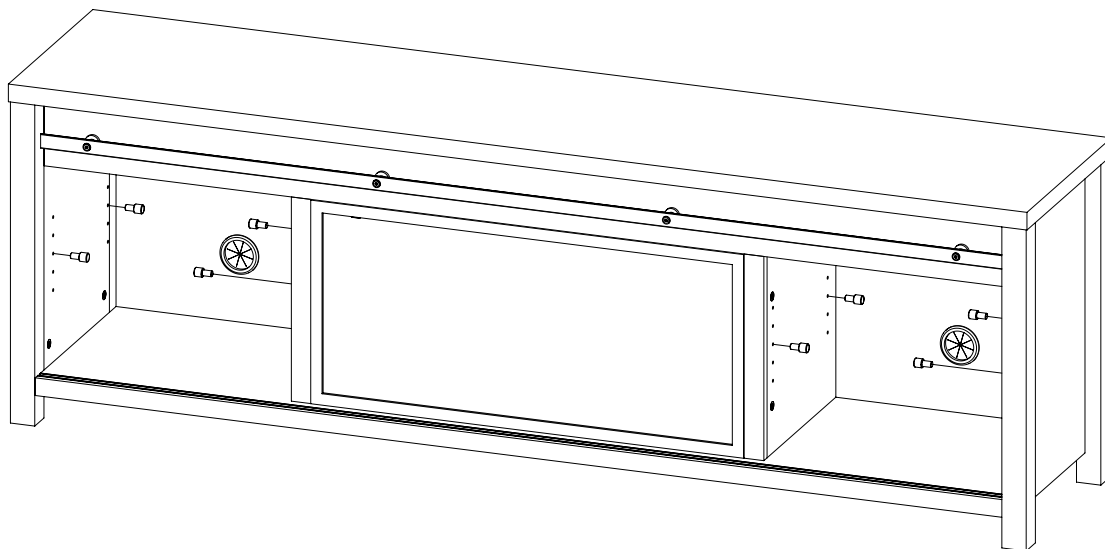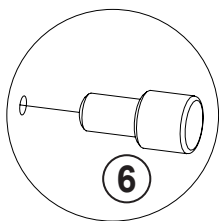

 
STEP 18

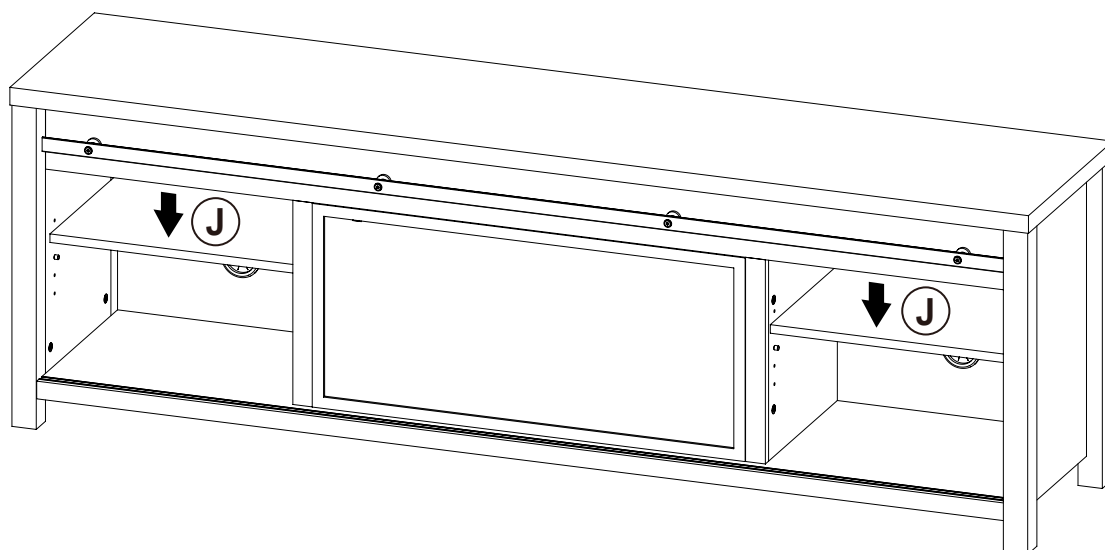


ITEM: **722863**

COASTER
FINE FURNITURE

 STEP 19

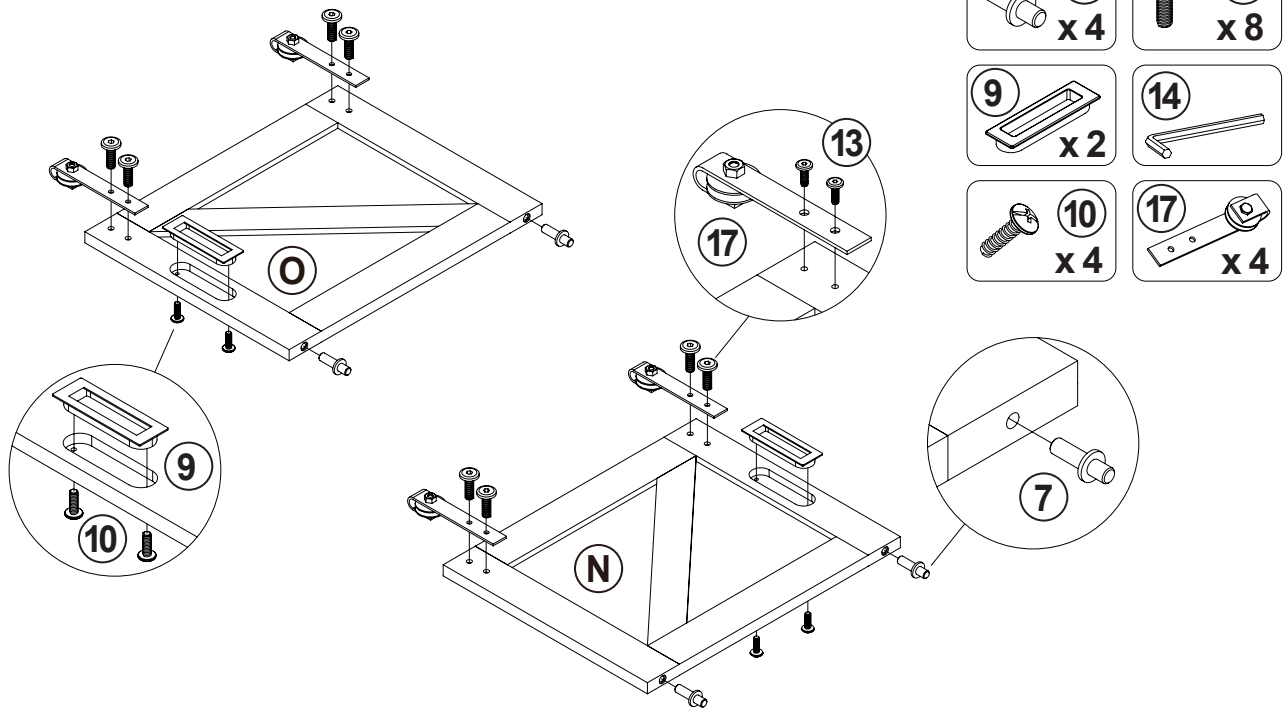


 
STEP 20

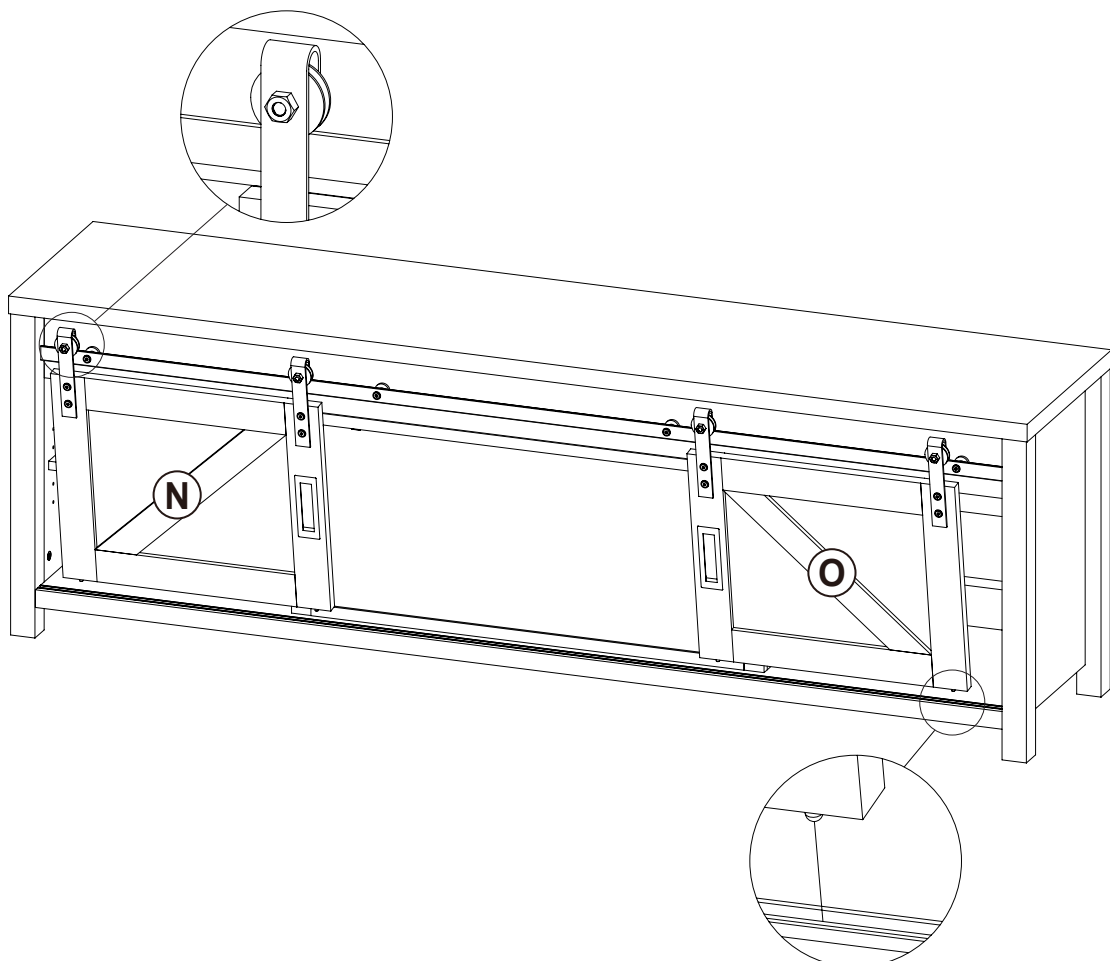



ITEM: **722863**

STEP 21

  COMPLETE

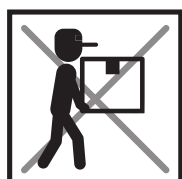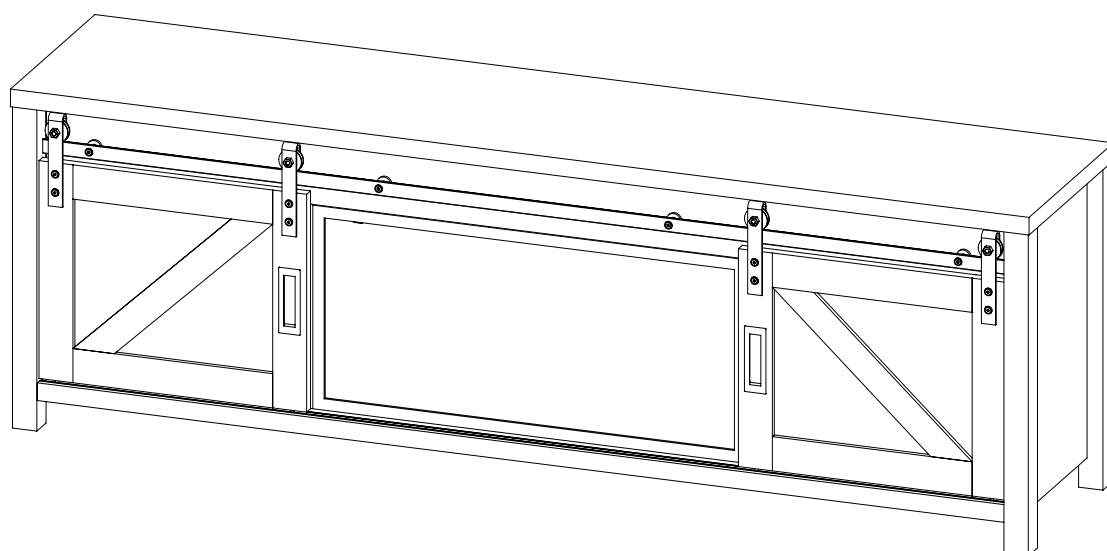

ITEM: 722863

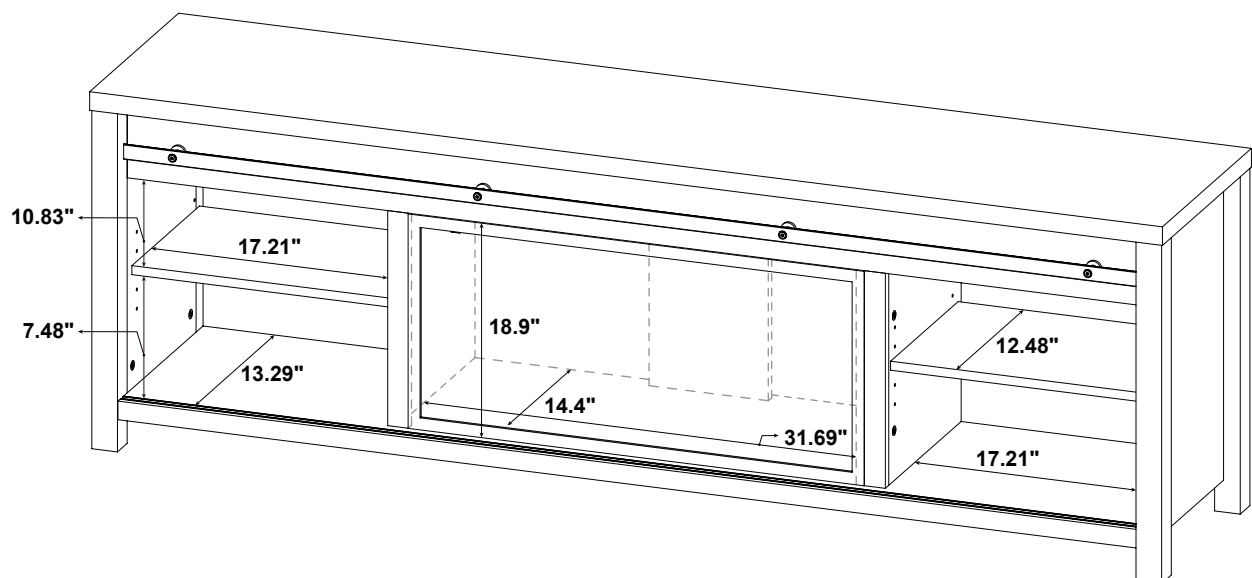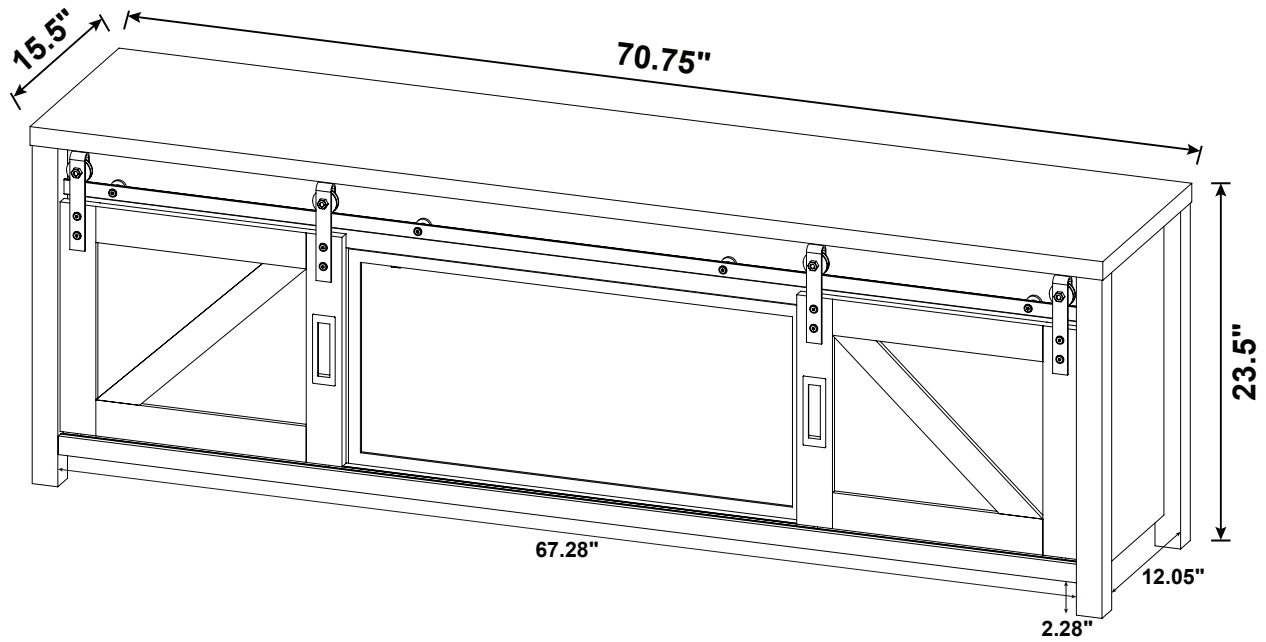  

Note : Dimension tolerance $\pm 5\%$