

ASSEMBLY INSTRUCTIONS

MODEL #

CM3146T


Questions?

GIVE US A CALL: 1-888-980-5122 MON-FRI 8:30AM - 5:30PM (PT)

TOOLS REQUIRED



(Included)

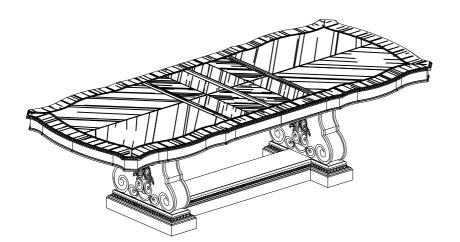



2 - People Recommended

ASSEMBLY RATING



The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

VERSION # 22-04-14






Thank you for your purchase!

We hope you enjoy this new addition to your home for many years to come.

Our commitment to providing quality products does not simply end when you purchase our product. We fully stand behind our products from start to finish. Our customer service department is available Monday – Friday 8:30 AM – 5:30 PM Pacific Time and can help with assembly questions as well as, if necessary, replacing damaged or missing parts. To help expedite our service, please have these assembly instructions readily available, along with your order receipt.

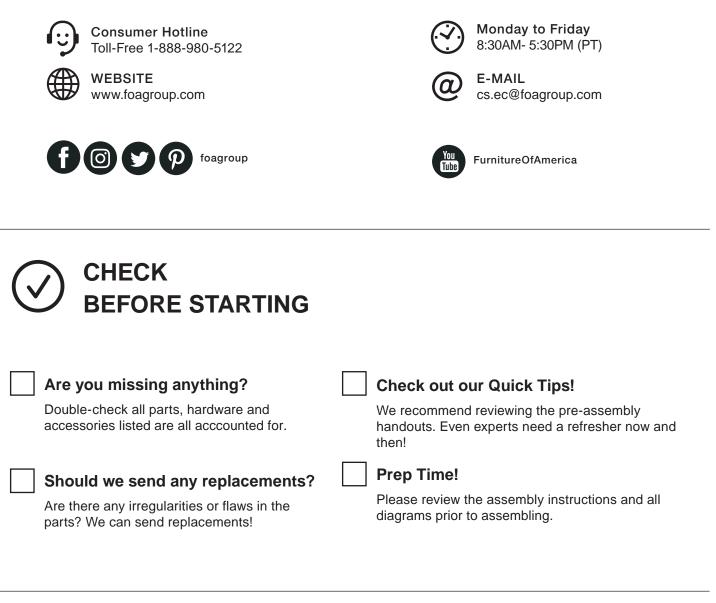

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





 












Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.

Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ALWAYS have at least two people

Teamwork

to help with transporting and assembling the product to avoid potential injury and/or damage.

Suitable Location

Assembling near the area of the intended location is highly recommended.


Sufficient Space

Make sure you have enough space to move around during the assembly.

ASSEMBLY AND CARE ADVICE



FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

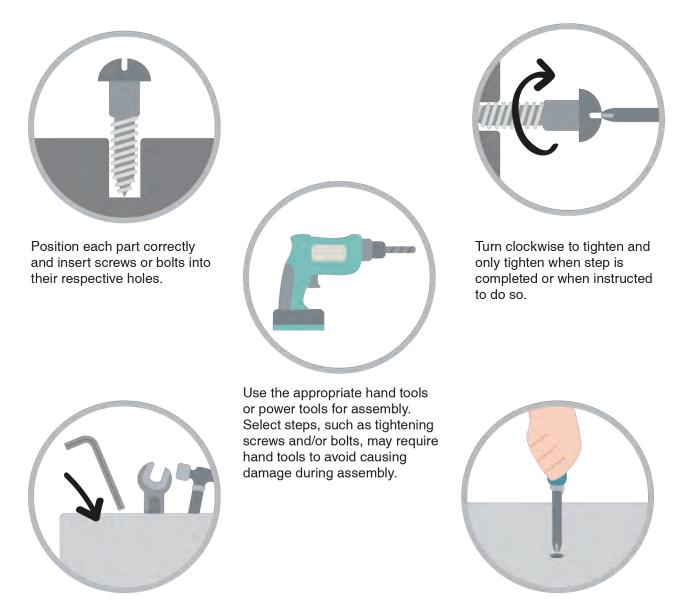

Save the instructions and store any supplied tools for later maintenance.


After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.


IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



 Please keep instructions for future reference.


 Check the quantity and irregularity of parts and hardware before you start.

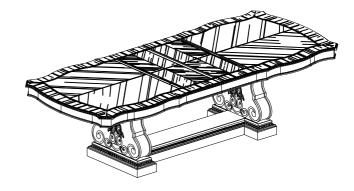

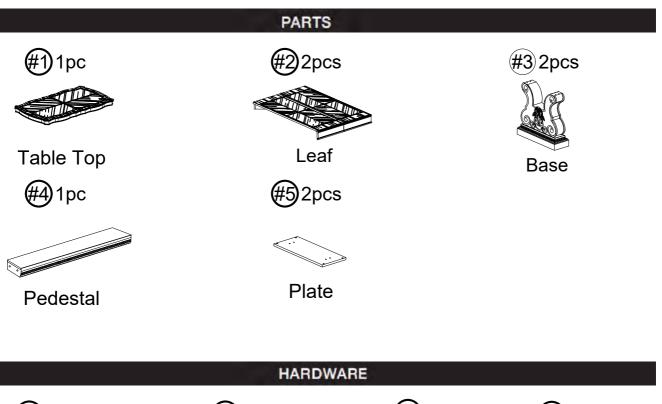

#A 20pcs	#B 20pcs	#C 20pcs	#D 1pc
	Ð	\bigcirc	Ĩ
Bolt Ø5/16" x 1-3/4"	Lock Washer Ø5/16"	Flat Washer Ø5/16"x22mm	Allen Wrench M4


Exploded View

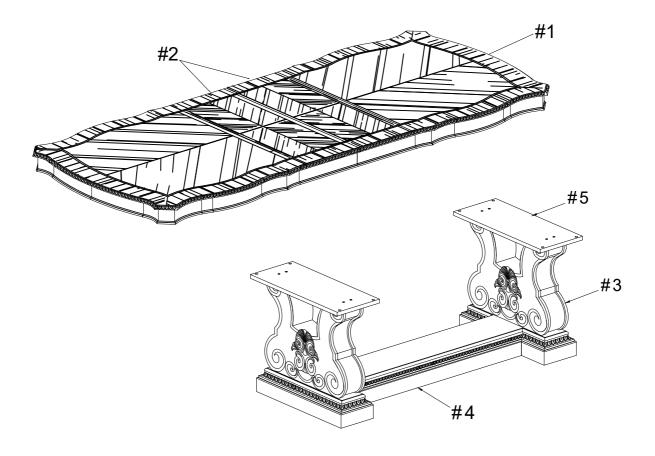


CM3146T is packed in 3 cases

Carton	Disignation	Part		Hardware
СМ3146Т-1	Table Top	#1		 #A x 20pcs #B x 20pcs #C x 20pcs #D x 1pc
	Leaf (2pcs)	#2		
	Plate (2pcs)	#5		
СМ3146Т-2	Base(2pcs)	#3		
СМ3146Т-3	Pedestal	#4		


ASSEMBLY INSTRUCTIONS

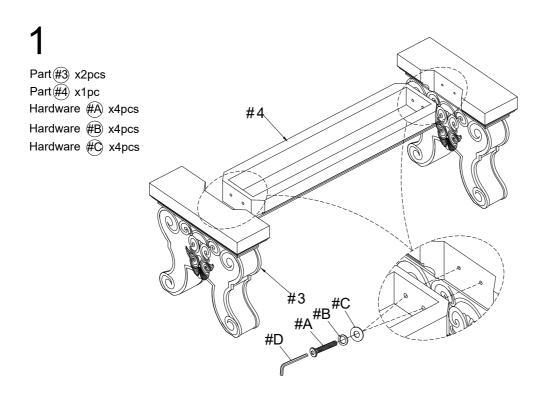

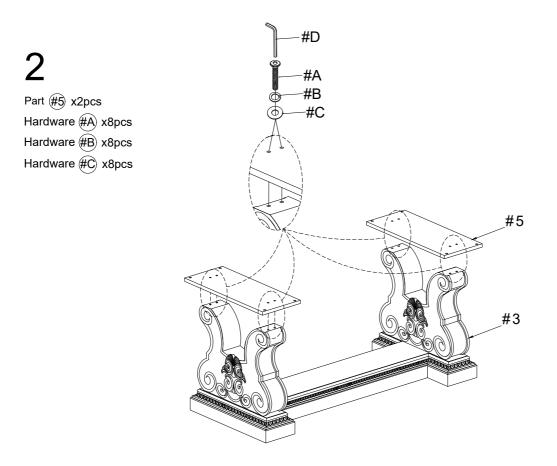


ASSEMBLY INSTRUCTIONS

3

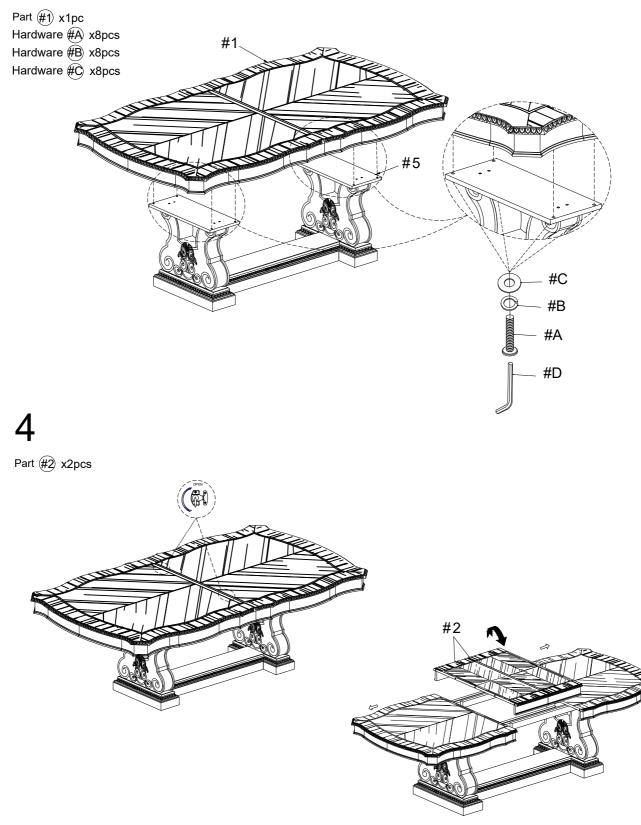


ASSEMBLY INSTRUCTIONS

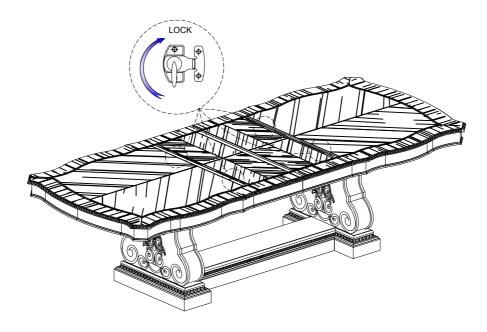

6

5

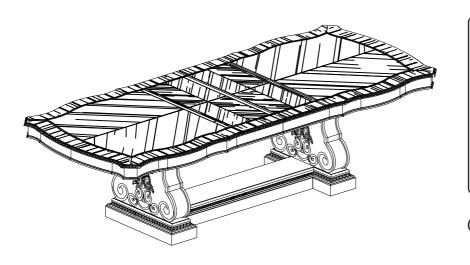



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.

✓ Keep this handy!

Please retain this instruction manual and any order-related information for future reference.

✓ Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting of adjusting the placement.