

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

# 122500 Dining Table

# ITEM: 122500

## **ASSEMBLY INSTRUCTION**



#### **ASSEMBLY TIPS:**

- 1. Remove hardware form box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### **WARNING:**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

# **PARTS IDENTIFICATION**

A TOP



1PC

B LEG



4PCS

## HARDWARE IDENTIFICATION

1 BOLT (Ø5/16" x 75mm - RBW)



8PCS

2 LOCK WASHER (Ø5/16" x 13mm - RBW)



8PCS

3 FLAT WASHER (Ø5/16" x 19mm - RBW)



8PCS

4 ALLEN WRENCH (M4 x 59mm - RBW)



1PC

#### NOTE:


Phillips head screw driver is required in the assembly process. However, manufacturer does not provide this item.

# ITEM: 122500

# COASTER

# **ASSEMBLY INSTRUCTION**

# STEP 1

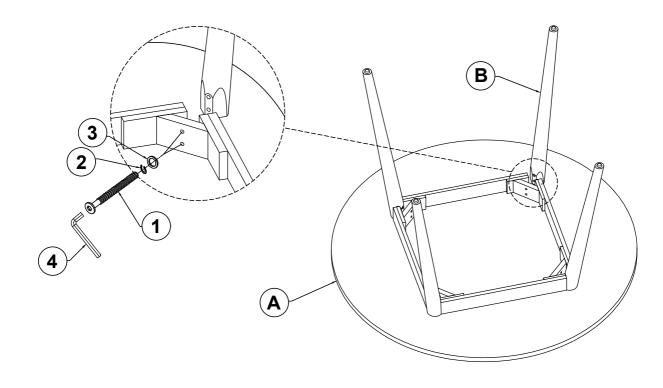


## STEP 2 COMPLETE





ITEM: 122500



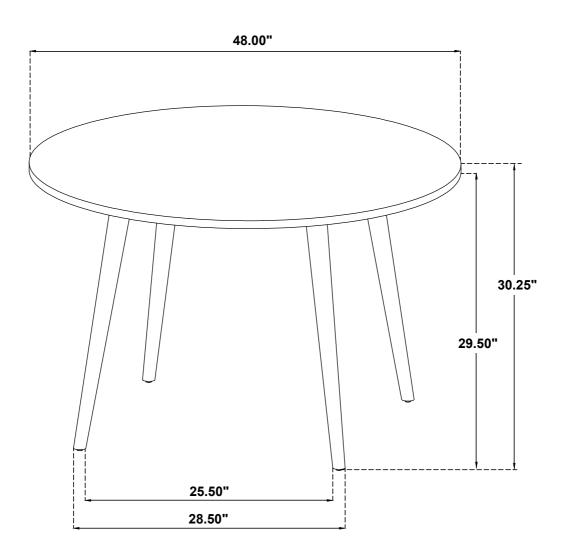

**Note: Dimension tolerance ±5%** 



# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

# 122502WHT Side Chair

# ITEM: 122502WHT

### **ASSEMBLY INSTRUCTION**



#### **ASSEMBLY TIPS:**

- 1. Remove hardware form box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### **WARNING:**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

# **PARTS IDENTIFICATION**

A SEAT AND BACK

B LEG FRAME

2PCS

C STRETCHER

2PCS

# HARDWARE IDENTIFICATION

| 1 | BOLT<br>(Ø1/4" x 35mm - RBW)         |                     | 4PCS |
|---|--------------------------------------|---------------------|------|
| 2 | LOCK WASHER<br>(Ø5/16" x 13mm - RBW) |                     | 4PCS |
| 3 | FLAT WASHER<br>(Ø5/16" x 19mm - RBW) |                     | 4PCS |
| 4 | PAN HEAD SCREW<br>(Ø4" x 28mm - RBW) | () <del>-mm</del> > | 4PCS |
| 5 | ALLEN WRENCH<br>(M4 x 59mm - RBW)    |                     | 1PC  |

#### NOTE:


Phillips head screw driver is required in the assembly process. However, manufacturer does not provide this item.

# ITEM: 122502WHT


# **ASSEMBLY INSTRUCTION**

# COASTER


## STEP 1

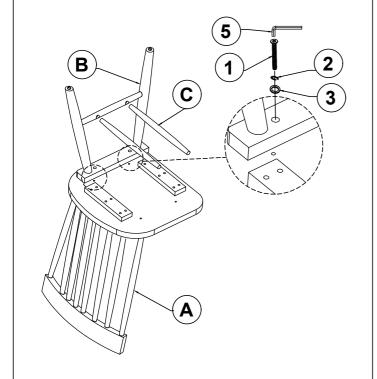


# STEP 2

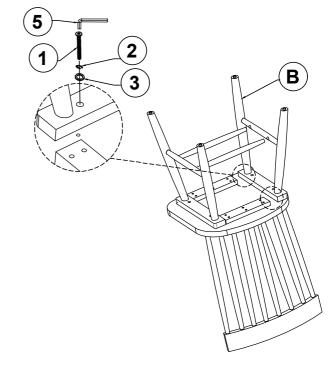

# STEP 3

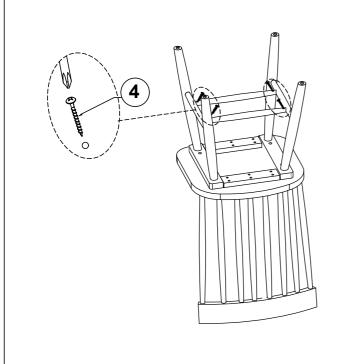

# STEP 4 COMPLETE

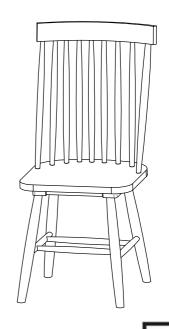




PAGE 3 OF 3

**COASTERFURNITURE.COM** 

# ITEM: 122502WHT



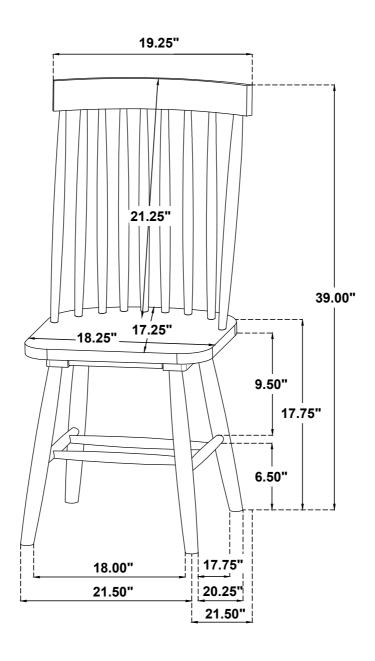

**Note: Dimension tolerance ±5%**