

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

704262
TV CONSOLE

ITEM:704262

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

 
 
 
 
 
 
 
 
 
 
 
 


ASSEMBLY TIME

50 MINUTES

 
 
 
 
 

 
MAX TV SIZE : 85"

PARTS IDENTIFICATION

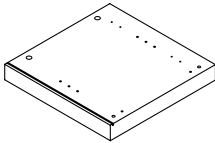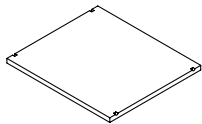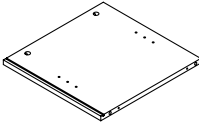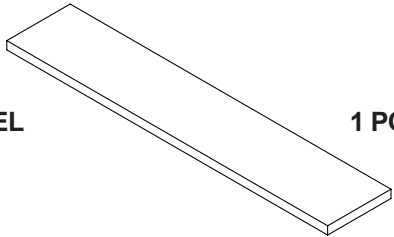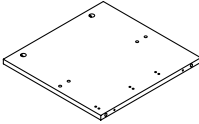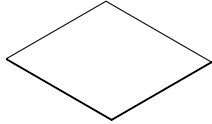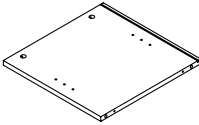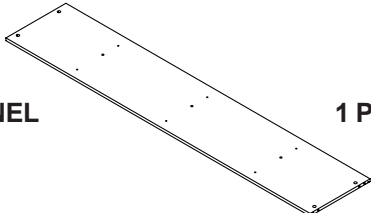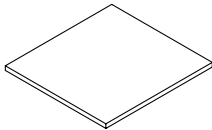A	LEFT SIDE PANEL		1 PC	G	CROSS PANEL		2 PCS
B	RIGHT SIDE PANEL		1 PC	H	ADJUSTABLE SHELF		2 PCS
C	LEFT DIVIDER PANEL		1 PC	I	TOP PANEL		1 PC
D	MIDDLE DIVIDER PANEL		1 PC	J	BACK PANEL		2 PCS
E	RIGHT DIVIDER PANEL		1 PC	K	MIDDLE BACK PANEL		2 PCS
F	BOTTOM PANEL		1 PC	L	DOOR		2 PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

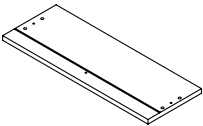 
 
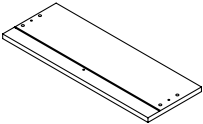 
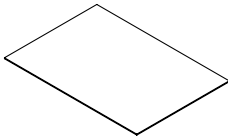 
 


 



 





M	LEFT DRAWER FRONT PANEL		1 PC	Q	DRAWER RIGHT SIDE PANEL		2 PCS
N	RIGHT DRAWER FRONT PANEL		1 PC	R	DRAWER BOTTOM PANEL		2 PCS
O	DRAWER BACK PANEL		2 PCS	S	DRAWER BOTTOM SUPPORT		2 PCS
P	DRAWER LEFT SIDE PANEL		2 PCS				

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:704262

  HARDWARE IDENTIFICATION**Z**

NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	10	CAM BOLT Ø7x63mm SR		2 PCS
2	WOODEN DOWEL Ø8x30mm		32 PCS	11	GLIDES L=350mm SR		2 SET
3	CAM BOLT Ø7x35.5mm SR		24 PCS	12	GLIDES BOLT Ø6x13mm SR		24 PCS
4	CAM LOCK Ø15x12mm SR		28 PCS	13	HINGE Ø35mm SR		4 PCS
5	SCREW Ø4.5x42mm SR		6 PCS	14	HINGE SCREW Ø4x15mm SR		16 PCS
6	SCREW Ø4.5x42mm SR		10 PCS	15	FOOT Ø35xH19mm		3 PCS
7	PLASTIC FEET Ø15mm		4 PCS	16	SCREW DRIVER		1 PC
8	PIN FOR ADJUSTABLE SHELF Ø4.9x15mm SR		8 PCS	17	STICKER Ø20mm		5 PCS
9	WOODEN DOWEL Ø8x50mm		2 PCS				

 
Z11,Z13,Z15 not included in blister packaging.

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 704262

STEP 1

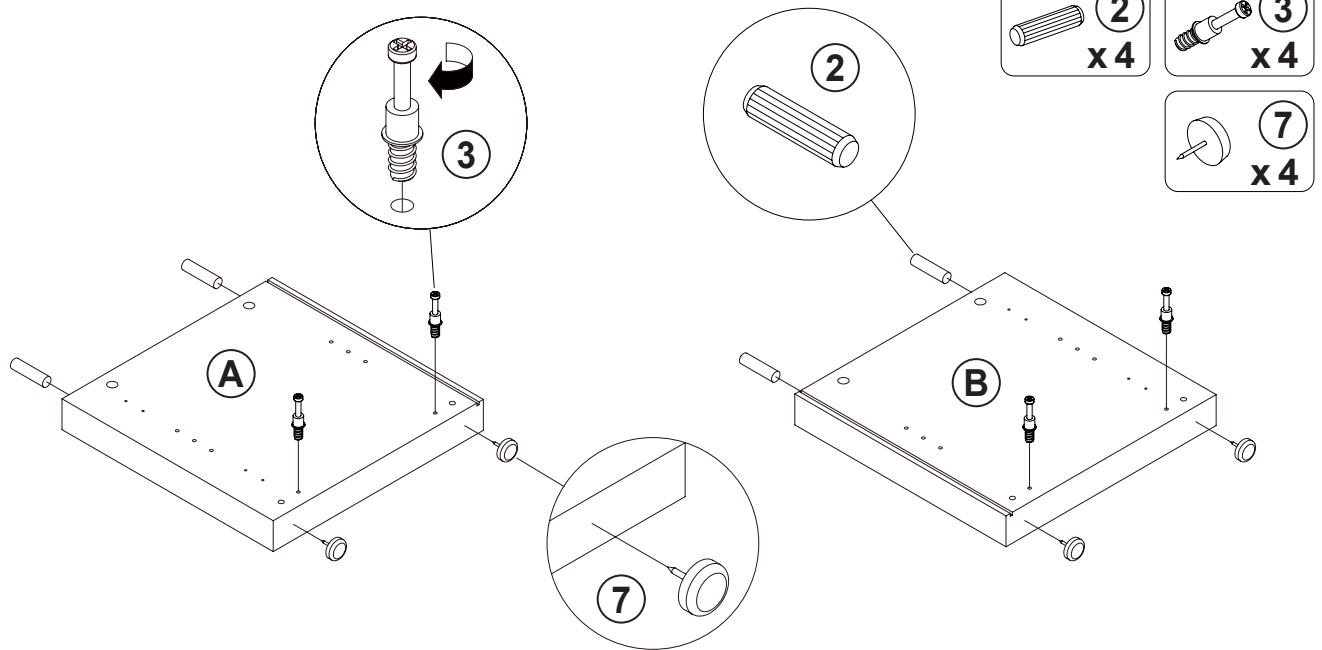


 STEP 2

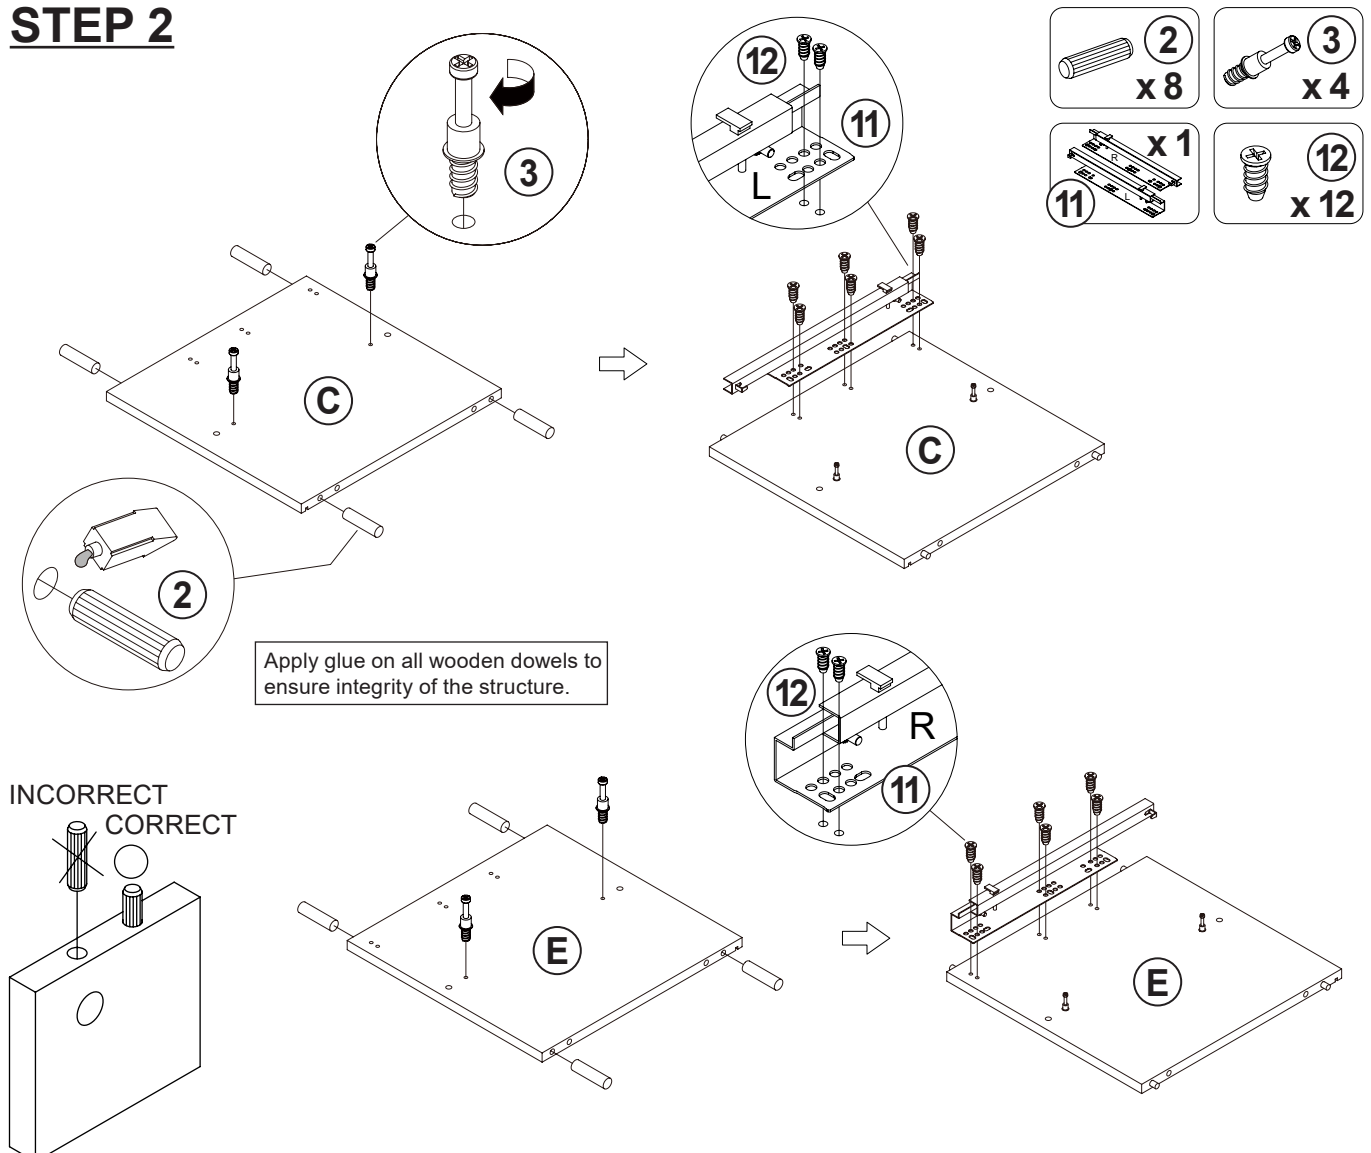


ITEM: **704262**

 STEP 3

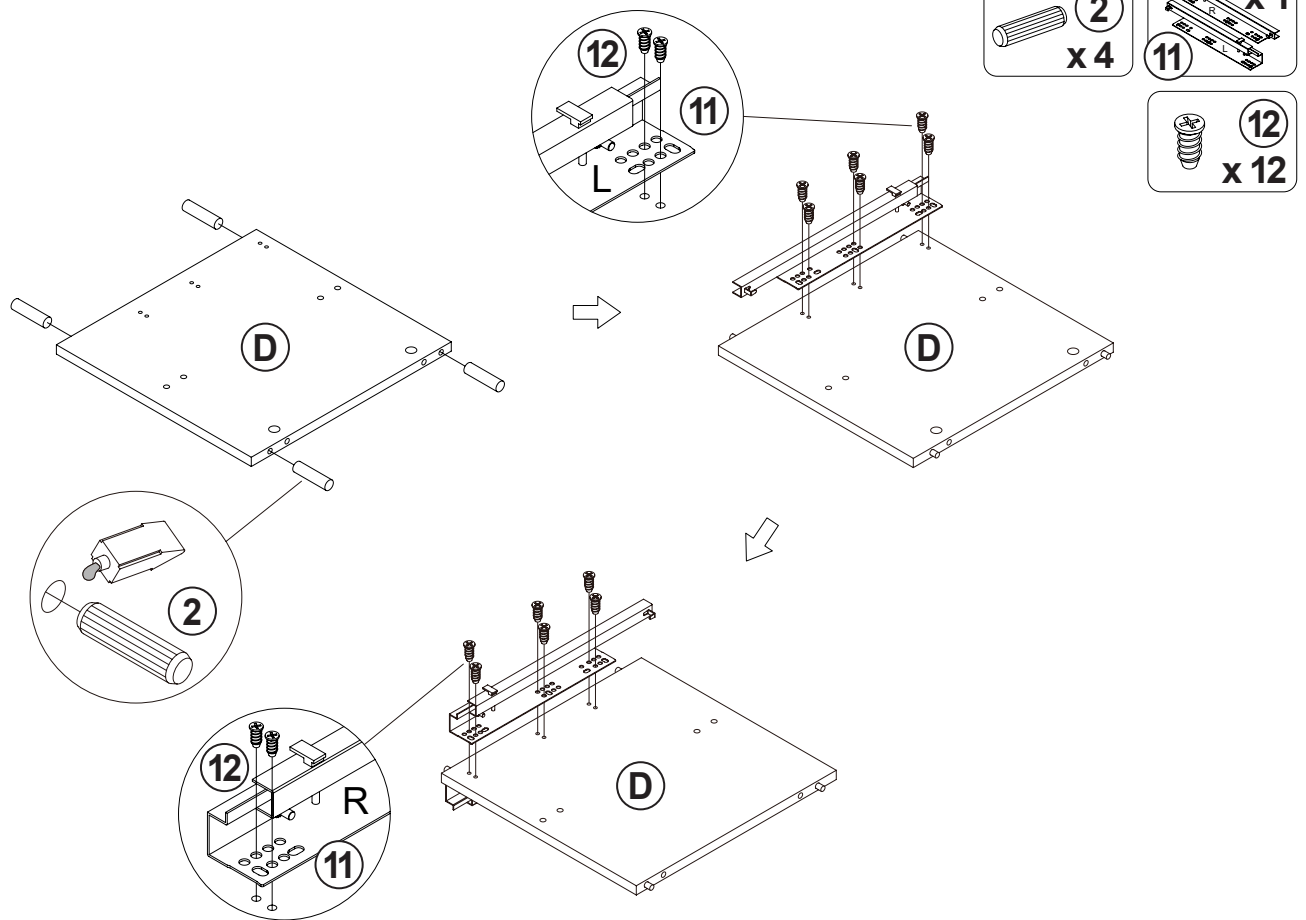


 
STEP 4

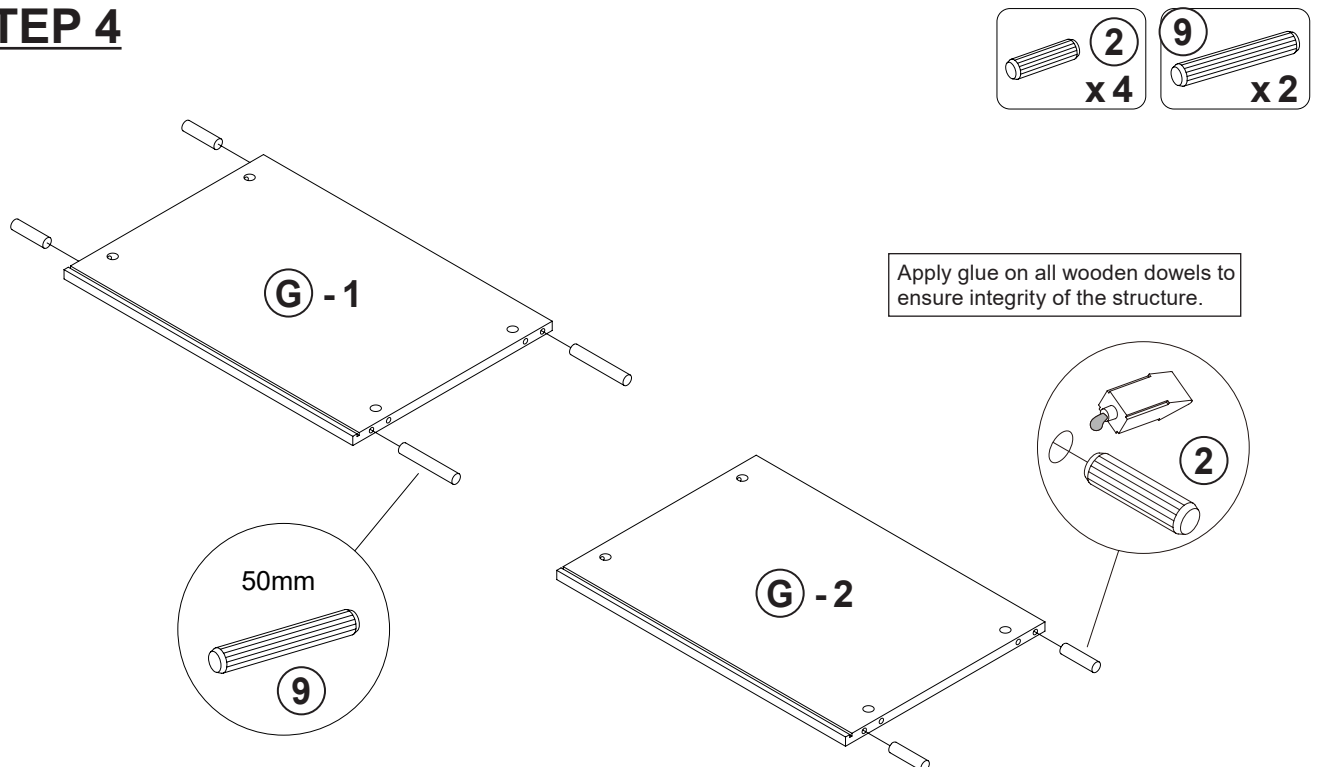

ITEM: **704262**

STEP 5

  
COASTER
FINE FURNITURE

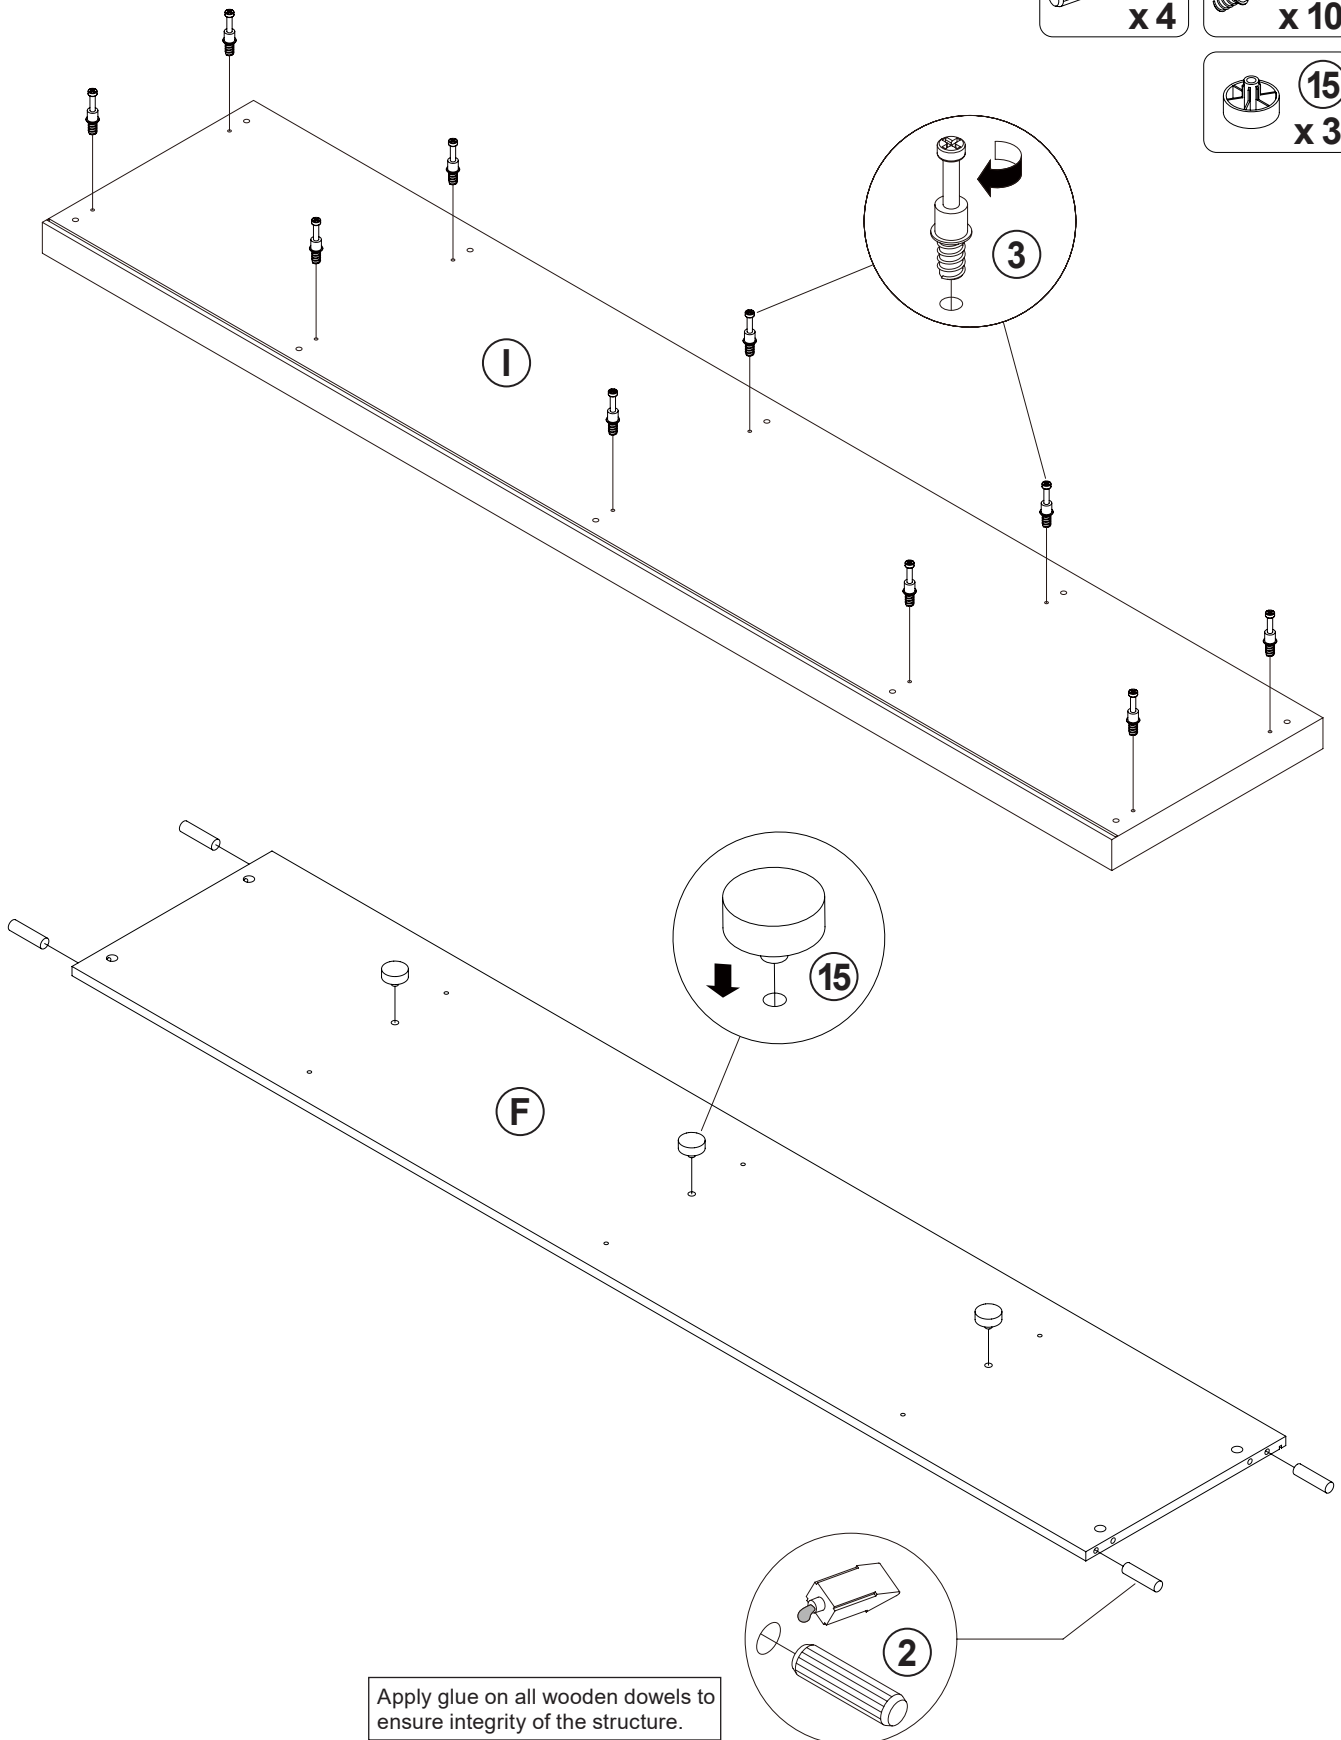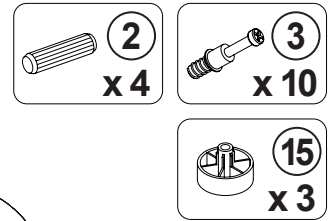


ITEM: 704262

COASTER
FINE FURNITURE

 STEP 6

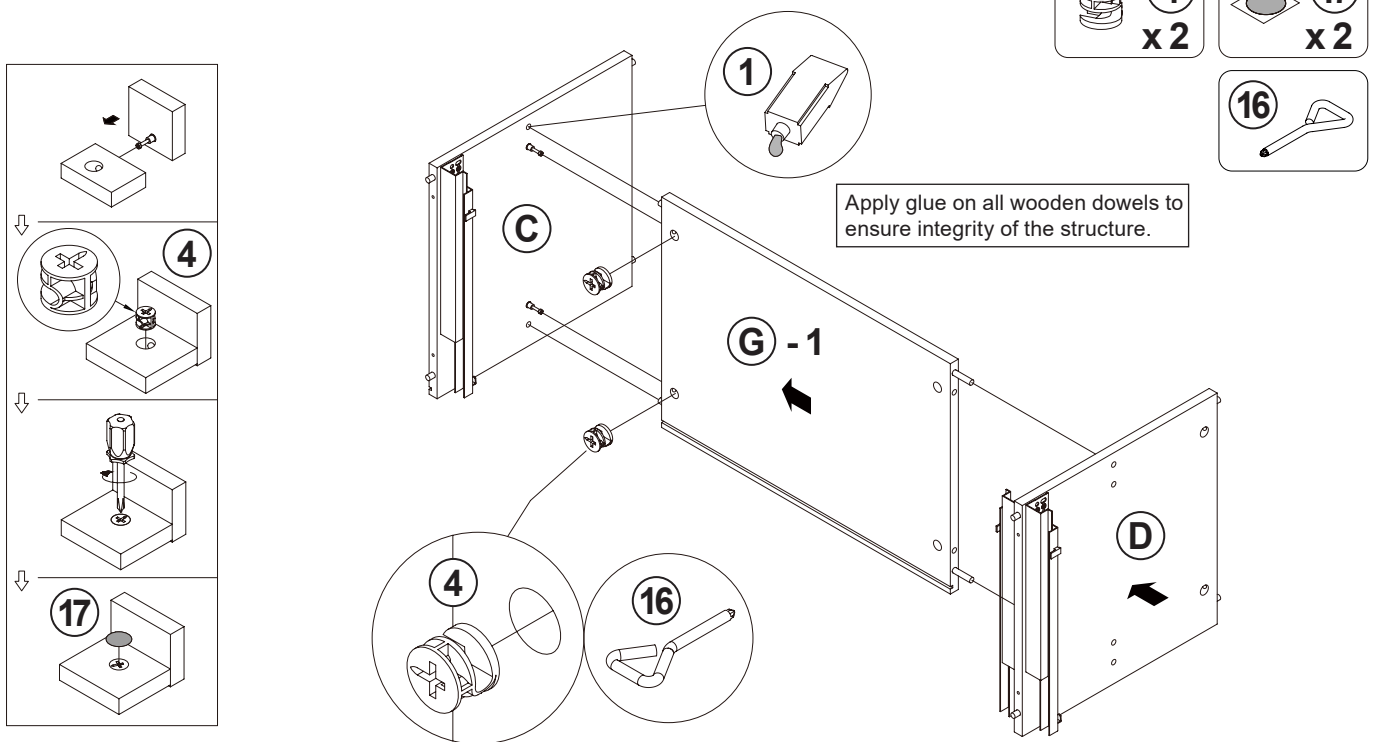

 
STEP 7

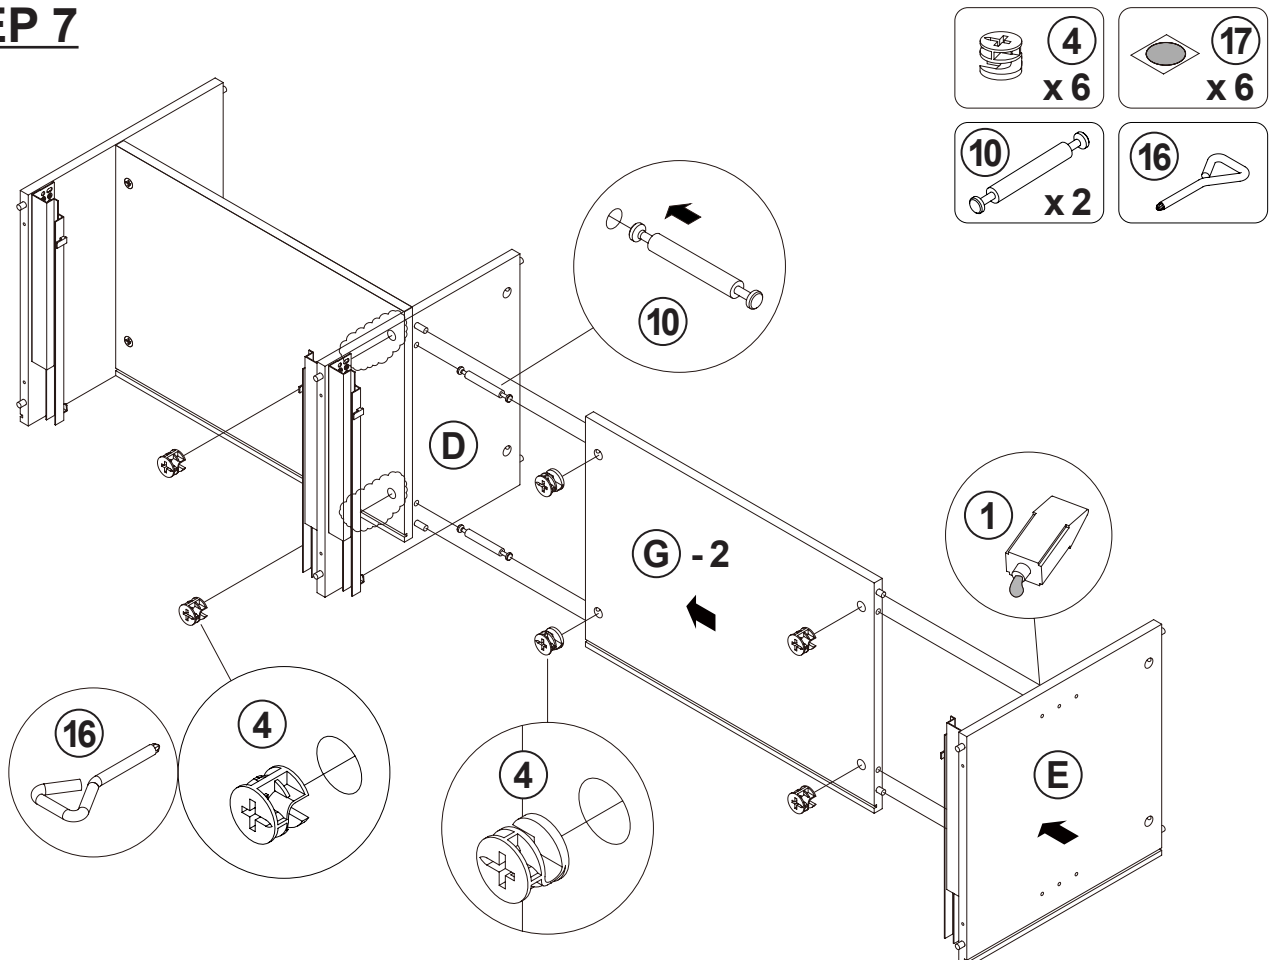


ITEM: **704262**

COASTER
FINE FURNITURE

 STEP 8

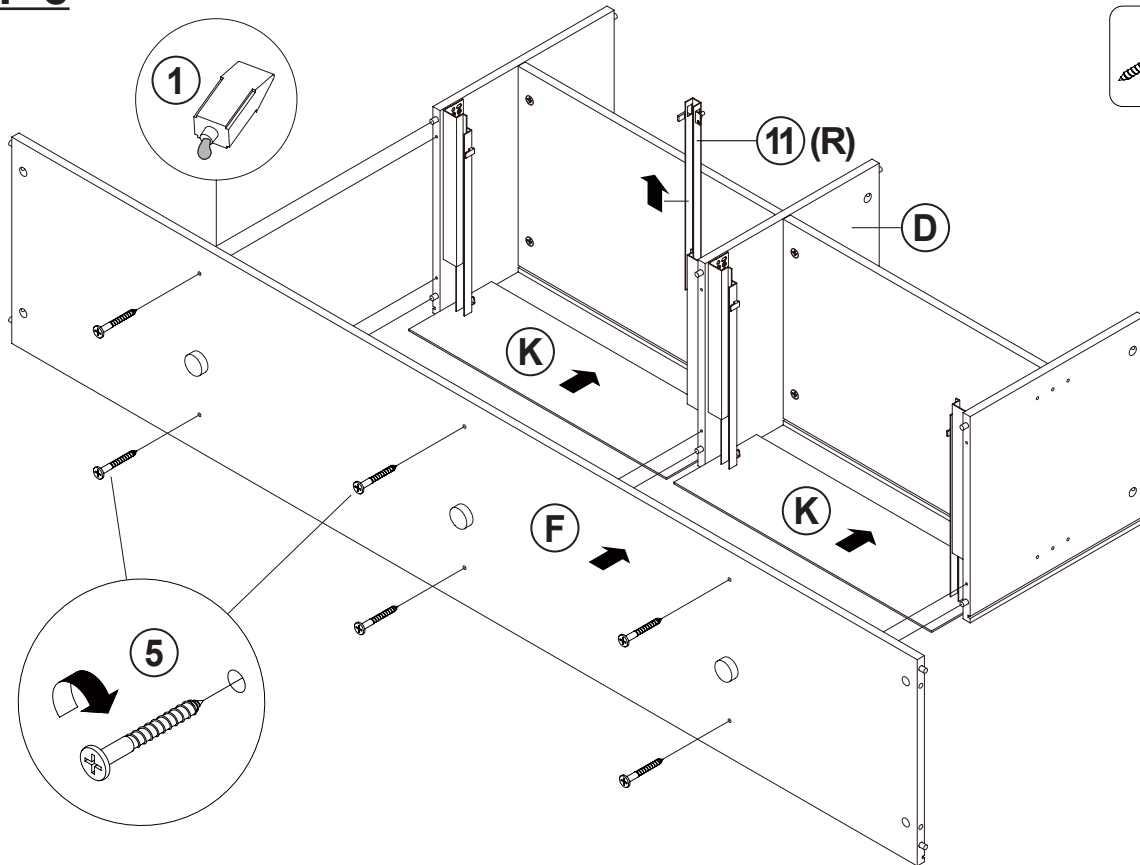

 
STEP 9

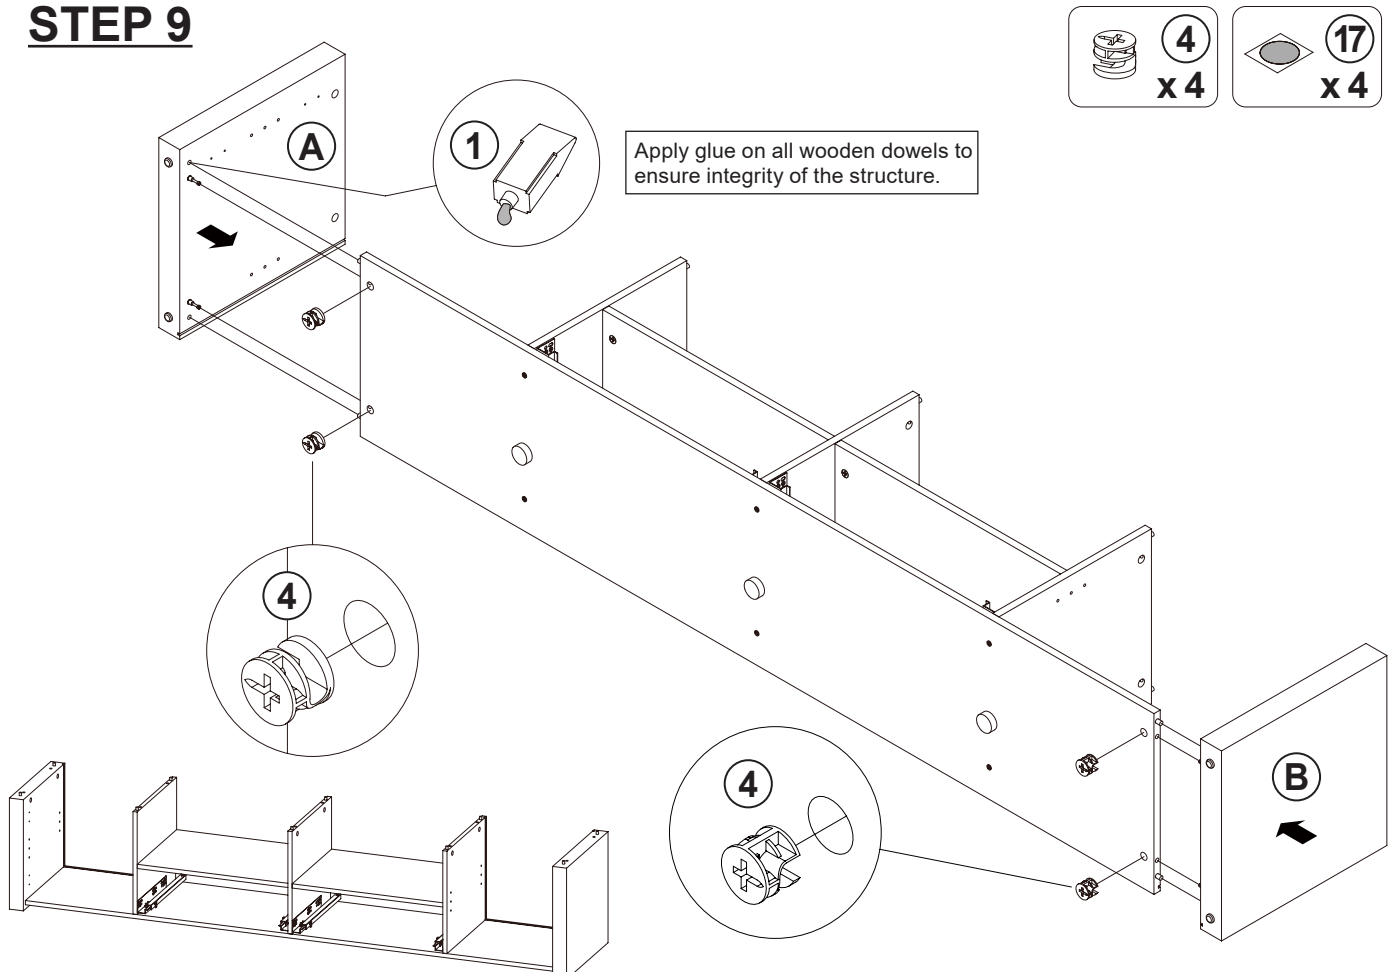


ITEM: **704262**

STEP 10

 COASTER
FINE FURNITURE


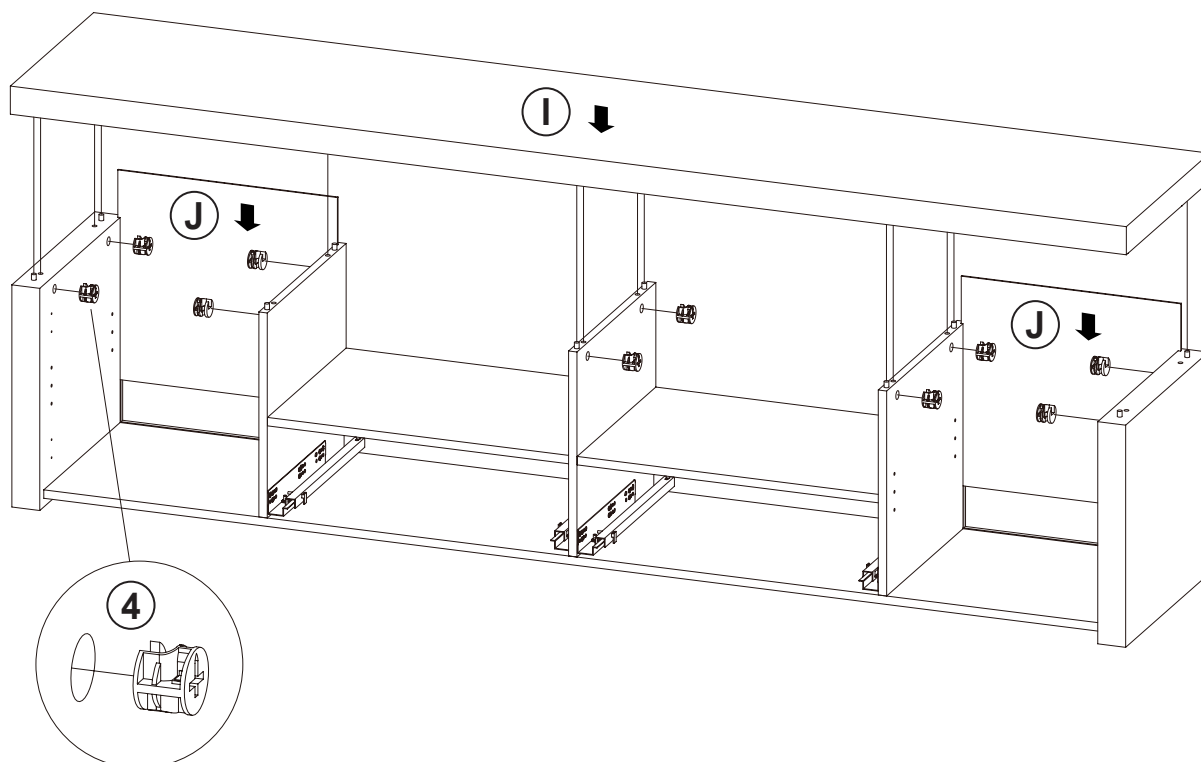


 STEP 11

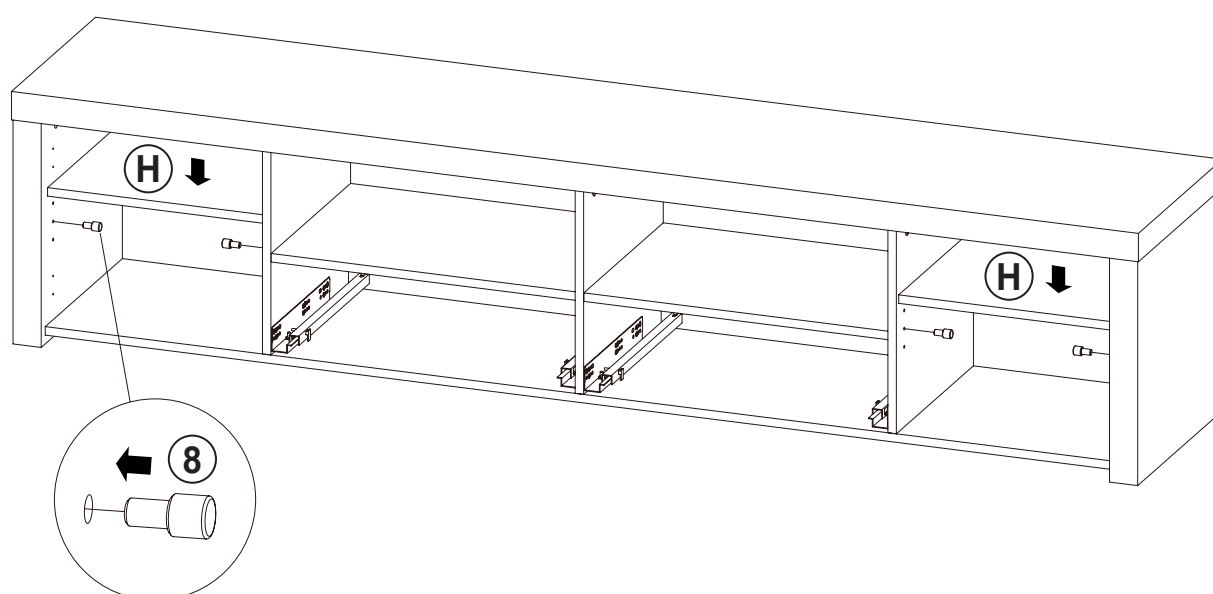


ITEM: 704262

  
STEP 12

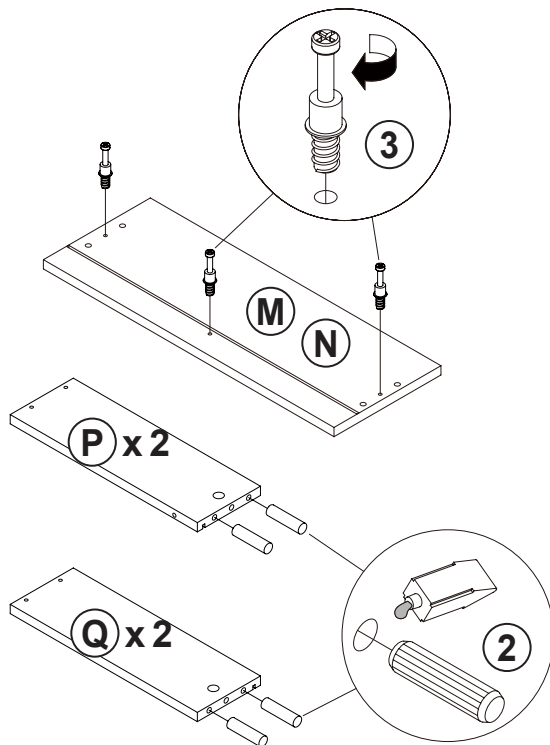


 
STEP 13

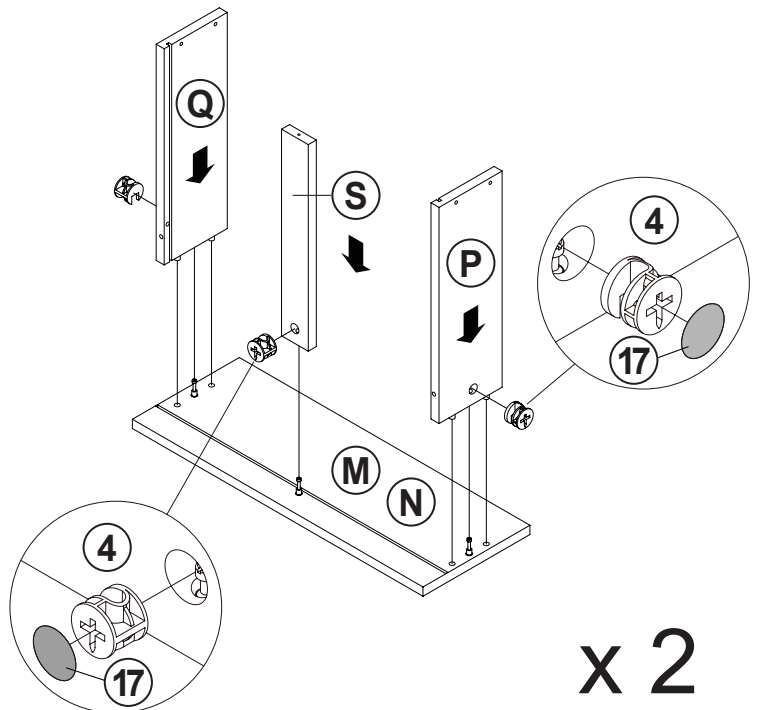

 STEP 14

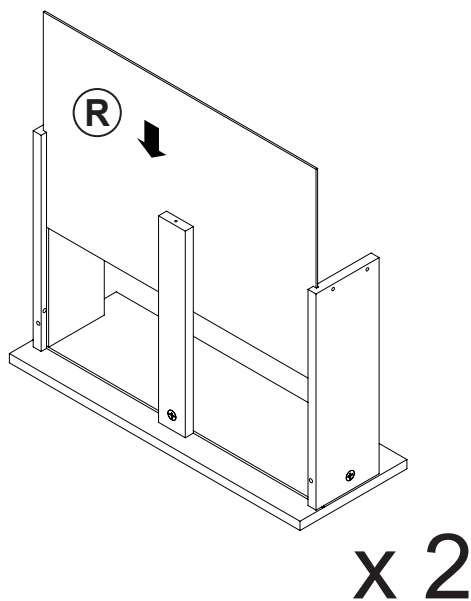


  STEP 15

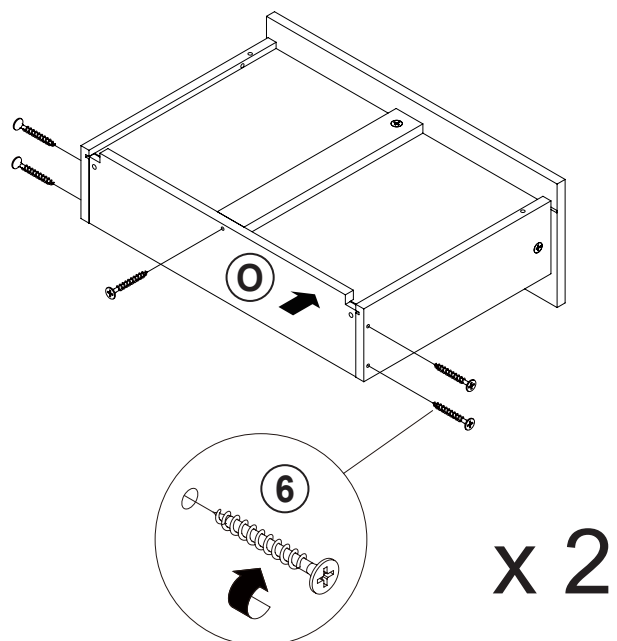


ITEM: **704262**

 STEP 16

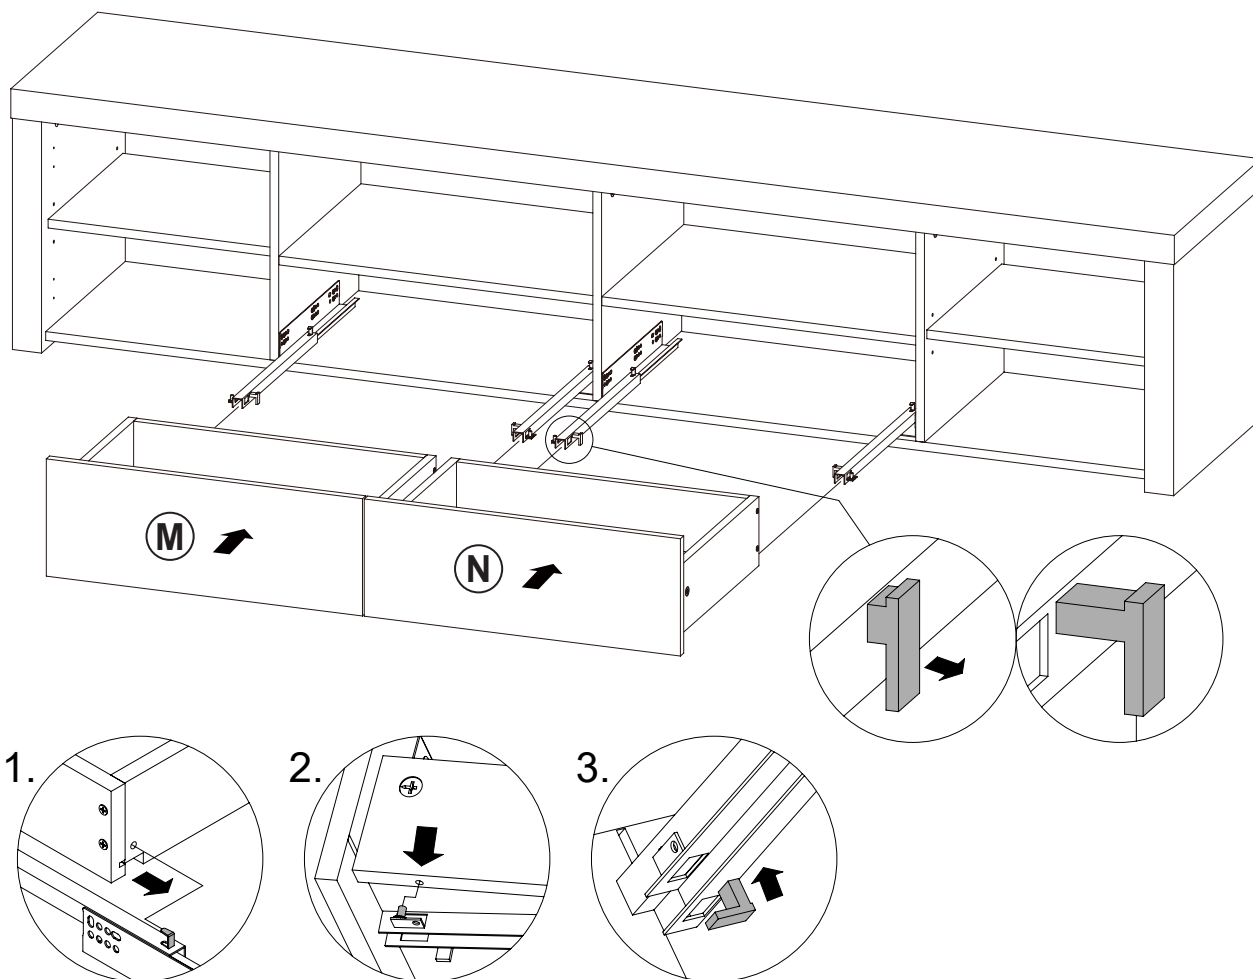


 
STEP 17

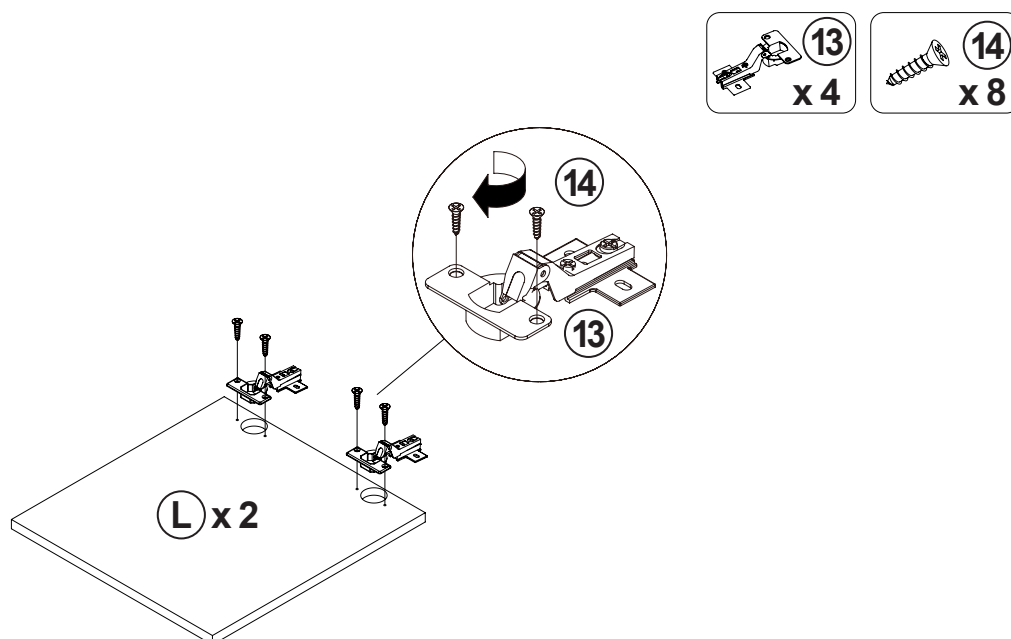


ITEM: **704262**

STEP 18

  
COASTER
FINE FURNITURE

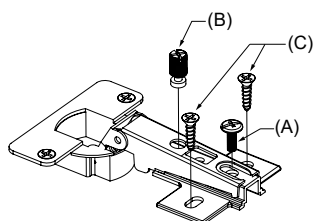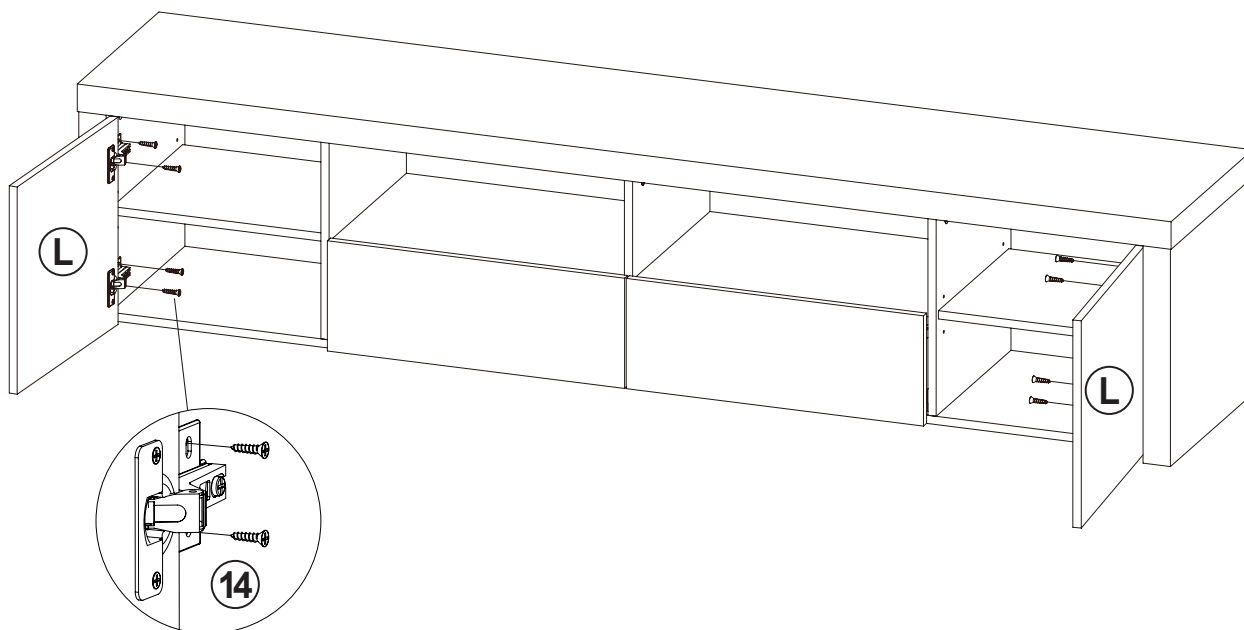


HORIZONTAL BY
SCREW A ADJUSTMENT

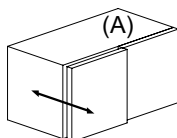 

LATERAL BY
SCREW B ADJUSTMENT


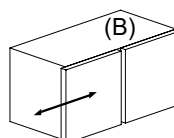 




VERTICAL BY
SCREW C ADJUSTMENT

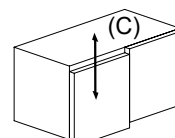 

STEP 19

    COMPLETE

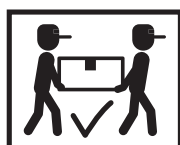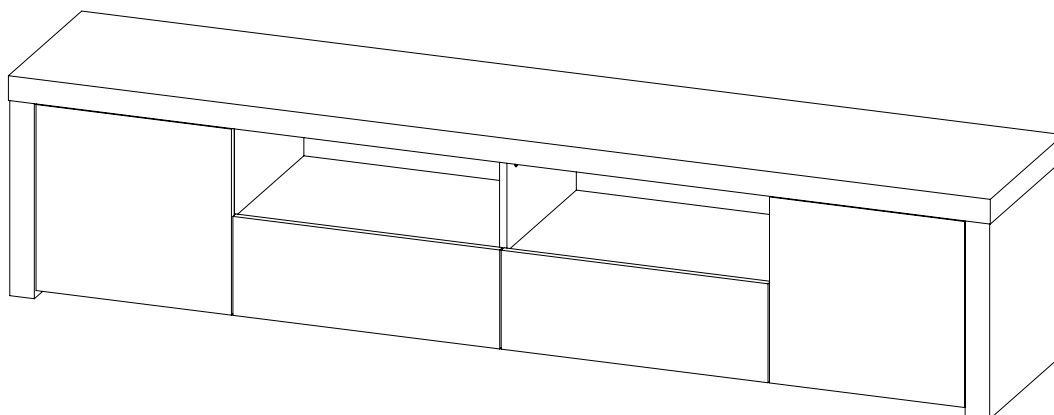

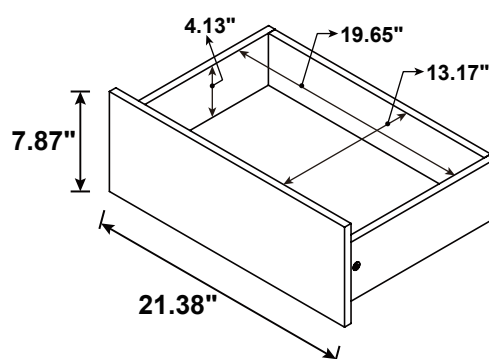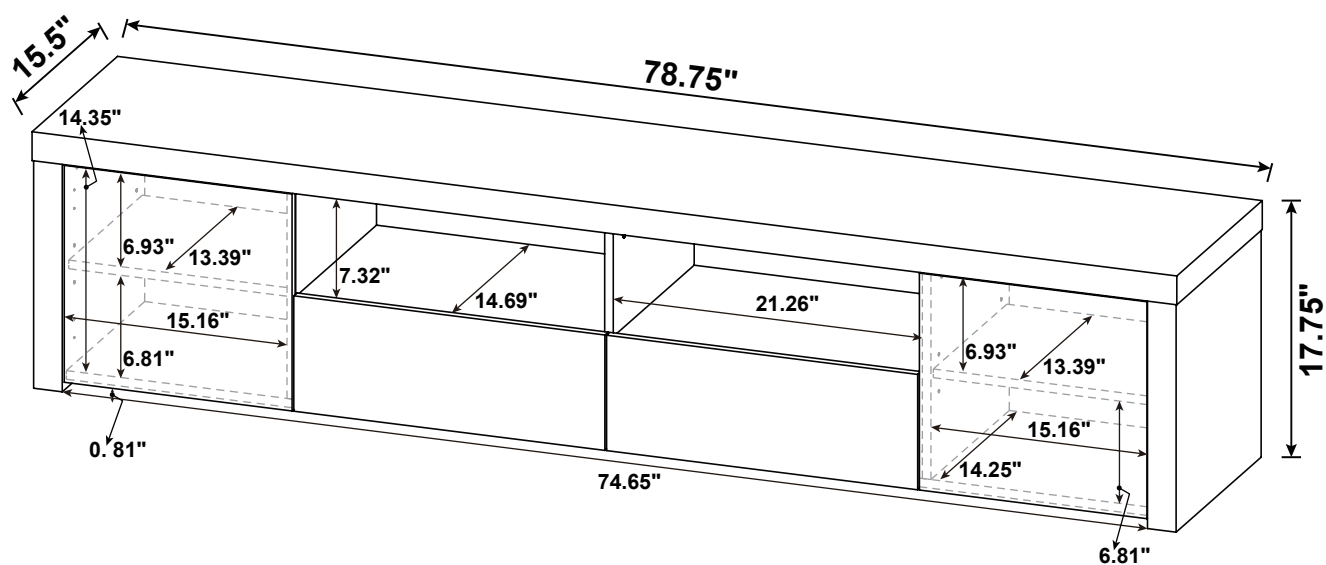

PAGE 14 OF 14