

CROSLEY FURNITURE


Etagere CF1411

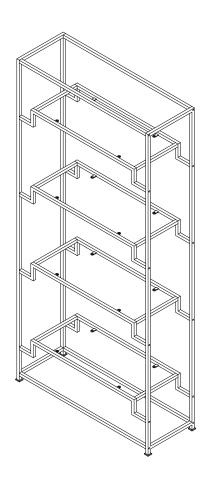

PART LIST

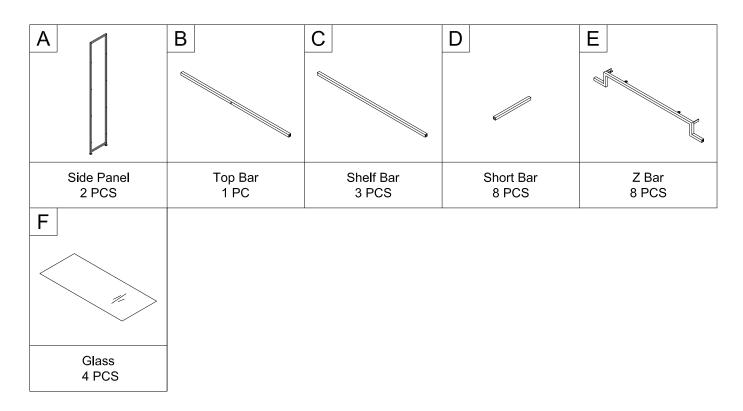


HARDWARE LIST

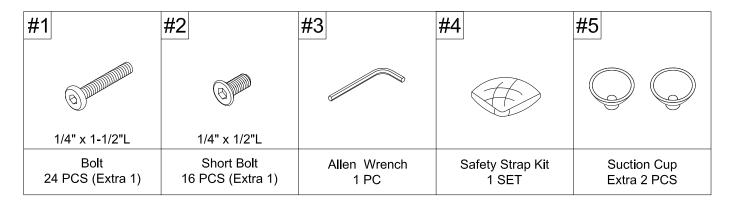


Step 1. Insert Z bars (part E) into short bars (part D) using short bolts (part #2) and allen wrench (part #3).


Note: Please do not fully tighten bolts at this time.

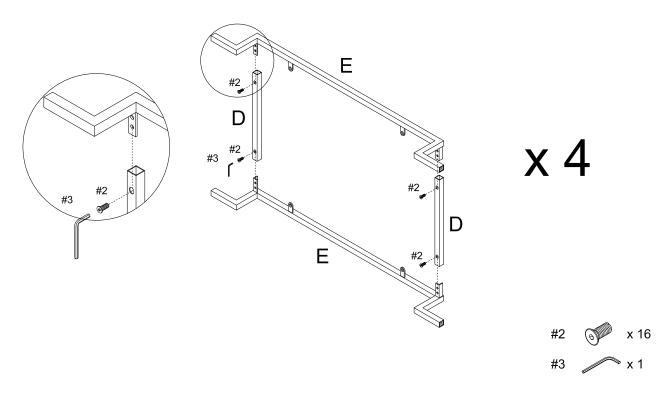

Step 2. Attach top bar (part B) and shelf bars (part C) to side panel (part A) using bolts (part #1) and allen wrench (part #3). Attach assembled units (parts D & E) to side panel (part A) using bolts (part #1) and allen wrench (part #3).

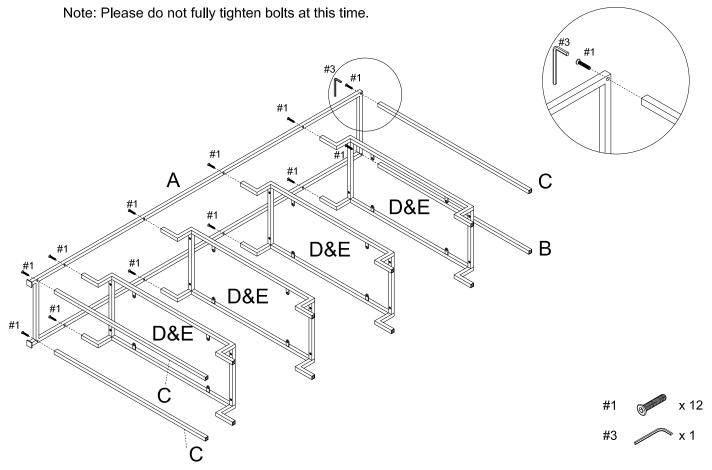

Step 3. Attach the remaining side panel (part A) to assembled unit (parts B, C, D & E) using bolts (part #1) and allen wrench (part #3)

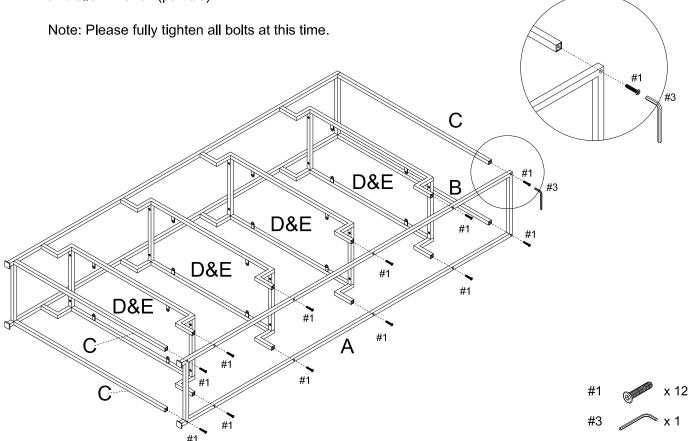


Step 4. Carefully turn unit upright. Insert glasses (part F) into assembled units (parts D & E).

Note: Safety strap kit (part #4) must be installed to prevent tipping, damage and/ or injury.

Note: It is important to adjust levelers once fully assembled and upright.

Extend adjustable levelers until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new lacation.

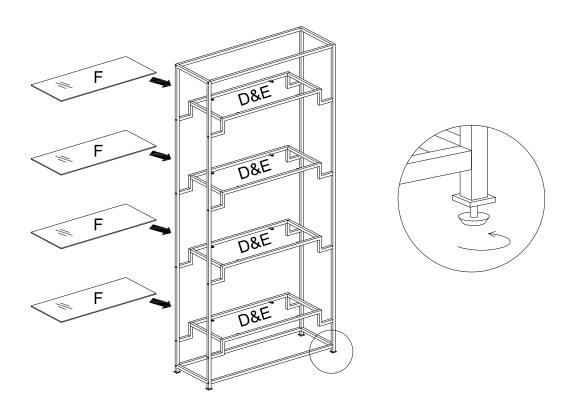


#4	A	В	С	D	E
			D8 x 1-1/2"	D10 x 1/2"	
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Hook 2 PCS	Screw 1 PC	Bolt 1 PC	Safety Wall Strap 1 PC


SAFETY WALL STRAP INSTALLATION

Important: Safety strap kit (part #4) must be installed to prevent tipping, damage and / or injury.

- 1) Insert bolt (D) through hook (B) and attach to predrilled hole in top bar (part B) using a philips head screwdriver.
- 2) Drill 11/32" hole in the wall where this unit will be secured. The drilled hole will be at the same height as the hole in top bar (part B) where hook (B) was attached. Tap wall anchor (A) into the drilled hole.
- 3) Insert screw (C) through hook (B) into the wall anchor (A) using a philips head screwdriver.
- 4) Insert safety wall strap (E) through both hooks (B) and tighten to secure.

Note: This item is not intended for clothing storage use.

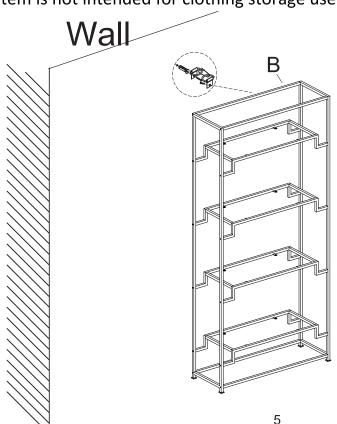

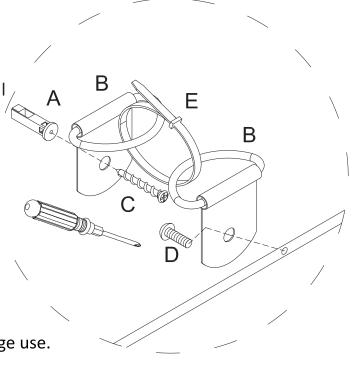

AWARNING

AWARNING Children have died from

- furniture tipover. To redu risk of furniture tipover: ALWAYS install tipover restraint
- NEVER put a TV on this product NEVER allow children to stand, climb or hang on drawers,
- doors, or shelves. NEVER open more than one
- drawer at a time. Place heaviest items in the lowest drawers.
 - This is a permanent label. Do not remove!

