



Item # : TN600GT

Description: Pendleton Gathering Table

Product size : 59-1/2" x 31-1/2" x 36"H

Your furniture purchase is an investment. Here are a few tips to maximize the lifetime of your furniture with a minimum amount of effort. Properly caring for your furniture can help ensure that it looks great year after year.

Wood Furniture Maintenance:

- Always dust, wipe, and clean *with* the grain of the wood.
- Dust with a soft cloth. Dust will scratch the furniture surface if not removed properly.
- Use the same type of polish consistently as interchanging oil-based and wax-based polishes will cause a build-up and result in a foggy or cloudy appearance.
- If a polished surface becomes foggy, rub it with a cloth dipped in a solution of one tablespoon vinegar to one quart of water. Rub softly with the grain until the surface is completely dry.
- Soap and water are not advisable for wood surfaces. Water can penetrate the finish and raise the grain on wood, causing damage.
- Remember to change dusting cloths frequently as dirty cloths may scratch your furniture's surface.

The Enemies of Wood:

- Moisture is wood's worst enemy. Liquid spills should be gently wiped up immediately. Coasters should be used under all beverages.
- Do not allow rubber or vinyl materials to lie on the furniture. Chemicals in rubber may leave a stain. Put a strip of felt or leather under accessories that have rubber or vinyl.
- Heat creates a chemical change in the furniture's finish, which results in a white spot. Use protective pads under hot dishes, appliances, etc.
- Sunlight's ultraviolet rays can damage the finish of furniture. Do not place furniture directly against a heater or radiator and do not place in the path of hot streams of air from central heating. This will cause extreme localized drying of the wood.

High Gloss Resin Table Maintenance:

- Resin tabletops have approximately 1/8" of a resin coat on the top face of the table, which will resist ice, water, wine, liquor, food, cleaning fluids, and warm or hot liquids; however, cups, glasses, etc. containing hot liquids should not be left on the table without a coaster for protection.
- Resin tabletops will scratch just the same as any other glossy surface and basic precautions should be taken.
- For lasting shine, the resin table should be waxed with a car wax that does not contain silicon. Maintaining this wax build-up will result in a high gloss shine.
- When wiping down the table, a soft, clean rag should be used. Do not use a heavy paper.

Granite Top Maintenance:

The surface of the granite on your table has been polished or sealed to create a generally non-porous surface. The stone has many natural characteristics including: veining, hairline cracks, and color variations - which make up the stone's beauty.

To maintain the beauty of your granite:

- Protect surfaces from scratching, staining and etching by:
 - * Keeping them free of debris or sharp objects
 - * Wiping up spills immediately
 - * Avoiding contact with chemicals (particularly acid-based materials)
- Clean with pH neutral products or those especially formulated for use on stone.
- It is not recommended to use a water-based solvent for dark granite as it will remove the polish from the surface.
- After a period of use, apply a penetrating sealer to prevent contaminants from being absorbed into the stone.
- Remove stains with special absorbent poultices formulated for use on stone.
- Renew the surface on polished granite (granite with a high gloss surface) by buffing with special stone polish , powder or cream .

Do not use granite polish on granite with a matte finish, which has been honed rather than polished. (Penetrating sealer may be used on both polished and honed granite.)

Marble Top Maintenance:

Marble may be stone, but it is porous stone and can stain easily. Treating marble surfaces the same as wood surfaces is a great rule of thumb.

- It is recommended to seal the tops on a regular basis (every 6 to 12 months). A good quality stone sealer can be purchased from any tiles/stone store or any homecare store and should be applied according to the manufacturer's recommendation.
- When sealed properly, marble tops can be used indoors and outdoors and can withstand any weather conditions except internal freezing. Snow or freezing rain will penetrate the table and cause cracks.

Caring for the Fabric on Upholstered Furniture:

- Frequent vacuuming of the entire upholstered area will prevent dust from settling into the fibers.
- Professional cleaning is always recommended for all upholstered pieces.
- Always pre-test a small area of fabric in an inconspicuous area when cleaning before proceeding.
- Do not use cleaning products containing brightening agents.

VERY IMPORTANT!!			
NEVER USE GLASS CLEANERS ON FINISHED SURFACES. AMMONIA WILL CHEMICALLY ATTACK THE FINISH.	DO NOT WRITE DIRECTLY ON SURFACE PREVENT MARKING	DO NOT PLACE DIRECTLY IN SUNLIGHT PREVENT FADING	DO NOT USE PLACEMATS WITH RUBBER BASES PREVENT DISCOLORING
NEVER ALLOW LIQUIDS OF ANY KIND TO LINGER ON SURFACES. ABSORPTION CAUSES THE WOOD TO WARP AND THE FINISH TO DE-LAMINATE.	DO NOT USE COMMERCIAL POLISHES AND WAXES PREVENT YELLOWING	DO NOT PLACE HOT POTS, ETC. ON SURFACE PREVENT DAMAGE TO FINISH!	REGULATE THE HUMIDITY CONDITIONS AT YOUR HOME PREVENT SPLITTING

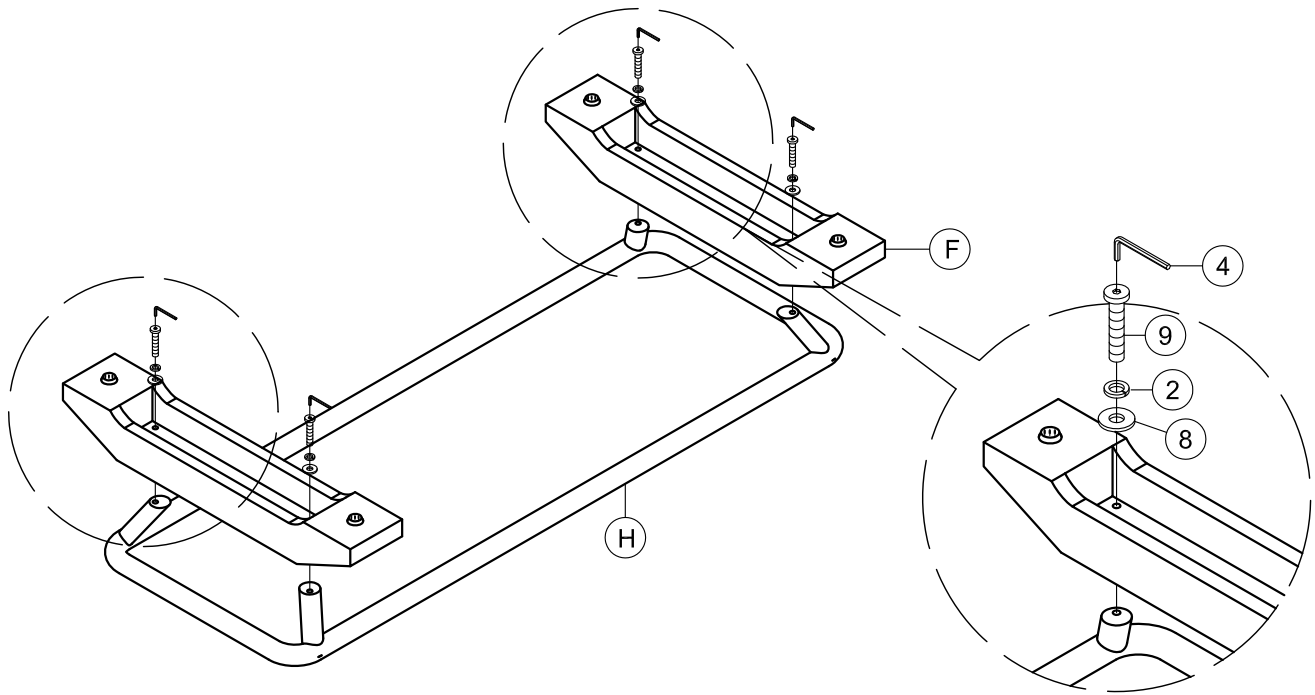 
TN600GT

ASSEMBLY INSTRUCTIONS

P. 2/6

STEP 1


Attach Table Base (F) to the Frame Metal (H), by inserting Flat Washer (8), Lock Washer (2), Shortest Bolt (9), and tighten by Allen Key (4).



STEP 2

Attach Post (B) to the Middle Stretcher (C), by inserting Small Flat Washer (3), Lock Washer (2), Medium Bolt (6), tighten by Allen Key (4) and Wood Cap (5).

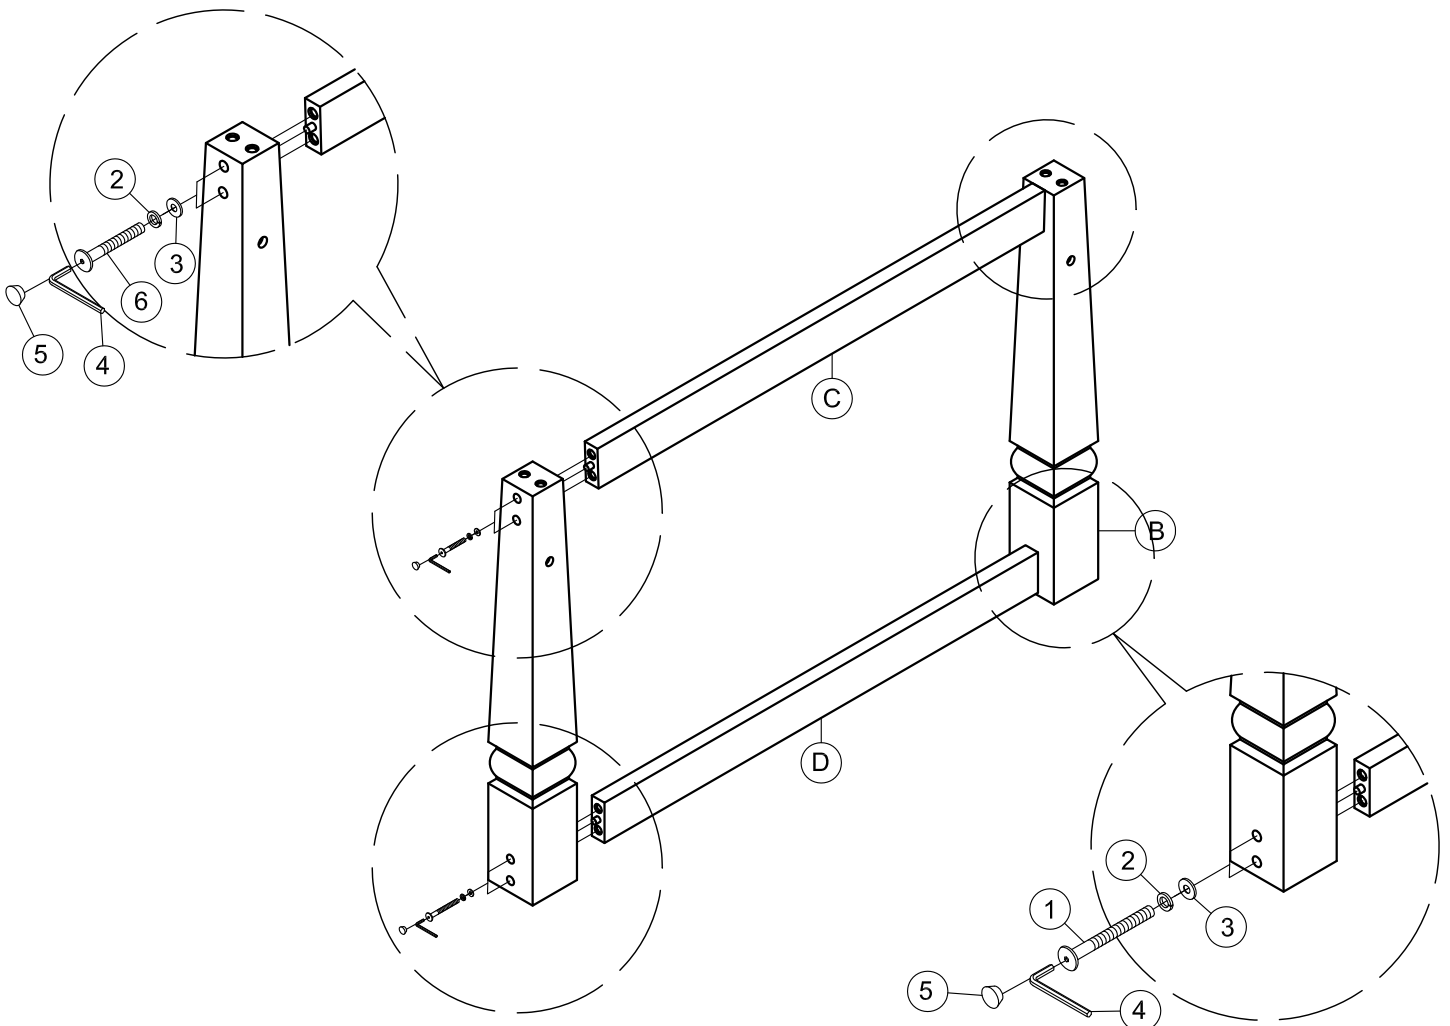 Attach Post (B) to the Bottom Rail (D), by inserting Small Flat Washer (3), Lock Washer (2), Long Bolt (1), tighten by Allen Key (4) and Wood Cap (5).




TN600GT

ASSEMBLY INSTRUCTIONS

P. 3/6


STEP 3

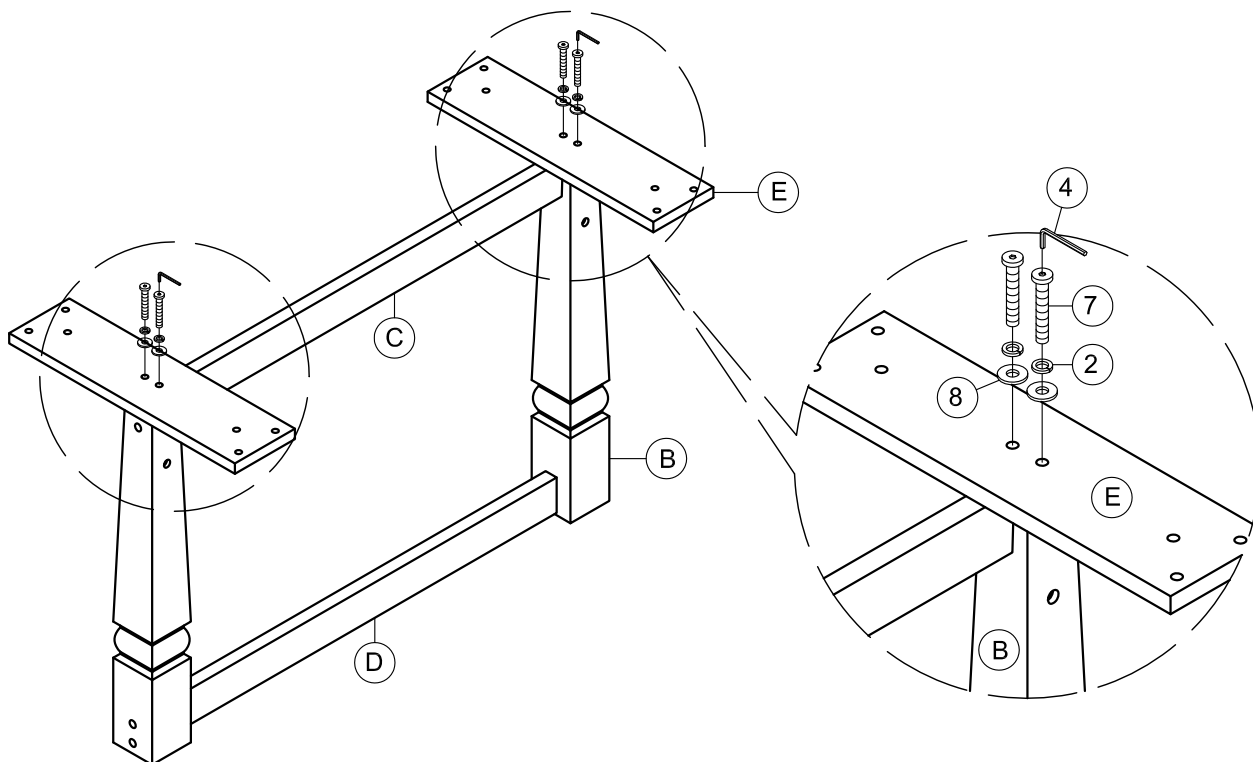 Attach Mounting Plate (E) to the Post (B), by inserting Flat Washer (8), Lock Washer (2), Short Bolt (7), and tighten by Allen Key (4).



STEP 4

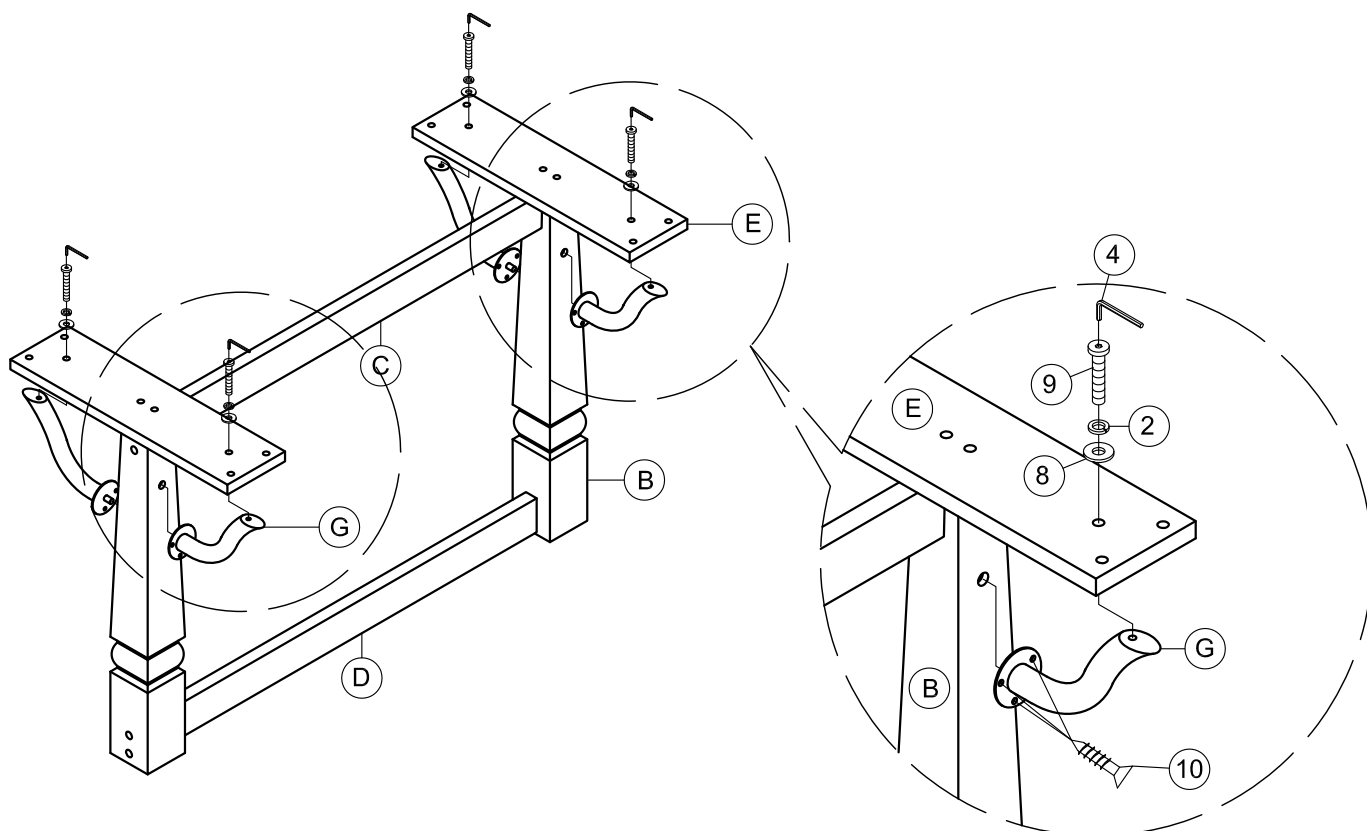 
Attach Pipe Metal (G) to the Post (B) and Mounting Plate (E), by inserting Flat Washer (8), Lock Washer (2), Shortest Bolt (9), tighten by Allen Key (4), and Screw (10).



ASSEMBLY INSTRUCTIONS

STEP 5

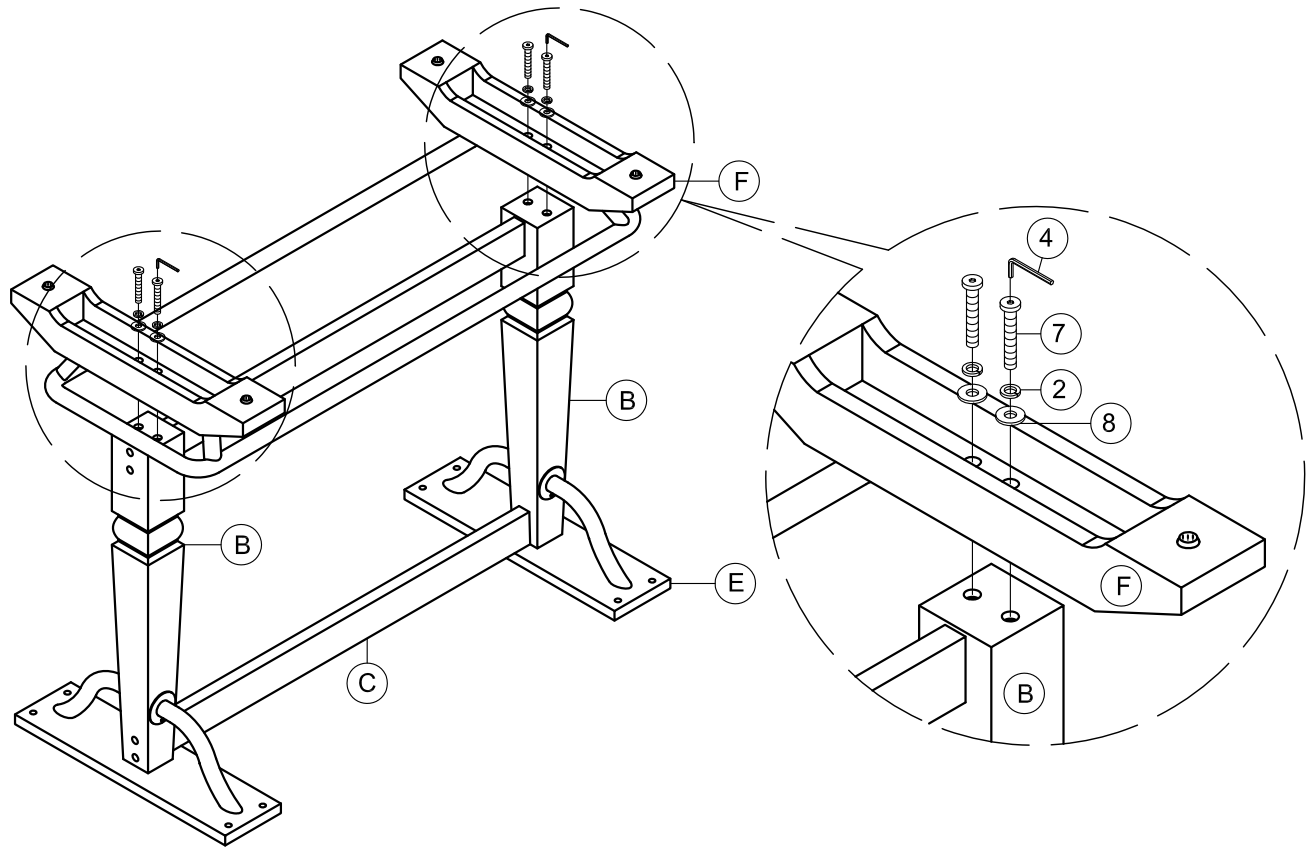 
Attach Table Base (F) to the Post (B), by inserting Flat Washer (8), Lock Washer (2), Short Bolt (7), and tighten by Allen Key (4).











STEP 6

Attach Mounting Plate (E) to the Table Top (A), by inserting Flat Washer (8), Lock Washer (2), Short Bolt (7), and tighten by Allen Key (4).




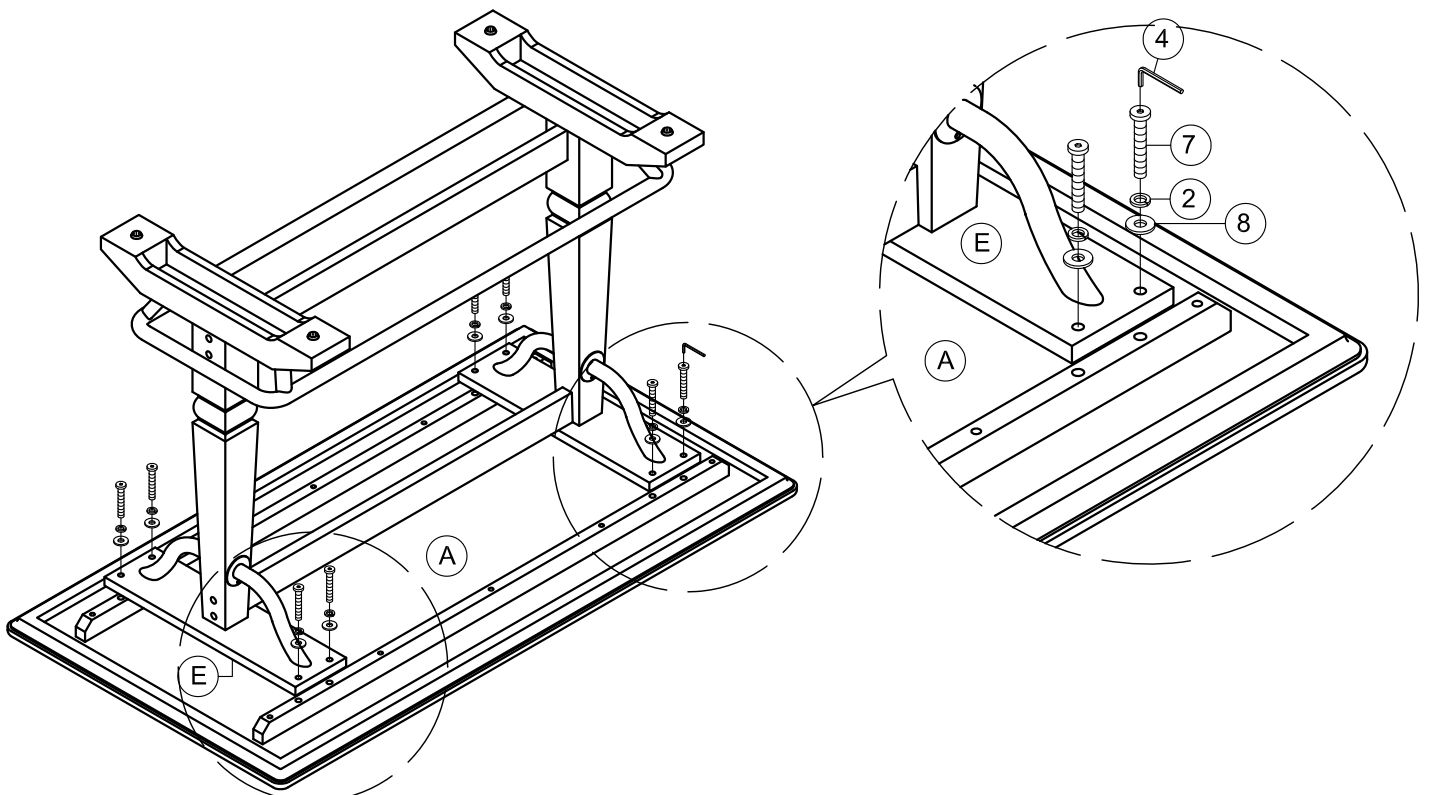 
Turn the table to upright position and place the table on flat surface. Fully tighten all Bolts at this time. Product assembly is now completed.




PARTS LIST

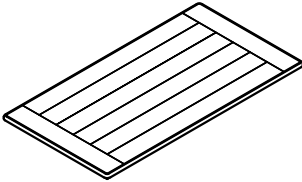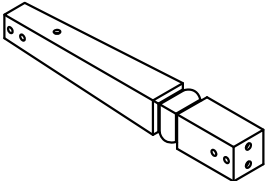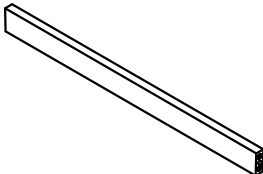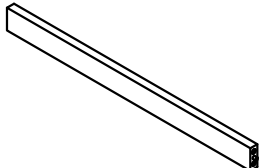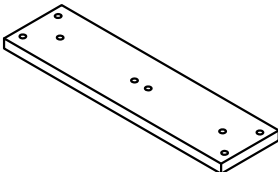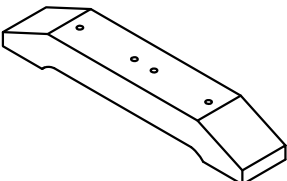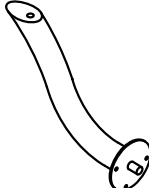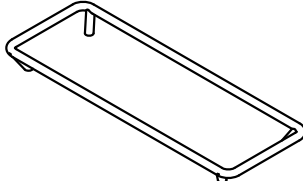        (A) Table Top (1PC)	(B) Post (2PCS)	(C) Middle Stretcher (1PC)	(D) Bottom Rail (1PC)
			
(E) Mounting Plate (2PCS)	(F) Table Base (2PCS)	(G) Pipe Metal (4PCS)	(H) Frame Metal (1PC)
			

    HARDWARE PACK # : TN600GTH

NO.		DESCRIPTION	DIMENSION	Q'TY
1	LONG BOLT		Ø5/16"x 110mm	4PCS
2	LOCK WASHER		Ø5/16" x 12mm	32PCS
3	SMALL FLAT WASHER		Ø5/16" x 14mm	8PCS
4	ALLEN KEY		58x 23x 4mm	1PC
5	WOOD CAP		Ø15.5x 10mm	8PCS
6	MEDIUM BOLT		Ø5/16"x 85mm	4PCS
7	SHORT BOLT		Ø5/16"x 57mm	16PCS
8	FLAT WASHER		Ø5/16" x 19mm	24PCS
9	SHORTEST BOLT		Ø5/16"x 38mm	8PCS
10	SCREW		Ø7x Ø3.5x 16mm	12PCS

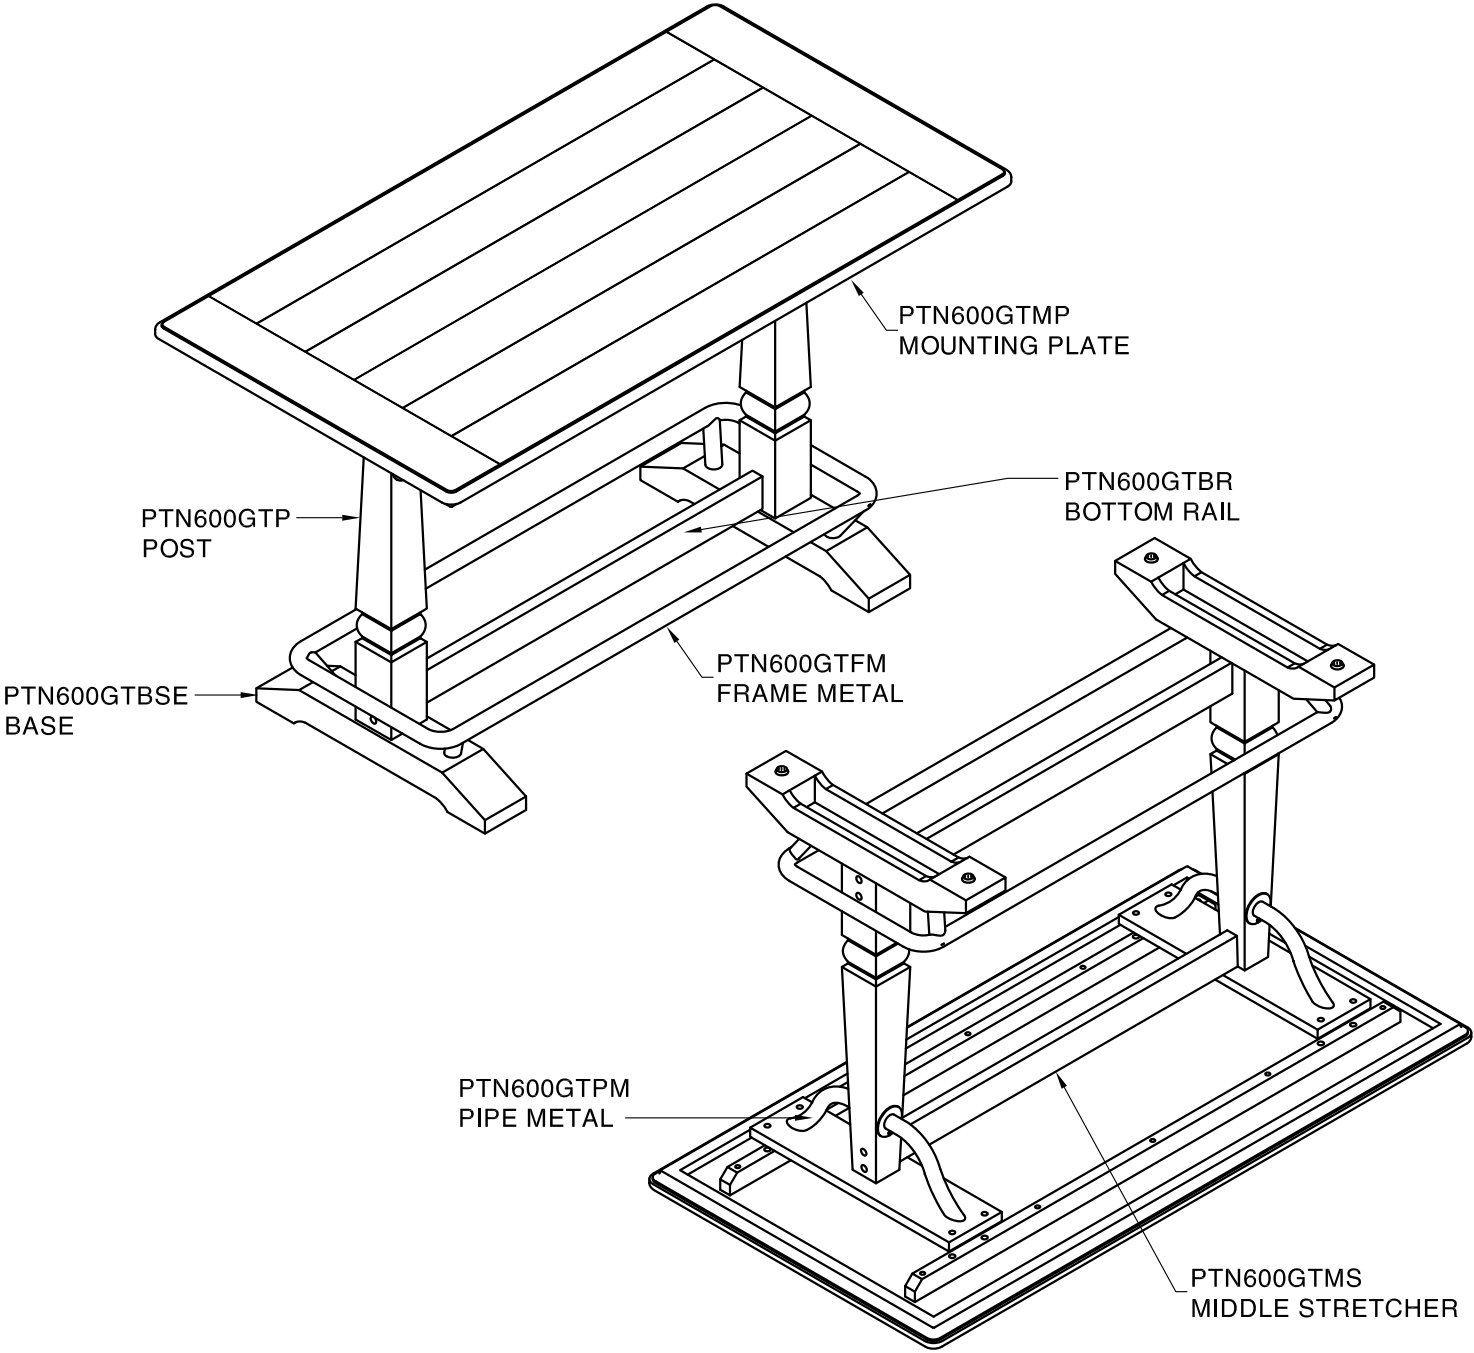 PARTS FOR TN600GT
COMPLETE HARDWARE # : PTN600GTH



PRODUCT DETAILS

TOP	MDF+ OAK VENEER
POST	RUBBER WOOD
BASE	RUBBER WOOD
BOTTOM RAIL	RUBBERWOOD
PRODUCT SIZE	59-1/2" x 31-1/2" x 36"H
CARTON SIZE TABLE	63.78" x 35.63" x 7.68"H
NET WEIGHT	101.2 LBS / 1PC
GROSS WEIGHT	114.4 LBS / 1PC
CU.FT.	10.1'

MADE IN VIETNAM



Item # : TN600CS

Description: Pendleton Counter Stool

Product Size: 19" x 16"x 27"H

Your furniture purchase is an investment. Here are a few tips to maximize the lifetime of your furniture with a minimum amount of effort. Properly caring for your furniture can help ensure that it looks great year after year.

Wood Furniture Maintenance:

- Always dust, wipe, and clean *with* the grain of the wood.
- Dust with a soft cloth. Dust will scratch the furniture surface if not removed properly.
- Use the same type of polish consistently as interchanging oil-based and wax-based polishes will cause a build-up and result in a foggy or cloudy appearance.
- If a polished surface becomes foggy, rub it with a cloth dipped in a solution of one tablespoon vinegar to one quart of water. Rub softly with the grain until the surface is completely dry.
- Soap and water are not advisable for wood surfaces. Water can penetrate the finish and raise the grain on wood, causing damage.
- Remember to change dusting cloths frequently as dirty cloths may scratch your furniture's surface.

The Enemies of Wood:

- Moisture is wood's worst enemy. Liquid spills should be gently wiped up immediately. Coasters should be used under all beverages.
- Do not allow rubber or vinyl materials to lie on the furniture. Chemicals in rubber may leave a stain. Put a strip of felt or leather under accessories that have rubber or vinyl.
- Heat creates a chemical change in the furniture's finish, which results in a white spot. Use protective pads under hot dishes, appliances, etc.
- Sunlight's ultraviolet rays can damage the finish of furniture. Do not place furniture directly against a heater or radiator and do not place in the path of hot streams of air from central heating. This will cause extreme localized drying of the wood.

High Gloss Resin Table Maintenance:

- Resin tabletops have approximately 1/8" of a resin coat on the top face of the table, which will resist ice, water, wine, liquor, food, cleaning fluids, and warm or hot liquids; however, cups, glasses, etc. containing hot liquids should not be left on the table without a coaster for protection.
- Resin tabletops will scratch just the same as any other glossy surface and basic precautions should be taken.
- For lasting shine, the resin table should be waxed with a car wax that does not contain silicon. Maintaining this wax build-up will result in a high gloss shine.
- When wiping down the table, a soft, clean rag should be used. Do not use a heavy paper.

Granite Top Maintenance:

The surface of the granite on your table has been polished or sealed to create a generally non-porous surface. The stone has many natural characteristics including: veining, hairline cracks, and color variations - which make up the stone's beauty.

To maintain the beauty of your granite:

- Protect surfaces from scratching, staining and etching by:
 - * Keeping them free of debris or sharp objects
 - * Wiping up spills immediately
 - * Avoiding contact with chemicals (particularly acid-based materials)
- Clean with pH neutral products or those especially formulated for use on stone.
- It is not recommended to use a water-based solvent for dark granite as it will remove the polish from the surface.
- After a period of use, apply a penetrating sealer to prevent contaminants from being absorbed into the stone.
- Remove stains with special absorbent poultices formulated for use on stone.
- Renew the surface on polished granite (granite with a high gloss surface) by buffing with special stone polish , powder or cream .

Do not use granite polish on granite with a matte finish, which has been honed rather than polished. (Penetrating sealer may be used on both polished and honed granite.)

Marble Top Maintenance:

Marble may be stone, but it is porous stone and can stain easily. Treating marble surfaces the same as wood surfaces is a great rule of thumb.

- It is recommended to seal the tops on a regular basis (every 6 to 12 months). A good quality stone sealer can be purchased from any tiles/stone store or any homecare store and should be applied according to the manufacturer's recommendation.
- When sealed properly, marble tops can be used indoors and outdoors and can withstand any weather conditions except internal freezing. Snow or freezing rain will penetrate the table and cause cracks.

Caring for the Fabric on Upholstered Furniture:

- Frequent vacuuming of the entire upholstered area will prevent dust from settling into the fibers.
- Professional cleaning is always recommended for all upholstered pieces.
- Always pre-test a small area of fabric in an inconspicuous area when cleaning before proceeding.
- Do not use cleaning products containing brightening agents.

VERY IMPORTANT!!			
NEVER USE GLASS CLEANERS ON FINISHED SURFACES. AMMONIA WILL CHEMICALLY ATTACK THE FINISH.	DO NOT WRITE DIRECTLY ON SURFACE  PREVENT MARKING	DO NOT PLACE DIRECTLY IN SUNLIGHT  PREVENT FADING	DO NOT USE PLACEMATS WITH RUBBER BASES  PREVENT DISCOLORING
NEVER ALLOW LIQUIDS OF ANY KIND TO LINGER ON SURFACES. ABSORPTION CAUSES THE WOOD TO WARP AND THE FINISH TO DE-LAMINATE.	DO NOT USE COMMERCIAL POLISHES AND WAXES  PREVENT YELLOWING	DO NOT PLACE HOT POTS, ETC. ON SURFACE  PREVENT DAMAGE TO FINISH!	REGULATE THE HUMIDITY CONDITIONS AT YOUR HOME  PREVENT SPLITTING

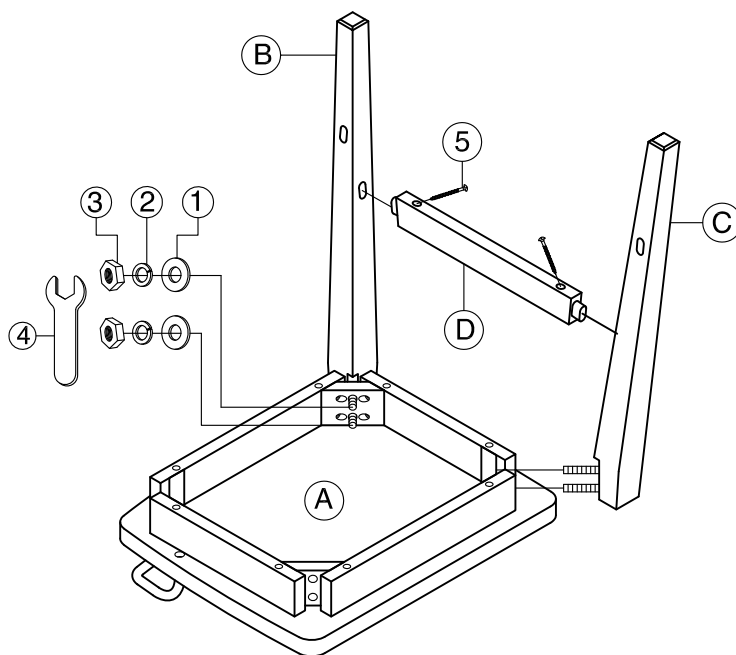 
TN600CS

ASSEMBLY INSTRUCTIONS

DO NOT TIGHTEN BOLTS UNTIL TABLE IS COMPLETELY ASSEMBLED.


Step 1:

Place the Seat Box (A) up side down on the floor with a piece of cloth or carpet underneath to prevent the finish from scratching. Attach the LSF/ RSF Front Leg (B/C) to the corner of Seat Box (A) and secure with Flat Washer (1), Lock Washer (2) and Hex Nut (3). Fully tighten with Wrench (4). Attach the Side Stretcher (D) into the LSF/ RSF Front Leg (B/C) by using Wood Screw (5).



Step 2:

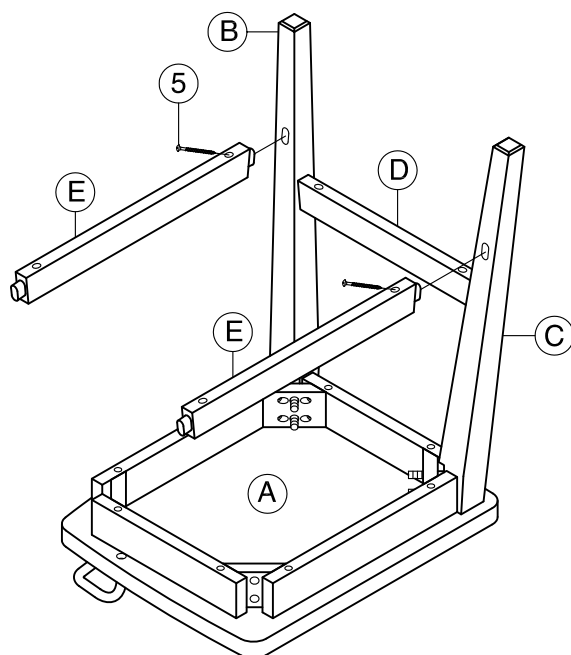 Attach the Front Stretcher (E) into the LSF/ RSF Front Leg (B/C) by using Wood Screw (5).



TN600CS

ASSEMBLY INSTRUCTIONS

Step 3:

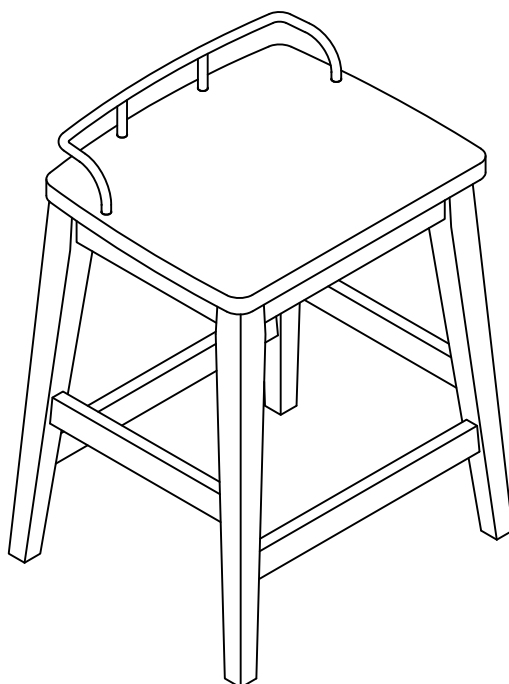 
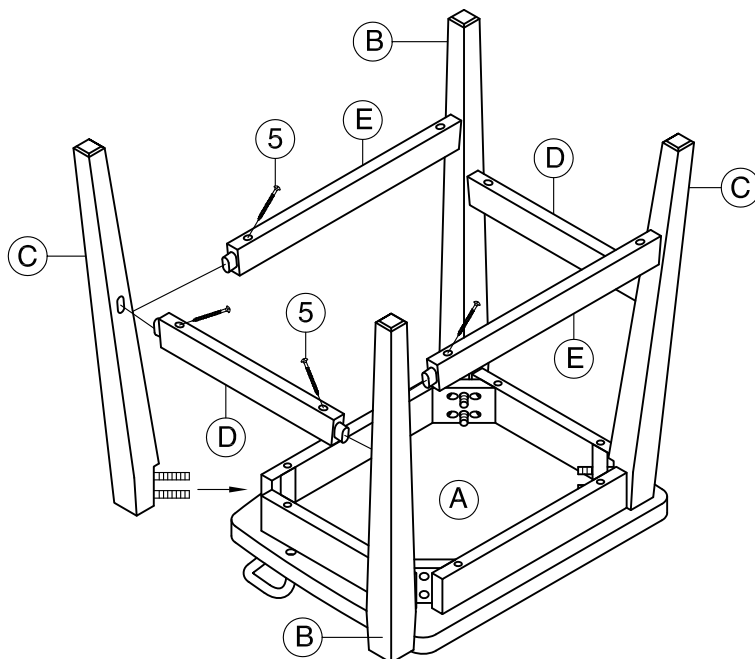 
Attach the LSF/RSF Front Leg (B/C) to the corner of Seat Box (A) and secure with Flat Washer (1), Lock Washer (2) and Hex Nut (3). Fully tighten with Wrench (4).

Attach the Side Stretcher (D) into the LSF/ RSF Front Leg (B/C) by using Wood Screw (5).






Attach the Front Stretcher (E) into the LSF/ RSF Front Leg (B/C) by using Wood Screw (5).

Fully tighten all bolts and hex nut at this time.






Product assembly is now completed.



PARTS LIST

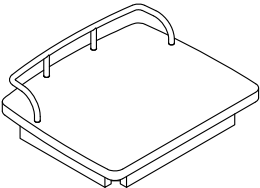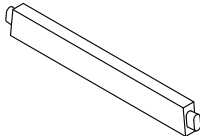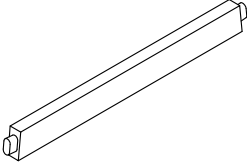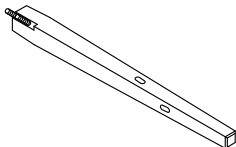     
A	SEAT BOX w/ WOODEN SEAT (1PC)		D	SIDE STRETCHER (2PCS)	
B	LSF FRONT LEG (2PCS)		E	FRONT STRETCHER (2PCS)	
C	RSF FRONT LEG (2PCS)				

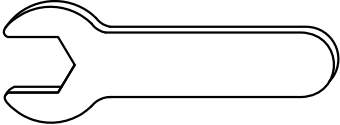     HARDWARE PACK # : PTN600CSH

NO.	DESCRIPTION		DIMENSION	Q'TY
1	FLAT WASHER		Ø5/16" x 19mm	8pcs
2	LOCK WASHER		Ø5/16" x 12mm	8pcs
3	HEX NUT		Ø5/16" x 12mm	8pcs
4	WRENCH		NO.12	1pc
5	WOOD SCREW		Ø8x Ø4x 50mm	8pcs

PARTS FOR TN600CS

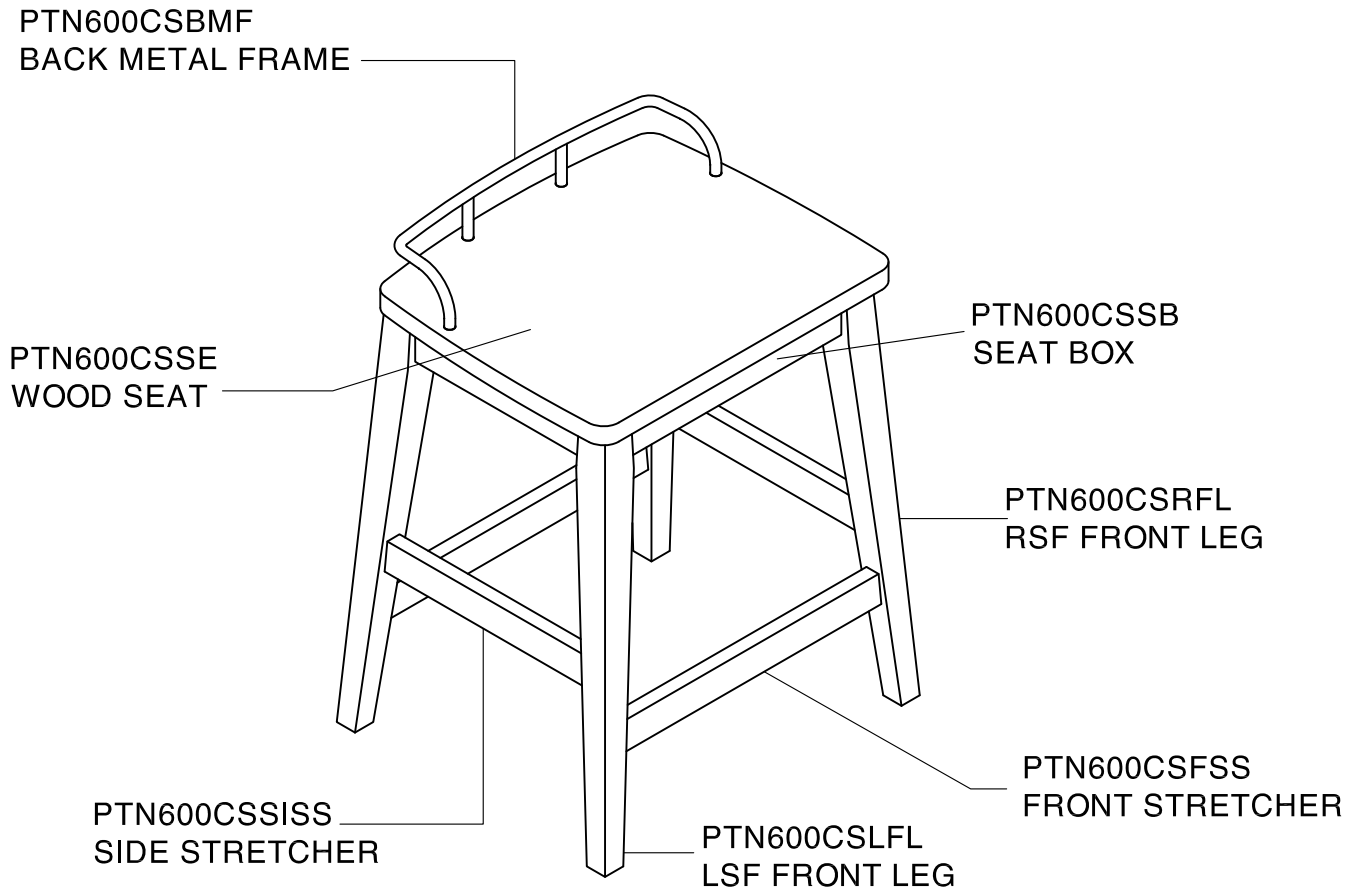 COMPLETE HARDWARE # : PTN600CSH



PRODUCT DETAILS	
SEAT BOX	RUBBER WOOD
METAL PIPE	METAL
LEG	RUBBER WOOD
STRETCHER	RUBBER WOOD
PRODUCT SIZE	19" x 16" x 27"H
CARTON SIZE	25.2" x 18.5" x 7.87"H
NET WEIGHT	19.8 LBS/ 1PC
GROSS WEIGHT	22 LBS/ 1PC
CU.FT.	2.12'

MADE IN VIETNAM

Steve Silver Company Dining Chairs - Assembly Troubleshooting Guide

The most important element of correct chair assembly is to tighten the bolts as directed. Prematurely tightening the bolts can lead to numerous issues and will lengthen the assembly time. Listed below are the most common issues in chair assembly and their easy solutions.

PROBLEM: Chair is unlevel.

Cause 1:

Unlevel chairs can occur if the bolts are fully tightened before all bolts are attached. There is a variance in the alignment of this chair to allow the chair to be assembled more easily.

Solution:

Loosen each bolt in the seat box (front legs, back corner blocks and back apron) until they are finger tight. Place the chair upright on the floor. Sit in the chair for about 30 seconds. Carefully turn the chair upside down and tighten each bolt. The chair will now be level.

Cause 2:

Unlevel chairs can occur if one or more of the floor glides are missing from the bottom of the chair leg.

Solution:

Request a set of floor glides from the e-mail address below.
AR@ssilver.com

PROBLEM: Bolts do not fit properly.

Cause:

This issue can occur when the bolts are tightened fully before all bolts are attached. There is a variance in the alignment of the bolts to allow the chair to be assembled more easily. Tightening the bolts prematurely can cause the holes for the other bolts to become slightly misaligned, causing the remaining bolts not to fit properly.

Solution:

Make sure each bolt in the seat box (front legs, back corner blocks and back apron) is loosened until finger tight. This will allow you to realign the holes, and the bolts will now fit properly.

Questions?

Please call us at 1 800 344 7278, and we will be happy to help you.