


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

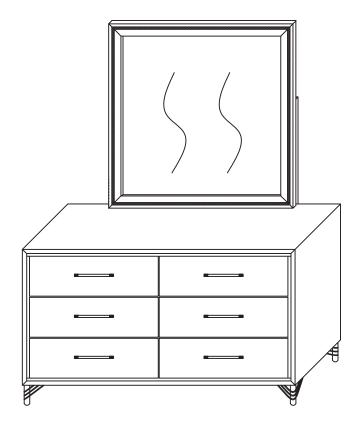

Fine Furniture for every stage of life

224734 Mirror

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A MIRROR

1PC

B MIRROR SUPPORT (PACKED WITH MIRROR)

2PCS

C DRESSER
*FROM BOX ITEM 224733



1PC

HARDWARE IDENTIFICATION

1 BOLT (M6 x 40mm - RBW)



8PCS

2 LOCK WASHER (1/4" x 12ø - RBW)



8PCS

3 FLAT WASHER (1/4" x 19ø - RBW)



8PCS

4 ALLEN WRENCH (M4 x 65mm - BLK)



1PC

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

ITEM: **224734**

ASSEMBLY INSTRUCTIONS


STEP 1



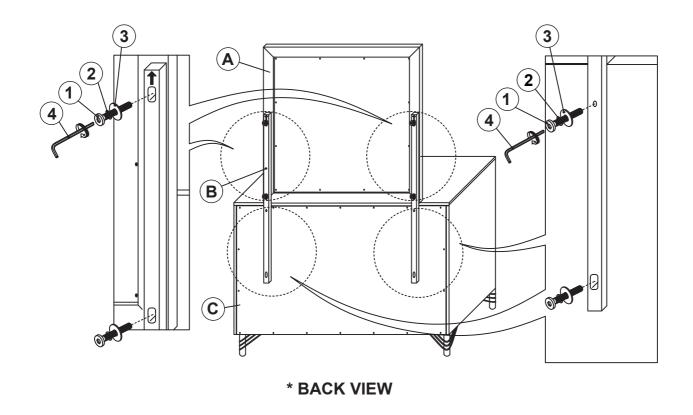


STEP 2

COMPLETE

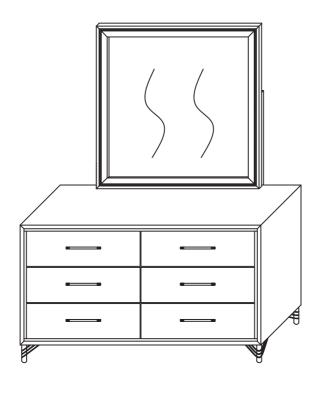





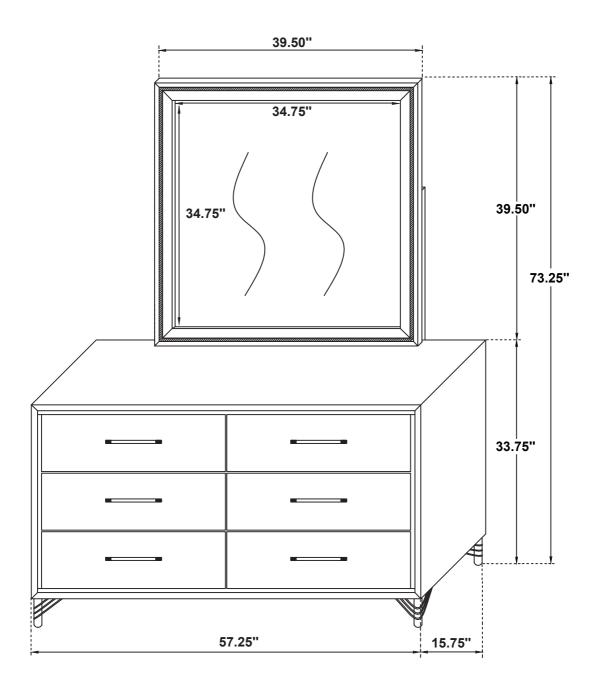

Note: Dimension tolerance ±5%