

ASSEMBLY INSTRUCTIONS

**MODEL : 8028A/8029A
YLIME DINING TABLE**


**(BOX 1)
BOX OF DINING TABLE**

NO	ITEM	QTY
A	TABLE TOP	1 PC
B	CENTER PANEL	1 PC
C	TABLE LEG	1 PC


**(BOX 1)
HARDWARE LIST**

No	ITEM	Qty
1	Csk M4 x 32mm	20 pcs
2	JCBC Bolt m6x35mm Blk	4 pcs
3	Spring Washer 1/4" Blk	4 pcs
4	Flat Washer 1/4"IDx13mmOD Blk	4 pcs
5	ALLEN KEY m4x65mm Blk	1 pc
6	Power Bank(PACK INSIDE TABLE TOP)	1 pc


STEP 1 : Remove the Center Panel (B) from the Table (A) by loosen the 4 located screw with Screw Driver (NOT PROVIDED).

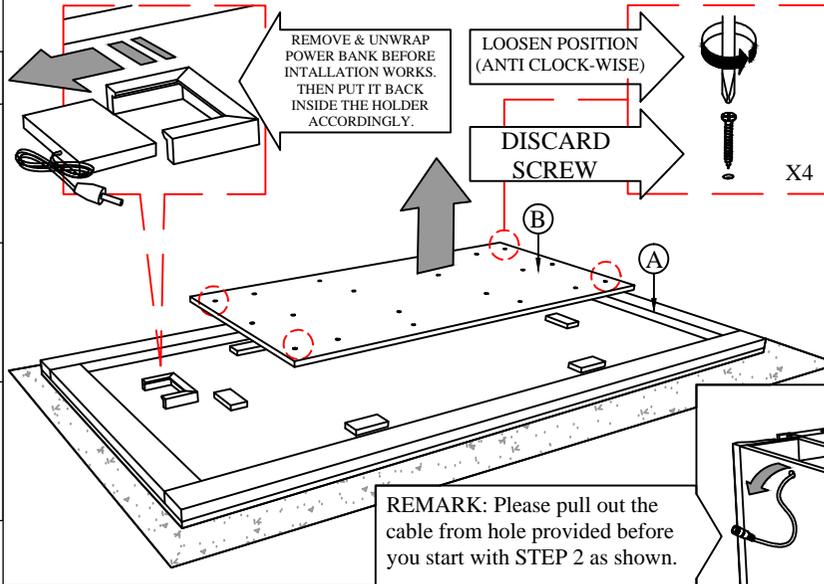


STEP 2 : Align and Fasten Center Panel (B) on top of Table Leg (C) using JCBC Screw (2), Spring Washer (3), Flat Washer (4) and tighten them with Allen Key (5). Then Secure Center Panel (B) with Csk Screw (1) and tighten them with Screw Driver (NOT PROVIDED).

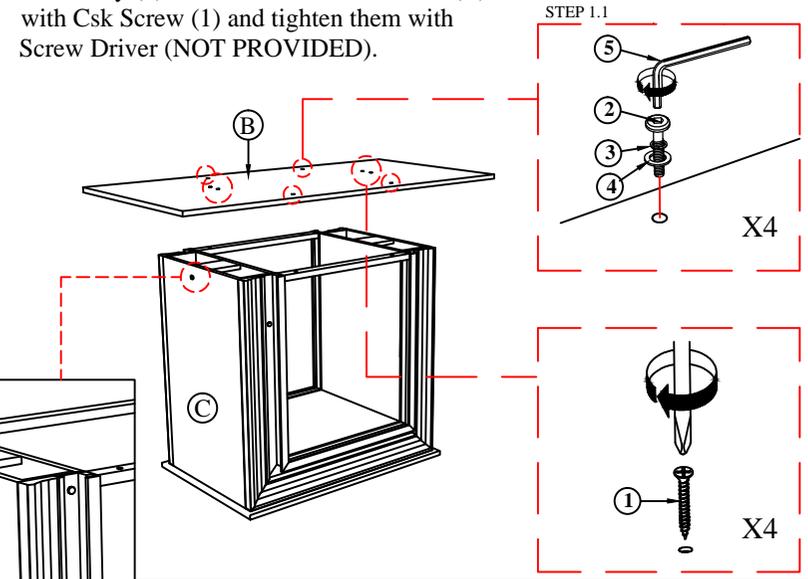


STEP 3 : Align and placing the Fixed Leg with Center panel to the bottom table top (A) UPSIDEDOWN position by following the lipping center panel as shown.

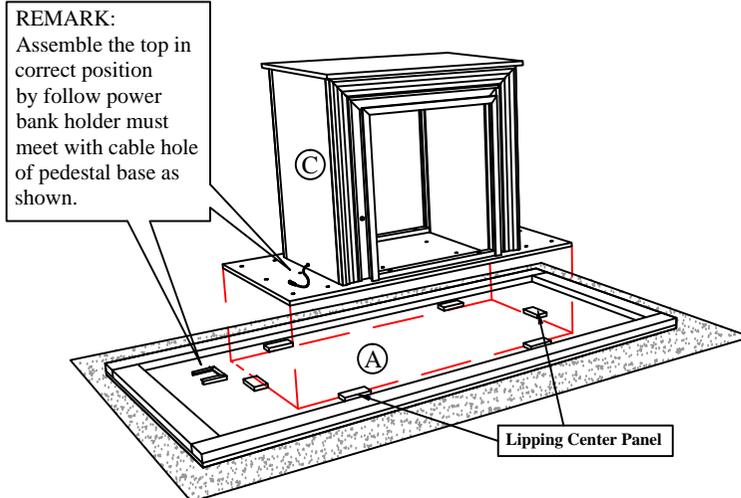

STEP 4 : Secure the Fixed Leg (C) with Csk Screw (1) by tighten them with Screw Driver (NOT PROVIDED).

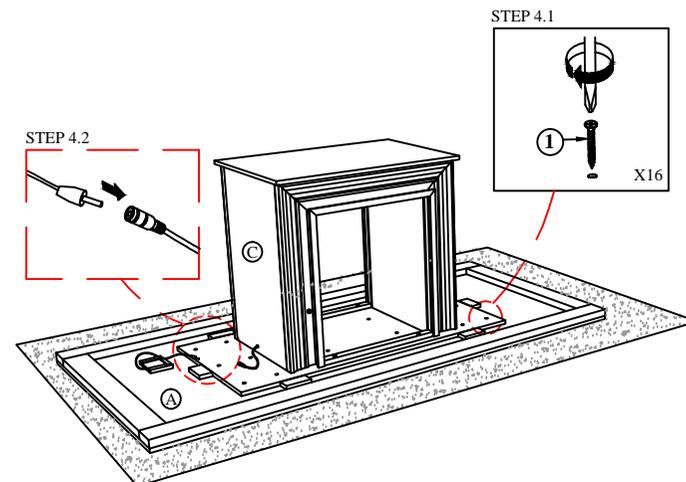

ASSEMBLY INSTRUCTIONS

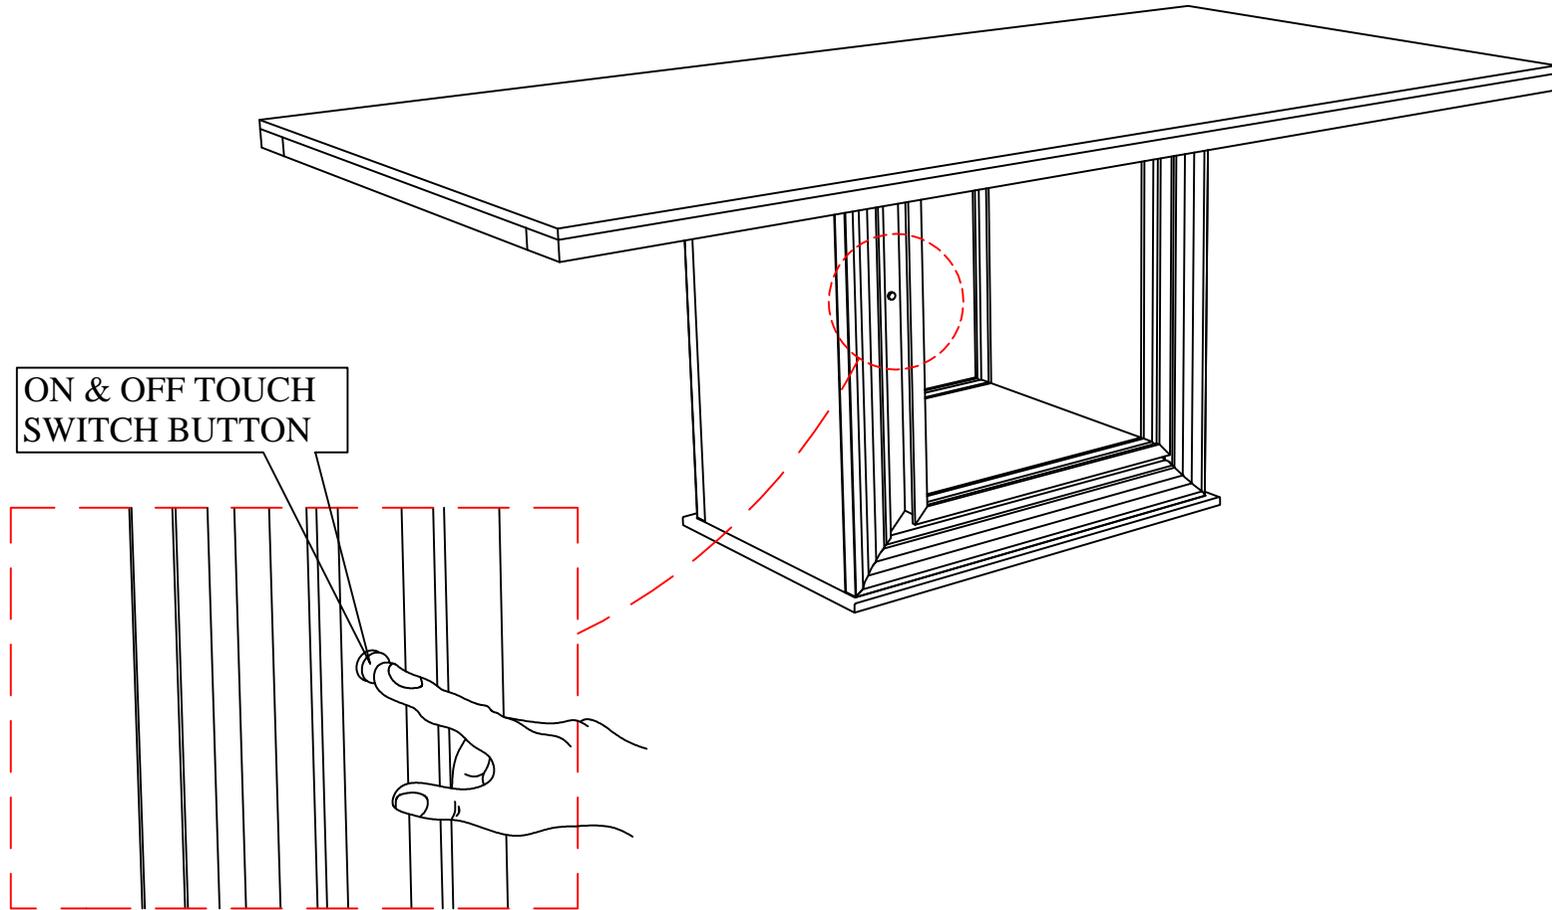

COMPLETED ASSEMBLY

NOTE : MUST TIGHTEN SCREWS PERIODCALLY OR SCREWS WILL BECOME LOOSE.CHECK TIGHTNESS OF ALL SCREWS EVERY 6-8 WEEKS.

PAGE 2 OF 2