


Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly required. Online Parts Request: parts.request@hillsdalefurniture.com - Customer Service Phone Number: 502-562-0000

HARDWARE LIST


- A (4) Allen Bolts
- B (4) Spring Washers
- C (4) Flat Washers
- D (1) Allen Wrench

PARTS LIST

- E (1) Top Section
- F (1) Bottom Section

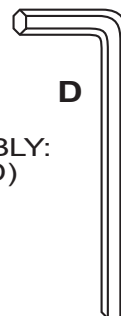

TOOLS REQUIRED FOR ASSEMBLY:
ALLEN WRENCH (INCLUDED)

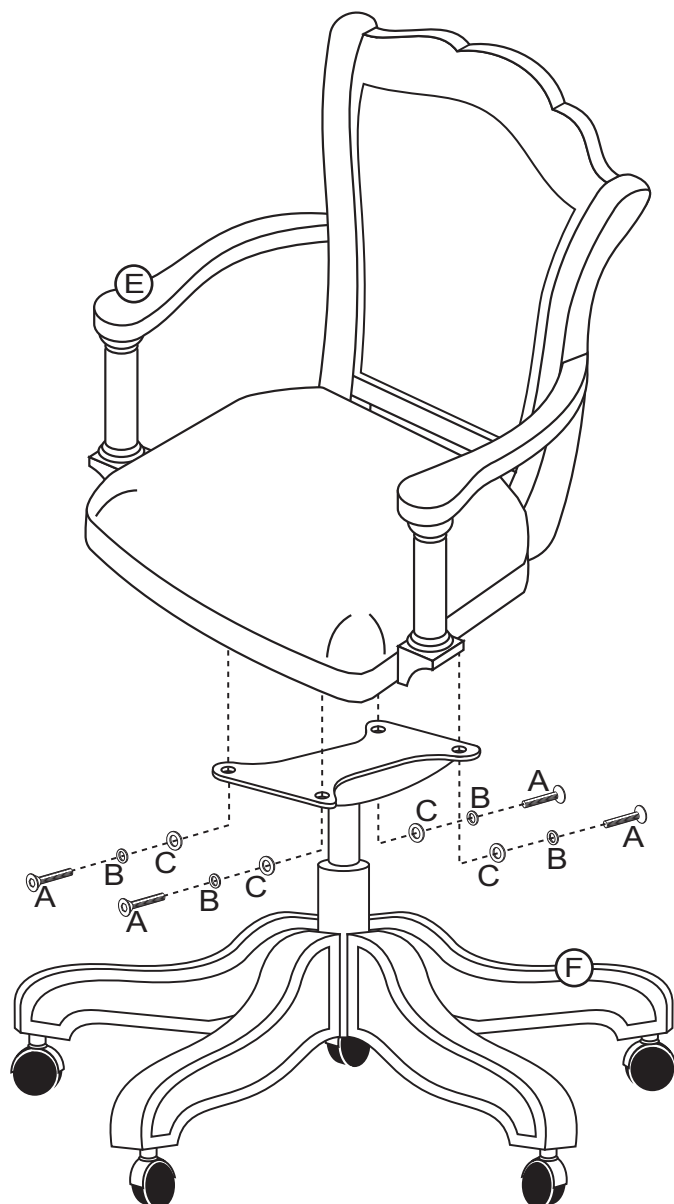

***** ASSEMBLY *****

Attach Top Section (E) to Bottom Section (F), using 4 Allen Bolts (A), 4 Spring Washers (B) & 4 Metal Washers (C) to hold tight in place. Please tighten all bolts using Allen Wrench (D) provided to prevent stripping of wood. The assembly of your new game chair is now complete.

The illustration shown above, is a generic drawing of assembly of the original item you purchased.

CARE & MAINTENANCE: The touch of a soft cloth is all the maintenance the finish will ever need. Please do not use harsh or abrasive cleaners for polishing, as they may cause damage to the finish. Periodic checks are recommended to make sure that all bolts, screws and nuts are securely tightened.