

beko

Front-Loading Dryer



Quick Start-up Instructions

Program Selection Table

Quick Dry	For the small loads of qualified fabrics with short drying times such as synthetic clothing.
Bedding	Drying cotton beddings such as bed linen, sheets, bed cover, pillow case.
Sports Wear	Use for drying sport, fitness, and casual polyester-blended garments.
Delicates	Very delicate laundry (silk blouses, fine underwear, etc.) can be dried at a lower temperature that are suitable for drying or for laundry that is advised to be handwashed.
Wrinkle Free	Dries the shirts in a more sensitive way so that they are less wrinkled and ironed easily.
Towel	Drying towels such as kitchen towel, bath towel and hand towel.
Wool	Use for softing wool items and garments made of wool blend such as sweaters, scarves, headscarves. It prepares wool garments for drying with low air temperature.
Timed Dryer (Low Temp.)	Timed programs can be selected to reach the desired final drying level at low temperatures.
Timed Dryer (High Temp.)	Timed programs can be selected to reach the desired final drying level at high temperatures.
Sanitize	It is a long-term program that you can use for the clothes (baby clothes, towels, underwear, etc. cotton) you require hygiene.
Mixed Fabric	Mix program (Regular Dry) is for mixed loads with different types of fabrics. Mixed laundry can be dried at a lower temperature.
Heavy Duty	Use for heavy-duty clothes such as jeans or garments should be extra dry.
Perm Press	Less durable clothing can be dried with this program at a lower temperature compared to the cottons program.
Cottons/Normal	Durable clothing can be dried with this program at a normal temperature.

(1) Drying

1. Place the laundry in the machine.



Do not load more laundry than the capacity of your machine!




Maximum loading level



Incorrect loading

2. Close the door.

3. To turn the machine on, set the control knob to the program you want to run. Your product will go into ready mode.

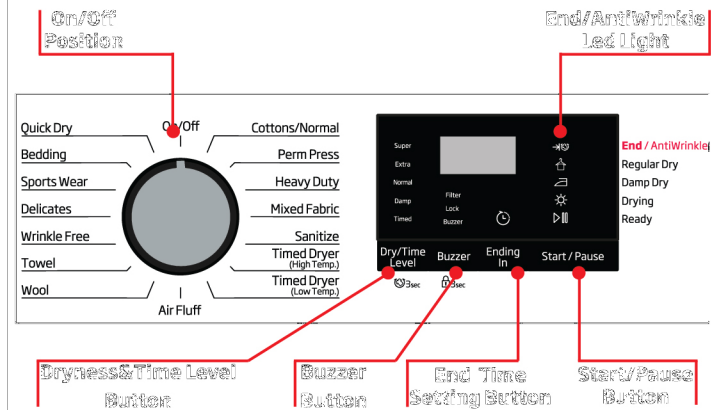

Use the program selection table for an appropriate program.



4. Select the appropriate program using the program knob.

5. Press Start / Pause button to start the program.

6. End / AntiWrinkle light on the panel will light once the drying process is over.



If you do not want to hear audible warning at the end of the program, press "Buzzer" button.


7. You may open the door and take the laundry out.

8. Use the program knob to turn off the tumble dryer.


9. Clean the filter. (see, Section 2)



Required when operating a Beko washer and dryer on the same circuit. The washer plugs into the rear of the dryer. This is way a 208 - 240V / 30 Amp circuit breaker is required. Machines should not be directly connected to any other brand washer or dryer.

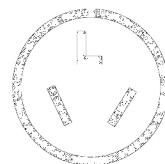


3 Wire Connection
10-30R Receptacle
208-240 V / 30 Amps

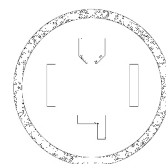

4 Wire Connection
14-30R Receptacle
208-240 V / 30 Amps


(2) Filter cleaning

1. Remove the filter.

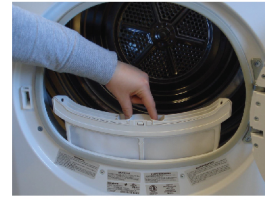

Clean the filter after each use.

2. Open the filter and clean the lint inside the filter. You can clean the lint by hand or by using a piece of cloth.

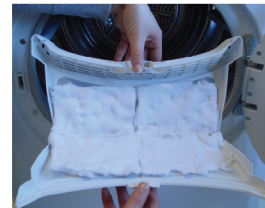

A layer can build up on the filter pores that can cause clogging of the filter after using your machine for a while. Wash the filter with warm water to remove the layer that builds up on the filter surface. Dry the filter completely before using it.



Do not operate your machine without installing the filter in its place after cleaning it.

3. Install the filter.

(5) Ventilation Duct and Connection



Proper ventilation duct connection

To connect a ventilation duct;
1.Connect the air outlet metal duct to the spacer by turning it counter-clockwise.
2.Make the duct passages as shown the picture above.



Improper ventilation duct connections



Only rigid or flexible metal duct should be used for exhausting, unless the appliance has been checked for use with nonmetallic duct or the duct has been checked and found acceptable for use with clothes dryers.

* In Canada, the diameter of the duct to be used should be 4" (102 mm). In United States, the regulation for the required exhaust duct diameter must be followed.
Max. metal rigid duct length is given:
Max. length: 72 ft (21.9 m) + 2 elbows

(6) Important warnings

- Do not load more laundry than the capacity of your machine.
- Do not operate without installing the filter.
- Overly wet laundry or laundry with dripping water must not be put into the machine.

- Always use the fitting device to mount onto a washing machine.
- Your machine is not intended for industrial use.



For a safe and efficient use of your machine, make sure that you have read the operation manual.

Specifications of this appliance may change without notice to improve the quality of the product. Figures in the operation manual are symbolic and may not exactly match your product.