


## Door Installation Instructions

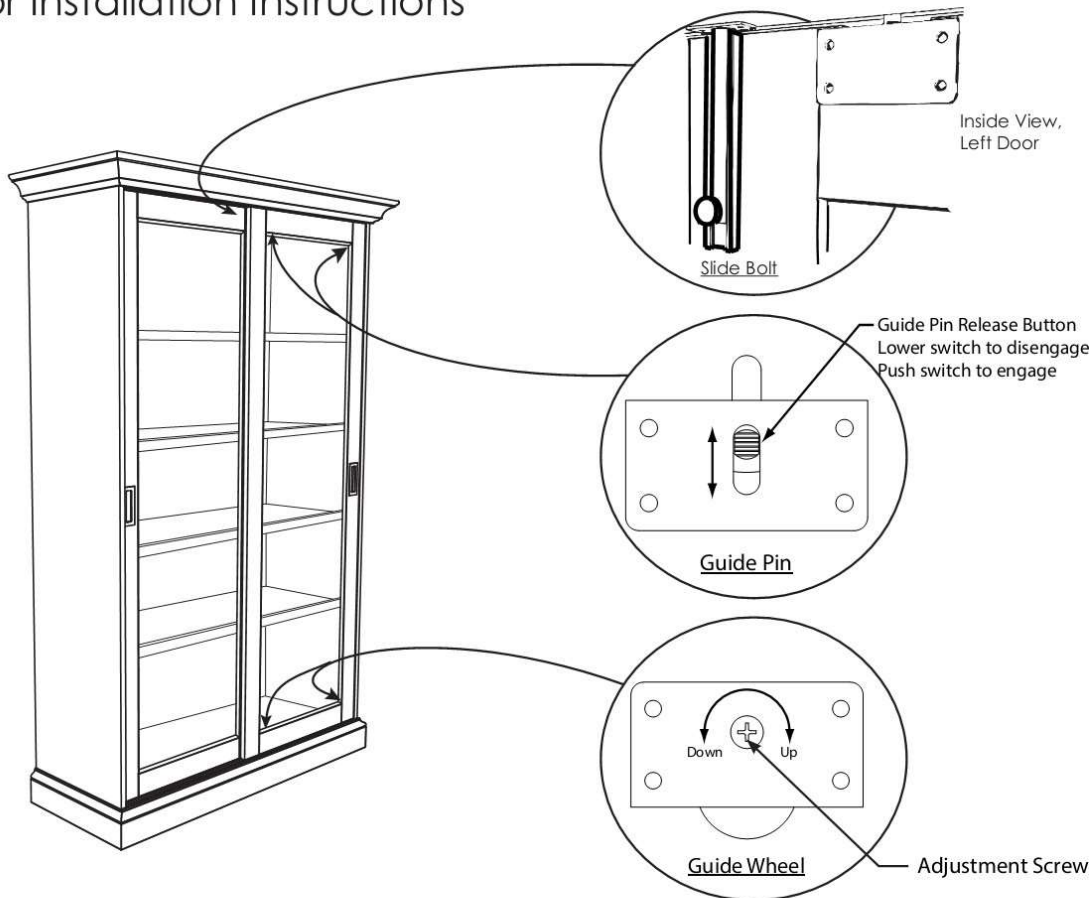

1. The doors are packaged in a separate carton located along the side of the cabinet. Remove the doors from inner carton.

**CAUTION: To avoid damage to the doors, DO NOT use a knife to cut the carton.**

2. Separate the left and right hand doors from the packaging. Each door has guide wheels along the bottom edge and guide pins along the top edge. The left door has an additional brass slide bolt which is attached to the upper backside of the door.

### INSTALLING THE DOORS

3. Install the left door first.

- Slide the two guide pins down until you hear a click. The pins remain concealed until you press the guide pin release button.
- Position the door so that the guide wheels rest in the rear lower track.
- Align the door guide pins with the rear upper track and engage the pins by pressing the guide pin release button. You will hear a click. The guide pins are now engaged. Ensure the guide pins have engaged in the track before releasing the door.

4. Install the right door by repeating step #3, inserting the guide wheel and pins into the front tracks.

### DOOR ADJUSTMENT

5. Each door can be raised or lowered by adjusting the bottom guide wheels. The adjustment screw is on the backside of each guide wheel.

Using a common Phillips screwdriver:

- Rotate the adjustment screw CLOCKWISE to raise the door height.
- Rotate the adjustment screw COUNTER-CLOCKWISE to lower the door height.
- Adjust each wheel up or down as needed in order to align the door with the cabinet.



[www.howardmiller.com](http://www.howardmiller.com)

497103-r2