


REMEMBER: THE IMAGES ARE FOR ILLUSTRATIVE PURPOSES ONLY.




STEP 1

REMOVE THE SCREWS FROM THE BACK OF THE ELECTRIC FIREPLACE, THEN USE THE SAME HOLES TO INSTALL THE BRACKETS

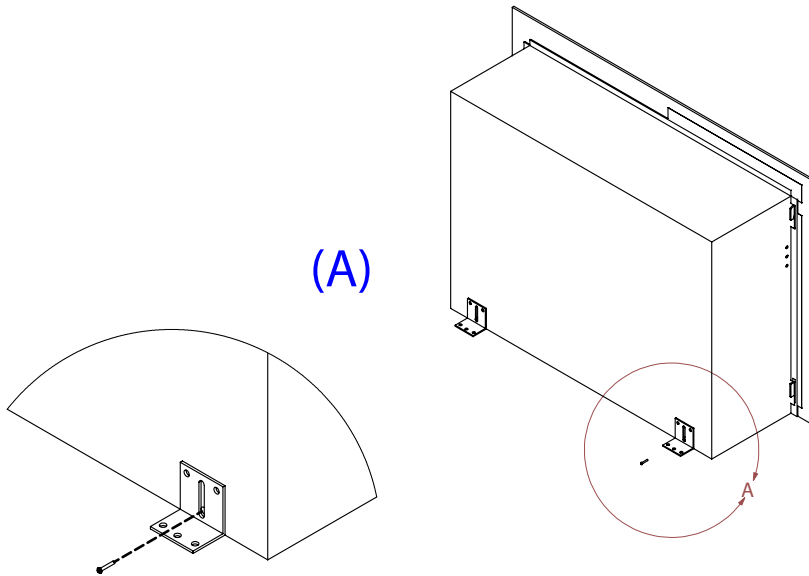

STEP 2

AS SHOWN IN FIGURES (B) AND (C), PLACE THE ELECTRIC FIREPLACE WITHOUT THE SCREEN INTO THE FURNITURE, USE THE TEMPLATE PROVIDED IN THE ENVELOPE TO ALIGNING THE SIDE (DETAIL B), THEN ADJUST IT 1/8" INSIDE OF THE FURNITURE (DETAIL C)

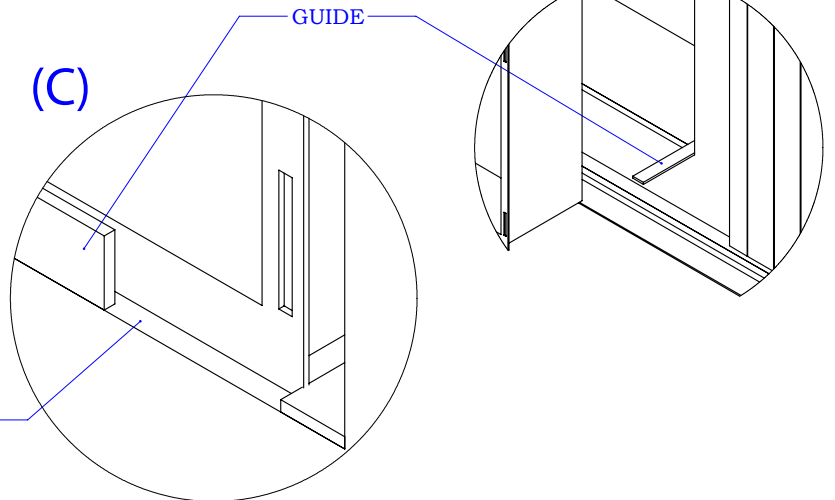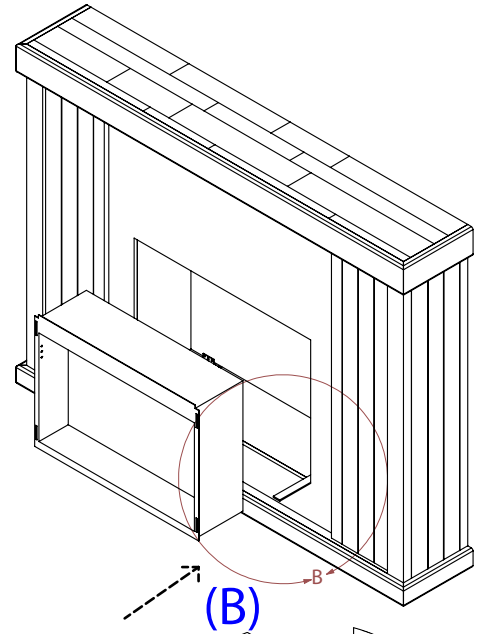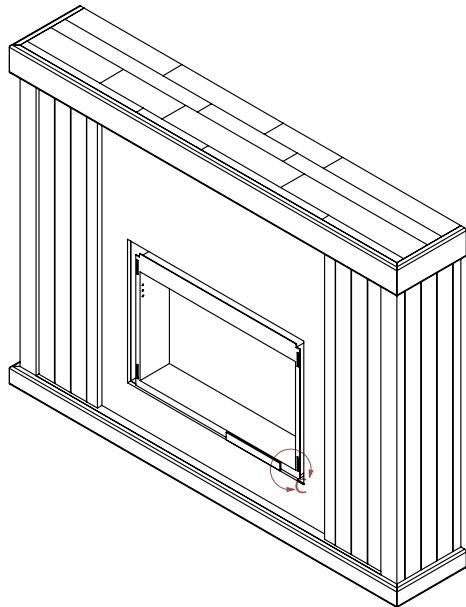

TRUCK
IN 1/8"




**ASSEMBLING
INSTRUCTION**


I-EFP-A02

STEP 3

NOW, AT THE BACK, FIX THE BRACKETS
TO THE CABINET USING SCREWS AS
SHOWN IN FIG. (D).

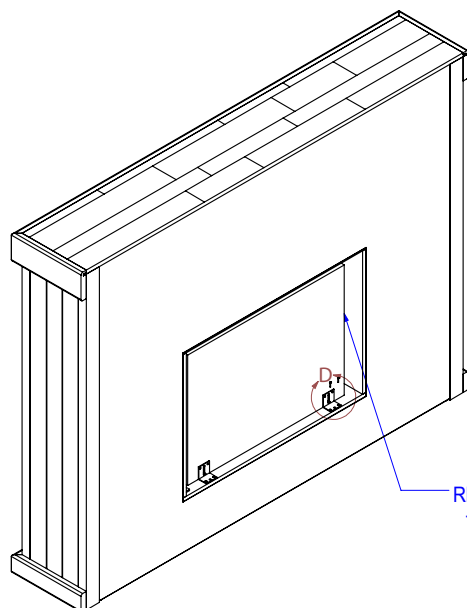



REMEMBER TO HAVE CENTERED
THE CHIMNEY BEFORE FIXING
IT WITH THE CABINET.

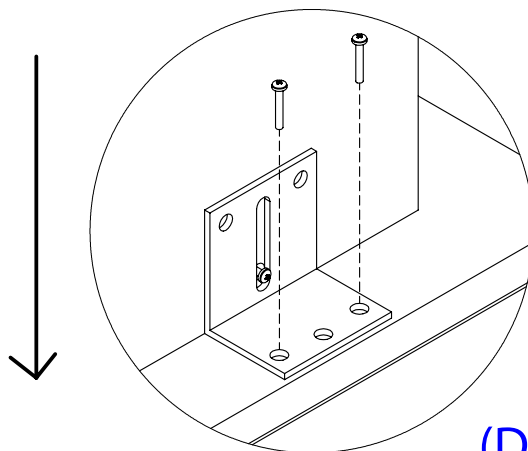

(D)

STEP 4

THE HOOKS LOCATED AT THE BACK OF THE SCREEN
SHOULD BE ATTACHED BY ALIGNING THE THE HOOKS
LOCATED AT THE BACK OF THE SCREEN WITH THE
OPENINGS OF THE ELECTRICAL FIREPLACE AND
PALCE IT.

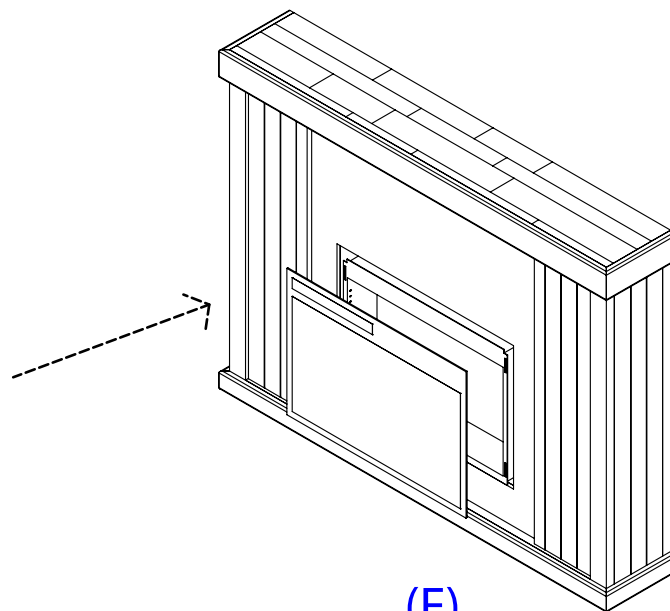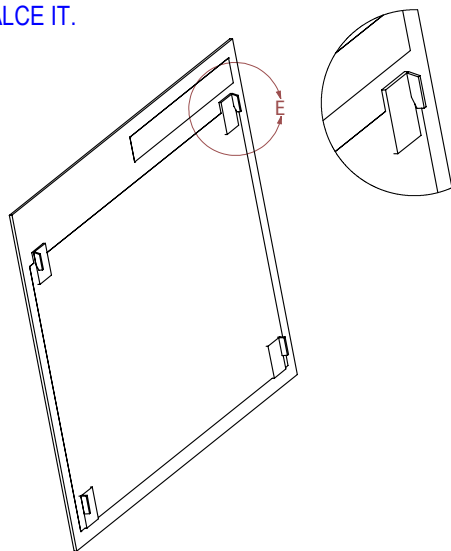

(E)



**ASSEMBLING
INSTRUCTION**

I-EFP-A02