



Setup Guide

Téléviseur digital a color con pantalla de cristal líquido

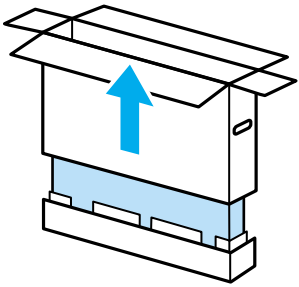

5-073-687-11(1)

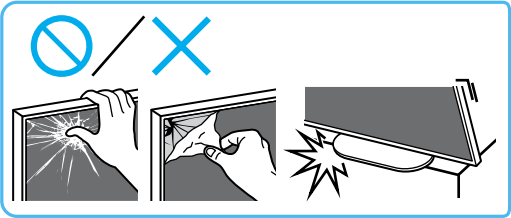

EN	Setup Guide
FR	Manuel de configuration
ES	Guía de configuración

Sony Customer Support

U.S.A.:
<https://www.sony.com/tvsupport>
Canada:
<https://www.sony.ca/support>
U.S.A. 1.800.222.SONY (7669) Canada 1.877.899.SONY (7669)
Please Do Not Return the Product to the Store

Service à la clientèle Sony

Canada :
<https://www.sony.ca/support>
États-Unis :
<https://www.sony.com/tvsupport>
Canada États-Unis
1.877.899.SONY (7669) 1.800.222.SONY (7669)
Ne retournez pas le produit au magasin









Lea este manual antes de usar el producto

Centro de Asistencia de Sony

<https://esupport.sony.com/ES/LA/>
Llame al número telefónico que aparece en su póliza de garantía.
Por favor no devuelva el producto a la tienda donde adquirió el producto.

BRAVIA

K-85XR90M2 / 85XR90SM2 / 85XR70M2
K-85XR70CM2 / 85XR70SM2 / 75XR90M2
K-75XR90CM2 / 75XR90SM2 / 75XR70M2
K-75XR70CM2 / 75XR70SM2 / 65XR90M2
K-65XR90CM2 / 65XR90SM2 / 65XR70M2
K-65XR70CM2 / 65XR70SM2

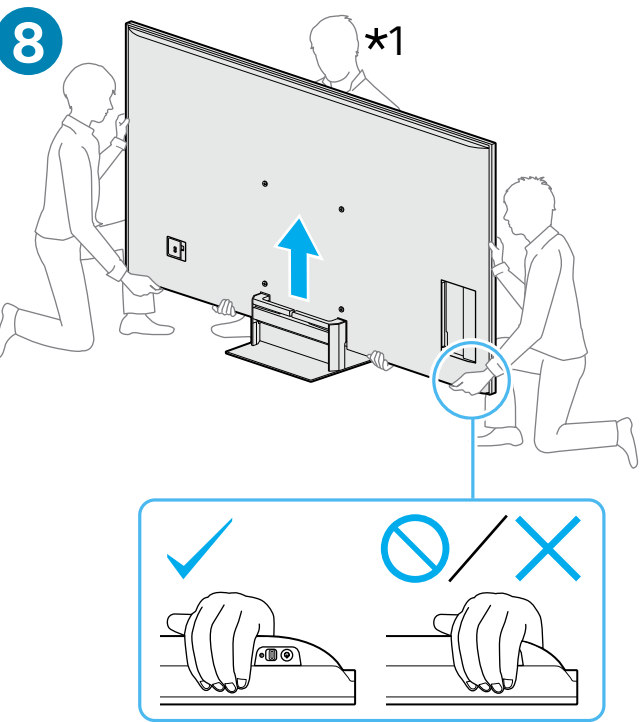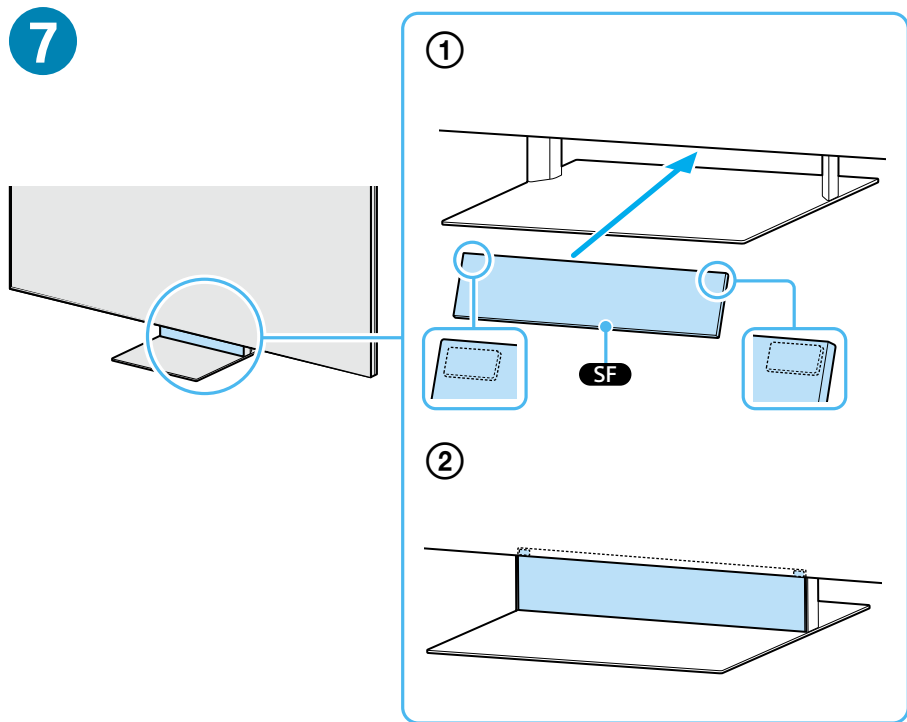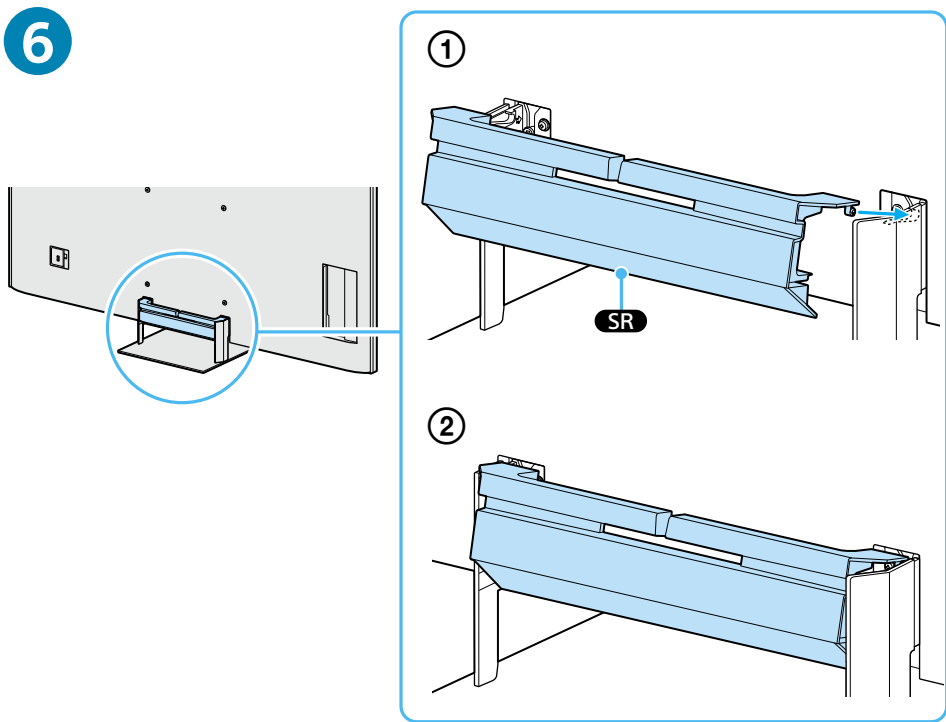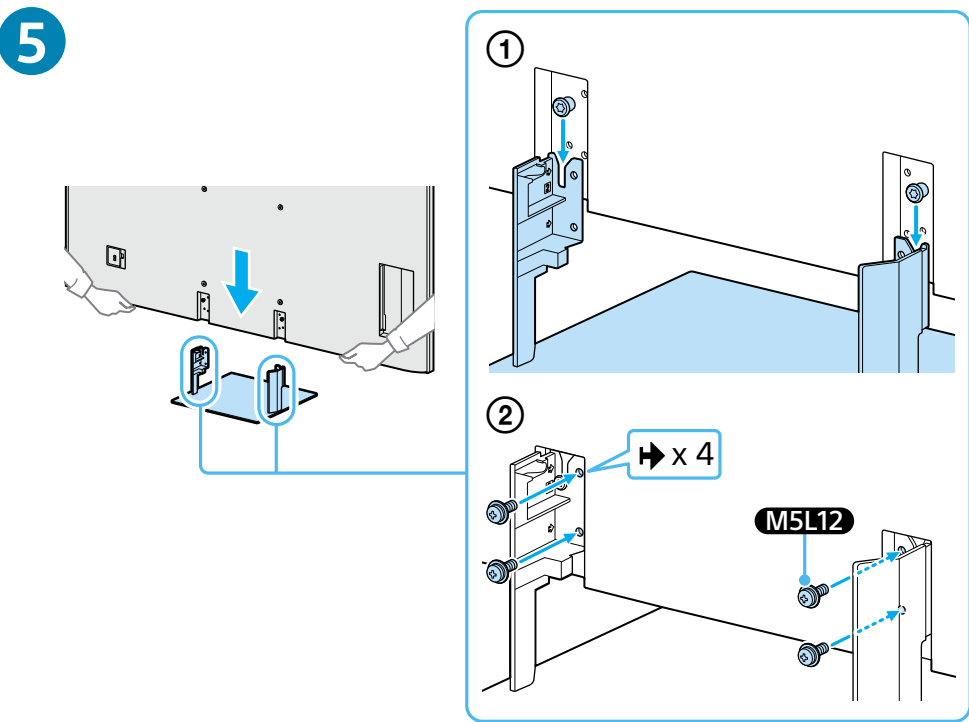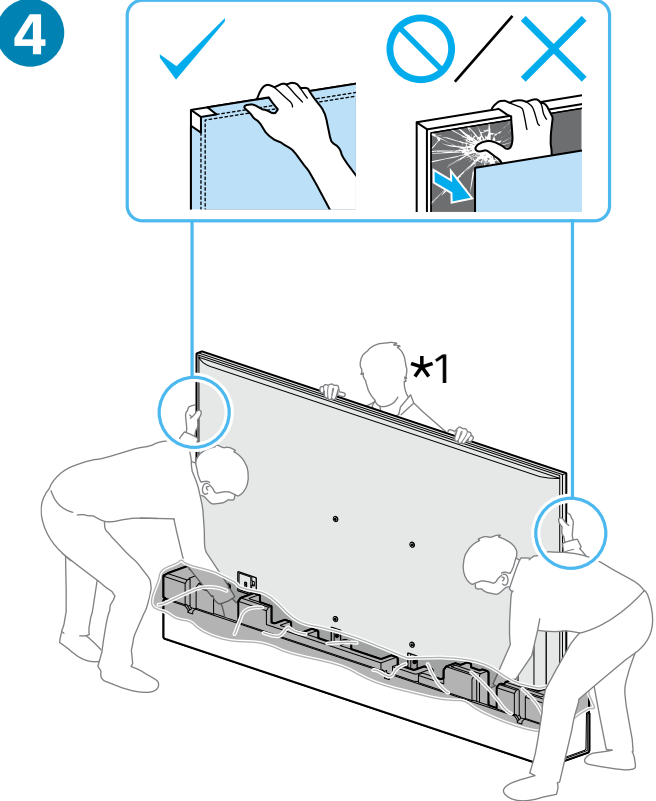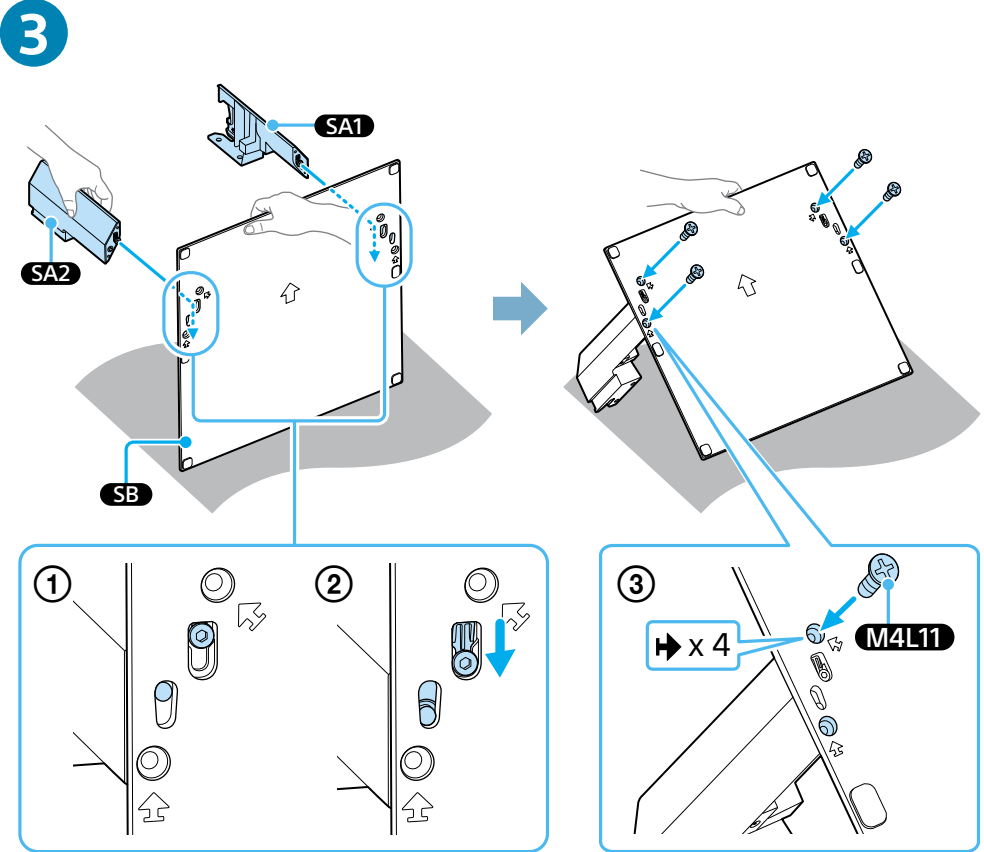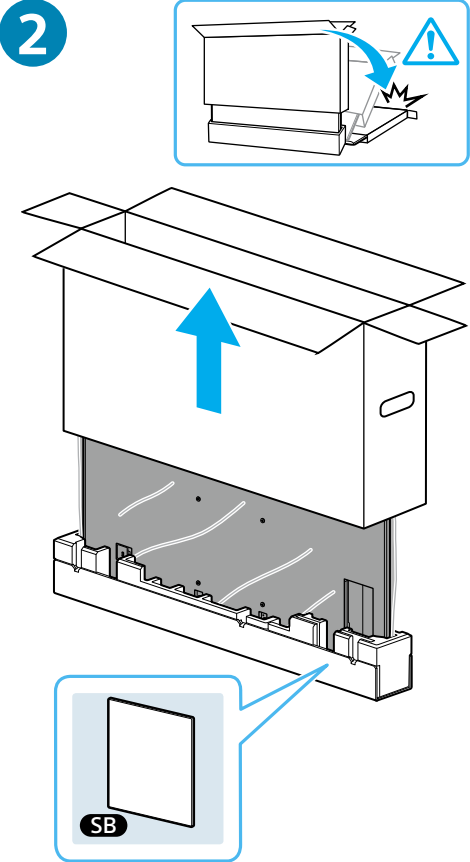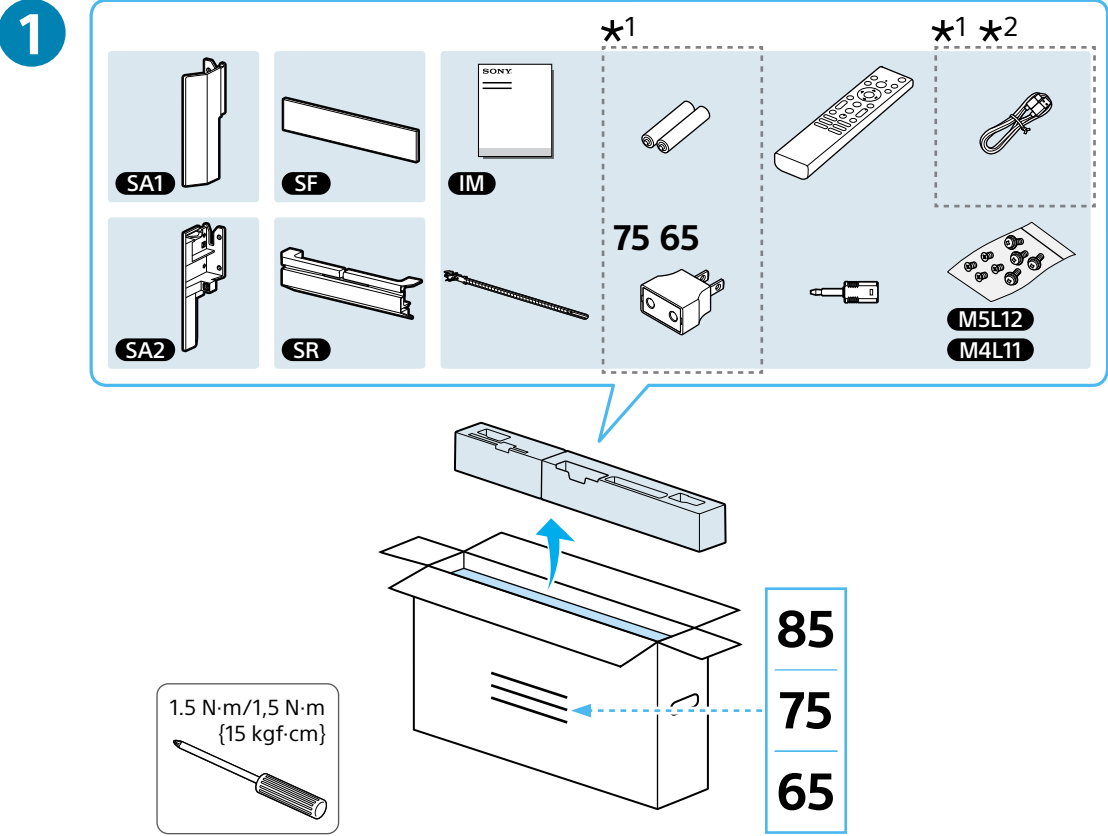


★1 Only for limited region/country/model. / Uniquement pour certaines régions/pays/modèles. / Solo para regiones/países/modelos limitados.


★2 Refer Reference Guide. / Reportez-vous au Manuel de référence. / Consulte la Guía de referencia.




9

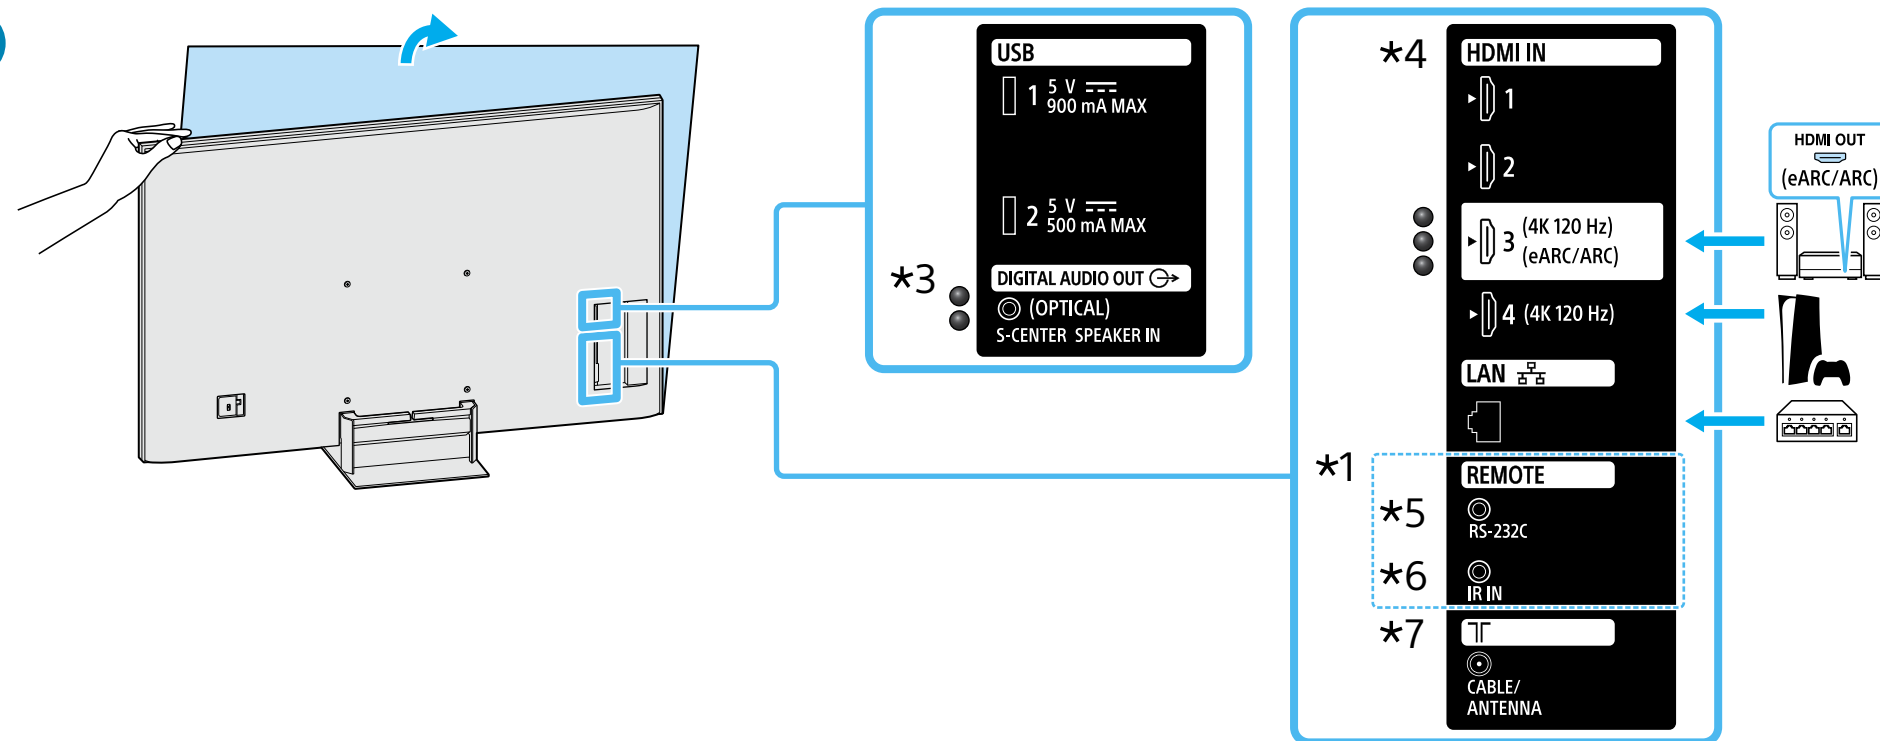


10

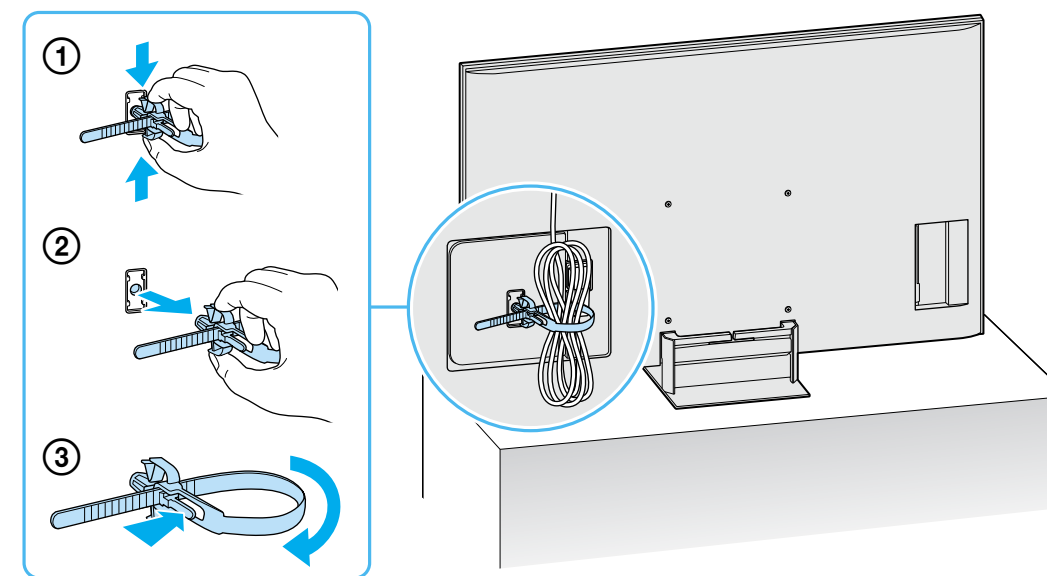




11

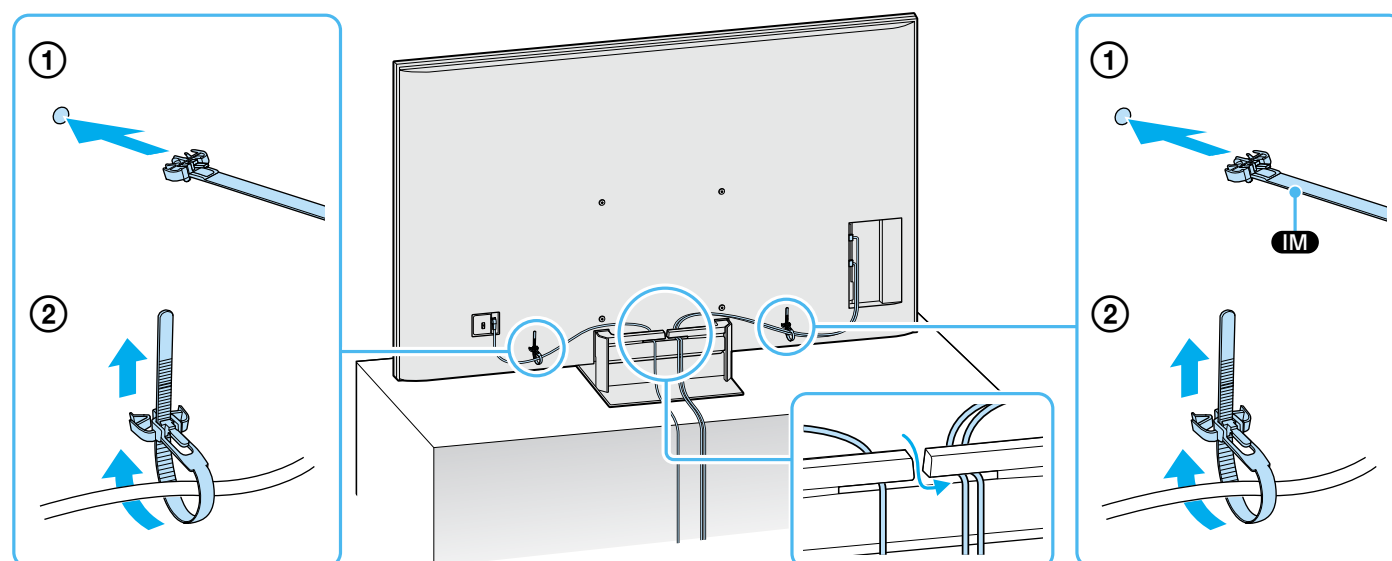


12

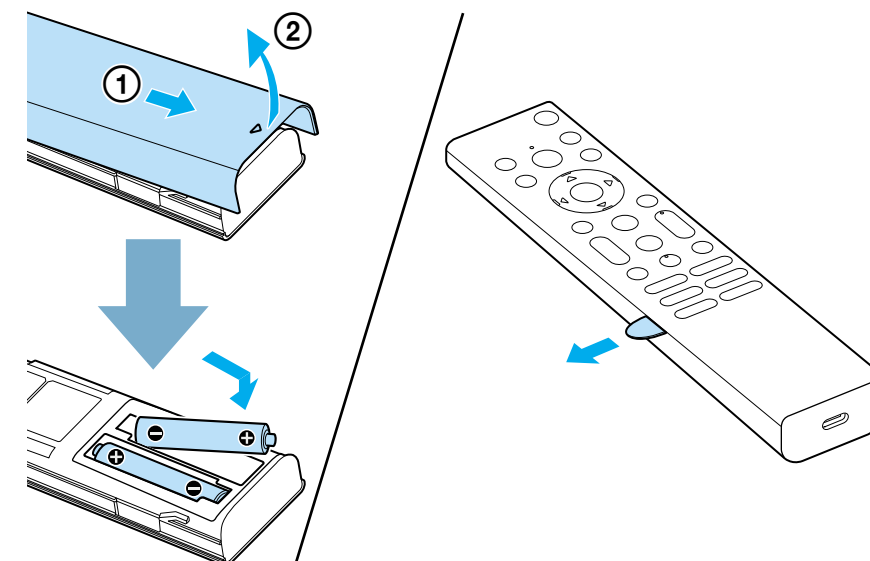


13

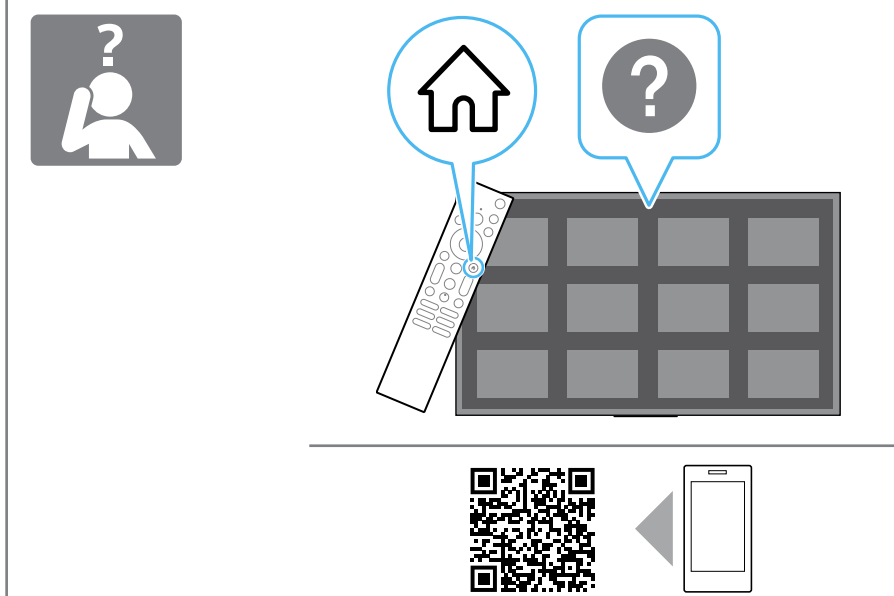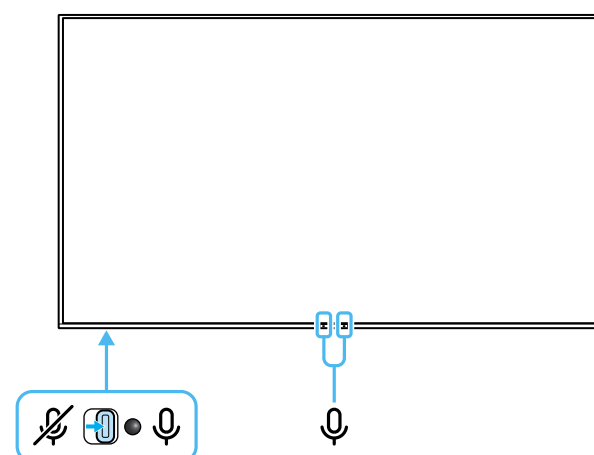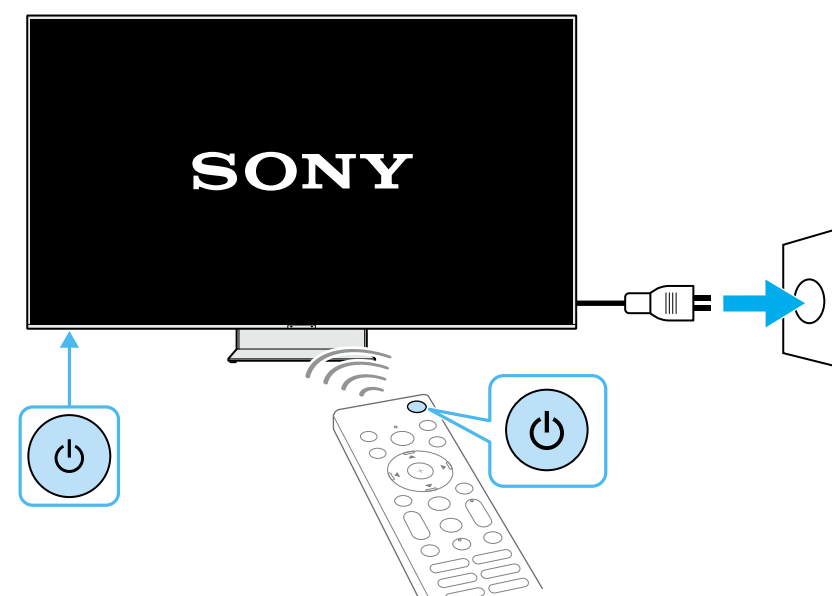


*3

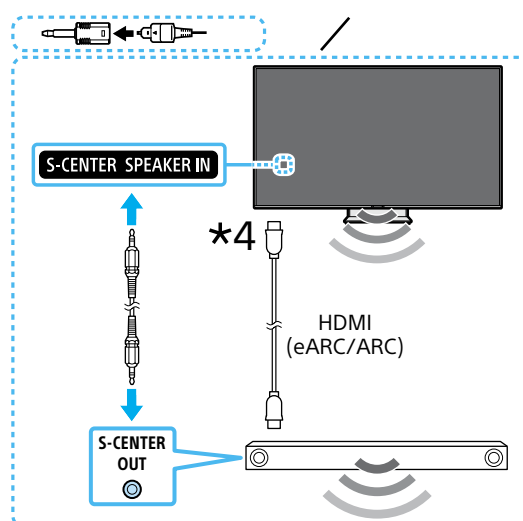


*4

 

*6

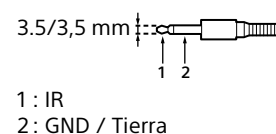

*5

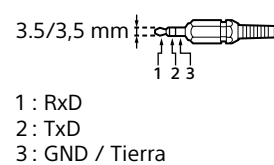

*7

