

ASSEMBLY INSTRUCTION FOR 47.5" ROUND DINING TABLE D-16730-8-RDT1

Caution:Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.


- 1.We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
- 2.Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
- 3.Please do not over tighten screws or bolts.
- 4.Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

PARTS LIST				HARDWARE LIST			
NO.	PART DESC		Q'TY	NO.	HARDWARE DESC		Q'TY
A	Top table		1pc	1		Connecting Long Bolt w/ Flat washer & Spring washer (Ø5/16" x 2")	12pcs
B	Leg		4pcs	2		Connecting Short Bolt w/ Flat washer & Spring washer (Ø5/16" x 1-1/4")	1pc
C	Bottom Rail 2 (Lower)		1pc	3		Allen key (M4)	1pc
D	Bottom Rail 1 (Upper)		1pc				




Only tighten all bolts when all bolts aligned with bolt inserts.

STEP: 1

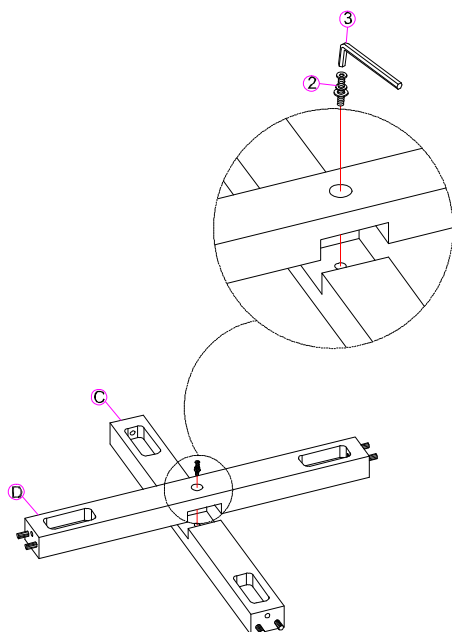


STEP: 2

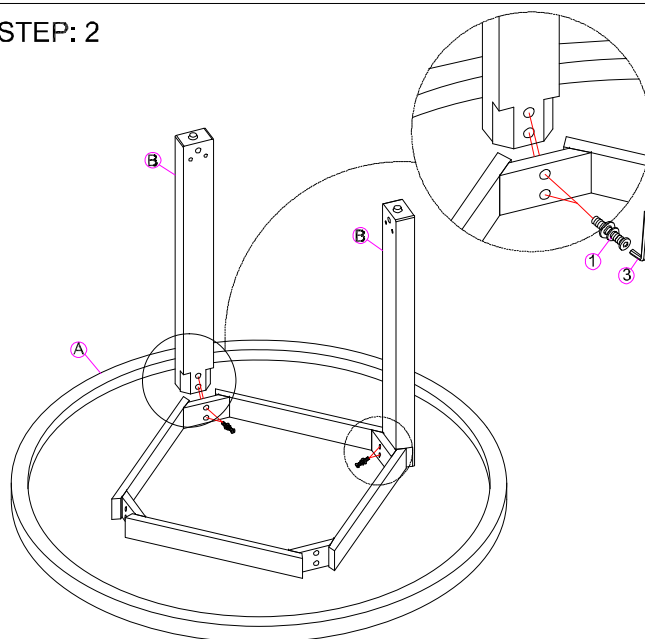


ASSEMBLY INSTRUCTION FOR 47.5" ROUND DINING TABLE D-16730-8-RDT1


STEP: 3

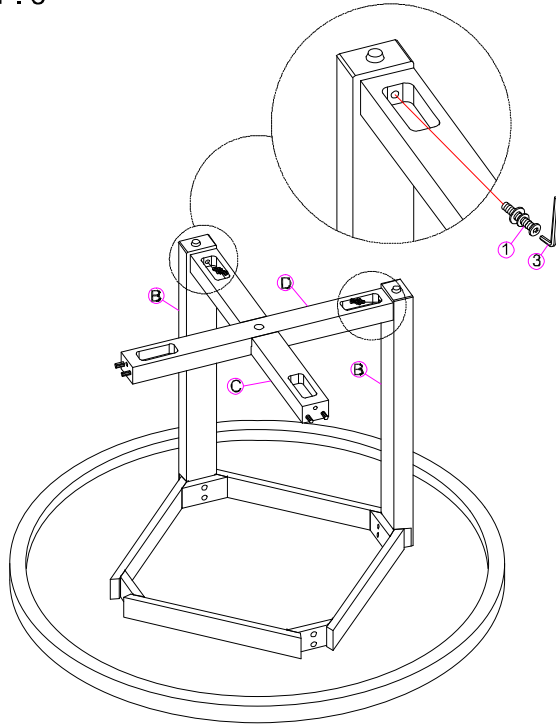

STEP: 4

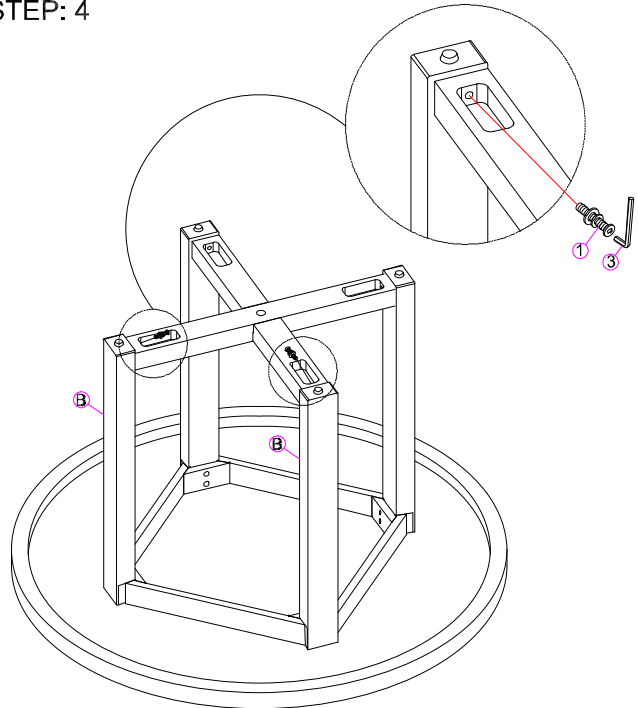

STEP: 5

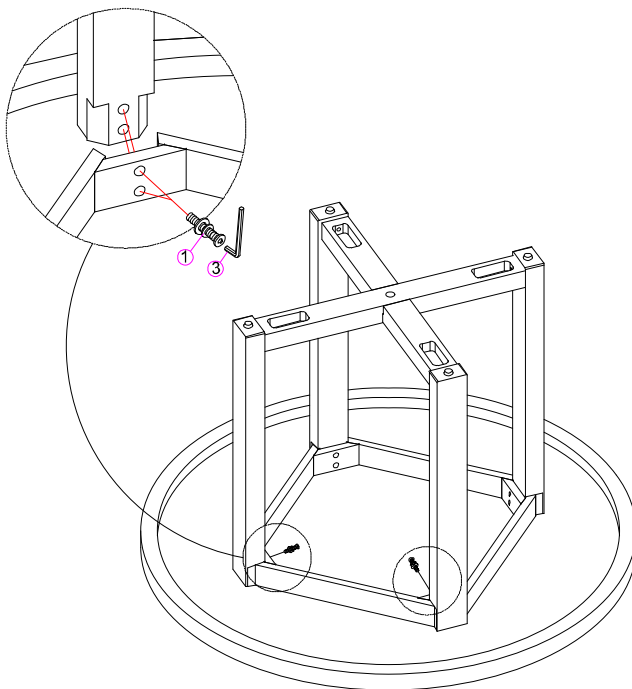

Completed

