

 


Assembly Instruction

ITEM NO: 1220F1S/1220F2S/1220F3S


ACCENT CHAIR

NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.

PART LIST:			
NO.	DESCRIPTION	PHOTO	QTY
A	CHAIR		1pc
B	WOODEN FRONT LEG		2pcs
C	WOODEN REAR LEG		2pcs
D	WASHER		4pcs


Please follow the drawings below to assemble the item.

Step 1: Legs are stored in the bubble bag at the bottom of the unit shown with arrow sticker. Please take out for assembly.

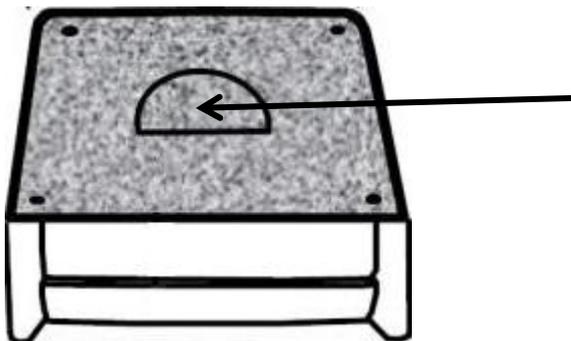


- B FRONT LEG  X 2
- C REAR LEG  X 2
- D WASHER  X 4

Step 2: Insert the washer onto the top of the legs, rotate the legs to tighten it. Rear leg curves must face outward.

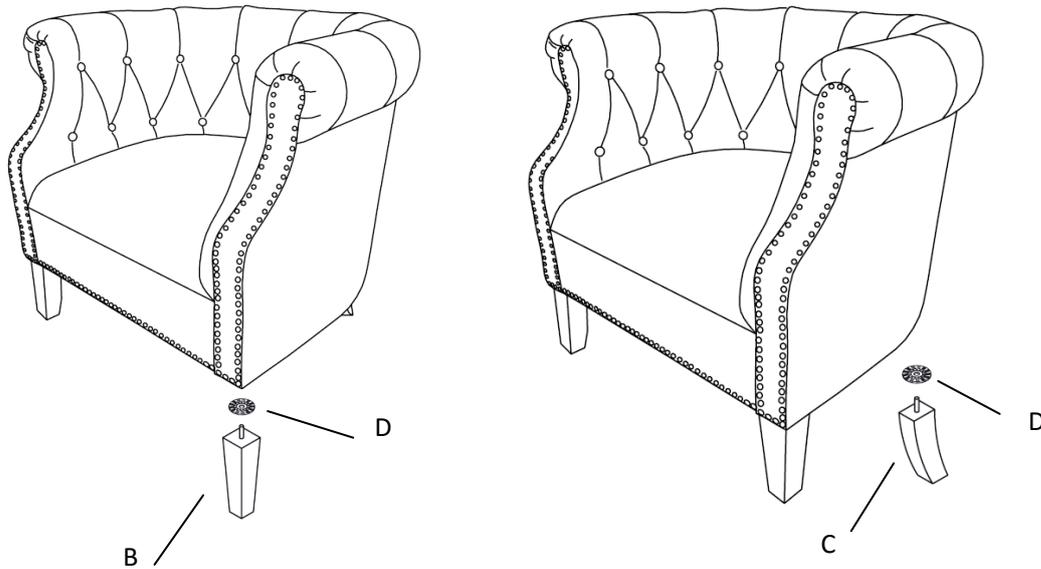

Step 3: Assembly completed.

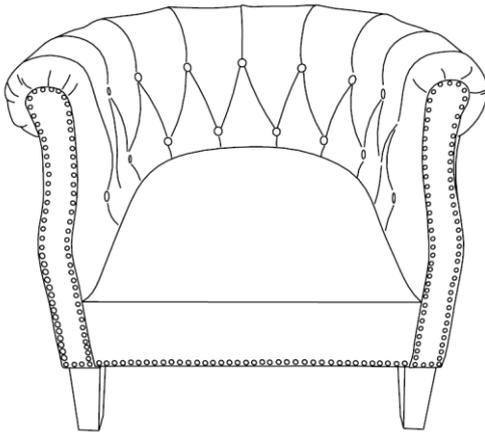

CARE INSTRUCTION FOR 100% POLYESTER FURNITURE:

In order to maintain the original appearance of your 100% polyester furniture, please follow below care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage 100% polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime buildup.
- Wipe the 100% polyester with professional cleanser.



For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.