



**Item # : YT500CC**  
**Description : YORKTOWN COUNTER CHAIR**  
**Product Size : 18.25" x 22" x 43"**

Your furniture purchase is an investment. Here are a few tips to maximize the lifetime of your furniture with a minimum amount of effort. Properly caring for your furniture can help ensure that it looks great year after year.

#### Wood Furniture Maintenance:

- Always dust, wipe, and dean with the grain of the wood.
- Dust with a soft cloth. Dust will scratch the furniture surface if not removed properly.
- Use the same type of polish consistently as interchanging oil-based and wax-based polishes will cause a build-up and result in a foggy or cloudy appearance.
- If a polished surface becomes foggy, rub it with a cloth dipped in a solution of one tablespoon vinegar to one quart of water. Rub softly with the grain until the surface is completely dry.
- Soap and water are not advisable for wood surfaces. Water can penetrate the finish and raise the grain on wood, causing damage.
- Remember to change dusting cloths frequently as dirty cloths may scratch your furniture's surface.

#### The Enemies of Wood:

- Moisture is wood's worst enemy. Liquid spills should be gently wiped up immediately. Coasters should be used under all beverages.
- Do not allow rubber or vinyl materials to lie on the furniture. Chemicals in rubber may leave a stain. Put a strip of felt or leather under accessories that have rubber or vinyl.
- Heat creates a chemical change in the furniture's finish, which results in a white spot. Use protective pads under hot dishes, appliances, etc.
- Sunlight's ultraviolet rays can damage the finish of furniture. Do not place furniture directly against a heater or radiator and do not place in the path of hot streams of air from central heating. This will cause extreme localized drying of the wood.

#### High Gloss Resin Table Maintenance:

- Resin tabletops have approximately 1/8" of resin coat on the top face of the table, which will resist ice, water, wine, liquor, food, cleaning fluids, and warm or hot liquids; however, cups, glasses, etc. containing hot liquids should not be left on the table without a coaster for protection.
- Resin tabletops will scratch just the same as any other glossy surface and basic precautions should be taken.
- For lasting shine, the resin table should be waxed with a car wax that does not contain silicon. Maintaining this wax build-up will result in a high gloss shine.
- When wiping down the table, a soft, clean rag should be used. Do not use a heavy paper.

#### Granite Top maintenance:

The surface of the granite on your table has been polished or sealed to create a generally non-porous surface. The stone has many natural characteristics including: veining, hairline cracks, and color variations - which make up the stone's beauty.

To maintain the beauty of your granite:

- Protect surfaces from scratching, staining and etching by:
    - \* Keeping them free of debris or sharp objects
    - \* Wiping up spills immediately
    - \* Avoiding contact with chemicals (particularly acid-based materials)
    - \* Clean with pH neutral products or those especially formulated for use on stone.
  - It is not recommended to use a water-based solvent for dark granite as it will remove the polish from the surface.
  - After a period of use, apply a penetrating sealer to prevent contaminants from being absorbed into the stone.
  - Remove stains with special absorbent poultices formulated for use on stone.
  - Renew the surface on polished granite (granite with a high gloss surface by buffing with special stone polish, powder or cream.
- Do not use granite polish on granite with a matte finish, which has been honed rather than polished. (Penetrating sealer may be used on both polished and honed granite.)

#### Marble Top maintenance:

Marble may be stone, but it is porous stone and can stain easily. Treating marble surfaces the same as wood surfaces is a great rule of thumb.

- It is recommended to seal the tops on a regular basis (every 6 to 12 months). A good quality stone sealer can be purchased from any tile/stone store or any homecare store and should be applied according to the manufacturer's recommendation.
- When sealed properly, marble tops can be used indoors and outdoors and can withstand any weather conditions except internal freezing. Snow or freezing rain will penetrate the table and cause cracks.

#### Caring for the Fabric on Upholstered Furniture:

- Frequent vacuuming of the entire upholstered area will prevent dust from settling into the fibers.
- Professional cleaning is always recommended for all upholstered pieces.
- Always pre-test a small area of fabric in an inconspicuous area when cleaning before proceeding.
- Do not use cleaning products containing brightening agents.

## VERY IMPORTANT!!

**NEVER**  
USE GLASS CLEANERS  
ON FINISHED SURFACES.  
AMMONIA WILL  
CHEMICALLY ATTACK  
THE FINISH.

DO NOT  
WRITE  
DIRECTLY  
ON  
SURFACE



 
**PREVENT  
MARKING**

DO NOT  
PLACE  
DIRECTLY  
IN  
SUNLIGHT



**PREVENT  
FADING**

DO NOT  
USE  
PLACEMATS  
WITH  
RUBBER  
BASES



**PREVENT  
DISCOLORING**

**NEVER**  
ALLOW LIQUIDS OF ANY  
KIND TO LINGER ON  
SURFACES. ABSORPTION  
CAUSES THE WOOD TO  
WARP AND THE FINISH  
TO DE-LAMINATE.

DO NOT USE  
COMMERCIAL  
POLISHES  
AND WAXES



**PREVENT  
YELLOWING**

DO NOT  
PLACE HOT  
POTS, ETC.  
ON  
SURFACE



**PREVENT  
DAMAGE TO  
FINISH!**

REGULATE  
THE  
HUMIDITY  
CONDITIONS  
AT YOUR  
HOME

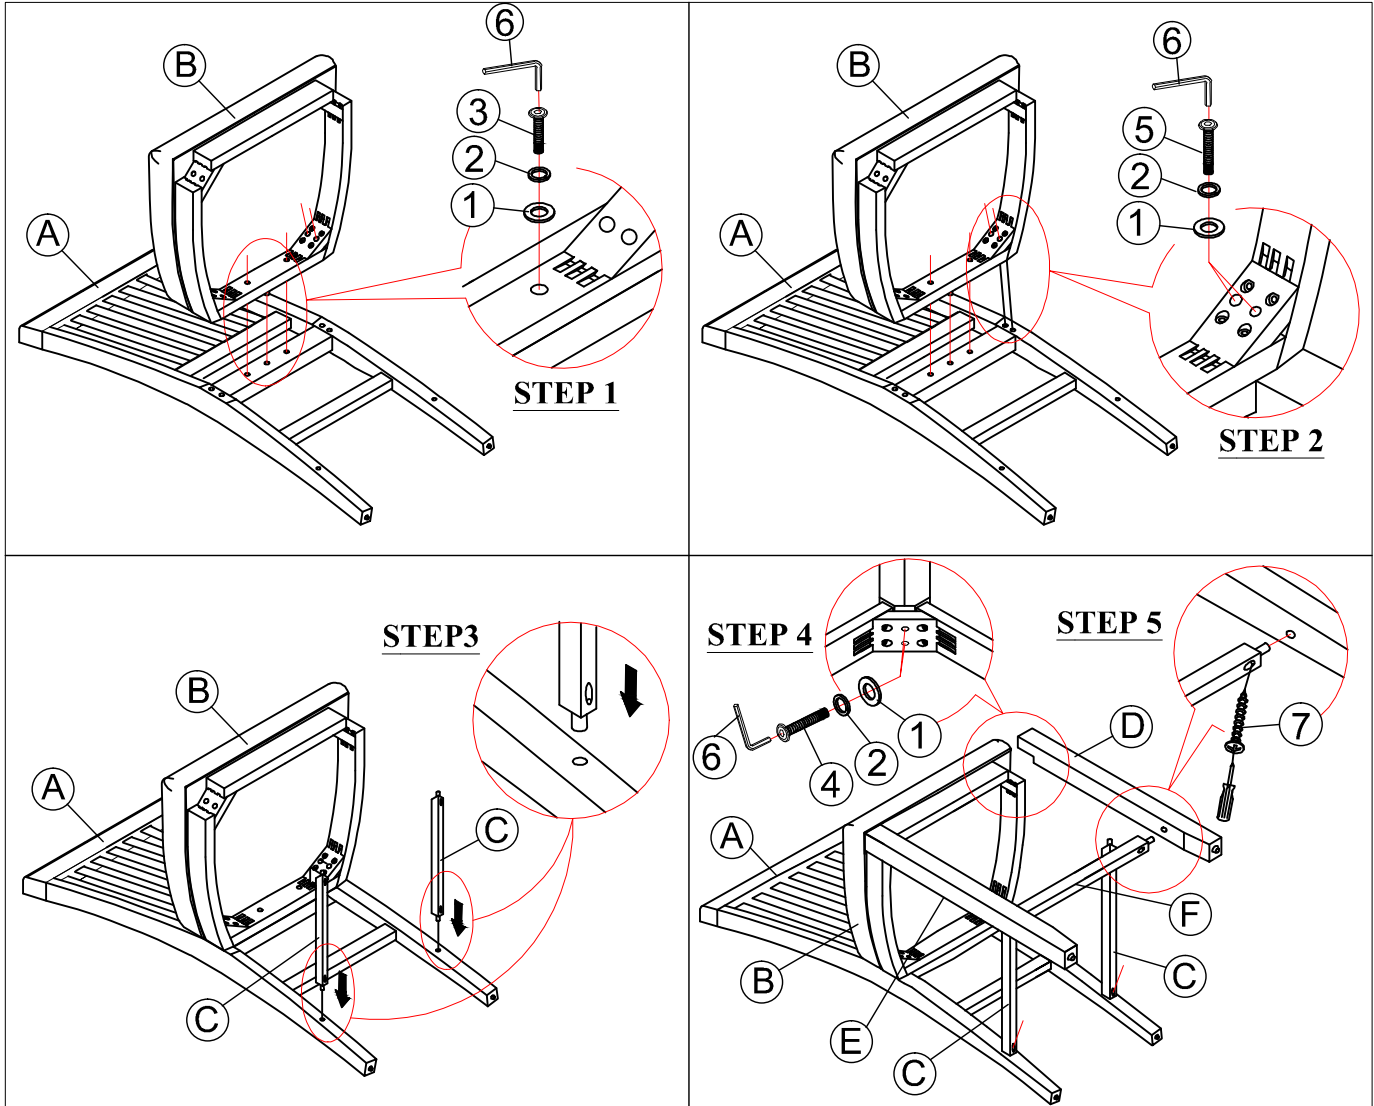


**PREVENT  
SPLITTING**

# YT500CC

## ASSEMBLY INSTRUCTIONS

**DO NOT FULLY TIGHTEN SCREWS AND BOLTS UNTIL THE ENTIRE IS COMPLETELY ASSEMBLED**



### Step 1

Turn the Chair Back (A) on the floor. Attach Seat Box W/Seat Cushion (B) to Chair Back (A) by inserting Flat Washer (1), Spring Washer (2), and Short Bolt (3) into the holes of the center of the Seat Box W/Seat Cushion (B). Tighten with Allen Key (6). Do not fully tighten.

### Step 2

Insert Flat Washer (1), Spring Washer (2), and Long Bolt (5) into the holes of the corner of the Seat Box W/Seat Cushion (B). Tighten with Allen Key (6). Do not fully tighten.

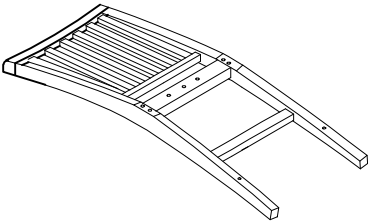
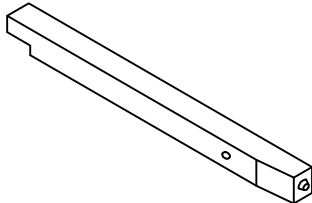
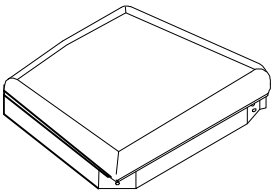
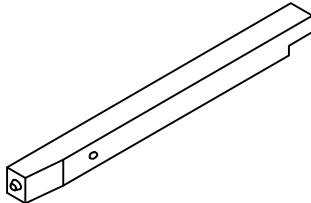
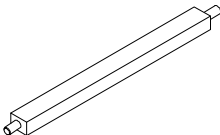
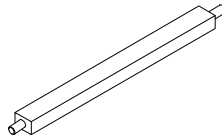
### Step 3

Attach side Stretcher (C) to Chair Back (A) .

 
 
 
 
 
### Step 4

Attach RSF /LSF Front Leg (D),(E) to Seat Box W/Seat Cushion (B) by inserting Flat Washer (1), Spring Washer (2), and Medium Bolt (4). Tighten with Allen Key (6), attach Front Stretcher (F) to RSF / LSF Front Leg (D),(E) by inserting Screw (7), and tighten with a Philip-head screwdriver ( not provided). Now fully tighten all bolts. Product assembly is now completed.

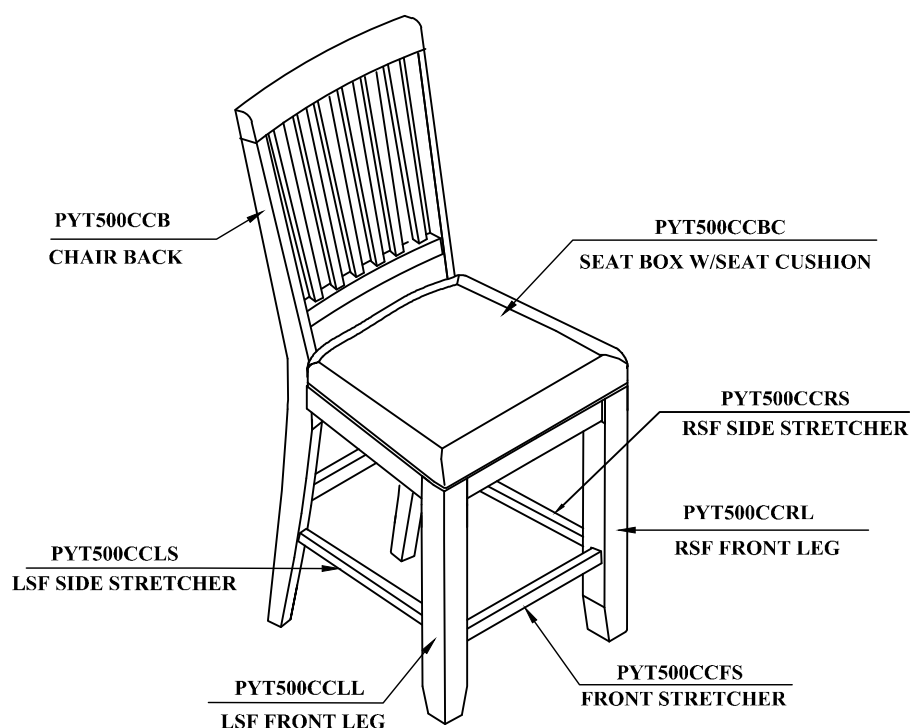
## PARTS LIST

|                                                                                                                               |                                                                                                                          |
|-------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|
| <b>(A) CHAIR BACK (1PC)</b><br>              | <b>(D) RSF FRONT LEG (1PC)</b><br>    |
| <b>(B) SEAT BOX W/SEAT CUSHION (1PC)</b><br> | <b>(E) LSF FRONT LEG (1PC)</b><br>     |
| <b>(C) SIDE STRETCHER (2PCS)</b><br>        | <b>(F) FRONT STRETCHER (1PC)</b><br> |

## HARDWARE PACK # : PYT500CCH

| NO. | DESCRIPTION                                                                         |               | SIZE          | Q'TY  |
|-----|-------------------------------------------------------------------------------------|---------------|---------------|-------|
| 1   |  | Flat Washer   | Ø5/16" x 19mm | 10pcs |
| 2   |  | Spring Washer | Ø5/16" x 13mm | 10pcs |
| 3   |  | Short Bolt    | Ø1/4" x 40mm  | 2pcs  |
| 4   |  | Medium Bolt   | Ø1/4" x 60mm  | 4pcs  |
| 5   |  | Long Bolt     | Ø1/4" x 75mm  | 4pcs  |
| 6   |  | Allen Key     | M4 x 60mm     | 1pc   |
| 7   |  | Screw         | M4 x 40mm     | 6pcs  |

## PARTS LIST FOR YT500CC COMPLETE HARDWARE # : PYT500CCH



### PRODUCT DETAILS

|                                |                                      |
|--------------------------------|--------------------------------------|
| <b>Chair Back</b>              | <b>Mindy Wood / Bent Wood</b>        |
| <b>Seat Box W/Seat Cushion</b> | <b>Mindy Wood / Plywood / Fabric</b> |
| <b>Front Leg (Right)</b>       | <b>Mindy Wood</b>                    |
| <b>Front Leg (Left)</b>        | <b>Mindy Wood</b>                    |
| <b>Side Stretcher</b>          | <b>Mindy Wood</b>                    |
| <b>Front Stretcher</b>         | <b>Mindy Wood</b>                    |
| <b>Product Size</b>            | <b>18.25" x 22" x 43"</b>            |
| <b>Carton Size</b>             | <b>L45.25" x W19.25" x 14" H</b>     |
| <b>Net Weight</b>              | <b>35.2 LBS / 2PCS</b>               |
| <b>Gross Weight</b>            | <b>41.8 LBS / 2PCS</b>               |
| <b>Cuft</b>                    | <b>7.06 / 2PCS</b>                   |

**MADE IN VIET NAM**

## **Steve Silver Company Dining Chairs - Assembly Troubleshooting Guide**

The most important element of correct chair assembly is to tighten the bolts as directed. Prematurely tightening the bolts can lead to numerous issues and will lengthen the assembly time. Listed below are the most common issues in chair assembly and their easy solutions.

### **PROBLEM: Chair is unlevel.**

#### **Cause 1:**

Unlevel chairs can occur if the bolts are fully tightened before all bolts are attached. There is a variance in the alignment of this chair to allow the chair to be assembled more easily.

#### **Solution:**

Loosen each bolt in the seat box (front legs, back corner blocks and back apron) until they are finger tight. Place the chair upright on the floor. Sit in the chair for about 30 seconds. Carefully turn the chair upside down and tighten each bolt. The chair will now be level.

#### **Cause 2:**

Unlevel chairs can occur if one or more of the floor glides are missing from the bottom of the chair leg.

#### **Solution:**

Request a set of floor glides from the e-mail address below.

### **PROBLEM: Bolts do not fit properly.**

#### **Cause:**

This issue can occur when the bolts are tightened fully before all bolts are attached. There is a variance in the alignment of the bolts to allow the chair to be assembled more easily. Tightening the bolts prematurely can cause the holes for the other bolts to become slightly misaligned, causing the remaining bolts not to fit properly.

#### **Solution:**

Make sure each bolt in the seat box (front legs, back corner blocks and back apron) is loosened until finger tight. This will allow you to realign the holes, and the bolts will not fit properly.

### **Questions?**

Please call us at 800-344-7278, and we will be happy to help you.