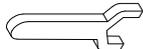


ASSEMBLY INSTRUCTION

ITEM: 6820-85003-80 Flip-Top Console Table
 6820-85003-85 Flip-Top Console Table
 6820-85003-99 Flip-Top Console Table


Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE PACK				
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Allen Wrench	73*29*5mm	1 PC
B		Bolt	5/16*30mm	8 PCS
C		Lock Washer	5/16"	10 PCS
D		Flat Washer	5/16*22mm	10 PCS
E		Hex Nut	5/16"	2 PCS
F		Threaded Rod	5/16*80mm	2 PCS
H		Open Wrench		1 PC

PART LIST			
NO.	DRAWING	DESCRIPTION	Q'TY
1		Flip Top	1 PC
2		Bottom Base	2 PCS
3		Stretcher	1 PC

STEP 1:
 Attach the Stretcher (3) to the Bottom Base (2) .

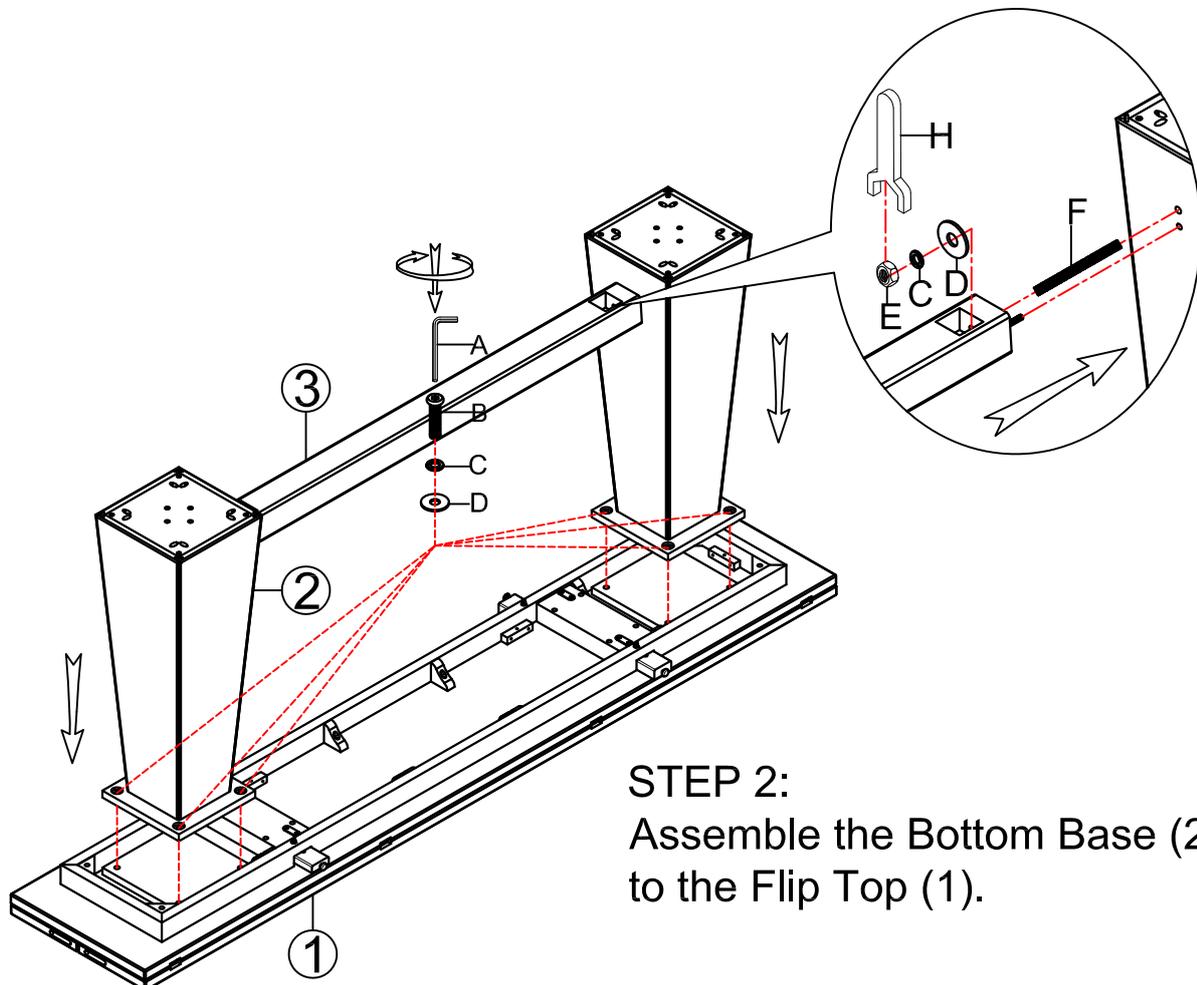


STEP 2:
 Assemble the Bottom Base (2)
 to the Flip Top (1).

ASSEMBLY INSTRUCTION

ITEM: 6820-85003-80 Flip-Top Console Table
6820-85003-85 Flip-Top Console Table
6820-85003-99 Flip-Top Console Table

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

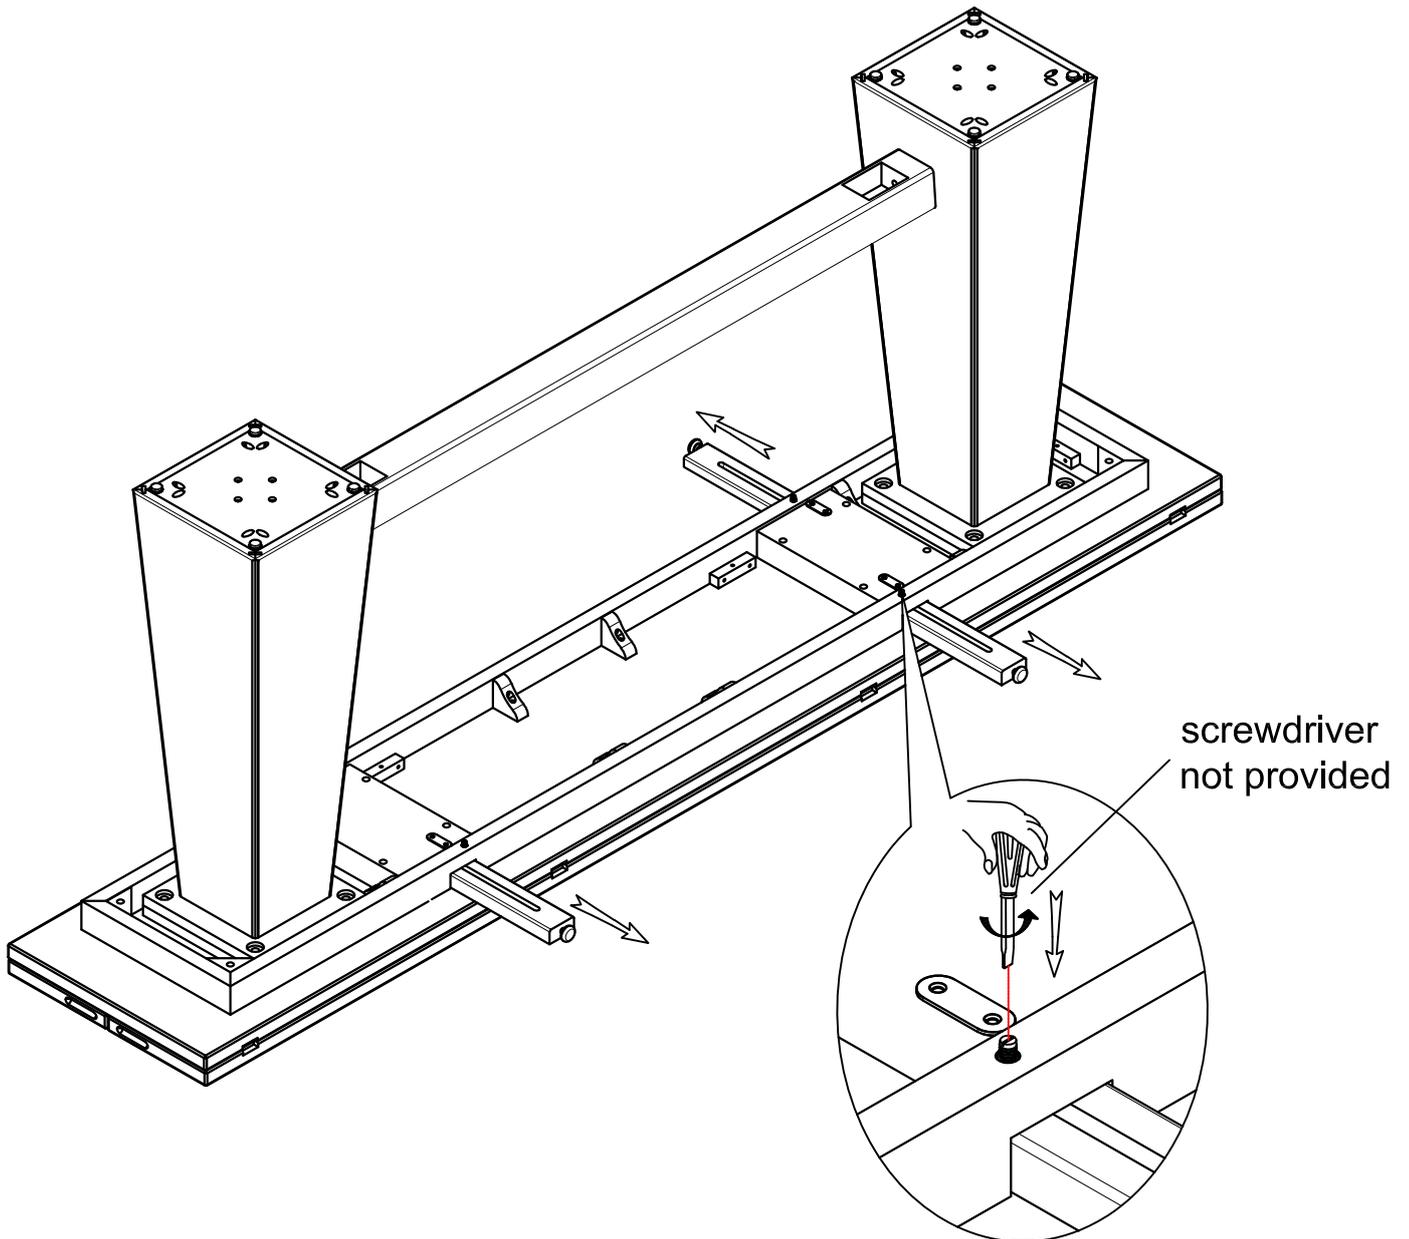

STEP 3:


If the top is out of level in open position, loosen the bolts by using screwdriver, then adjust the "Pull out support rails" to level the top.

ITEM: 6820-85003-80 Flip-Top Console Table
6820-85003-85 Flip-Top Console Table
6820-85003-99 Flip-Top Console Table

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

STEP 4:
Pull out the "Pull Out Support" when
needing to open the Flip Top (1).

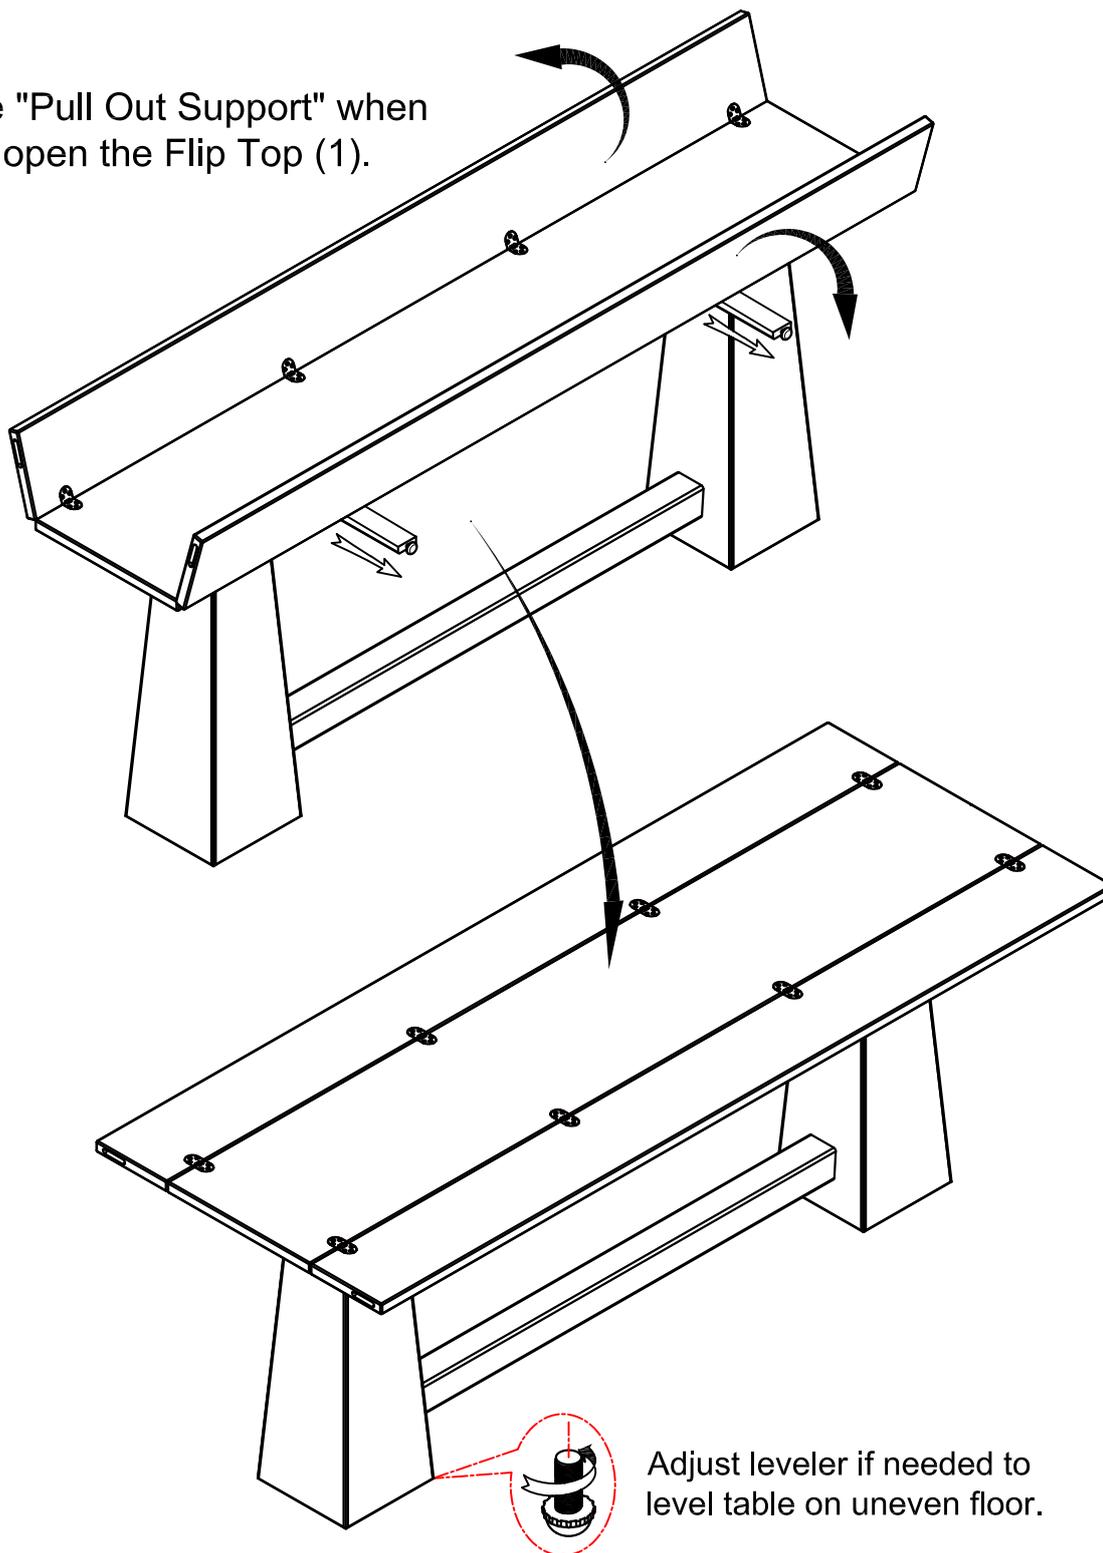

Adjust leveler if needed to
level table on uneven floor.