

A Quick Guide to Getting Started




⏻ Before you begin

- Check that your dryer is level and that all corners sit solidly on the floor where it is located. Check that all shipping materials are removed.
- For gas models, ensure the gas supply valve is open to allow gas to flow. Refer to the installation instructions section of your Use & Care Manual for all important information regarding your dryer.

+ Care and cleaning

- Clean the lint filter after every load. Lint build-up on the filter can restrict air flow, which causes longer drying times.
- A waxy build-up from fabric softener sheets may form on the lint filter or moisture sensing bars. Clean the filter with warm, soapy water, and dry thoroughly before replacing.

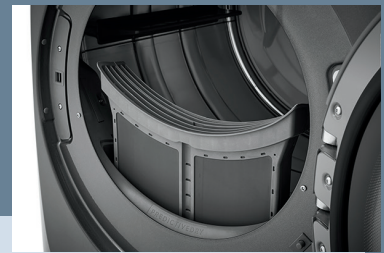

Important Reminder:

Regularly check and clean the entire outdoor exhaust and venting system.

? FAQs

• What can I do to optimize the drying performance?


After ensuring your lint filter is clean, check the cycle and settings selected are the right ones for your load type. Avoid overloading your dryer as items need room to tumble freely.

• Is it normal for my dryer to make sounds or noises?

Some sounds are part of your dryer's normal operations. You may hear the suspension rollers or exhaust system moving air through the cycle. For gas models: You may hear a clicking sound as the gas valve opens and closes to control the gas flow. Check your Use & Care Manual to learn more.

• How do I add a forgotten item to the load?

To add an item to the dryer, press start/pause, add the item, close the door and press start/pause again to resume the cycle.

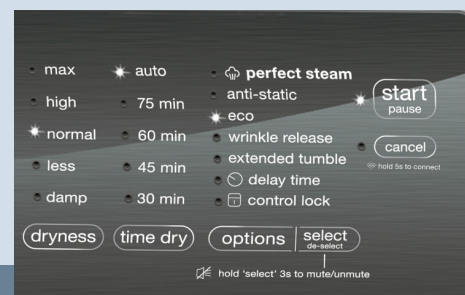

Cycle settings and options will be remembered and recalled each time until changed (except sanitize and Perfect Steam™).



Getting Started



Turn on your dryer

Press the power button to turn on your unit.

Select a cycle

HEAVY/TOWELS

For large loads and durable fabrics.

ALLERGEN

For allergen reduction, not for delicate items.

NORMAL

For everyday loads such as cotton, linen or sheets.

MIXED LOAD

For mixed fabric loads.

ACTIVWEAR

For lightweight, synthetic, athletic and stretch fabrics.

FAST DRY

For drying small loads on high temperature in a 15 minute cycle time.

DELICATES

For knit and delicate fabrics.

TIME DRY

Various drying times and temperature settings can be selected.

INSTANT REFRESH

Uses steam to refresh fabrics, remove odors and reduce static.

Select cycle settings

DRY TEMPERATURE

Press the temp button to choose the desired setting. Not all temperatures are available with every cycle.

DRYNESS LEVEL

Press the dryness button to choose the desired setting. Not all dryness levels are available with every cycle.

DRY TIME

Press the time dry button to choose a dry time of 30-75 minutes for a manual dry time cycle.

Select cycle options

PERFECT STEAM™

Injects steam prior to cool down to reduce wrinkling.

ANTI-STATIC

Injects steam prior to cool down to reduce static cling.

ECO

Reduces the drying temperatures to save energy.

WRINKLE RELEASE

Tumbles the dried load periodically after the cycle has completed to prevent wrinkles.

EXTENDED TUMBLE

Select to extend tumble time for 30 minutes without heat if the dried load won't be promptly removed at the end of the cycle.

Start load

Close the door and press the start/pause button.

Learn More

We recommend familiarizing yourself with product features and terminology in your Use & Care Manual.



Peace of Mind & Protection

Look for the photo icon on your registration card to text and register, or visit us online.

electroluxappliances.com

(877) 435-3287

10200 David Taylor Drive
Charlotte, NC 28262

electroluxappliances.ca

(800) 265-8352

5855 Terry Fox Way
Mississauga, ON L5V 3E4