

WINNERS ONLY[®]

ASSEMBLY INSTRUCTIONS

BD3001CKHN/BD3001KHN
PROD. NO.: BD3001CKFN/BD3001KFN
BD3001CKRN

 
 
 

 
 

 

Thank you for purchasing this quality product. Please read the instructions thoroughly before unpacking the assembly parts.


 



Caution: sharp exposed staple tips can cause injury, therefore for your protection, please remove any exposed staples used in packing.

Please keep all hardware parts out of the reach of children.

1. We recommend that you should assemble this product with the assistance of another person; this will make the assembly easier, and will help to prevent personal injury and to insure parts are not damaged during the assembly process.
2. Before beginning, please check the packing materials carefully for small parts which may have come loose inside the carton during shipping. Please do not discard any packing material until all parts have been located. If any parts are missing, please contact your dealer for prompt replacement.
3. To prevent damage to your floor or carpet, please check the bottom of each piece of furniture for stain residues and rough surfaces and also check for staples or nails left after removing the packing materials. The manufacturer will not be held responsible if preventive steps are not taken prior to installation.
4. Please do not over tighten screws or bolts. During normal use everyday, screws, bolts, nuts and wooden plugs may loosen up. They should be periodically inspected and re-tightened to prevent damage to the furniture and (or) personal property or cause injury. Always check to be sure all hardware on this list and the below mentioned components are attached to the furniture properly and kept tightened.
5. Please lay all parts and hardware on a non abrasive surface such as a carpet, and follow the assembly steps.

NOTE: Bunkie Board must be used to replace Box Spring.

Components List:			
NO	DESCRIPTION		QTY
A		HB Left Leg	1 PC
B		HB Right Leg	1 PC
C		Headboard	1 PC
D		Wood stretcher	1 PC
E		Panel Footboard	1 PC
F		Side Rail	2 PCS
G		Slat	5 PCS
H		Support Leg	10 PCS
I		Rail Cap	2 PCS

Hardware List:				
NO	Description	Size	Sketcher	QTY
1	Allen Key	4*74*29mm		1 PC
2	Bolt	1/4"*15*45mm		20 PCS
3	Spring Washer	1/4"*11*2mm		20 PCS
4	Flat Washer	1/4"*18*2mm		20 PCS
5	Screw	Ø8*30mm		10 PCS

STEP 1:

Lay the Headboard (C) front side down on a smooth and clean surface.

Attach HB Left Leg (A) and HB Right Leg (B) to Headboard (C) using Flat Washer (4), Spring Washer (3), Bolt (2). Do not fully tighten yet.

Attach Wood Stretcher (D) to HB Left (A) and HB Right legs (B) using Flat Washer (4), Spring Washer (3), Bolt (2), fully tighten with Allen Key (1).

Fully tighten all the bolts located in HB Left Leg (A) and HB Right Leg (B).

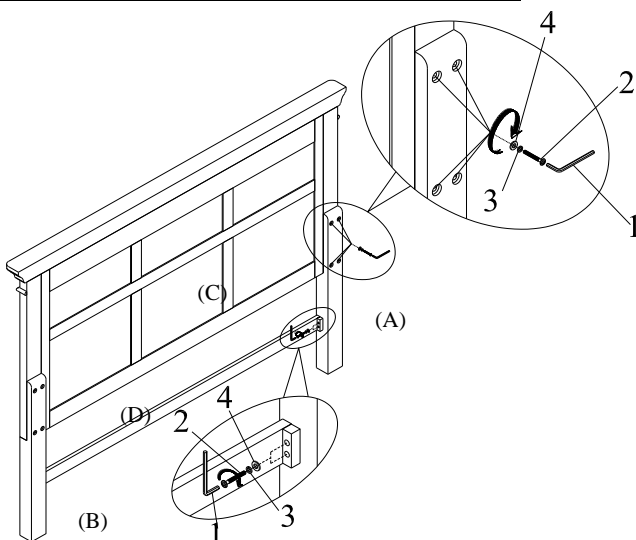


FIG 1


WINNERS ONLY®

ASSEMBLY INSTRUCTIONS

BD3001CKHN/BD3001KHN
PROD. NO.: BD3001CKFN/BD3001KFN
BD3001CKRN

STEP 2

FIG 2

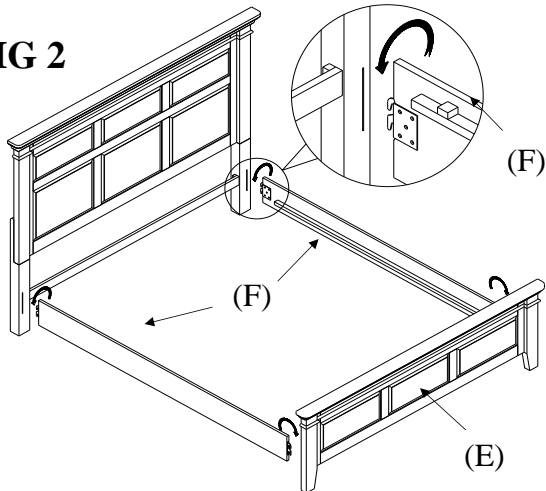

STEP 2: Hook both Side Rails (F) to the Headboard assembly and to the Footboard (E) as shown in FIG 2.

STEP 3: Attach Support Legs (I) to the Slat (H) as shown in FIG 3.

STEP 4: Attach Slat with Support Legs (I&H) to the Side Rails (F) using Screws (6) as shown in FIG 3.

STEP 3

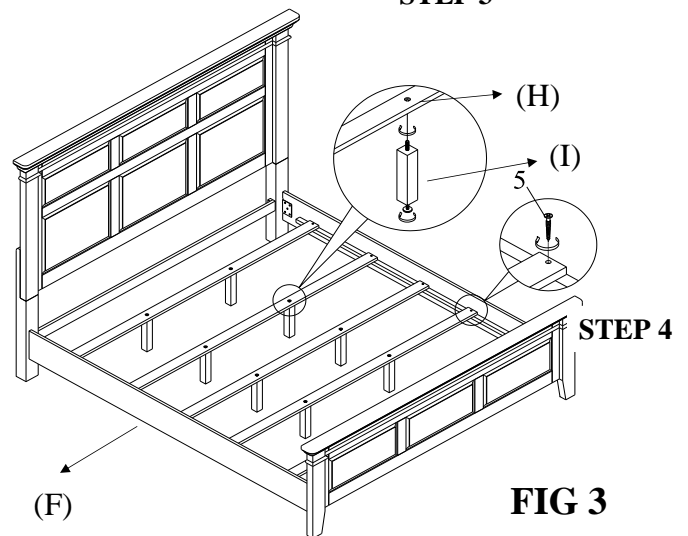


FIG 3

STEP 5


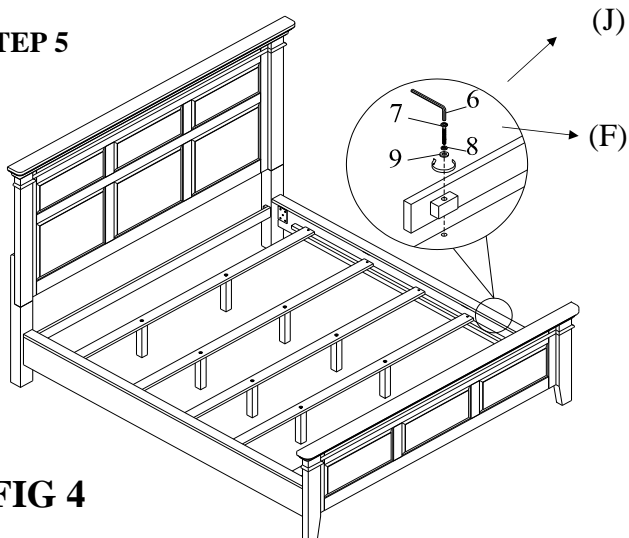


FIG 4

STEP 5: Attach the rail caps (I) to side rails (F), using bolt(2), spring washer (3), flat washer (4) and tighten them by Allen Key (1).

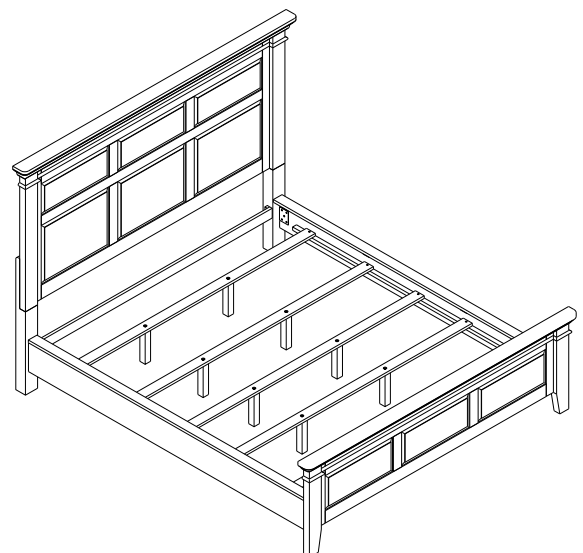

Assembly is now completed !