
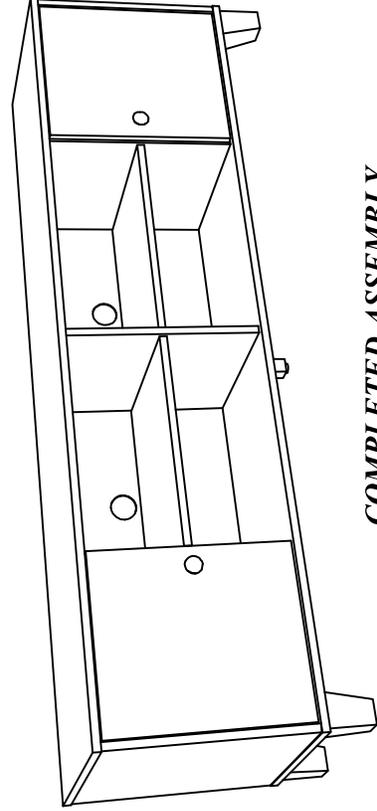


ASSEMBLY INSTRUCTIONS

STEP 1 : Open The door and take out the Bunfoot carton (B). Assemble the Bun Foot (B) with JCBC Bolt (1), Spring washer (2), Flatwasher (3) and securing with Allen Key (4) as shown.

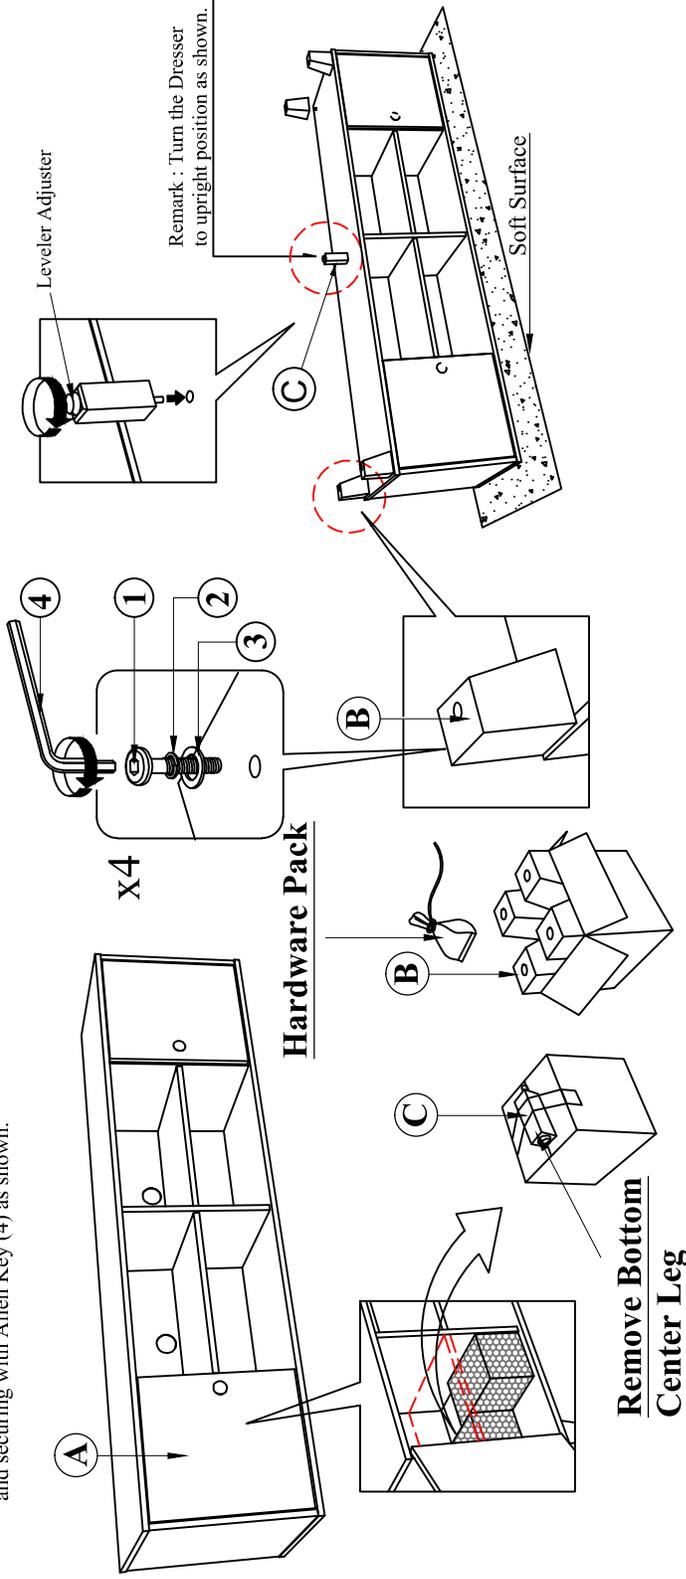

NOTE : MUST TIGHTEN SCREWS **PERIODICALLY** WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

CROWNMARK MODEL : B4610-9 TV STAND			
(BOX 1) BOX OF DRESSER			
NO	ITEM	QTY	
A	DRESSER 	1 pc	
B	BUN FOOT 	4 pcs	
C	BOTTOM CENTER LEG 	1 pc	
(BOX 1) HARDWARE LIST			
NO	ITEM	QTY	
1	JCBC Bolt m6x45mm Blk 	4 pcs	
2	Spring Washer 1/4" Blk 	4 pcs	
3	Flat Washer 1/4"IDx1.3mmOD Blk 	4 pcs	
4	Allen Key m-x110mm With Ball Blk 	1 pc	