 


Hisense

QUICK SETUP GUIDE

Before using the TV, please read this guide thoroughly and retain it for future reference.

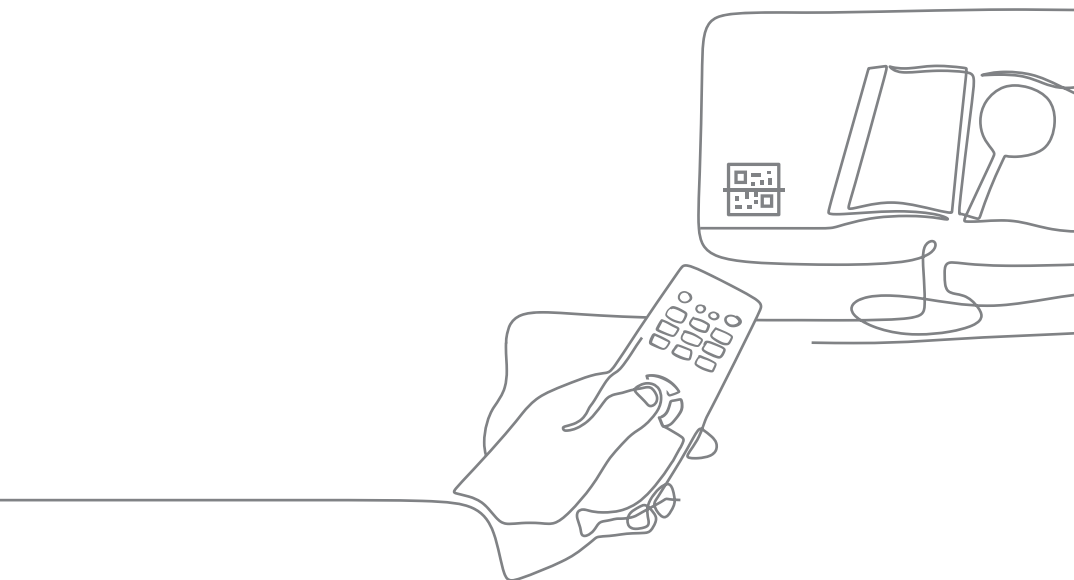

20229182

English

Congratulations on the purchase of your Hisense TV! If you would like to know 'all things Hisense', contact us using the support info:
 The model and serial number of the TV is located on the back and/or on one side of the TV. We recommend that you record this if you ever need service.

Country	U.S.A	CANADA	MEXICO
Customer Care Center	Phone: 1-888-935-8880 Hours of Operation: Monday - Friday: 9 AM to 9 PM EST Saturday - Sunday: 9 AM to 6 PM EST Service Email: Service@hisense-usa.com USA: Hisense USA Corporation 105 Satellite BLVD Suite I, Suwanee, GA 30024	Phone: 1-855-344-7367 Hours of Operation: Monday - Friday: 8 AM to 8 PM EST Saturday - Sunday: 9 AM to 6 PM EST, Federal holidays excluded Service Email: canadasupport@hisense.com CANADA: Hisense Canada Co., Ltd 2550 Meadowvale Boulevard, Unit 1 Mississauga, ON, Canada L5N 8C2	Phone: 800-008-8880 Hours of Operation: Monday - Friday: 9 AM to 9 PM Saturday: 9 AM to 3 PM Service Email: mxservicio@hisense.com MEXICO IMPORTER: Hisense Mexico S. de R.L. de C.V. Blvd. Miguel de Cervantes Saavedra No 301 Torre Norte Piso 2, Col. Ampliación Granada Miguel Hidalgo, Ciudad de México, C.P. 11520
Hisense Support Page	http://www.hisense-usa.com/support/ 	http://www.hisense-canada.com/support/ 	https://hisense.com.mx/support/  <i>*Scan to download user manual</i>
Register your TV	http://www.hisense-usa.com/support/register 	http://www.hisense-canada.com/support/productReg.asp 	https://hisense.com.mx/support/register 

Disclaimer: This Quick Setup Guide is intended as a general guideline to help you set up your TV. Images throughout this document are for illustrative purposes only and may differ from the actual product.

Disclaimer: Subscriptions or other payments may be required to access content through some applications. Some or all of the included or downloaded application services in this Hisense device may not function depending on the Internet connection, local limitations of included applications or other reasons outside of Hisense’s control. HISENSE EXPRESSLY DISCLAIMS RESPONSIBILITY FOR ANY APPLICATION SERVICE FROM FUNCTIONING AT ANY TIME, FOR CONTENT IN ANY APPLICATION SERVICE, FOR DISRUPTIONS OF SERVICE, LOCAL OR REGIONAL LIMITATIONS, WARRANTIES OF TITLE, NO INFRINGEMENT, AND FOR IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. By purchasing this device, you accept such Disclaimer without any claim on Hisense at any time.

Find what you want

This TV is equipped with this quick setup guide and embedded E-Manual (⚙ > **Settings > System > Advanced System > E-Manual**).

On the website (www.hisense.com), you can get the User Manual.

E-Manual support functions



Search

Find the help you are looking for.



QR Code

Scan to open the E-Manual on your mobile device.

NOTE: If you encountered difficulty when setting up your TV, we suggest you refer to the troubleshooting tips in the User Manual or the E-Manual.

This Quick Setup Guide supports the following models:

55U6SG / 55U6SGD / 55U60SG / 55U65SG / 55U65SGB / 55U65SGC / 55U68SG / 55U6SG Pro / 55U65SG Pro / 55U65SGB Pro / 55U65SGC Pro

65U6SG / 65U6SGD / 65U60SG / 65U65SG / 65U65SGB / 65U65SGC / 65U68SG / 65U6SG Pro / 65U65SG Pro / 65U65SGB Pro / 65U65SGC Pro

75U6SG / 75U6SGD / 75U60SG / 75U65SG / 75U65SGB / 75U65SGC / 75U68SG / 75U6SG Pro / 75U65SG Pro / 75U65SGB Pro / 75U65SGC Pro

85U6SG / 85U6SGD / 85U60SG / 85U65SG / 85U65SGB / 85U65SGC / 85U68SG / 85U65QG / 85U7QG / 85U68QG / 85U6SG Pro / 85U65SG Pro / 85U65SGB Pro / 85U65SGC Pro

100U6SG / 100U6SGD / 100U60SG / 100U65SG / 100U65SGB / 100U65SGC / 100U68SG / 100U65QG / 100U7QG / 100U68QG / 100U6SG Pro / 100U65SG Pro / 100U65SGB Pro / 100U65SGC Pro

What's in the box

Your Hisense TV comes with the following items:

 
- TV
- power cord
- remote control
- 2 base stands
- 4 screws (55"/65"/75"/100")(139.7cm/165.1cm/190.5cm/254.0cm)
- Quick Setup Guide (this document)
- 1 set of AA or AAA (1.5Vcc) batteries
- Important Safety Information and Warranty Card
- 6 screws (85")(215.9cm)

NOTE:

- The accessories may be different from the list above due to different models, countries/regions, please refer to the actual accessory bag.

IMPORTANT:

To prevent accidentally discarding items that came with your TV, be sure to **check ALL of the foam** in the carton box.

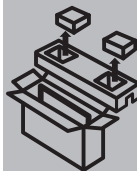

- Please check foam for accessories before discarding.
- Veuillez vérifier la mousse pour qu'il n'y ait pas d'accessoires avant de la jeter.
- Antes de desechar la espuma, asegúrese de retirar todos los accesorios.

Getting started

Step 1. Attach stand or mount

Before you start using your TV, attach your TV stand or mount it on the wall.

CAUTION:

- Disconnect the AC power cord before installing a stand or a wall mount bracket.
- The LED display on your TV is fragile. Make sure the TV screen is not scratched or damaged by hard objects or from pressure.
- After the installation is completed, make sure the TV is steady on a table or firmly attached to a wall mount, before removing all protective film, if any.

Attach the TV stand

 
 
55"/65"/75"/85"(139.7cm/165.1cm/190.5cm/215.9cm)

To attach the TV base stands to your TV:

1. Carefully place your TV on a clean, soft and flat surface.
2. Insert the TV base stands into the bottom slots on your TV.
3. Use the screws provided to secure each base stand tightly.

55"/65"/75"(139.7cm/165.1cm/190.5cm)

85"(215.9cm)


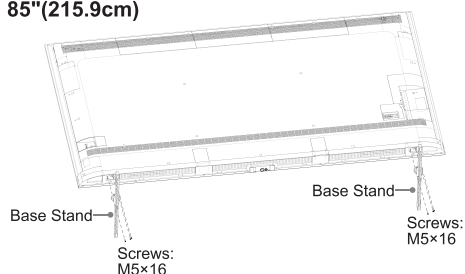



100"(254.0cm)

NOTE: Three or more people are needed to install the TV. One person holds the TV to prevent tipping through the whole installation process.

1. One person holds the side of the TV, and the others remove the side cushions. Do not pinch the screen when hold the TV.
2. Insert the TV base stands into the bottom slots on your TV. Use the screws provided to secure each base stand tightly.
3. It takes three persons to transport the TV. The weight of TV with base stands is 140.0 lbs (63.5 kg), the furniture where the TV is placed should be tough enough to support. Please make sure the width of the furniture is above 18.9 inches (480 mm).

   Note: If your table is long enough to place the TV on top of, then insert the base stands into the screw holes 'A' that are shown in the illustration. If your table is NOT long enough, then insert the base stand into the screw holes 'B' that are shown in the illustration. Note that these two installation methods cannot be mixed.

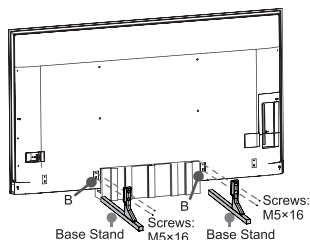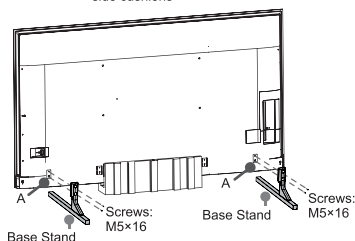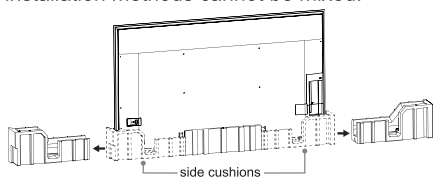

Attach the wall mount bracket (not included)

 
55"/65"/75"/85"(139.7cm/165.1cm/190.5cm/215.9cm)

Before mounting the TV, remove the TV stand if you have already attached it, and make sure the wall mount bracket supports the weight of your TV.

100"(254.0cm)

Before you begin the third-party manufacturer instructions, be sure to do the following things:


- 1. Keep the television vertically on the cushions. The TV weight with base stands is 140.0 lbs (63.5 kg), make sure the wall is tough enough before hanging the TV.
- 2. Remove the TV stand if you have already attached it.
- 3. Place spacers (not included) in the corresponding bracket holes.

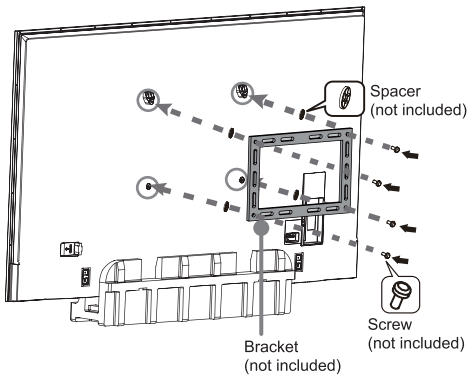


CAUTION:

- Follow instructions provided with the wall mount bracket. If it is not correctly mounted, the TV may fall and cause property damage or personal injury.
- When you attach the mount, be sure to use spacers (provided by the third-party manufacturer) between the TV and the bracket.
- To prevent internal damage to the TV and to ensure it is mounted securely, be sure to use fixing screws (not included), standard dimensions are shown below.

 9.5 - 11.5 mm(55"/65"/75")(139.7cm/165.1cm/190.5cm)
11.0 - 13.0 mm(85"/100")(215.9cm/254.0cm)

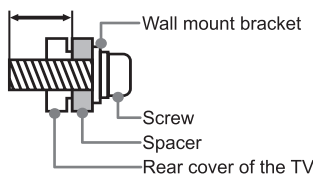	Wall mount hole pattern(mm)	200 × 300 (55")(139.7cm) 400 × 300 (65")(165.1cm) 500 × 400 (75")(190.5cm) 600 × 400 (85")(215.9cm) 800 × 400 (100")(254.0cm)
	Wall mount screw size	M6 (55"/65"/75")(139.7cm/165.1cm/190.5cm) M8 (85"/100")(215.9cm/254.0cm)
	Number of wall mount screw	4

 - We do not recommend hanging the TV on a slanted wall, and when wall mounting make sure your television remains parallel to the wall and does not lean forward.

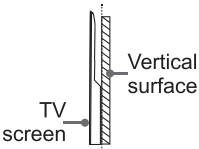


NOTE:

- If installed on a ceiling or slanted wall, or the television installed is not parallel to the wall, the television may fall and result in property damage or severe personal injury.
- If you have additional questions, please contact the wall mount manufacturer or the retailer from which you purchased the TV.
- The diameter and length of the screws differ depending on the wall mount bracket model.



Step 2. Connect devices to your TV

Check to ensure that you have connected right cables for right ports securely. Loose connections can affect the quality of the picture image and color.

 55"/65"/75"(139.7cm/165.1cm/190.5cm)

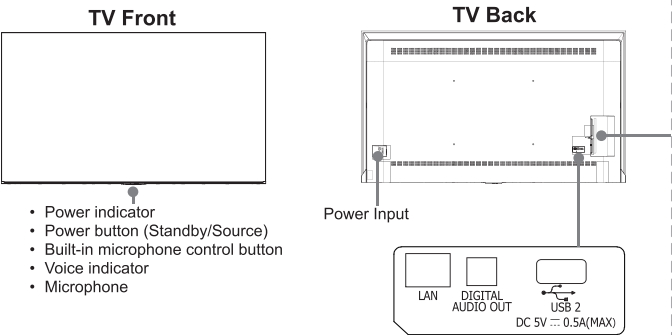

85"/100"(215.9cm/254.0cm)

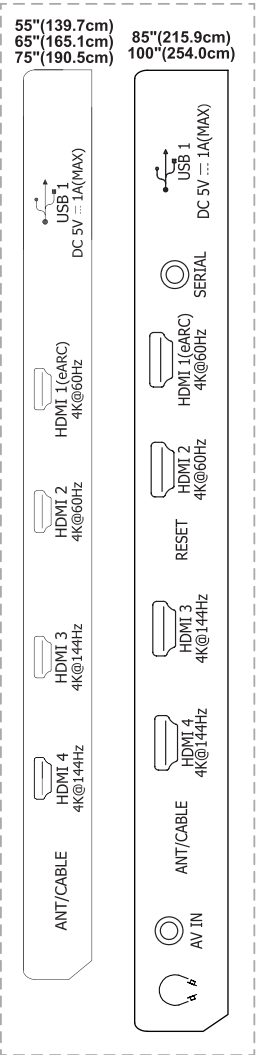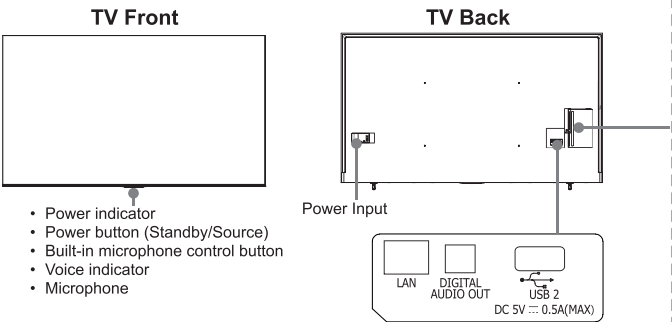  



Power indicator	The light is white in standby mode.
Power button (Standby/Source)	When the TV is in standby mode, quick press the power button, and TV will be turned on. When the TV is on, quick press the power button to call up the menu: • Quick press to change the selection. • Long press to confirm your selection.
Built-in microphone control button	Switch the built-in microphone control button to on to use the built-in microphone. Pair the remote first, press  button to select “Yes, I’m in”. Or press  button and select Settings > Accounts & Sign In > Google Assistant to turn on the Hands-free Mic switch. Say “Hey Google” to start a conversation. Before using this function, connect the TV to the Internet and sign in your Google account.
SERIAL	Connect the serial cable to PC. You can input serial command on PC to control the TV, such as turn on/off the TV, select an input source or adjust the OSD menu, etc.
ANT/CABLE	Connect an outdoor VHF/UHF antenna or cable.
HDMI	Connect a High Definition Multimedia Interface (HDMI) cable from an external device.
AV IN	Connect a composite video cable and left-right audio cables from an external AV device.
HEADPHONE / 	Connect headphones to hear audio from the TV. Headphones with microphones are not supported.
RESET	Power off / restart (quick press) Reset your TV back to the factory setting (long press for 5 seconds)
USB	Connect a USB device for browsing photos, music and movies. The rate of speed of USB 3.0 port 10 times faster than the USB 2.0 port. NOTE: You can still plug a USB 2.0 device into a USB 3.0 port; however, the rate of speed will not be as fast. USB 3.0 devices are also backwards compatible with USB 2.0 ports.
LAN	Connect an Ethernet cable to access a network or the Internet. The TV also has a wireless connectivity feature.
DIGITAL AUDIO OUT	Connect an optical cable from an external digital audio system.

NOTE:

- The location and names of the terminals on the TV may vary according to TV model, and not all terminals available on all models.
- The Google Assistant and some features are available on limited country/region/language.

Step 3. Get your remote ready

  The following table shows the buttons on your remote control and describes what they are for.

BUTTON	DESCRIPTION
	Power on/off
	Microphone / Indicator
	Change TV input source
	Google Assistant of TV
	Accounts & Sign In or switch profile
	Access the settings (direct or through the dashboard in GTV) from any place in the system
	D-pad (up/down/left/right navigation buttons)
	Confirmation button
	Return to the previous place in the menu or app
	Press to display the Home screen
	Return to Live TV/Enter to Live tab in launcher/Display the Electronic Program Guide(if support) *
	Volume (up/down)
	Channel (up/down)
	Press to mute or restore sound Press and hold to display Accessibility menu
	Press to enter Menu
	Media content control function buttons
	Enter Channels/input numbers and special function buttons
	Quick access buttons to applications
	Fast access to all applications
	Custom button to launch input or apps quickly
	Press to enter Freeplay or Live TV

NOTE:

- Buttons listed here are for reference only. Actual remote control may vary depending on model, country.
- * Pressing the button in different scenarios will have different responses.

Insert the batteries

1. Take off the back cover to open the battery compartment of the remote control.
2. Insert two AA or AAA(1.5Vcc) size batteries. Make sure to match the (+) and (-) ends of the batteries with the (+) and (-) ends indicated in the battery compartment.
3. Restore the battery compartment cover.

Important information about the remote and batteries

- Discard batteries in a designated disposal area. Do not throw them into a fire.
- Remove old batteries immediately to prevent them from leaking into the battery compartment.
- If you do not intend to use the remote control for a long time, then remove the batteries.
- Battery chemicals can cause a rash. If the batteries leak, clean the battery compartment with a cloth. If chemicals touch your skin then wash it immediately.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (NiCd, NiMH, etc.) batteries.
- Do not continue using the remote if it gets warm or hot.
- Call our Support Center immediately on the support website.

Remote control range information

- The remote control can work at a distance of up to 26 feet (792.5 cm) in front of the TV set.
- It can work at a 30 degree horizontal or vertical angle.

Pairing the remote control

1. Pair the remote to the TV after you power it on for the first time, there will be instructions on how to pair the remote.
2. If your remote fails to pair with TV, keep the remote within 10 feet (304.8 cm) from the TV. You can choose one of the following ways to pair:
 - Method 1: While holding [] button, press and hold [] button for 3 seconds.
 - Method 2: Press and hold [MENU] / [] button at least 3 seconds to start pairing.**NOTE:** For some remotes, it can only function after the TV software is updated.
3. If the remote pairs successfully, a confirmation will display on the screen. If it does not pair successfully, an unsuccessful message will display. Repeat step 2, or you can press [] button to select **Settings > Remotes & Accessories > Bluetooth to On**.

NOTE:

- If an unknown error occurs with the remote, it could have been caused by interference. Try to remove what's causing the interference and pair the remote again.
- If an unknown error occurs with the remote control while the battery power is normal, you can take out the batteries and press any key for 1~2 seconds, and insert them back. The remote control can work normally.
- The remote cannot be paired to the TV while the TV is in the standby mode.

Step 4. Power on the TV

Connect your power cord to the TV and plug it into a power outlet. Your TV will display a launch screen showing the Hisense logo.

Step 5. Complete the first-time setup

The first time you turn on your TV, there is a guided setup to make it easy to connect your TV to the Internet and complete the setup of your TV.

And setup is done, congratulations!

Now that you've completed the first-time setup, enjoy your TV!

Product Specifications

Model Name		55U6SG / 55U6SGD / 55U60SG / 55U65SG / 55U65SGB / 55U65SGC / 55U68SG / 55U6SG Pro / 55U65SG Pro / 55U65SGB Pro / 55U65SGC Pro	65U6SG / 65U6SGD / 65U60SG / 65U65SG / 65U65SGB / 65U65SGC / 65U68SG / 65U6SG Pro / 65U65SG Pro / 65U65SGB Pro / 65U65SGC Pro
Dimension (W × H × D)	Without Stand	48.3 × 28.1 × 2.6 inches (1 226 × 715 × 67 mm)	56.9 × 33.0 × 2.6 inches (1 445 × 837 × 66 mm)
	With Stand	48.3 × 29.8 × 11.7 inches (1 226 × 756 × 298 mm)	56.9 × 34.6 × 11.7 inches (1 445 × 878 × 298 mm)
Weight	Without Stand	29.8 lbs (13.5 kg)	40.8 lbs (18.5 kg)
	With Stand	30.2 lbs (13.7 kg)	41.2 lbs (18.7 kg)
TV Stand Width (W × D)		38.7 × 11.7 inches (984 × 298 mm)	49.1 × 11.7 inches (1 246 × 298 mm)
Active Screen Size (Diagonal)		54.6 inches (138.7 cm)	64.5 inches (163.8 cm)
Screen Resolution		3840 × 2160	3840 × 2160
Audio Power		10 W × 2 + 20 W	10 W × 2 + 20 W
Power Consumption		190 W	250 W
Power Supply		100-240 V~ 50/60 Hz	
Connectivity		Built-in Wireless feature (2x2, dual band)	
Receiving Channels		VHF: 2 - 13, UHF: 14 - 69, CATV: 1 - 125 Digital Terrestrial Broadcast (8VSB): 2 - 69 Digital cable (64/256 QAM): 1 - 135	
Tuner Type		Frequency synthesized	
Receiving Systems		Analog: NTSC, PAL M/N Digital: ATSC/QAM, ISDB-T, DTV-T2(6M)	
Wireless LAN Module specifications	Frequency Range	2.4-2.4835 GHz 5.15-5.85 GHz	
	Output Power (Max.)	2.4-2.4835 GHz 17 dBm 5.15-5.25 GHz 14 dBm 5.25-5.35 GHz(DFS Band) 14 dBm 5.49-5.71 GHz(DFS/TPC Band) 14 dBm 5.725-5.85 GHz(for Non EU) 14 dBm	
	Standards	IEEE 802.11 a/b/g/n/ac/ax	
Bluetooth Module specifications	Version/Profiles	Bluetooth 5.3	
	Frequency Range	2.4-2.4835 GHz	
	Output Power (Max.)	2.4-2.4835 GHz,Class1,6 dBm	
	Modulation Type	GFSK, π/4-DQPSK and 8-DPSK	
Operating Temperature		41 °F - 95 °F(5 °C - 35 °C)	
Operating Humidity		20 % to 80 % non-condensing	
Storage Temperature		5 °F to 113 °F(-15 °C to 45 °C)	
Storage Humidity		10 % to 70 %, non-condensing	

Model Name		75U6SG / 75U6SGD / 75U60SG / 75U65SG / 75U65SGB / 75U65SGC / 75U68SG / 75U6SG Pro / 75U65SG Pro / 75U65SGB Pro / 75U65SGC Pro
Dimension (W × H × D)	Without Stand	65.7 × 37.9 × 2.6 inches (1 668 × 963 × 67 mm)
	With Stand	65.7 × 39.7 × 11.7 inches (1 668 × 1 008 × 298 mm)
Weight	Without Stand	56.9 lbs (25.8 kg)
	With Stand	57.3 lbs (26.0 kg)
TV Stand Width (W × D)		54.3 × 11.7 inches (1 378 × 298 mm)
Active Screen Size (Diagonal)		74.5 inches (189.3 cm)
Screen Resolution		3840 × 2160
Audio Power		10 W × 2 + 20 W
Power Consumption		320 W
Power Supply		100-240 V~ 50/60 Hz
Connectivity		Built-in Wireless feature (2x2, dual band)
Receiving Channels		VHF: 2 - 13, UHF: 14 - 69, CATV: 1 - 125 Digital Terrestrial Broadcast (8VSB): 2 - 69 Digital cable (64/256 QAM): 1 - 135
Tuner Type		Frequency synthesized
Receiving Systems		Analog: NTSC, PAL M/N Digital: ATSC/QAM, ISDB-T, DTV-T2(6M)
Wireless LAN Module specifications	Frequency Range	2.4-2.4835 GHz 5.15-5.85 GHz
	Output Power (Max.)	2.4-2.4835 GHz 17 dBm 5.15-5.25 GHz 14 dBm 5.25-5.35 GHz(DFS Band) 14 dBm 5.49-5.71 GHz(DFS/TPC Band) 14 dBm 5.725-5.85 GHz(for Non EU) 14 dBm
	Standards	IEEE 802.11 a/b/g/n/ac/ax
Bluetooth Module specifications	Version/Profiles	Bluetooth 5.3
	Frequency Range	2.4-2.4835 GHz
	Output Power (Max.)	2.4-2.4835 GHz, Class 1, 6 dBm
	Modulation Type	GFSK, π/4-DQPSK and 8-DPSK
Operating Temperature		41 °F - 95 °F (5 °C - 35 °C)
Operating Humidity		20 % to 80 % non-condensing
Storage Temperature		5 °F to 113 °F (-15 °C to 45 °C)
Storage Humidity		10 % to 70 %, non-condensing

Model Name		85U6SG / 85U6SGD / 85U60SG / 85U65SG / 85U65SGB / 85U65SGC / 85U68SG / 85U65QG / 85U7QG / 85U68QG / 85U6SG Pro / 85U65SG Pro / 85U65SGB Pro / 85U65SGC Pro	100U6SG / 100U6SGD / 100U60SG / 100U65SG / 100U65SGB / 100U65SGC / 100U68SG / 100U65QG / 100U7QG / 100U68QG / 100U6SG Pro / 100U65SG Pro / 100U65SGB Pro / 100U65SGC Pro
Dimension (W × H × D)	Without Stand	74.5 × 43.0 × 3.2 inches (1 892 × 1 091 × 81 mm)	87.8 × 50.5 × 3.2 inches (2 229 × 1 282 × 82 mm)
	With Stand	74.5 × 44.7 × 16.9 inches (1 892 × 1 136 × 430 mm)	87.8 × 51.9 × 18.9 inches (2 229 × 1 317 × 480 mm)
Weight	Without Stand	86.6 lbs (39.3 kg)	136.7 lbs (62.0 kg)
	With Stand	87.7 lbs (39.8 kg)	140.0 lbs (63.5 kg)
TV Stand Width (W × D)		62.0 × 16.9 inches (1 576 × 430 mm)	68.3 × 18.9 inches (1 735 × 480 mm) / 35.2 × 18.9 inches (895 × 480 mm)
Active Screen Size (Diagonal)		84.5 inches (214.7 cm)	99.5 inches (252.7 cm)
Screen Resolution		3840 × 2160	3840 × 2160
Audio Power		15 W × 2 + 20 W	15 W × 2 + 20 W
Power Consumption		320 W	500 W
Power Supply		100-240 V~ 50/60 Hz	
Connectivity		Built-in Wireless feature (2x2, dual band)	
Receiving Channels		VHF: 2 - 13, UHF: 14 - 69, CATV: 1 - 125 Digital Terrestrial Broadcast (8VSB): 2 - 69 Digital cable (64/256 QAM): 1 - 135	
Tuner Type		Frequency synthesized	
Receiving Systems		Analog: NTSC, PAL M/N Digital: ATSC/QAM, ISDB-T, DTV-T2(6M)	
Wireless LAN Module specifications	Frequency Range	2.4-2.4835 GHz 5.15-5.85 GHz	
	Output Power (Max.)	2.4-2.4835 GHz 17 dBm 5.15-5.25 GHz 14 dBm 5.25-5.35 GHz(DFS Band) 14 dBm 5.49-5.71 GHz(DFS/TPC Band) 14 dBm 5.725-5.85 GHz(for Non EU) 14 dBm	
	Standards	IEEE 802.11 a/b/g/n/ac/ax	
Bluetooth Module specifications	Version/Profiles	Bluetooth 5.3	
	Frequency Range	2.4-2.4835 GHz	
	Output Power (Max.)	2.4-2.4835 GHz, Class 1, 6 dBm	
	Modulation Type	GFSK, π/4-DQPSK and 8-DPSK	
Operating Temperature		41 °F - 95 °F (5 °C - 35 °C)	
Operating Humidity		20 % to 80 % non-condensing	
Storage Temperature		5 °F to 113 °F (-15 °C to 45 °C)	
Storage Humidity		10 % to 70 %, non-condensing	

NOTE: "Receiving Systems" may differ depending on your model/country/region.

Disclaimer: All products, product specifications, and data are subject to change without notice to improve reliability, function, design or otherwise.

Certification and compliance

NOTE: The following warnings only apply to products with such certification.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of [20] cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

This equipment complies with radio frequency exposure limits set forth by the Innovation, Science and Economic Development Canada for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the device and the user or bystanders.

This device must not be co-located or operating in conjunction with any other antenna or transmitter.

Declaration of conformity

Trade Name: Hisense

Model: 55U6SG / 55U6SGD / 55U60SG / 55U65SG / 55U65SGB / 55U65SGC / 55U68SG / 55U6SG Pro / 55U65SG Pro / 55U65SGB Pro / 55U65SGC Pro / 65U6SG / 65U6SGD / 65U60SG / 65U65SG / 65U65SGB / 65U65SGC / 65U68SG / 65U6SG Pro / 65U65SG Pro / 65U65SGB Pro / 65U65SGC Pro / 75U6SG / 75U6SGD / 75U60SG / 75U65SG / 75U65SGB / 75U65SGC / 75U68SG / 75U6SG Pro / 75U65SG Pro / 75U65SGB Pro / 75U65SGC Pro / 85U6SG / 85U6SGD / 85U60SG / 85U65SG / 85U65SGB / 85U65SGC / 85U68SG / 85U65QG / 85U7QG / 85U68QG / 85U6SG Pro / 85U65SG Pro / 85U65SGB Pro / 85U65SGC Pro / 100U6SG / 100U6SGD / 100U60SG / 100U65SG / 100U65SGB / 100U65SGC / 100U68SG / 100U65QG / 100U7QG / 100U68QG / 100U6SG Pro / 100U65SG Pro / 100U65SGB Pro / 100U65SGC Pro

Responsible Party: Hisense USA Corporation

Service Address: 105 Satellite BLVD Suite I, Suwanee, GA 30024

Service Phone Number: 1-888-935-8880



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



Dolby, Dolby Vision, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Dolby Vision IQ is a trademark of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012-2024 Dolby Laboratories. All rights reserved.

85"/100"(215.9cm/254.0cm)



Manufactured under license from DTS, Inc. and/or its affiliates. For patents, see <https://xperi.com/dts-patents/>. DTS, the DTS logo, DTS:X, and the DTS:X logo are trademarks or registered trademarks of DTS, Inc. and/or its affiliates in the U.S. and/or other countries. © DTS, Inc. and/or its affiliates. All rights reserved.

55"/65"/75"(139.7cm/165.1cm/190.5cm)



Manufactured under license from DTS, Inc. and/or its affiliates. For patents, see <https://xperi.com/dts-patents/>. DTS, the DTS logo, DTS:X, the DTS:X logo, Virtual:X, and the DTS Virtual:X logo are trademarks or registered trademarks of DTS, Inc. and/or its affiliates in the U.S. and/or other countries. © DTS, Inc. and/or its affiliates. All rights reserved.

55"/65"/75"(139.7cm/165.1cm/190.5cm)



Manufactured under license from IMAX Corporation. IMAX® is a registered trademark of IMAX Corporation in the United States and/or other countries. For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS and the DTS logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2020 DTS, Inc. ALL RIGHTS RESERVED.



Environmental Protection

This mark indicates that this product should not be disposed together with other domestic garbage, to avoid damage to the environment or human health due to the disposal of uncontrolled waste. Recycle it responsibly for promoting the sustainable reuse of material resources. To return your used device, please use the return systems available in your location or contact the vendor where you purchased your product they could take this product for recycling and protection of the environment.

©2026. All rights reserved. Hisense and the Hisense logo are registered trademarks of Hisense. Other brand and product names are registered trademarks of their respective owners.