

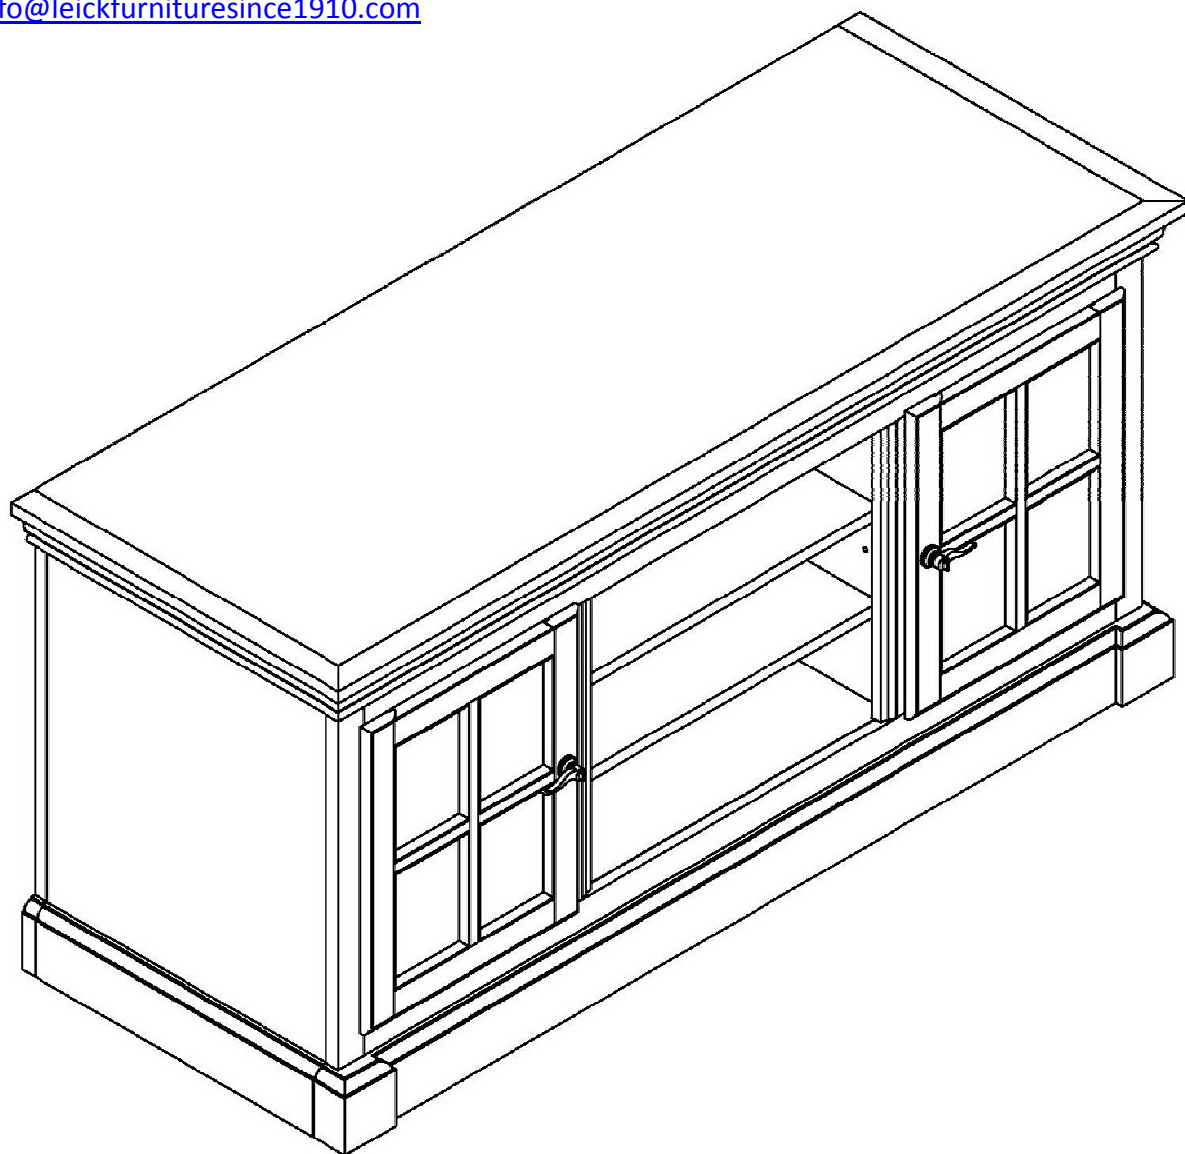 
ITEM# 81550

Bella Maison Chocolate Two Door TV Console

 
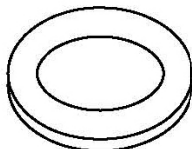 
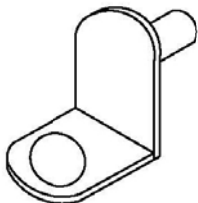 
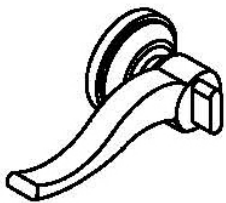 
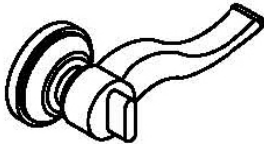 
 
Leick
Home
SINCE 1910

2219 S. 19th St.
Sheboygan, WI 53081
Ph: 920-451-4060
Fax: 920-451-4063

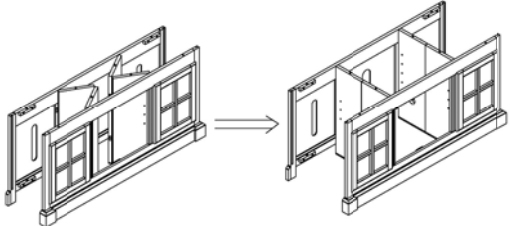 
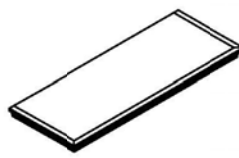 
 
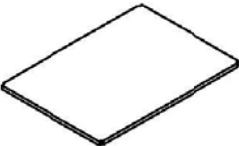 
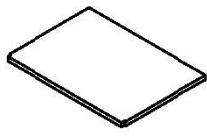 
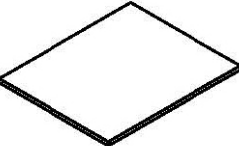 
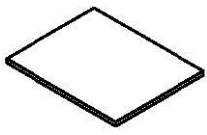 
info@leickfurnituresince1910.com



Hardware List

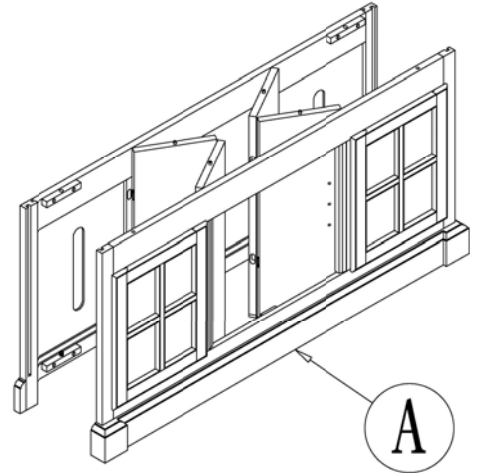 
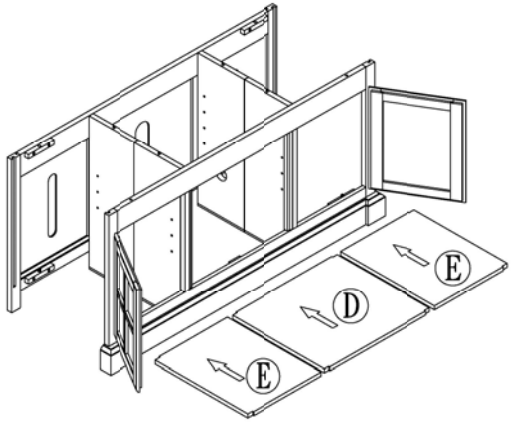 
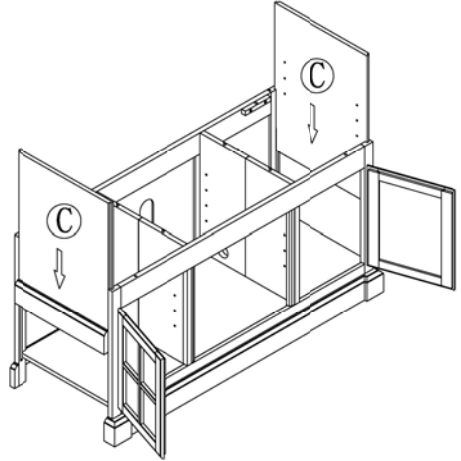 
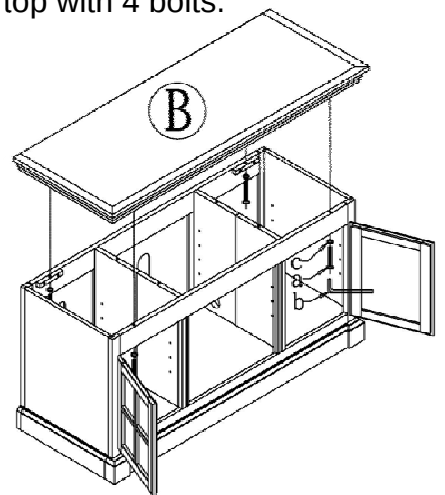 
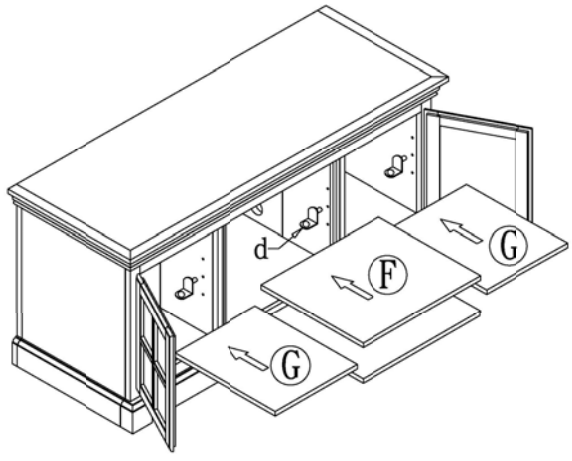 
Item	Description	Qty
a	 Bolt 1/4"*1-1/8"	4 PCS
b	 Allen wrench	1 PC
c	 Washer 1/4"*12mm	4 PCS
d	 Shelf Metal Clip	16 PCS
e	 Left Door Pull	1 PC
f	 Right Door Pull	1 PC
g	 Machine screw for door pull 5/32" X 3/4"	2PCS

Parts List

Item	Description	Qty
A		Cabinet
B		Top Panel
C		Side Panel
D		Middle Bottom Panel
E		Side Bottom Panel
F		Middle Adjustable Shelf
G		Side Adjustable Shelf

Assembly Instructions

Two person assembly recommended.

Step 1 Unfold the cabinet. 	Step 2 Open 2 doors. Insert the middle bottom panel first, and then insert side bottom panels. 
Step 3 Insert two side panels. 	Step 4 Fasten the top with 4 bolts. 
Step 5 Install shelf clips and insert shelves. 	Step 6 Install door pulls. 