

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

930275
SIDE TABLE

ITEM:930275

ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

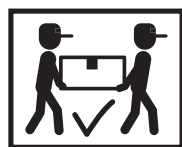


ASSEMBLY TIME

30 MINUTES


PARTS IDENTIFICATION

 A SIDE PANEL

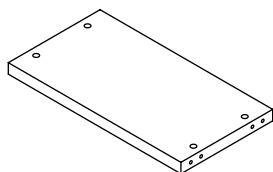


1 PC

 B DIVIDER PANEL

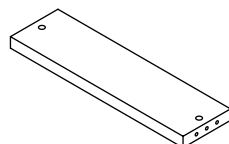

1 PC

 C TOP & BOTTOM
PANEL

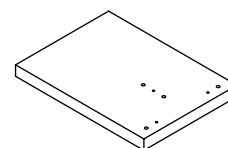

2 PCS

HARDWARE IDENTIFICATION






Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 15g		1 PC	4	CAM LOCK Ø15x12mm SR		6 PCS
2	WOODEN DOWEL Ø8x30mm		8 PCS	5	STICKER Ø20mm		1 PC
3	CAM BOLT Ø7x35.5mm SR		6 PCS	6	PLASTIC GASKET		4 PCS

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **930275**

     
STEP 1

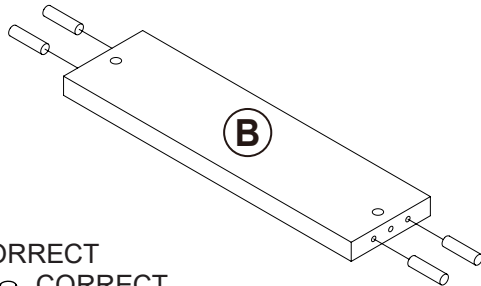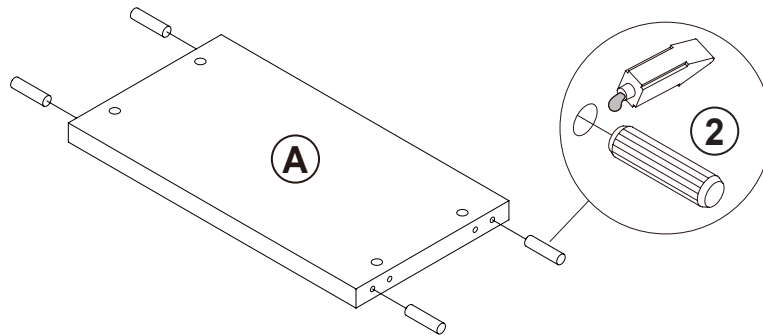





INCORRECT
CORRECT

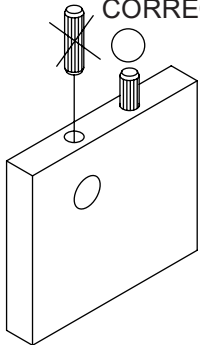 

 Apply glue on all wooden dowels to ensure integrity of the structure.

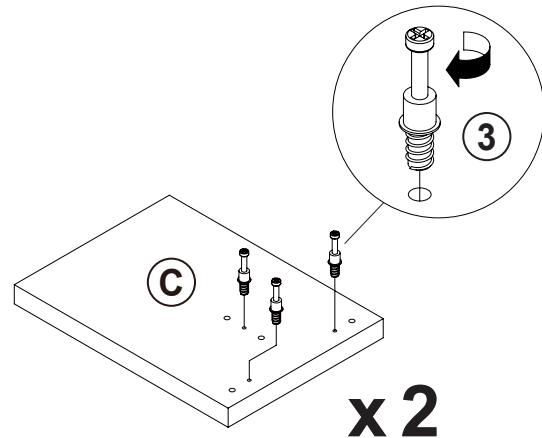

   
 
STEP 2

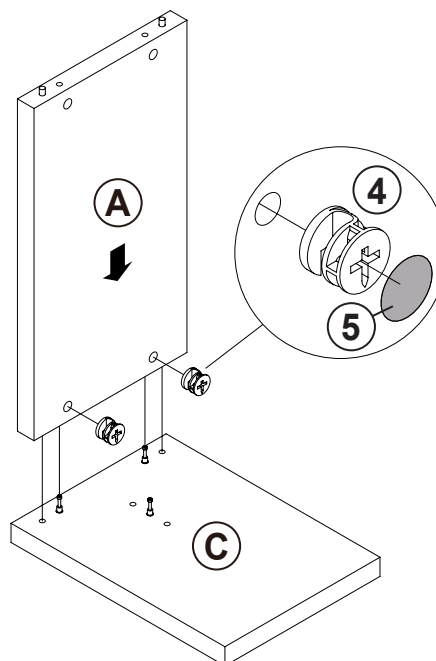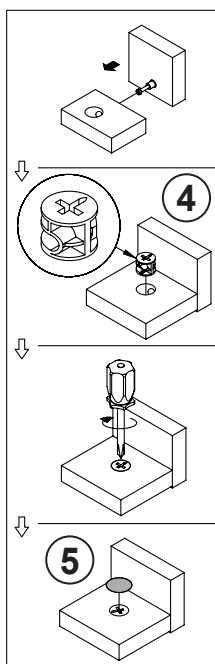





ITEM: **930275**

STEP 3

  COASTER
FINE FURNITURE

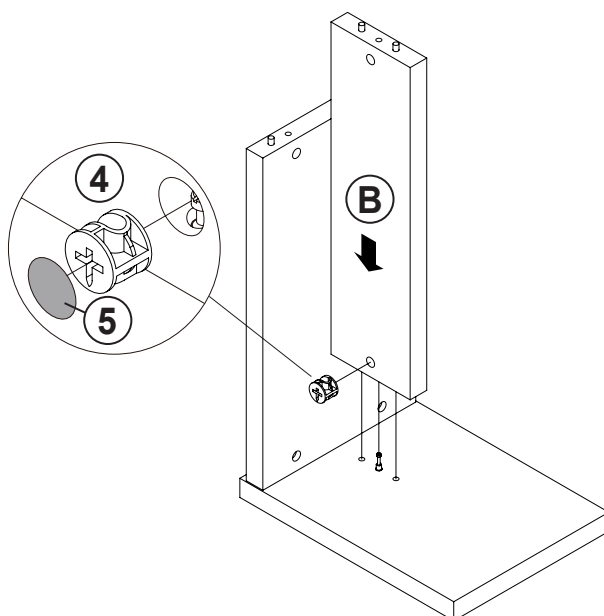

  
 
 
STEP 4

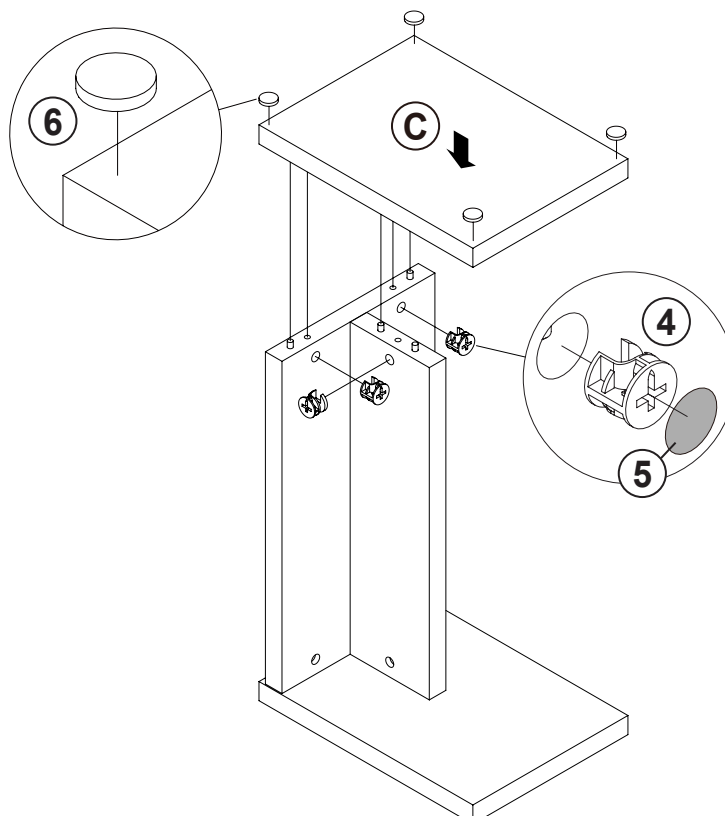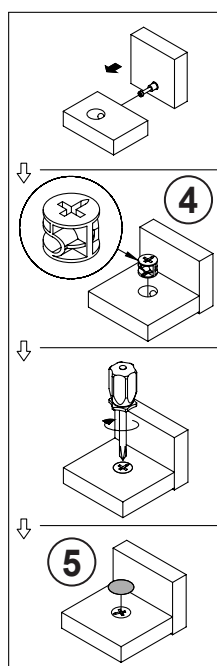


ITEM: **930275**

STEP 7

    COMPLETE

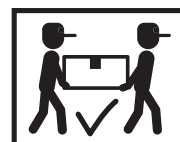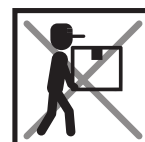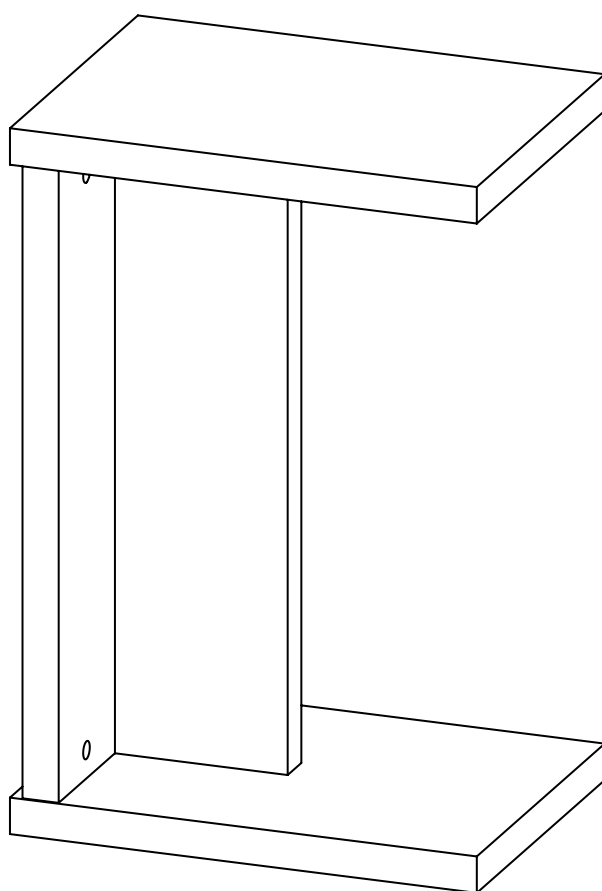

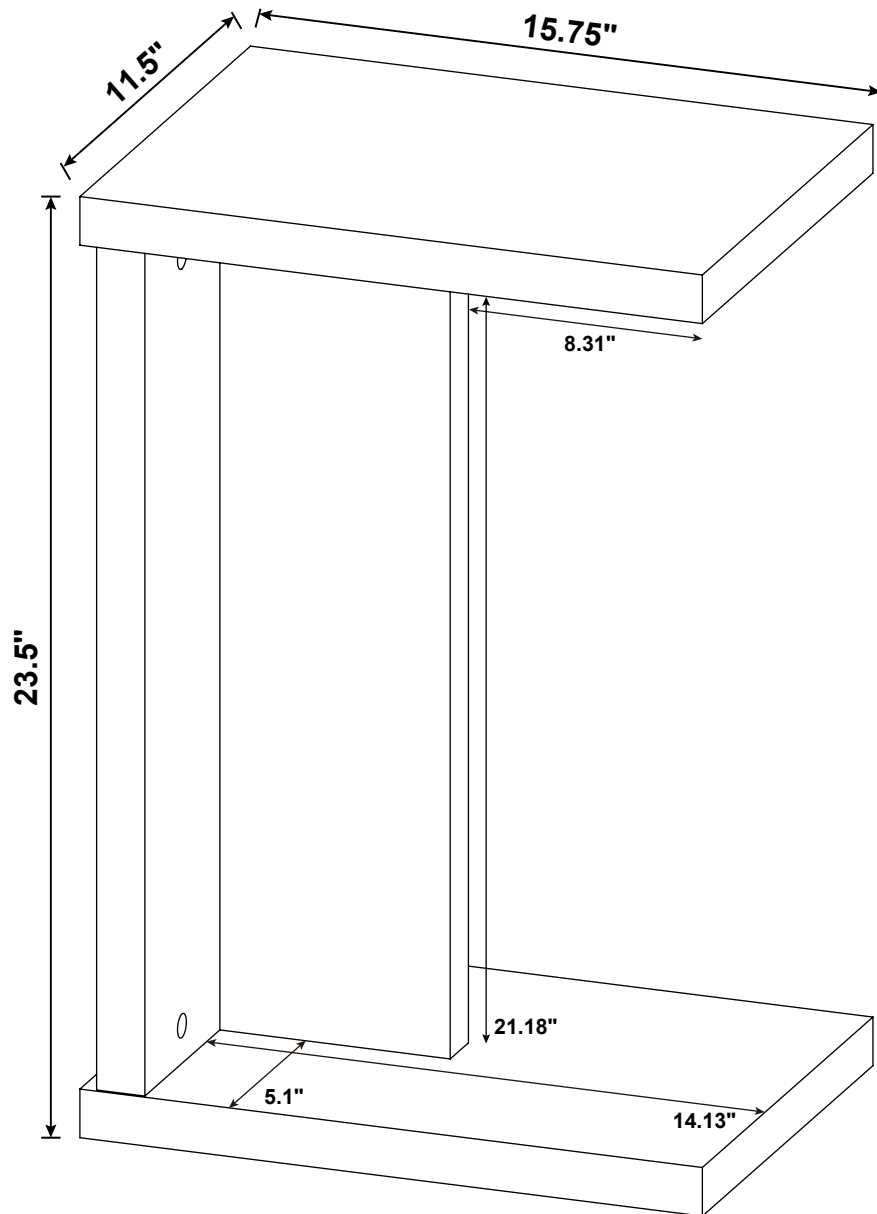

Note : Dimension tolerance $\pm 5\%$