


TANNER DINING TABLE ASSEMBLY INSTRUCTIONS



PARTS PACKING CONFIGURATIONS

A. TOP

1 PC


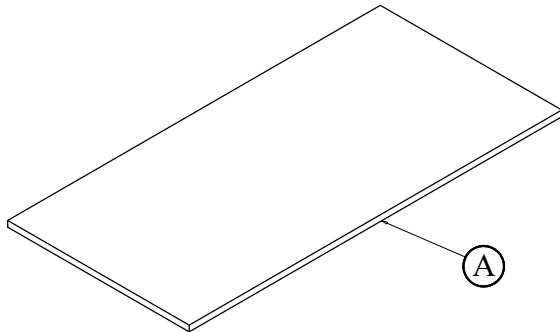


B. OUTER LEG


2 PCS

C. INNER LEG

2 PCS

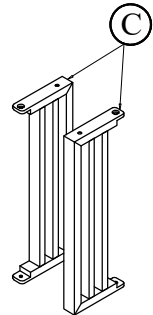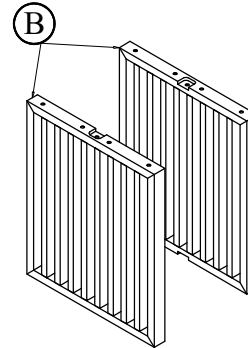



FULLY ASSEMBLED

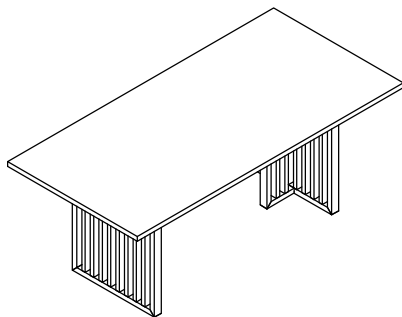


HARDWARE KIT PACKED IN BOX

NO.	DESCRIPTION	IMAGE	QTY
1	ALLEN BOLT (5/16"x20mm) and FLAT WASHER (5/16")		4 SETS
2	ALLEN BOLT (5/16"x30mm) with SPRING WASHER (5/16") and FLAT WASHER (5/16")		26 SETS
3	ALLEN KEY		1 PC

  EXTRA HARDWARE MAY BE INCLUDED




STEP 1

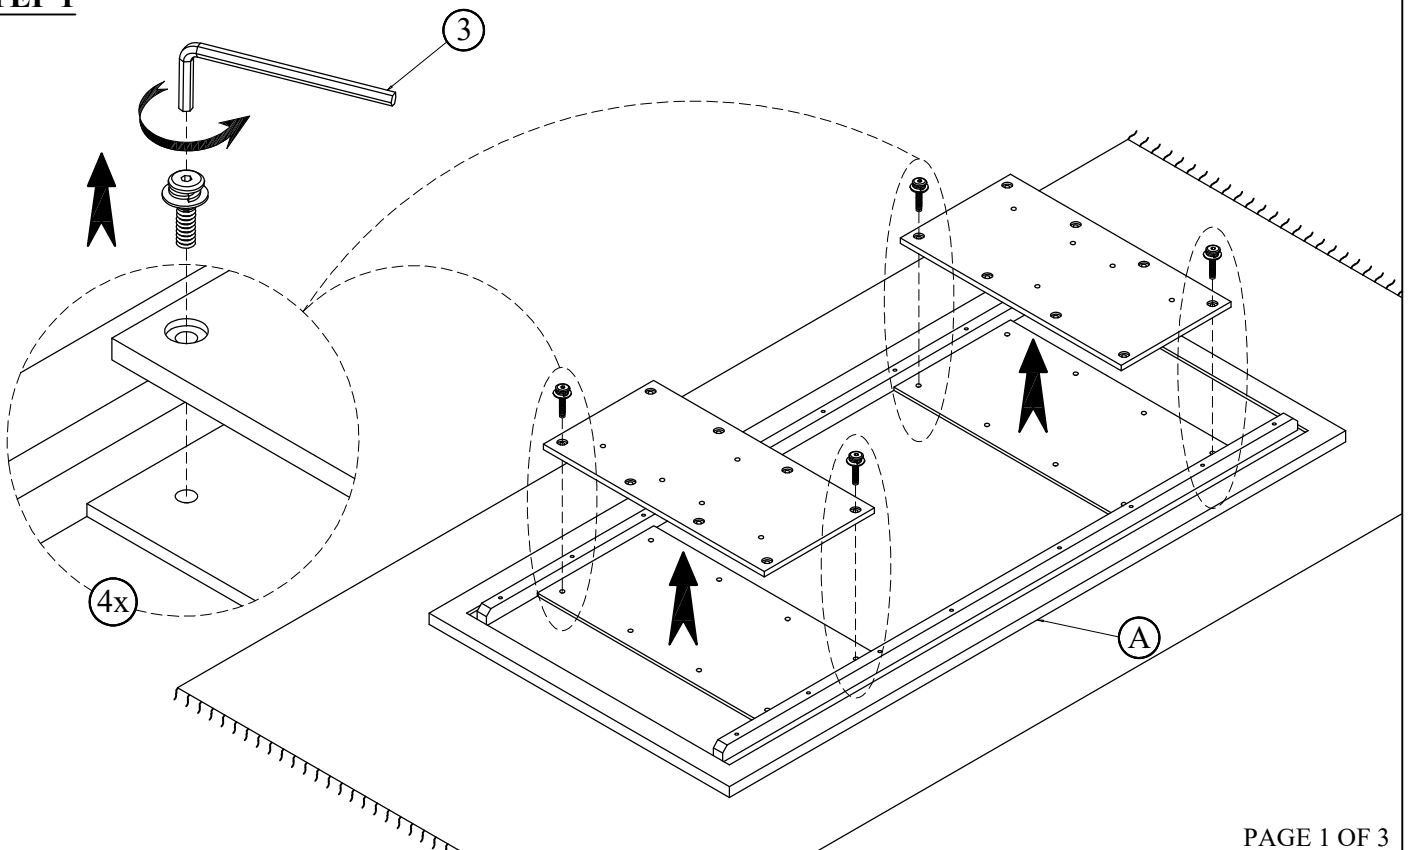

TANNER DINING TABLE ASSEMBLY INSTRUCTIONS

STEP 2

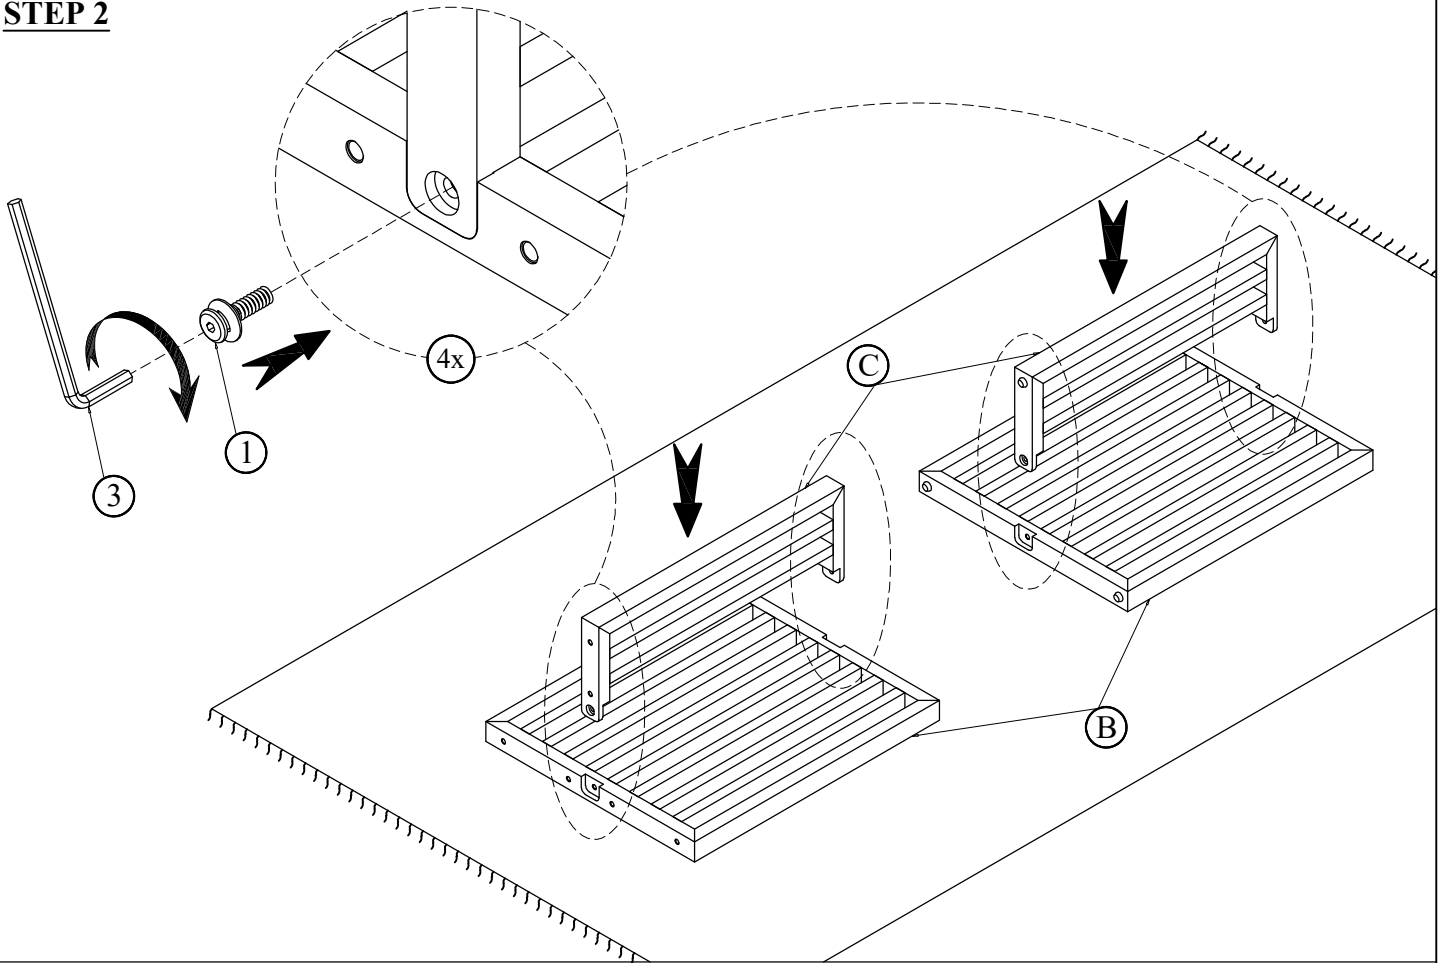

STEP 3

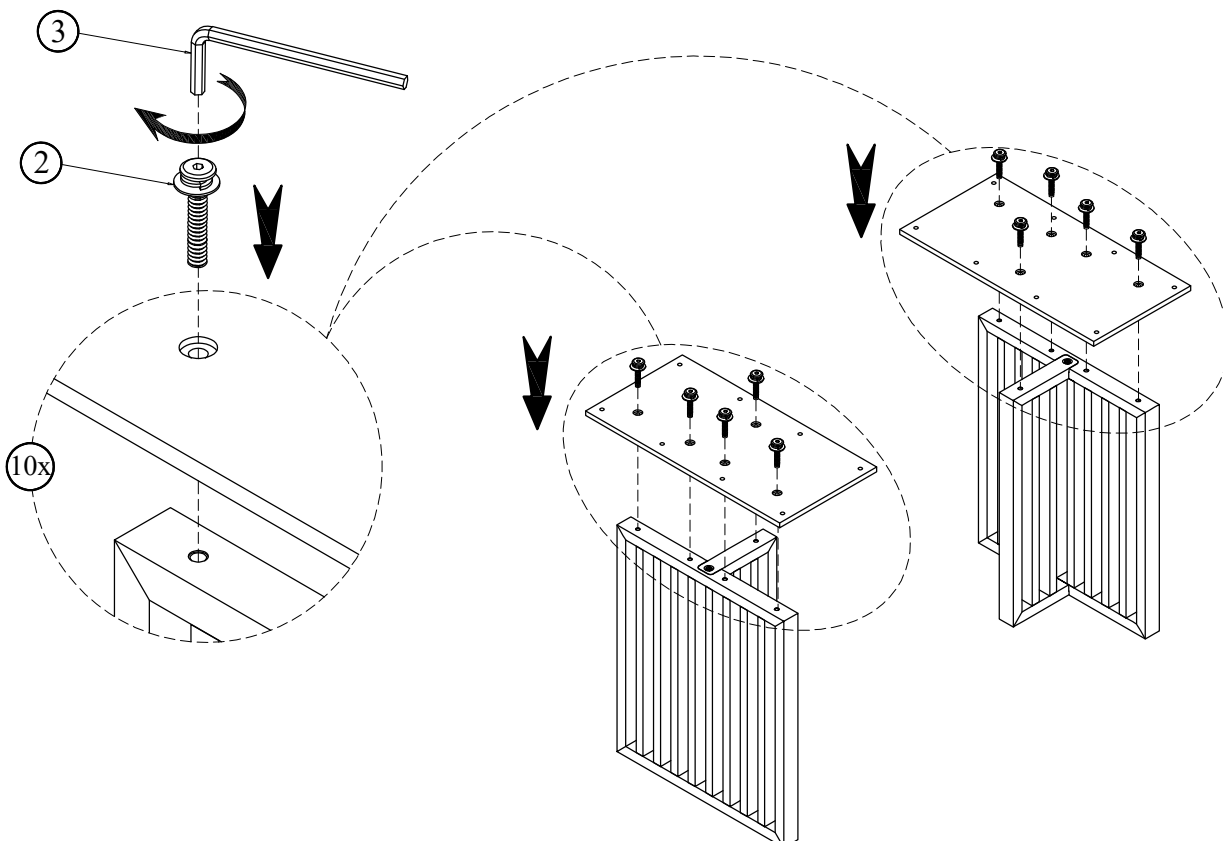


Diagram illustrating the assembly of the rear panel. The main unit is shown with the rear panel being attached. A detailed view shows a screw (labeled 16x) being inserted into the rear panel. The rear panel is secured with multiple screws, and the assembly is shown being pushed into place (indicated by a downward arrow).

STEP 5

The diagram illustrates the final step of assembly. It shows a rectangular table top being positioned over a frame of four legs. A large black arrow indicates the direction of movement. Two inset diagrams provide guidance: the top-left inset shows an incorrect diagonal placement marked with a red 'X', while the top-right inset shows the correct vertical placement marked with a red checkmark. A circular inset at the bottom right shows a close-up of the legs meeting at a corner, with a circular arrow indicating they should be rotated to fit together.

PAGE 3 OF 3