

WINNERS ONLY

ASSEMBLY INSTRUCTIONS

 
PROD.NO: GC33072BDP

Thank you for purchasing this quality product . Please read instructions thoroughly before unpacking assembly parts

Caution: Sharp, exposed staple tips can cause injury. Therefore, for your protection, please remove any exposed staples used in packing. Please keep all hardware parts out of the reach of children.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier and will help to prevent personal injury and to insure parts are not damaged during assembly process.
2. Before beginning, please check packing materials carefully for small parts that may have come loose inside the carton during shipping. Do not discard any packing material until all parts have been located. If any parts are missing, please contact your dealer for prompt replacement.
3. To prevent damage to your floor or carpet, please check the bottom of each piece of furniture for stain residues and rough surfaces and also check for staples or nails left after removing the packing materials .The manufacturer will not be held responsible if preventive steps are not taken prior to installation.
4. Please do not over tighten screws or bolts. During normal use everyday, screws, bolts , nuts and wooden plugs may loosen up. They should be periodically inspected and re-tightened to prevent damage to the furniture and (or) personal property or cause Always check to be sure all hardware on this list and below mentioned components are attached to the furniture property and kept tightened.
5. Please lay all parts and hardware on a non-abrasive surface such as a carpet and follow the assembly.

Components List :

NO.	DESCRIPTION	Q' TY
A	 72" Bookcase W/ Doors	1pc

Hardware List



NO.	DESCRIPTION	SIZE	SKETCH	Q' TY
1	Metal Plate	90*20*3mm		1pc
2	Allen Bolts	1/4*15*Ø11mm		2pcs
3	Allen Key	4*30*80mm		1pc

IMPORTANT NOTE:

- Please do not over tighten screws or bolts
- Please keep all hardware parts out of the reach of children
- Two or more people are needed for assembly

To adjust the shelves

Remove the Screw located underneath the shelf as shown on the illustration. Adjust the position of the shelf clip to the desire location. Attach the screw underneath the shelf.

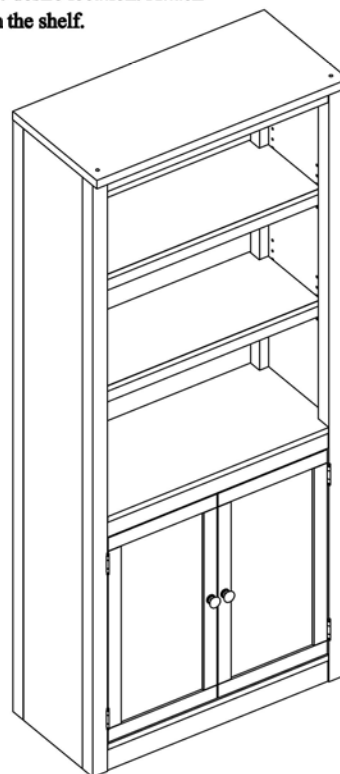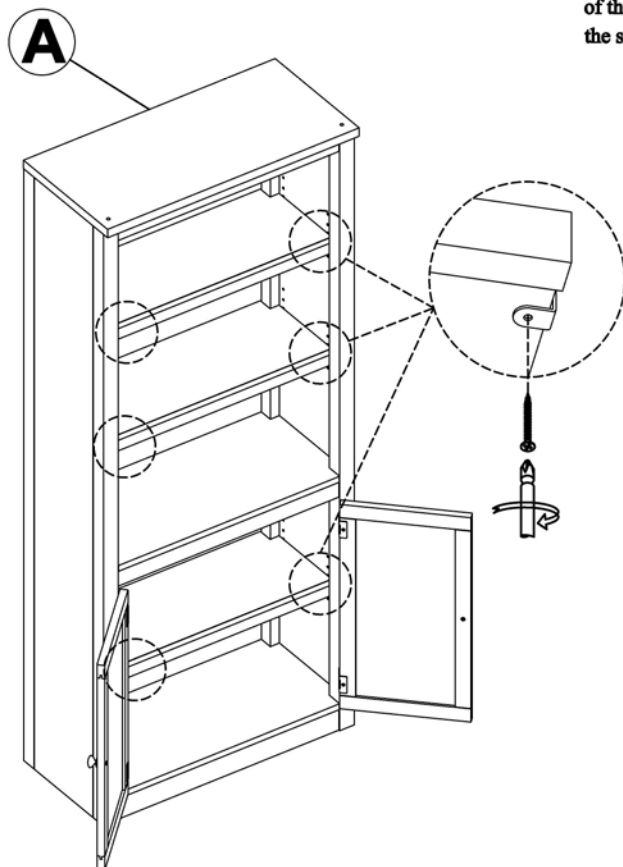

WINNERS ONLY

ASSEMBLY INSTRUCTIONS

PROD.NO: GC33072BDP

