




Headrest Operation Guide




To adjust headrest: pull from back on both sides as shown

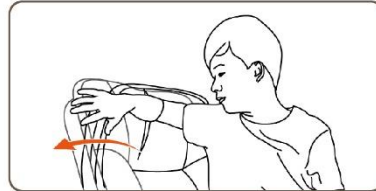

To return headrest back: push on both sides or use forearm to evenly move headrest back



Do not pull from side edge to adjust, material may tear

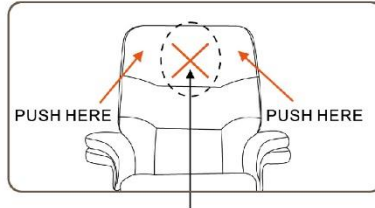

CAUTION:
Do not push in the center of the headrest as this may cause foam cushion to collapse