

*ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE*



Fine Furniture for every stage of life

720223
TV STAND

ITEM:720223

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 


ASSEMBLY TIME

60 MINUTES

MAX TV SIZE : 85"












PARTS IDENTIFICATION

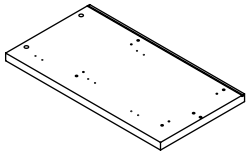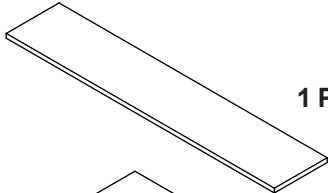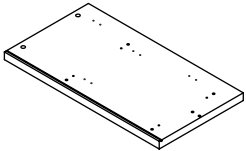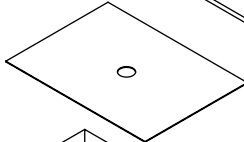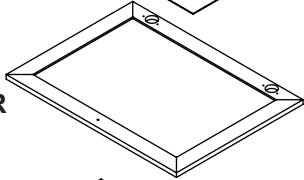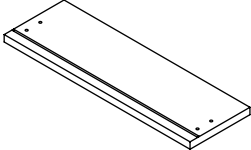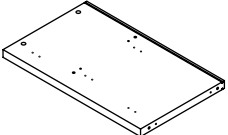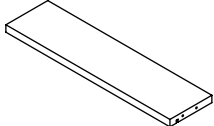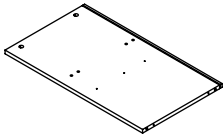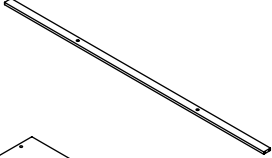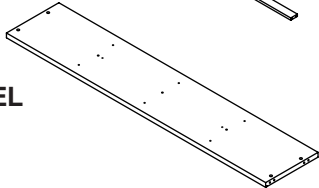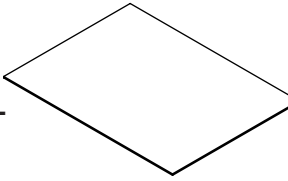A	LEFT SIDE PANEL		1 PC	J	TOP PANEL		1 PC
B	RIGHT SIDE PANEL		1 PC	K	BACK PANEL		4 PCS
C	LEFT SMALL DIVIDER PANEL		2 PCS	L	GLASS DOOR		4 PCS
D	RIGHT SMALL DIVIDER PANEL		2 PCS	M	DRAWER FRONT PANEL		4 PCS
E	MIDDLE DIVIDER PANEL		1 PC	N	DRAWER BACK PANEL		4 PCS
F	DIVIDER PANEL		2 PCS	O	DRAWER LEFT SIDE PANEL		4 PCS
G	LOWER CROSS BRACE		1 PC	P	DRAWER RIGHT SIDE PANEL		4 PCS
H	BOTTOM PANEL		1 PC	Q	DRAWER BOTTOM PANEL		4 PCS
I	CROSS PANEL		4 PCS				

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

           ITEM: **720223****HARDWARE IDENTIFICATION**

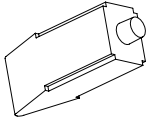

Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	11	HANDLE		4 PCS
2	WOODEN DOWEL Ø8 x 30mm		35 PCS	12	HANDLE BOLT BLK		4 PCS
3	CAM BOLT Ø7 x 35.5mm SR		40 PCS	13	HINGE Ø35mm SR		8 PCS
4	CAM LOCK Ø15 x 12mm SR		48 PCS	14	HINGE SCREW Ø4x15mm SR		32 PCS
5	SCREW Ø 4.3x35mm SR		32 PCS	15	PLASTIC COVER Ø 52mm		4 PCS
6	PLASTIC FEET Ø15mm		5 PCS	16	BACK PANEL SUPPORT		6 PCS
7	BOLT Ø9.5x55mm SR		6 PCS	17	BACK PANEL SUPPORT SCREW Ø3 x 19mm SR		6 PCS
8	WOODEN DOWEL Ø8 x 50mm		4 PCS	18	CAM BOLT Ø7x63mm SR		4 PCS
9	RAIL L = 300mm BLK		4 PCS	19	STICKER-BK Ø20mm		2 PCS
10	SCREW Ø3x10mm BLK		48 PCS	20	STICKER Ø20mm		6 PCS

Z9, Z11, Z13, Z15 not included in blister packaging.**NOTE:**


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **720223**

  STEP 1

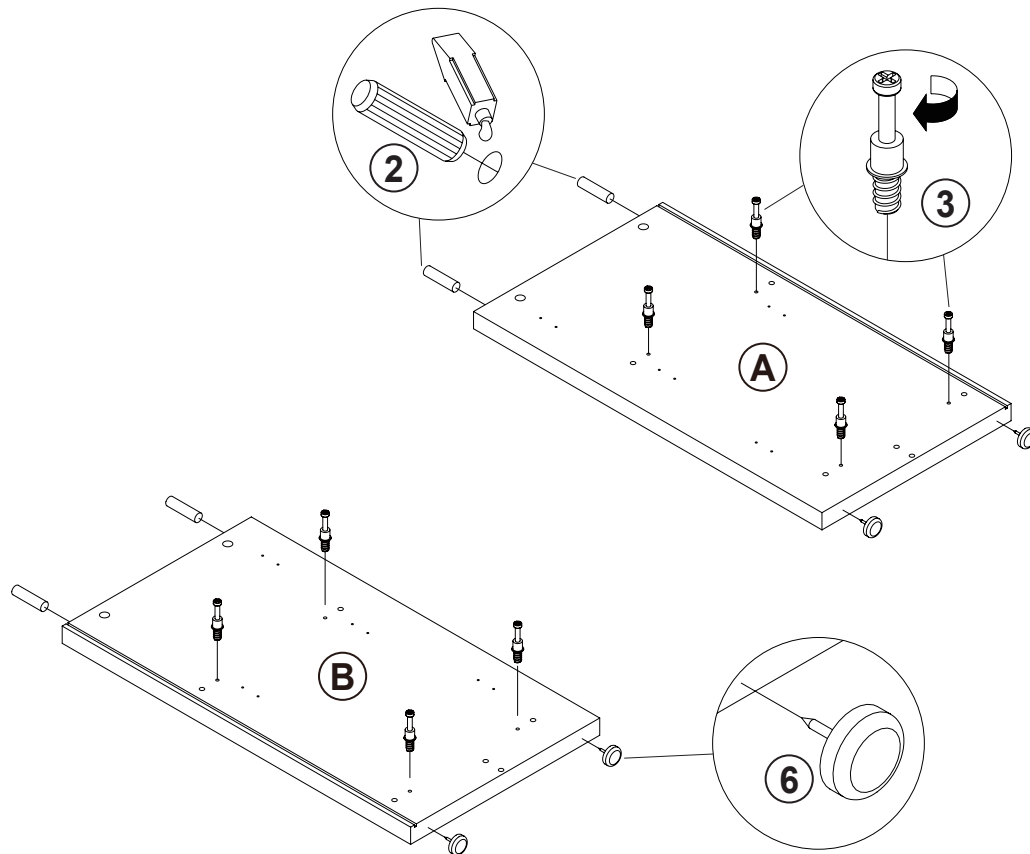


1

 

2

 x 4



3

 
 
x 8



6

x 4


STEP 2

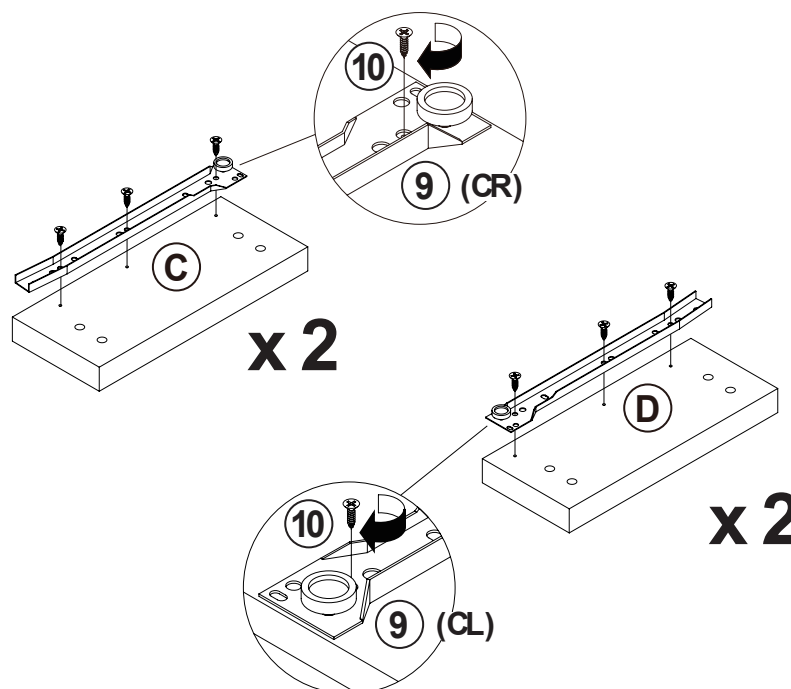

9

CL
CR

 
x 2



10

x 12

 INCORRECT
CORRECT

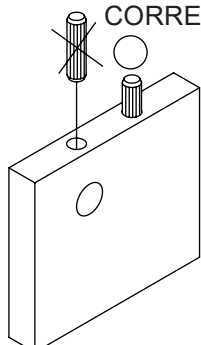


Apply glue on all wooden dowels to ensure integrity of the structure.


ITEM: 720223

COASTER
FINE FURNITURE

 STEP 3

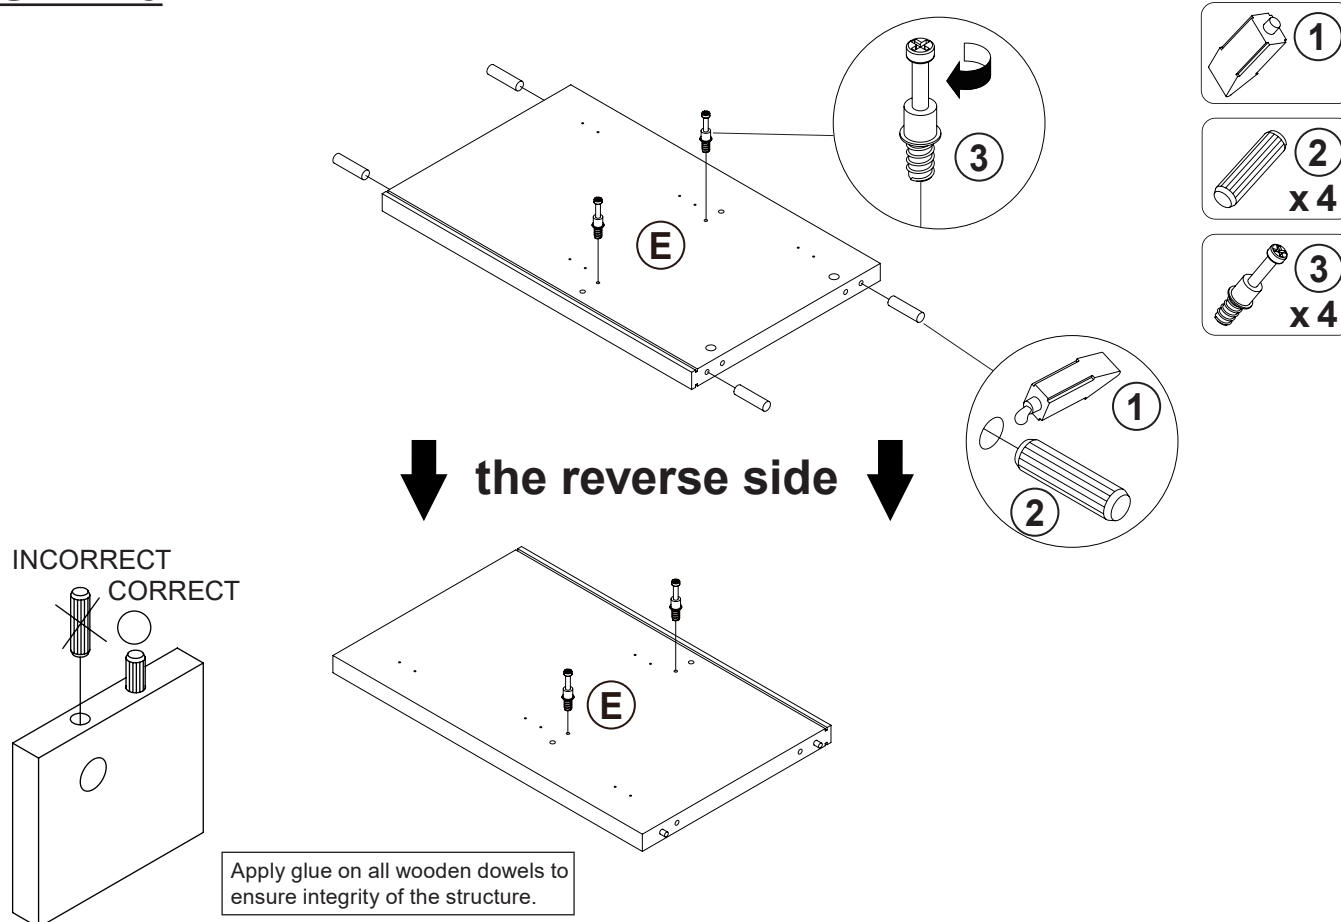


 STEP 4

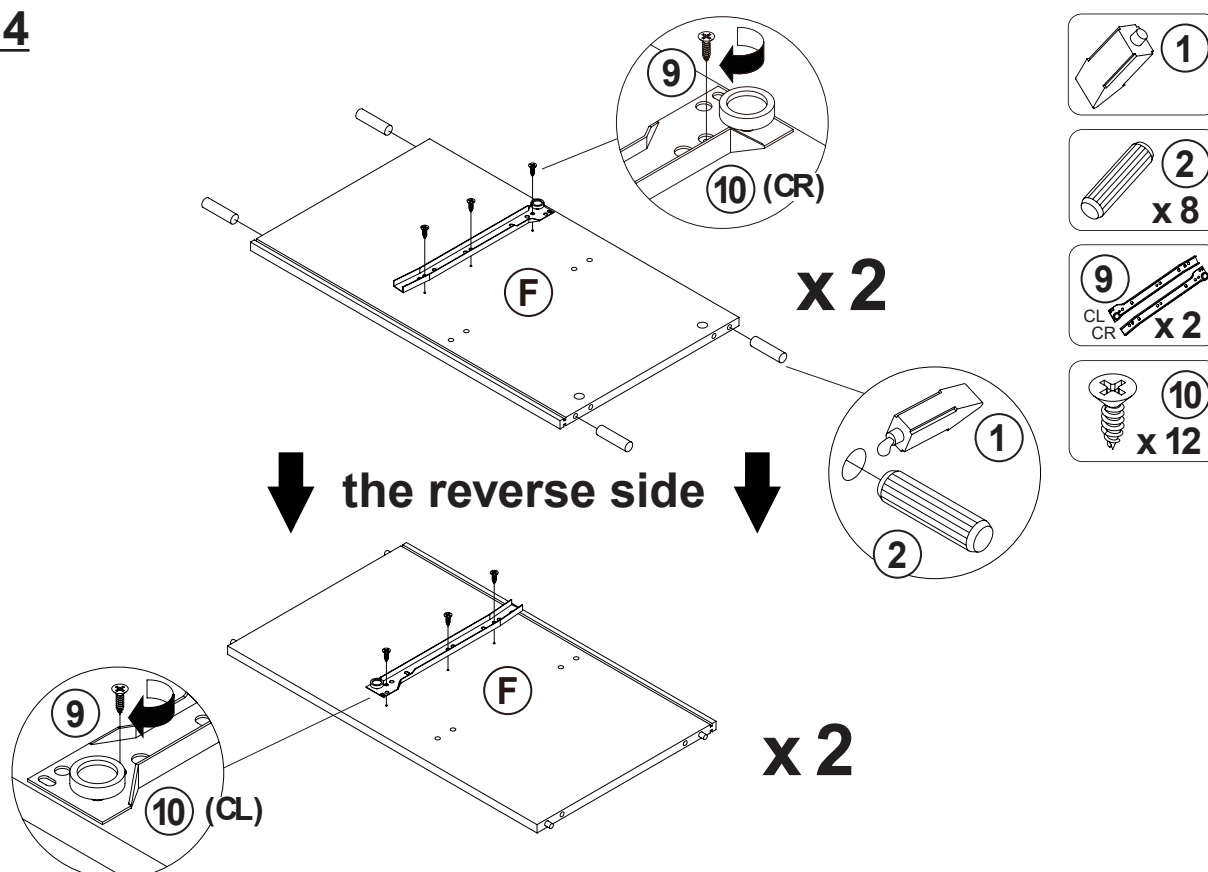


ITEM: **720223**

 STEP 5


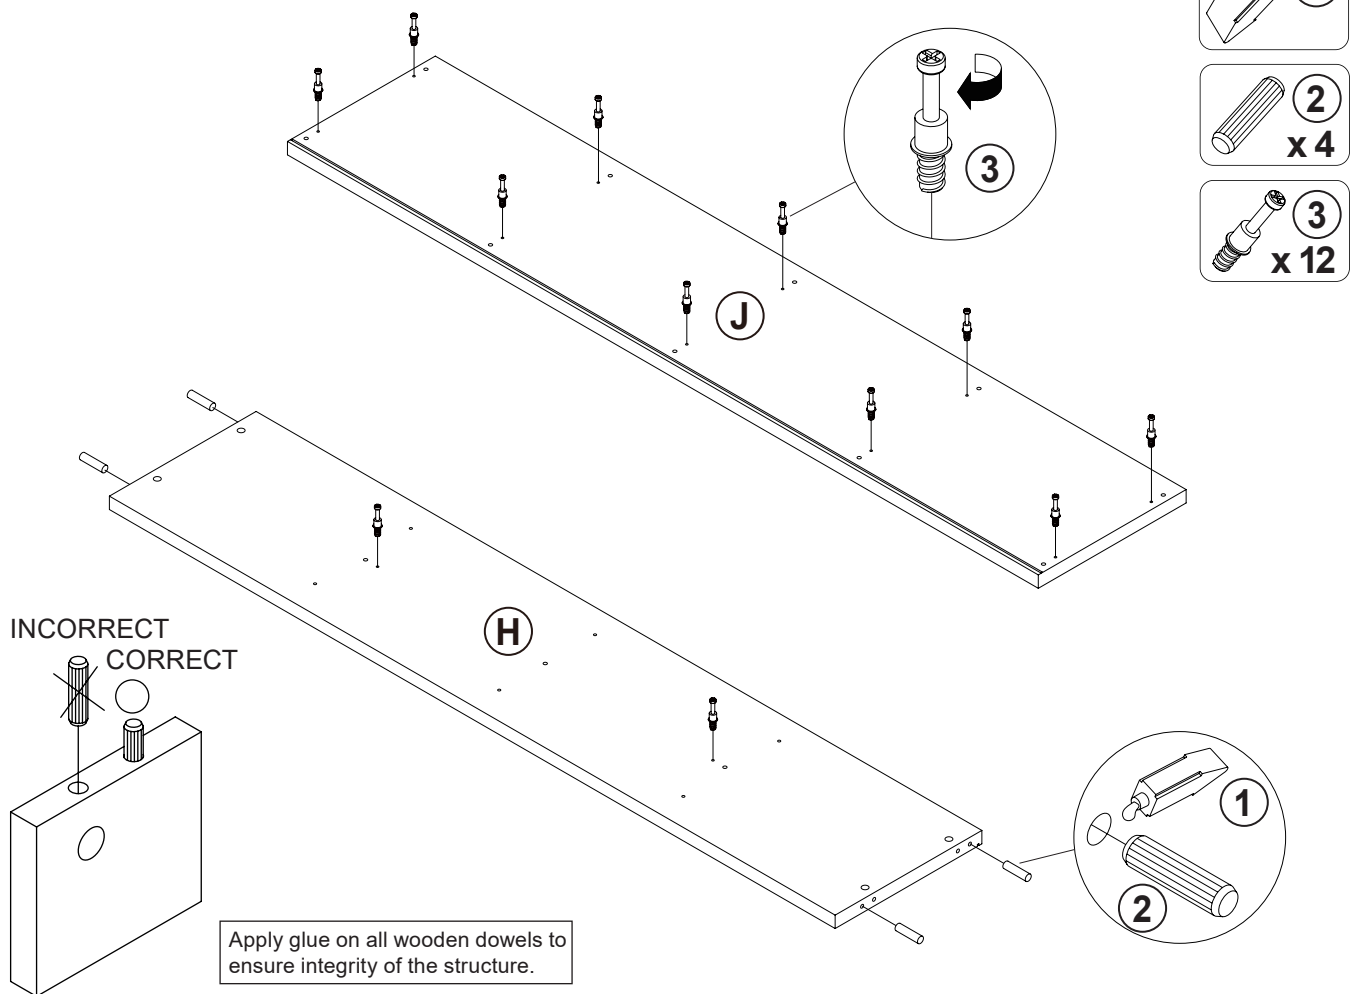


 STEP 6

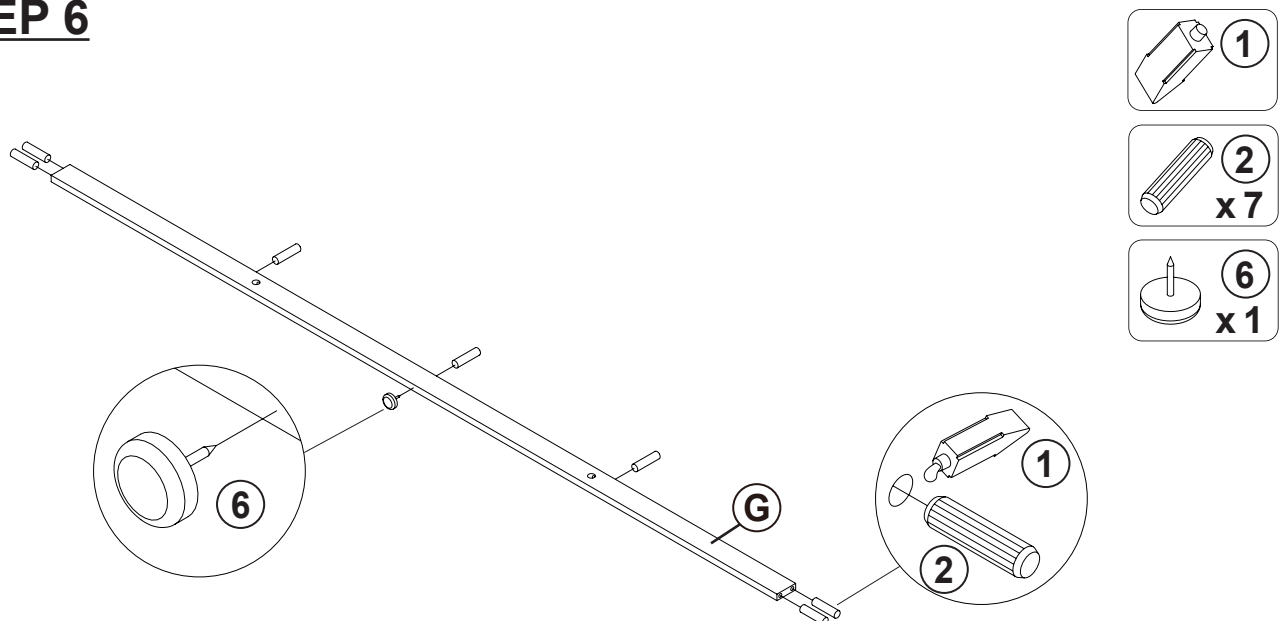


ITEM: **720223**

  STEP 7

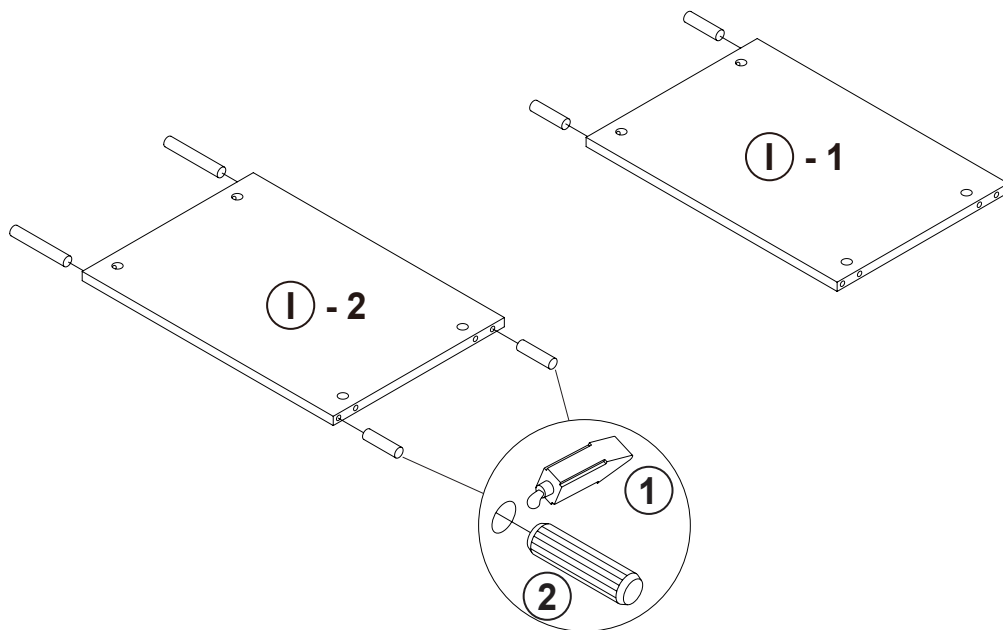


1

 

2


 
x 4




8

x 2

  STEP 8

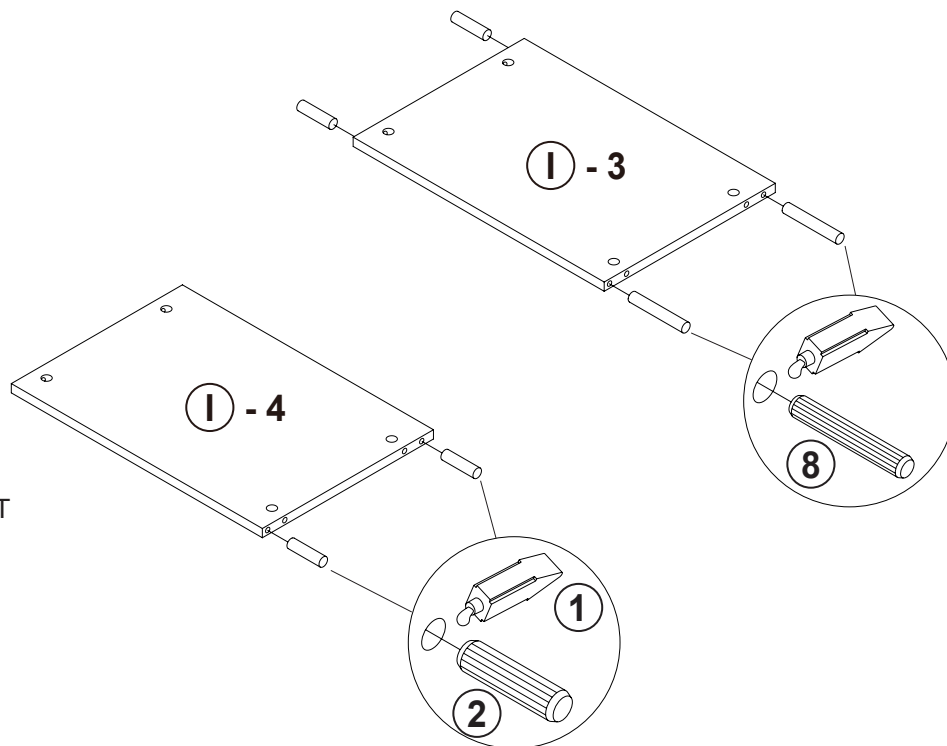


1

 

2

 
x 4



8

x 2

 INCORRECT
CORRECT


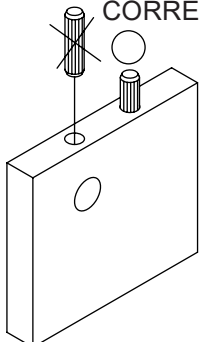


Apply glue on all wooden dowels to ensure integrity of the structure.




ITEM: **720223**

STEP 9

  COASTER
FINE FURNITURE

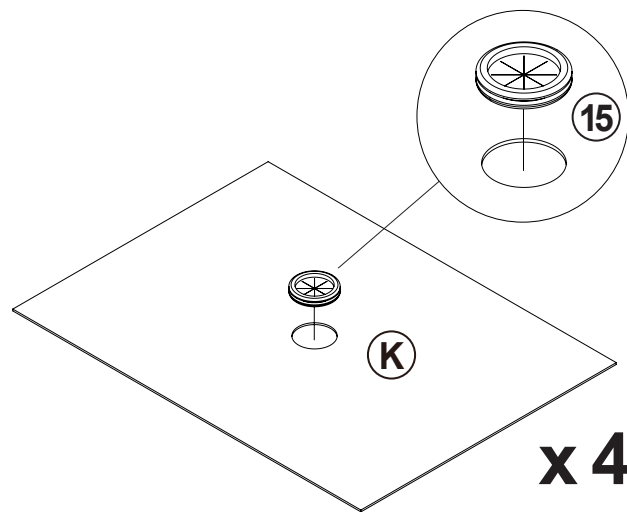

  
 
STEP 10

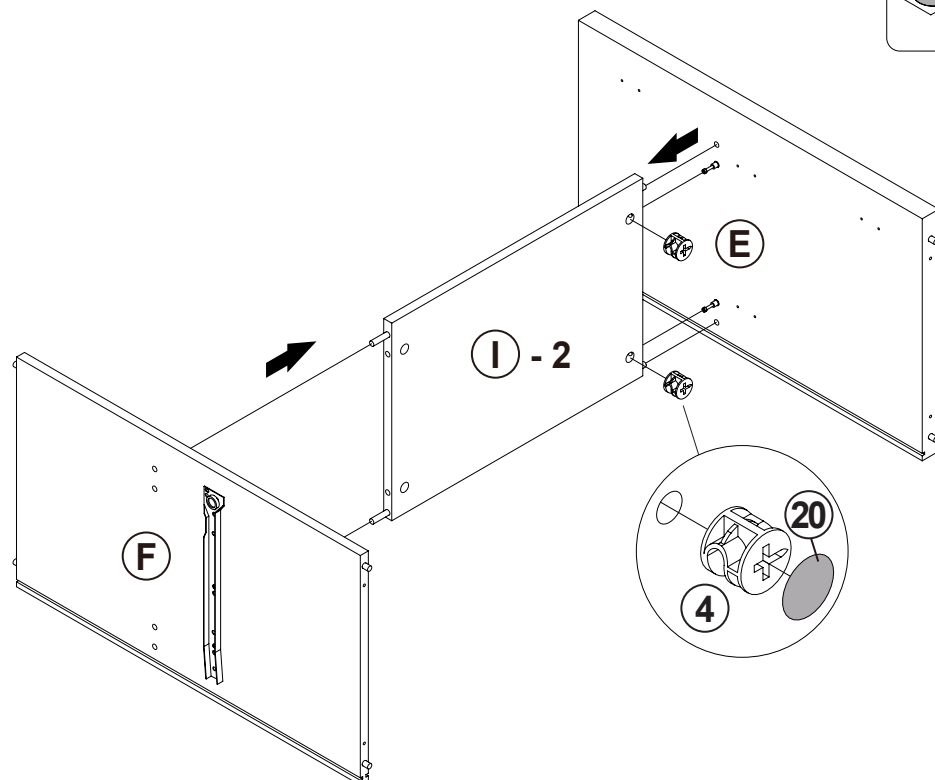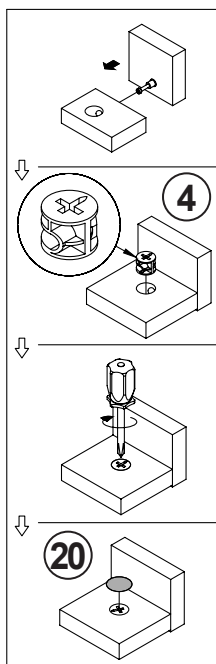




ITEM: **720223**

STEP 11

  COASTER
FINE FURNITURE

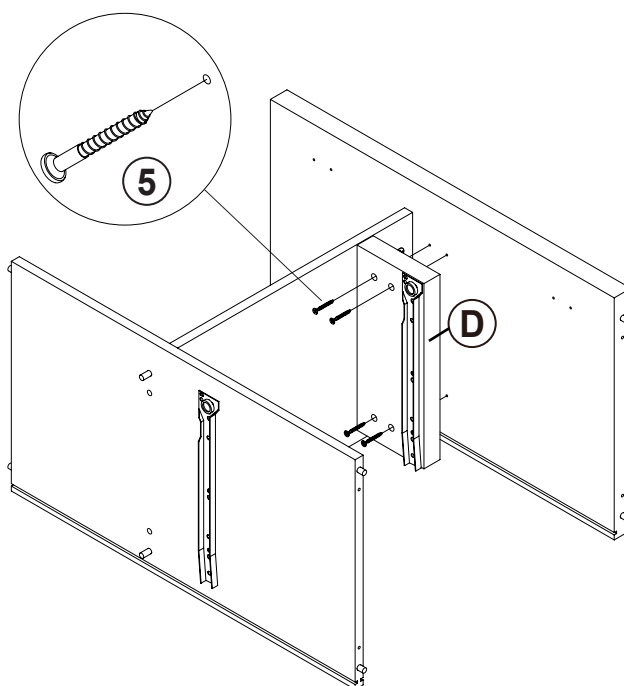

  
 
STEP 12

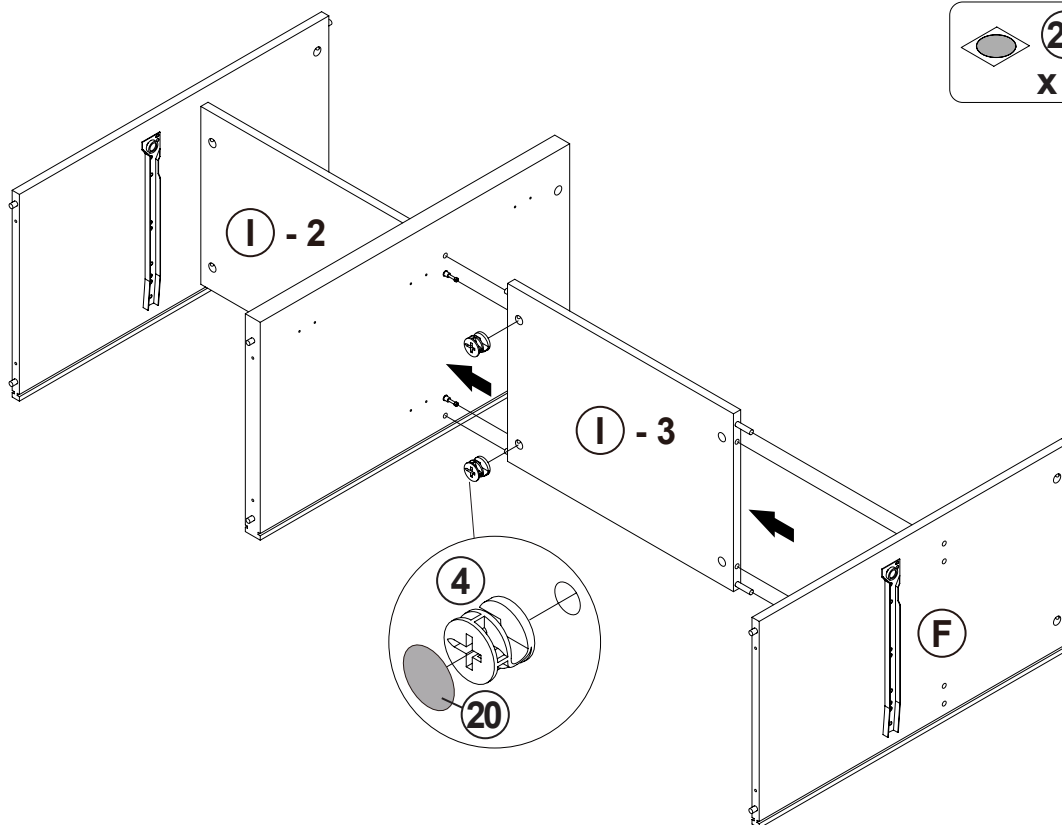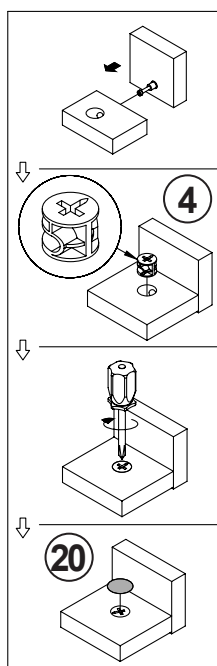



ITEM: **720223**

STEP 13

  COASTER
FINE FURNITURE

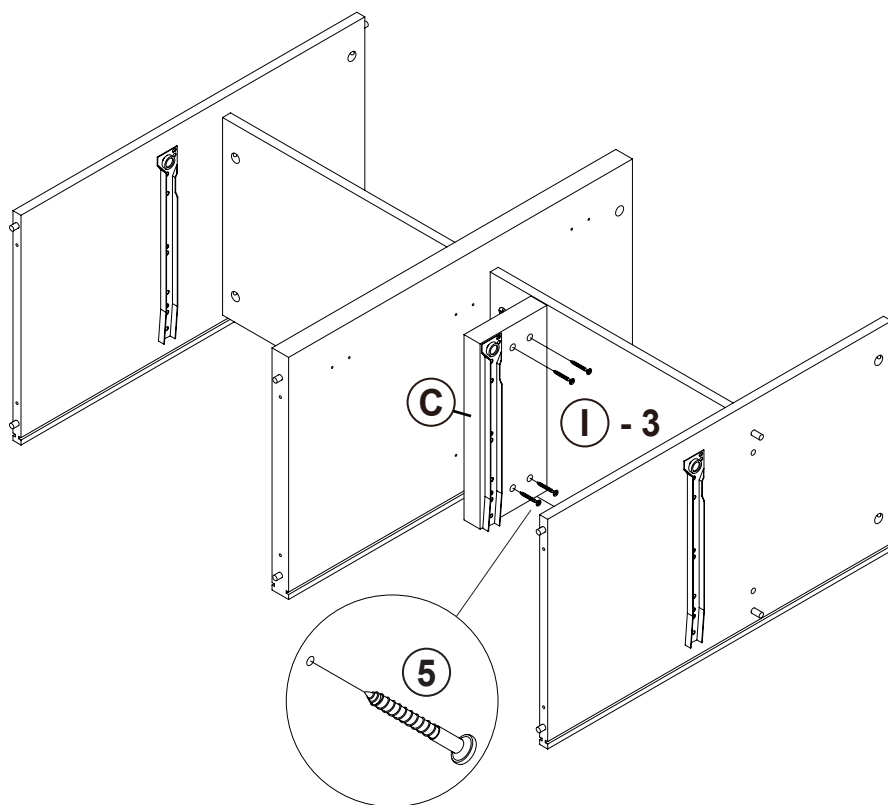


  STEP 14

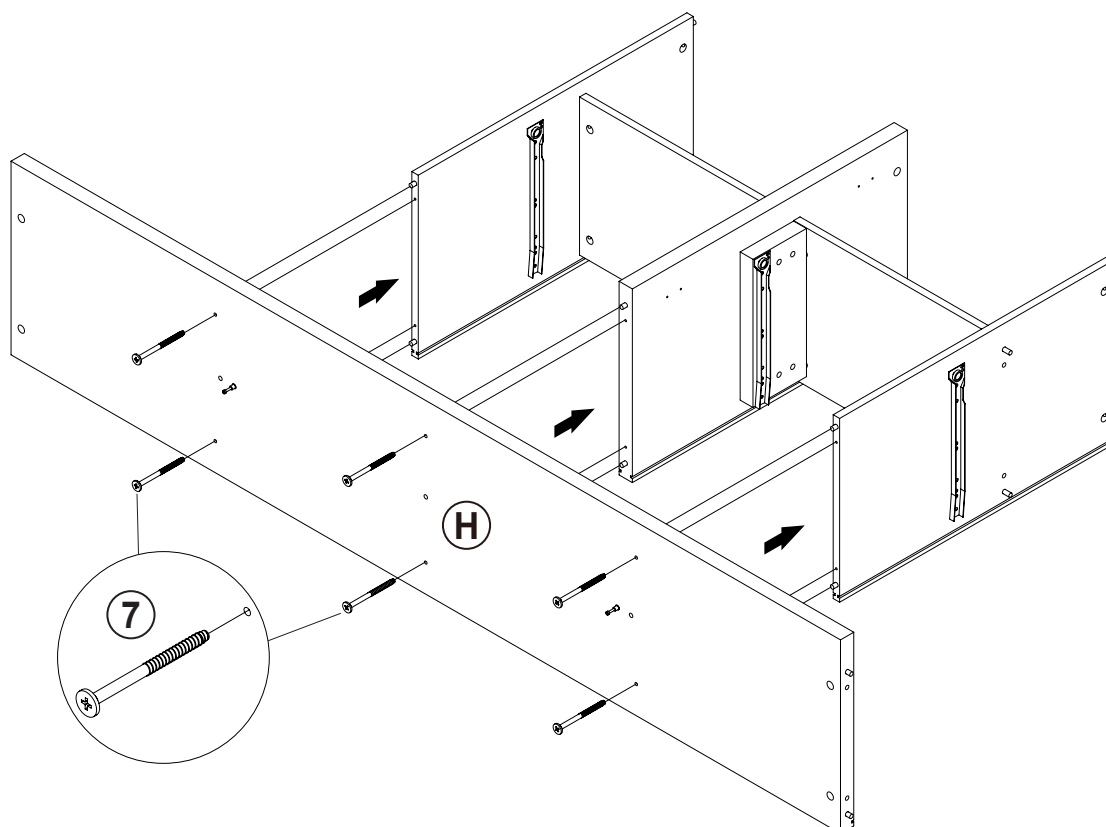


ITEM: **720223**

 STEP 15

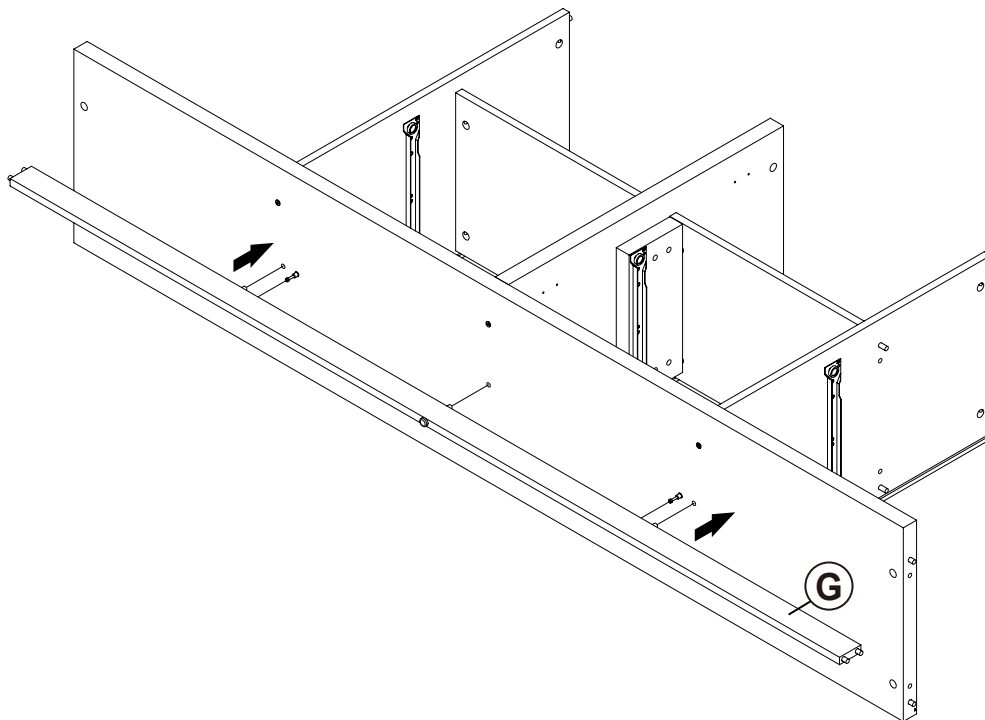




 
STEP 16

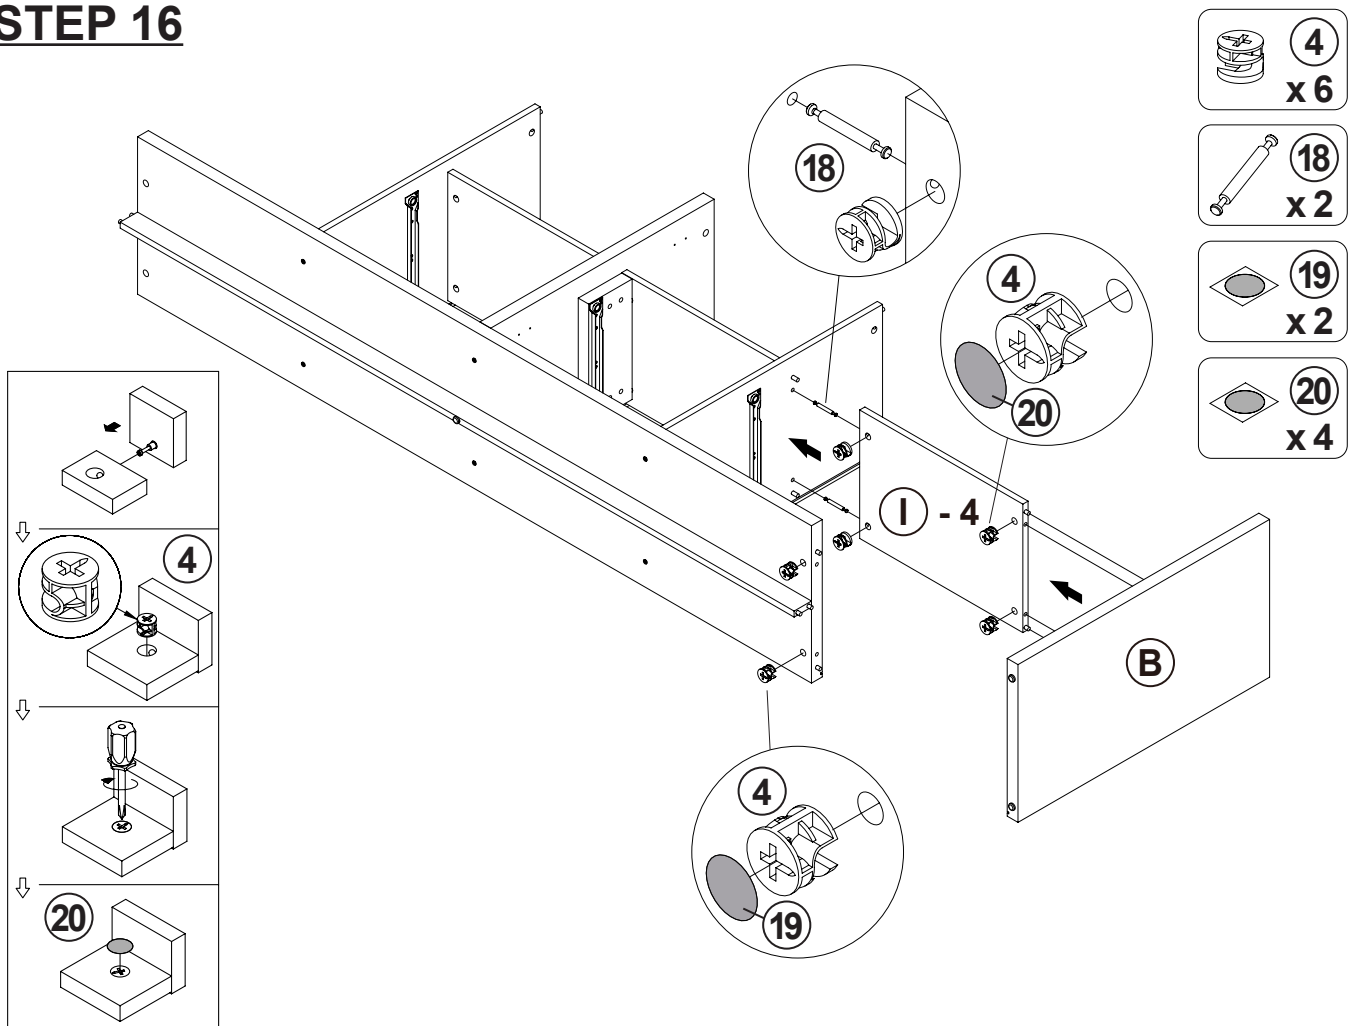


ITEM: **720223**

STEP 17

    COASTER
FINE FURNITURE

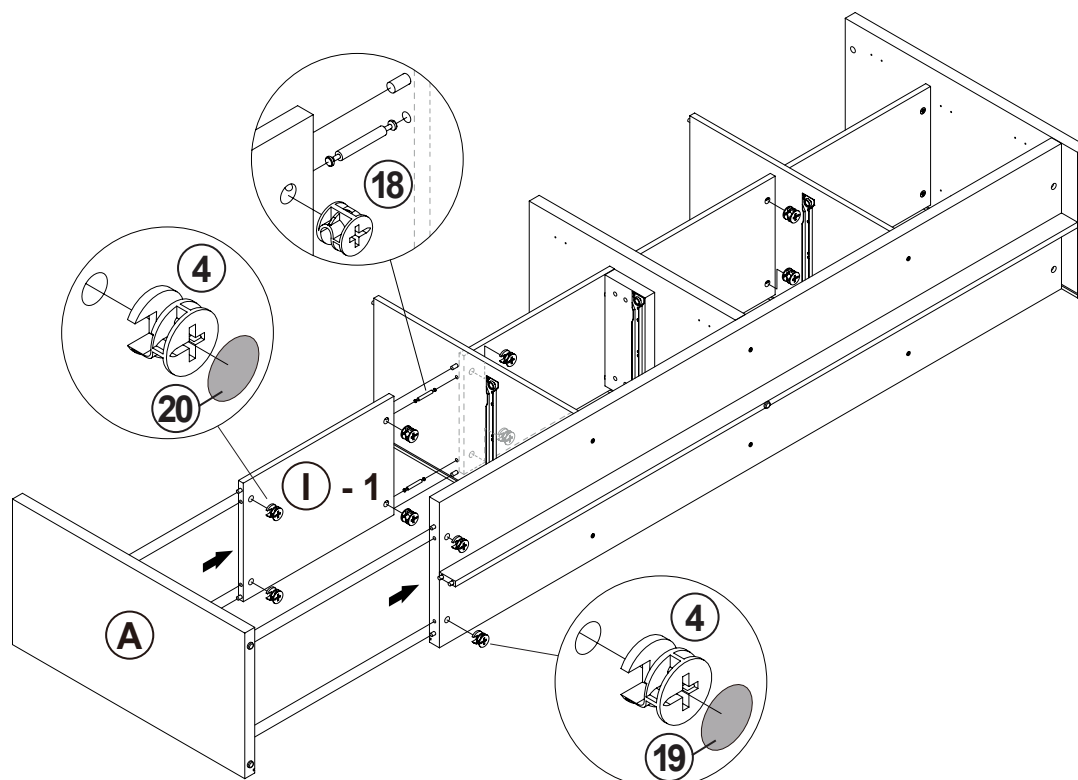


 
STEP 18

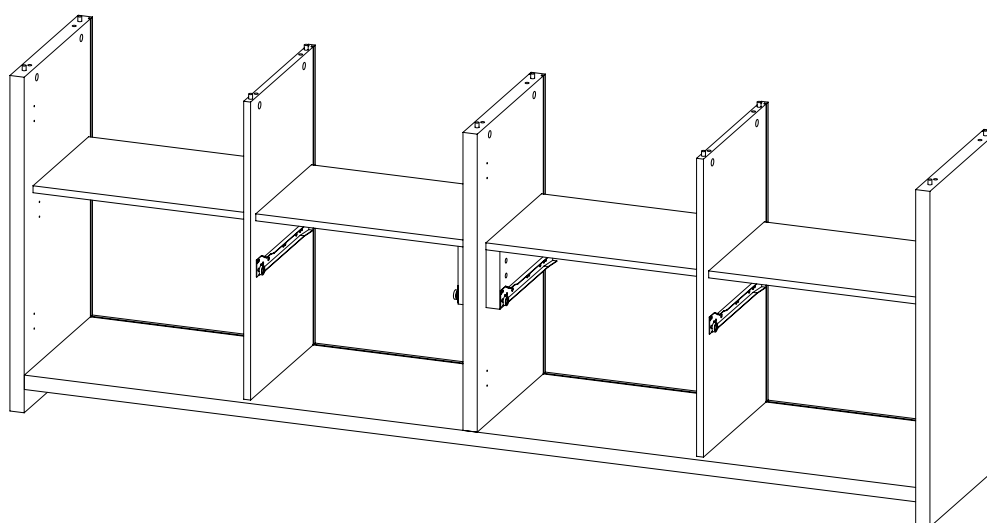





ITEM: **720223**

STEP 19

  COASTER
FINE FURNITURE

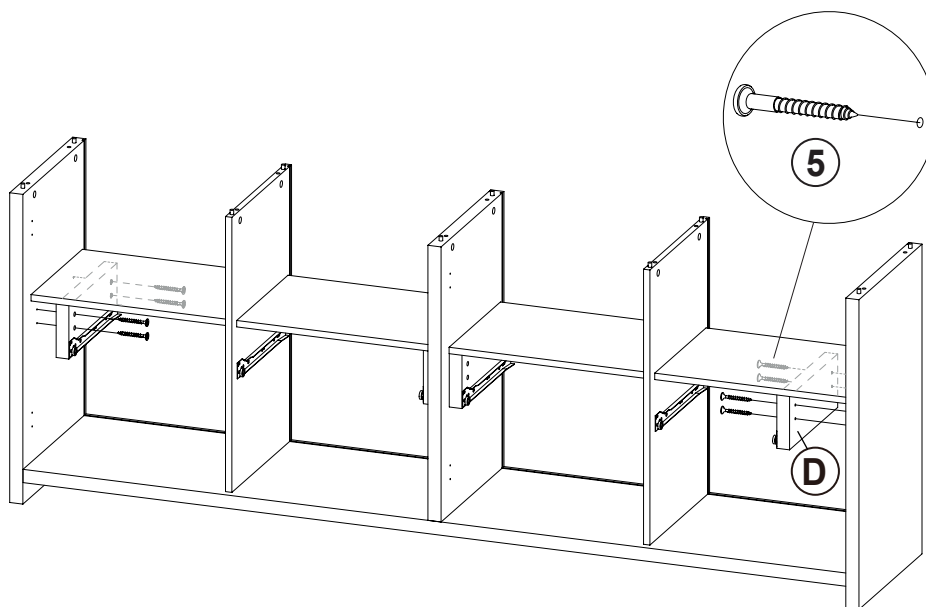

    
STEP 20

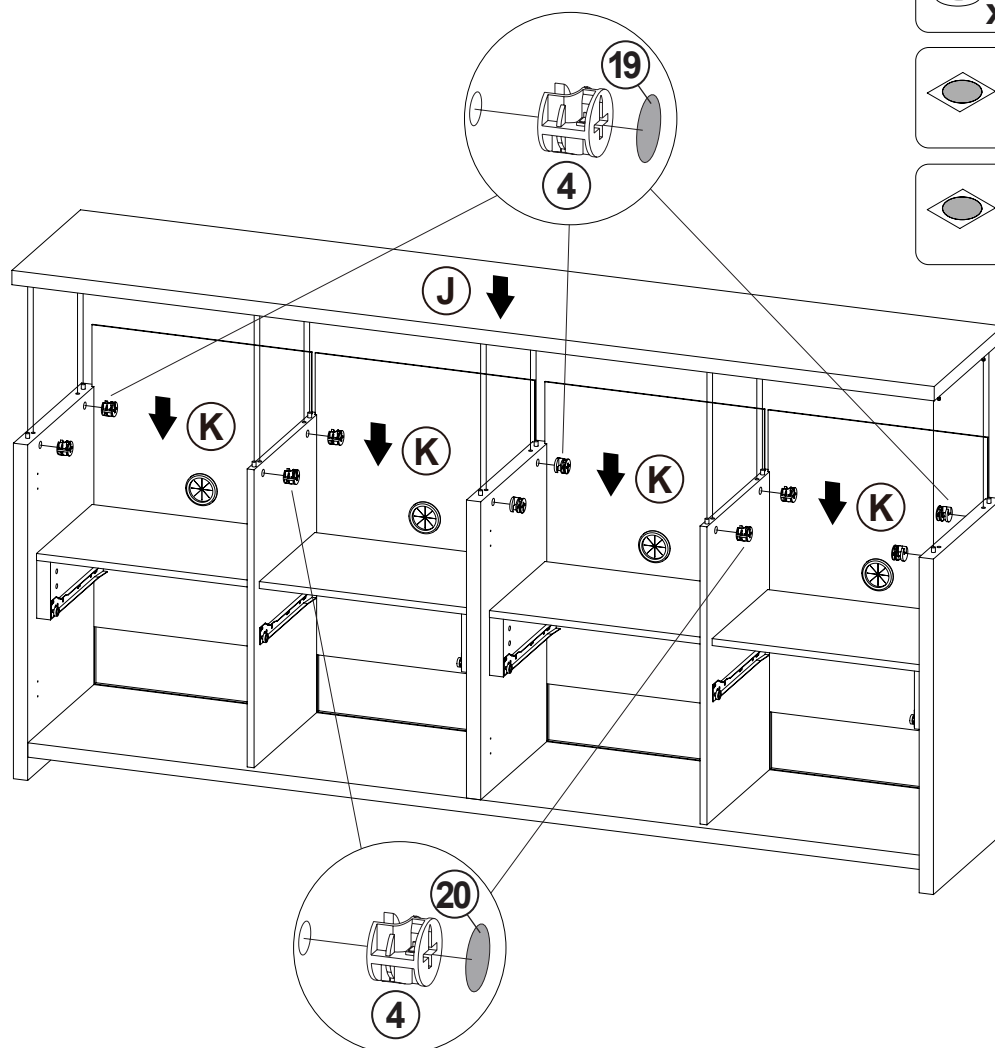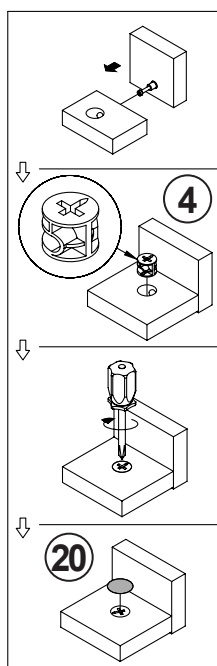


ITEM: **720223**

COASTER
FINE FURNITURE

 
STEP 21-1

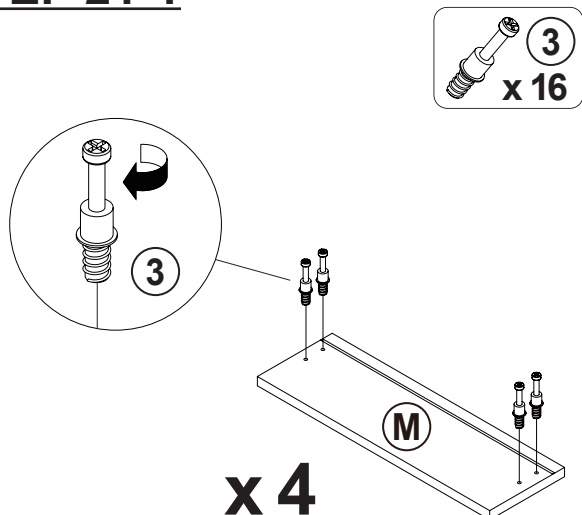

 
STEP 21-2

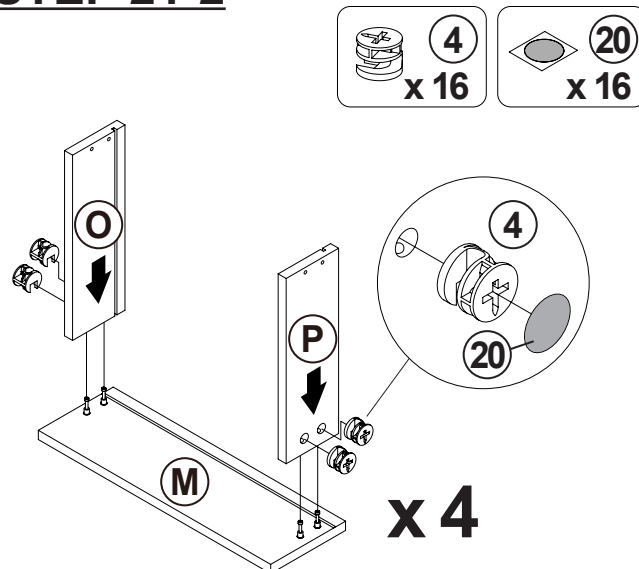

 
STEP 21-3

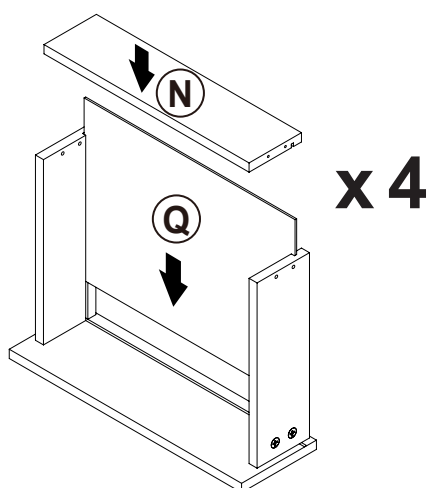

 STEP 21-4

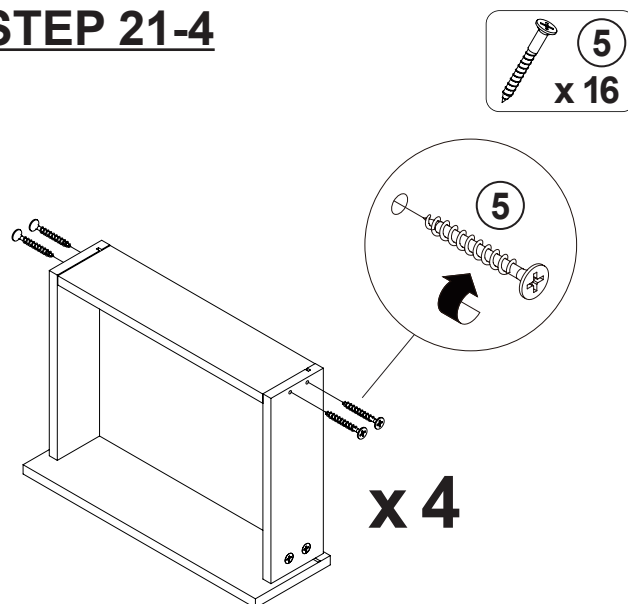


 STEP 21-5

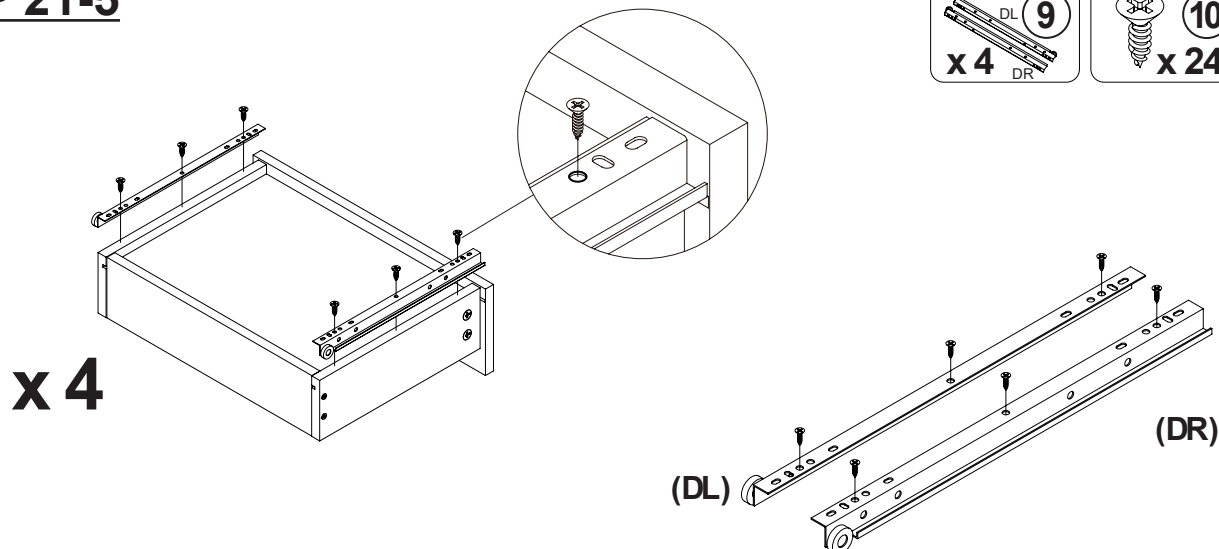


ITEM: **720223**

 
STEP 22

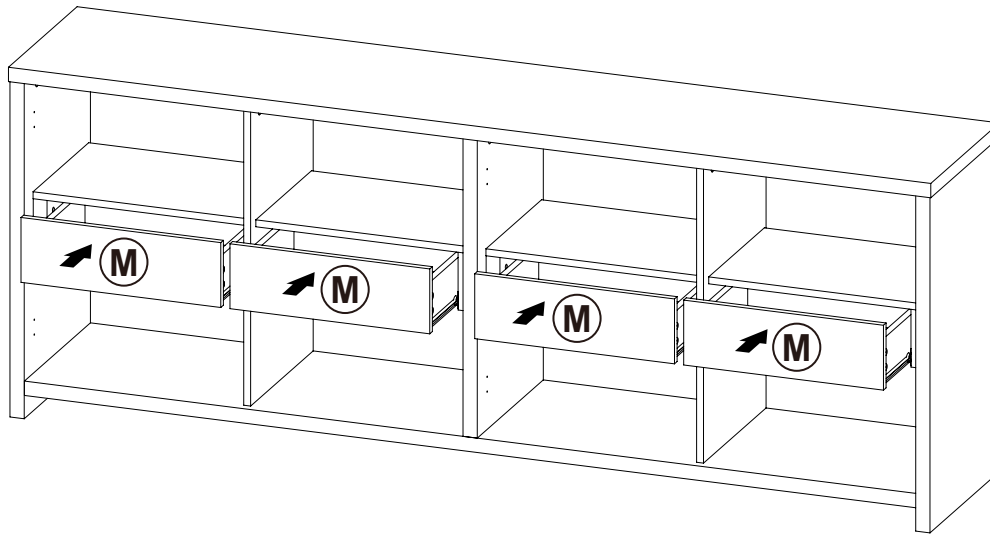

 
STEP 23

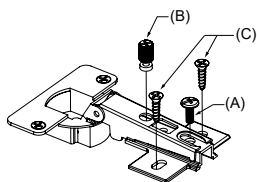



HORIZONTAL BY
SCREW A ADJUSTMENT

 


LATERAL BY
SCREW B ADJUSTMENT

 

VERTICAL BY
SCREW C ADJUSTMENT

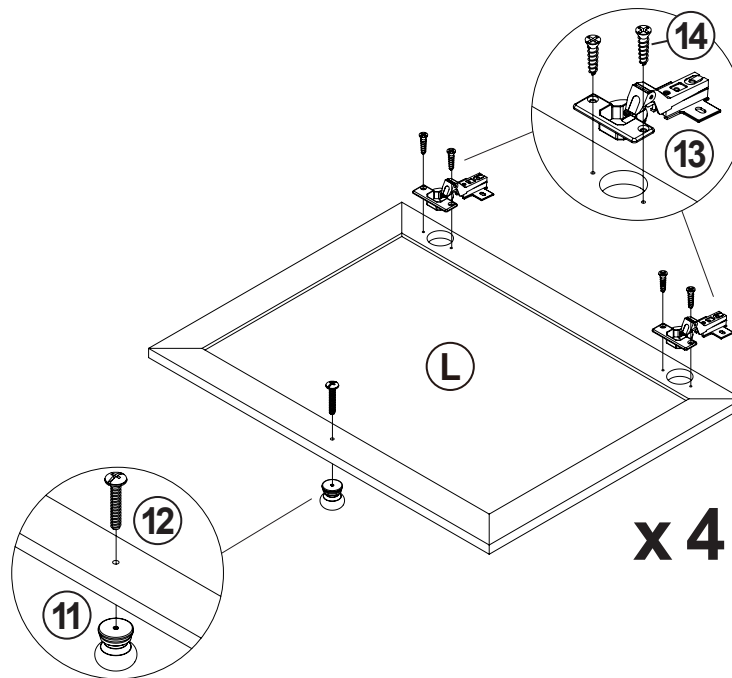  



x 4

 


ITEM: **720223**

STEP 24

  COASTER
FINE FURNITURE

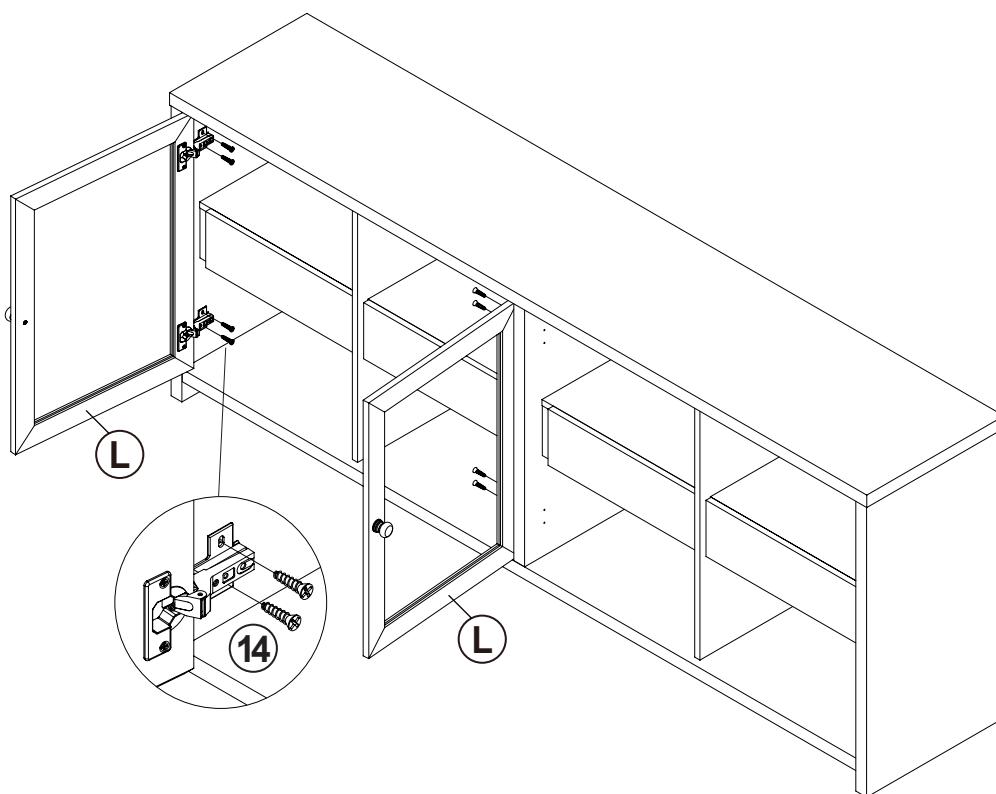



 
STEP 25

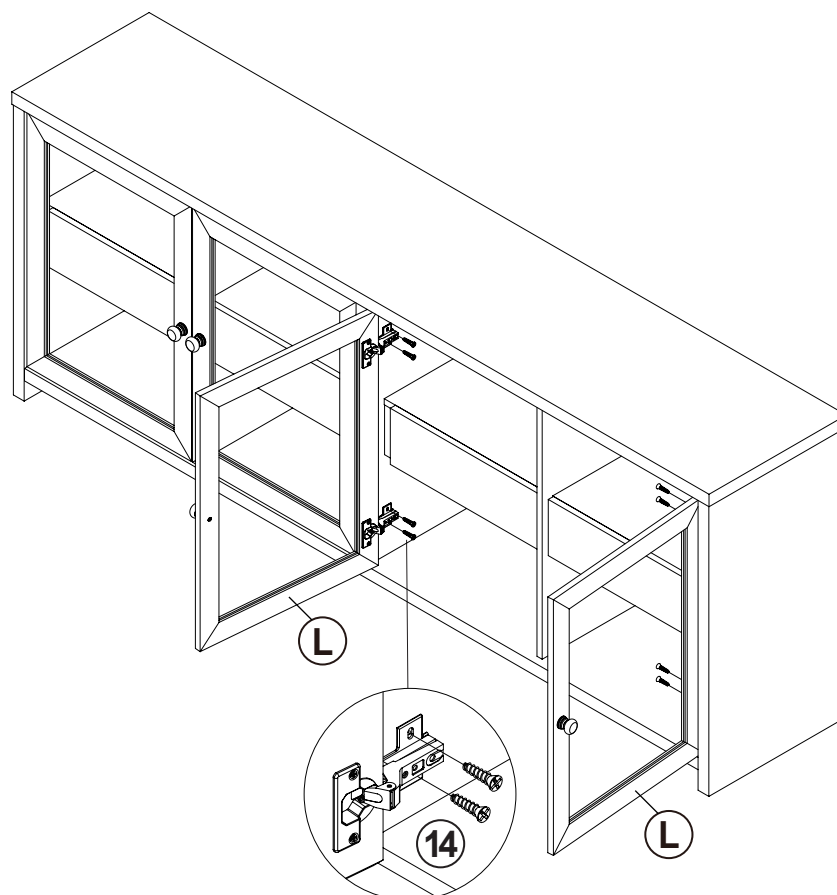




ITEM: **720223**

STEP 26

   COASTER
FINE FURNITURE

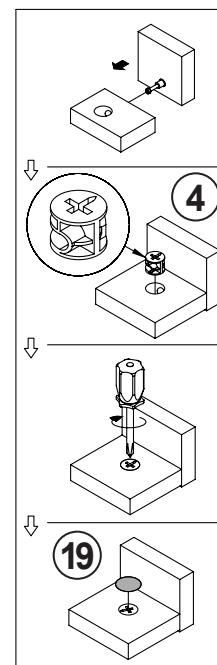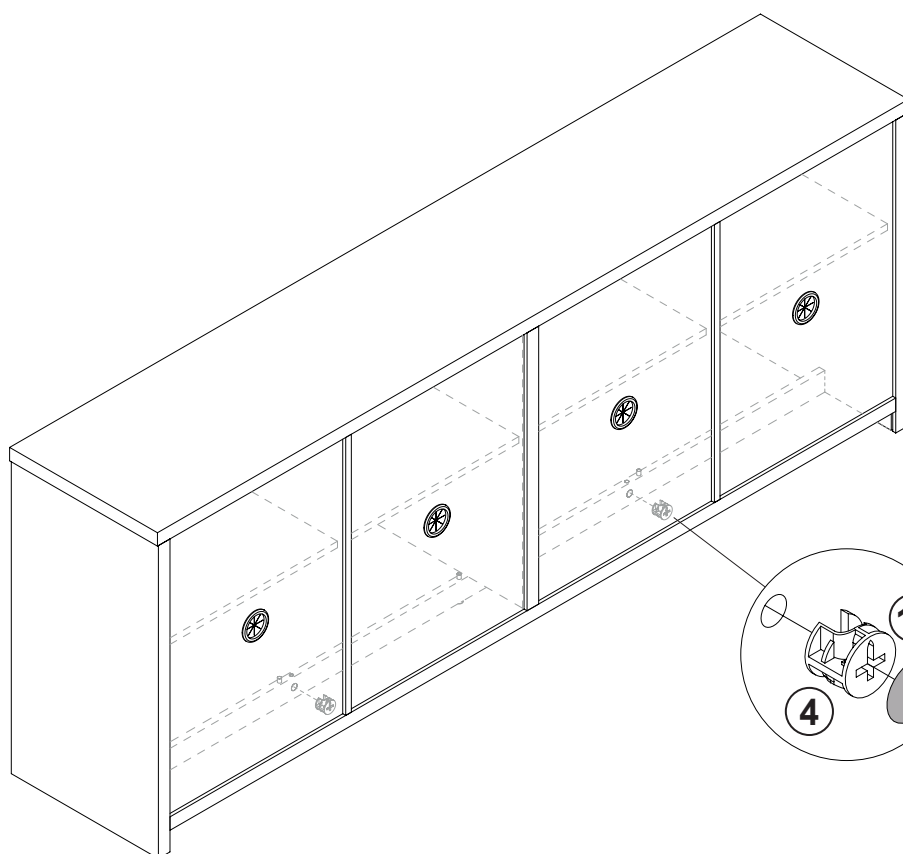

   STEP 27

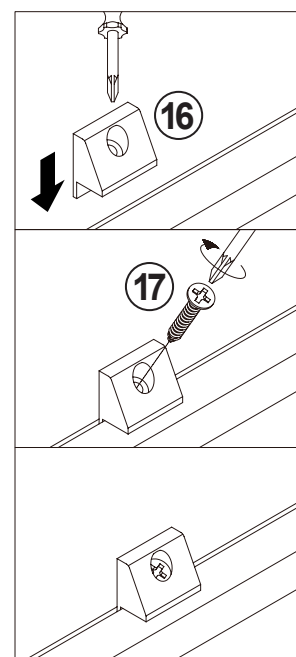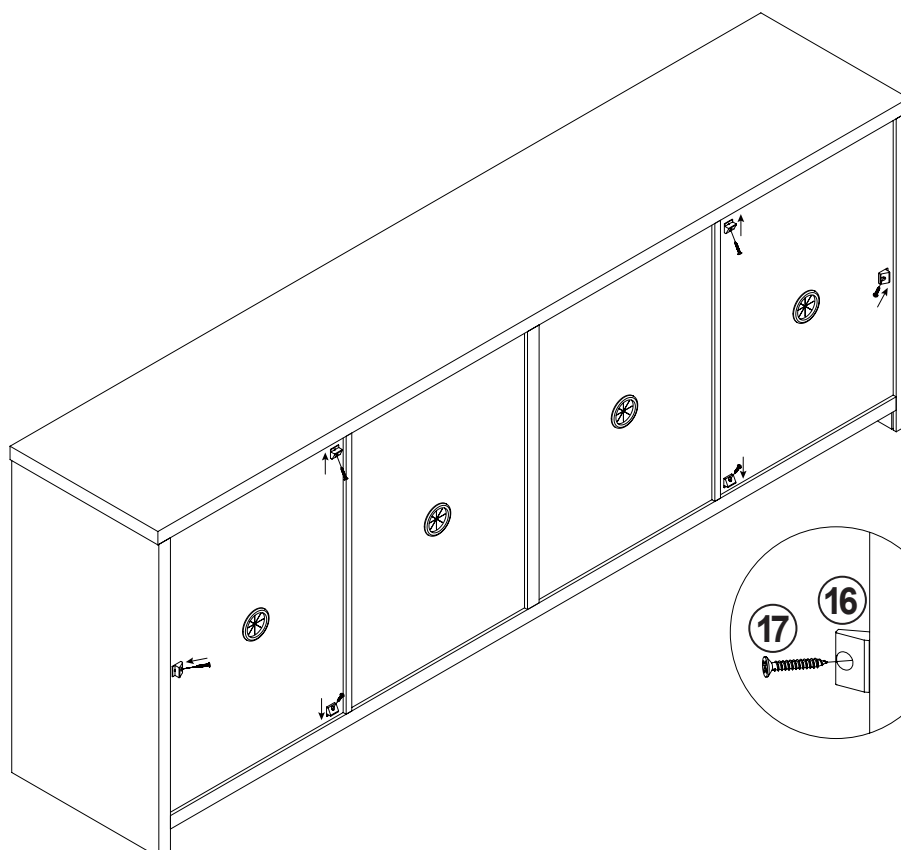



ITEM: **720223**





STEP 28

  COMPLETE

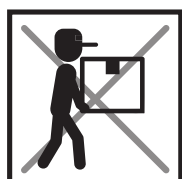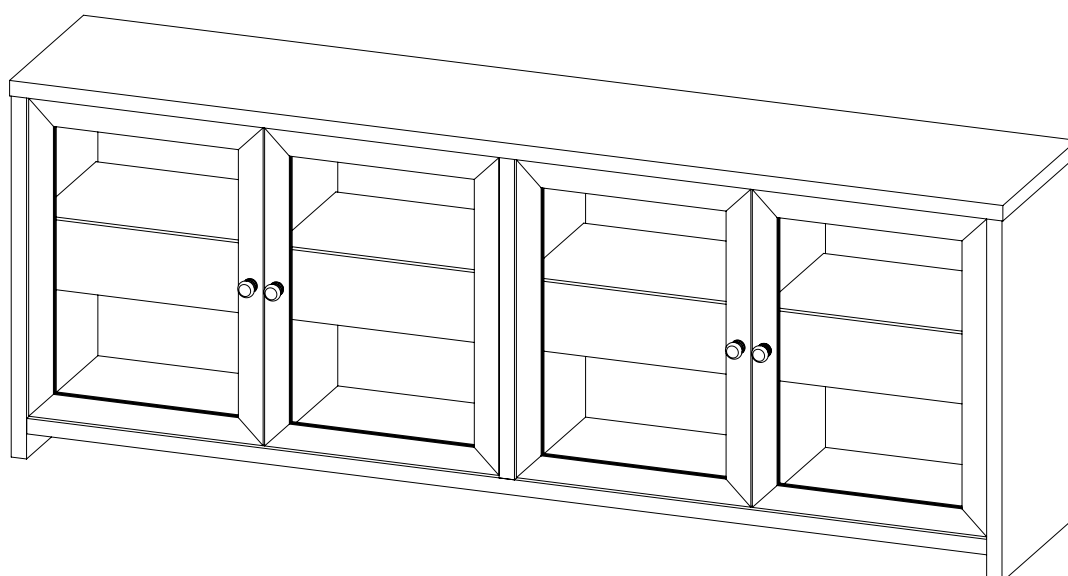

ITEM: 720223

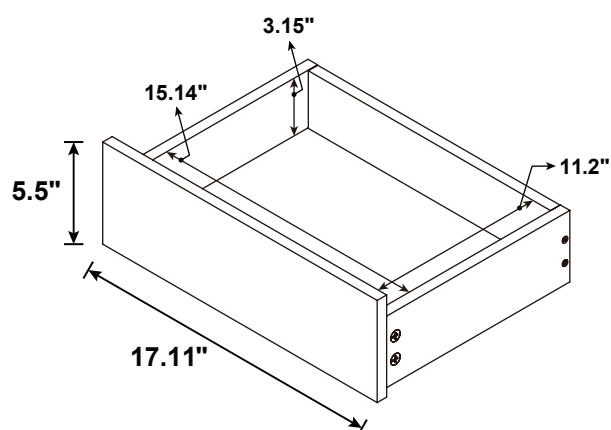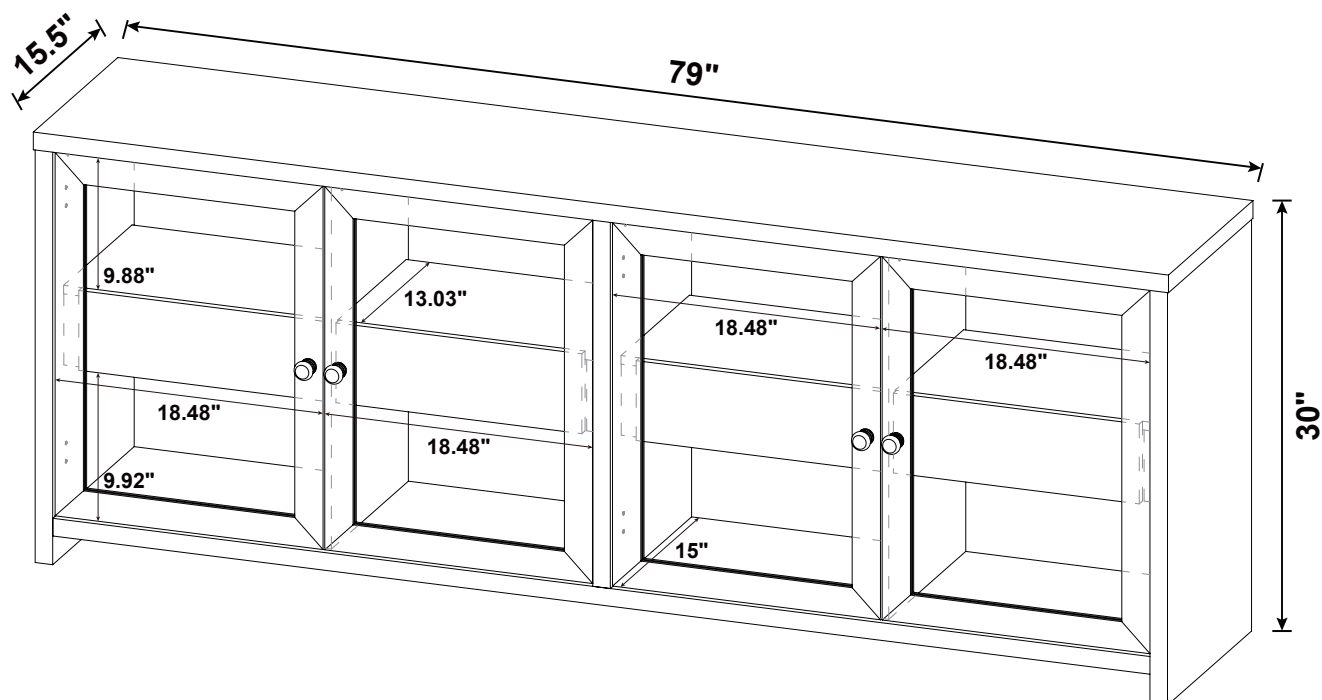  

Note : Dimension tolerance $\pm 5\%$

 
ANTI-TIPPING INSTALLMENT INSTRUCTIONS
FURNITURE TIPPING RESTRAINT**WARNING**

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture may result in injury and damage.


This restraint must be screwed to a wood stud on the wall, using the long screw provided.

STEP 1


Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

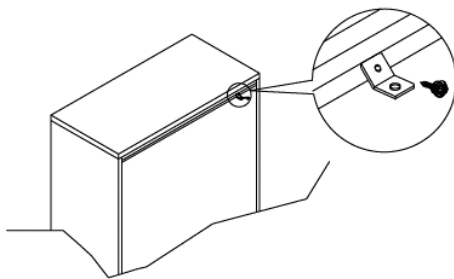**STEP 2**

 Locate the wood stud on the wall, and secure the other bracket, 2 inches below the back of the unit.

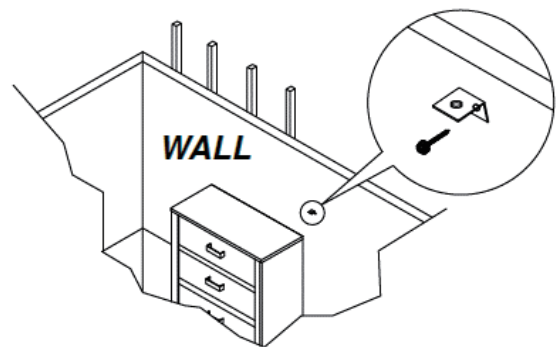**STEP 3**

 Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end, and drag it through, until the slack is removed. Ensure that the strap is securely laced and locked.

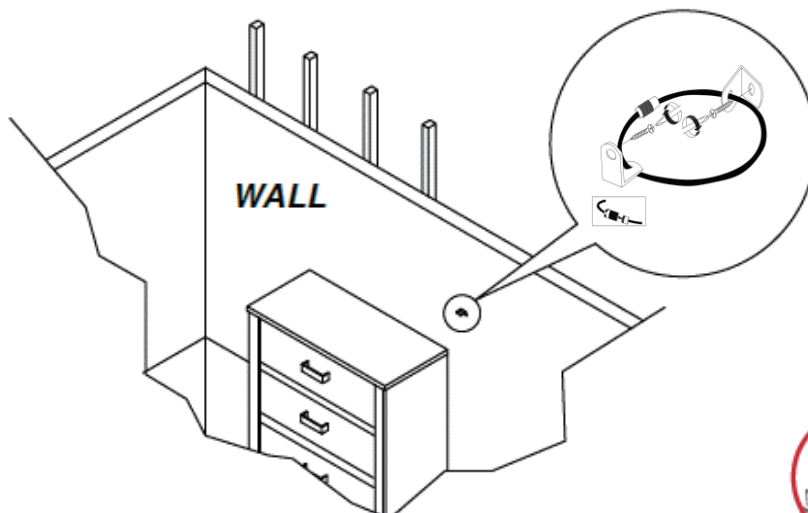

*ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE*



Fine Furniture for every stage of life

720224
MEDIA TOWER

ITEM:720224

ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!




















1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

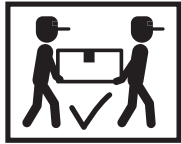

ASSEMBLY TIME

60 MINUTES

                   PARTS IDENTIFICATION

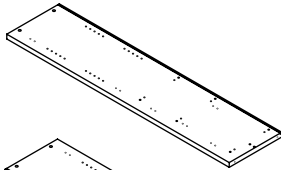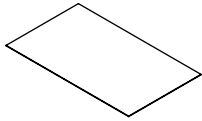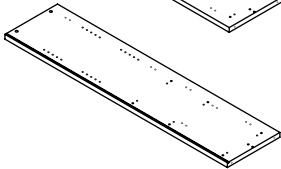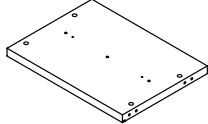
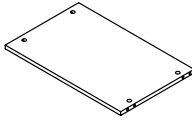
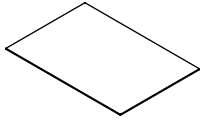
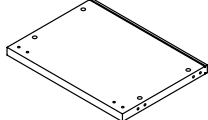
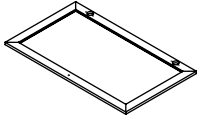
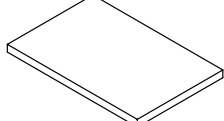

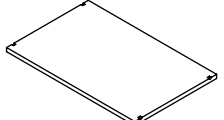
A	LEFT SIDE PANEL		1 PC	K	UPPER BACK PANEL		1 PC
B	RIGHT SIDE PANEL		1 PC	L	LOWER BACK PANEL		1 PC
C	LEFT SMALL DIVIDER PANEL		1 PC	M	DRAWER FRONT PANEL		1 PC
D	RIGHT SMALL DIVIDER PANEL		1 PC	N	DRAWER BACK PANEL		1 PC
E	LOWER FRONT TOP BAR		1 PC	O	DRAWER LEFT SIDE PANEL		1 PC
F	BOTTOM PANEL		1 PC	P	DRAWER RIGHT SIDE PANEL		1 PC
G	CROSS PANEL		1 PC	Q	DRAWER BOTTOM PANEL		1 PC
H	MIDDLE PANEL		1 PC	R	UPPER GLASS DOOR		1 PC
I	TOP PANEL		1 PC	S	LOWER GLASS DOOR		1 PC
J	ADJUSTABLE SHELF		2 PCS				

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:720224

        HARDWARE IDENTIFICATION

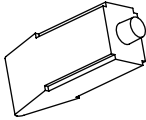Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	11	HANDLE		2 PCS
2	WOODEN DOWEL Ø8 x 30mm		23 PCS	12	HANDLE BOLT BLK		2 PCS
3	CAM BOLT Ø7 x 35.5mm SR		22 PCS	13	HINGE Ø35mm SR		4 PCS
4	CAM LOCK Ø15 x 12mm SR		22 PCS	14	HINGE SCREW Ø4x15mm SR		16 PCS
5	SCREW Ø 4.3x35mm SR		12 PCS	15	PLASTIC COVER Ø 52mm		1 PC
6	PLASTIC FEET Ø15mm		4 PCS	16	BACK PANEL SUPPORT		6 PCS
7	PIN FOR ADJUSTABLE SHELF Ø4.9x15mm SR		8 PCS	17	BACK PANEL SUPPORT SCREW Ø3 x 19mm SR		6 PCS
8	DOOR CATCH		4 PCS	18	STICKER-BK Ø20mm		4 PCS
9	RAIL L = 300mm BLK		1 PCS	19	STICKER Ø20mm		2 PCS
10	SCREW Ø3x12mm BLK		12 PCS				

 
Z9, Z11, Z13, Z15 not included in blister packaging.

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **720224**

STEP 1

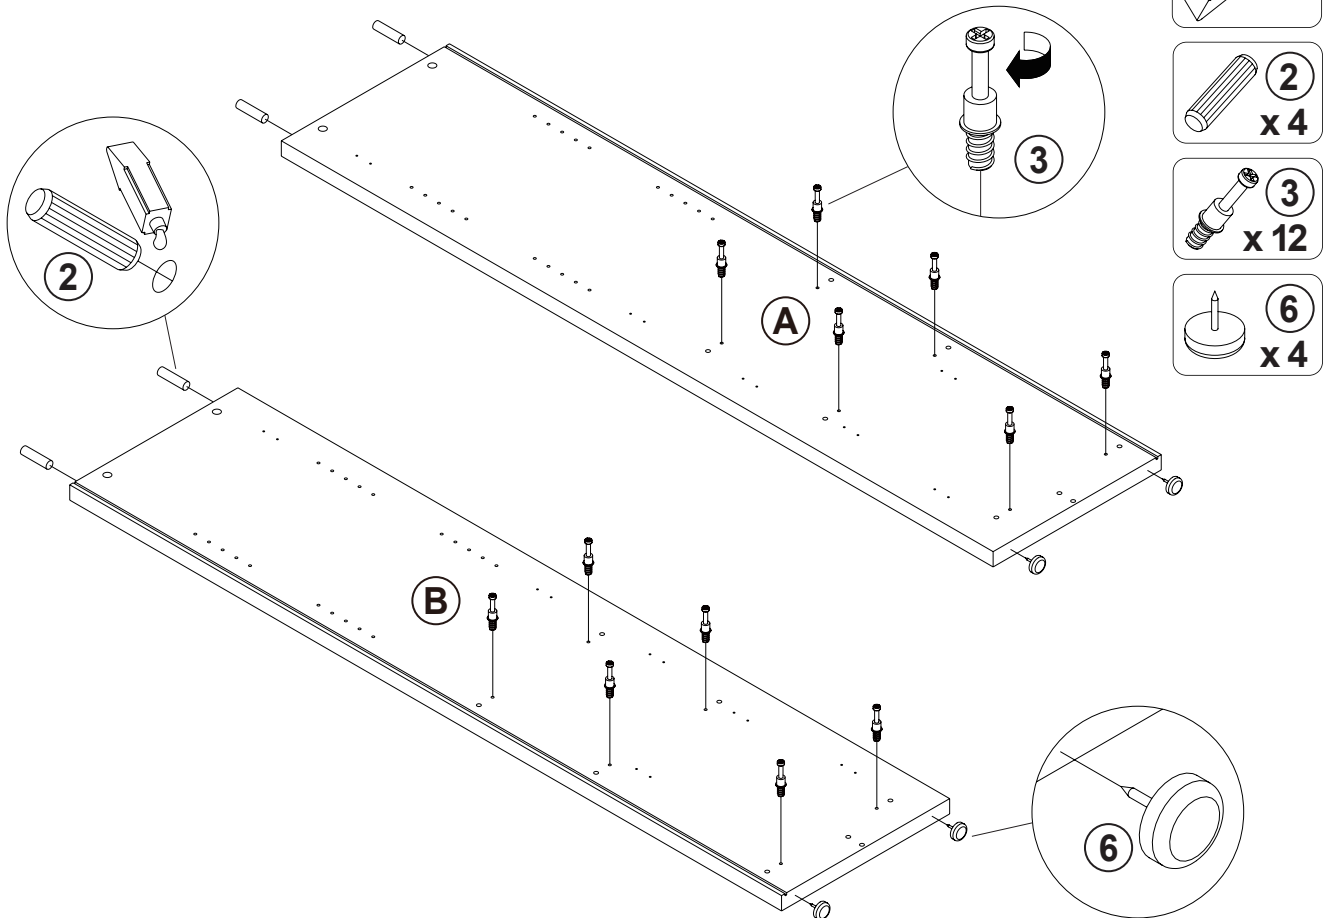


 STEP 2

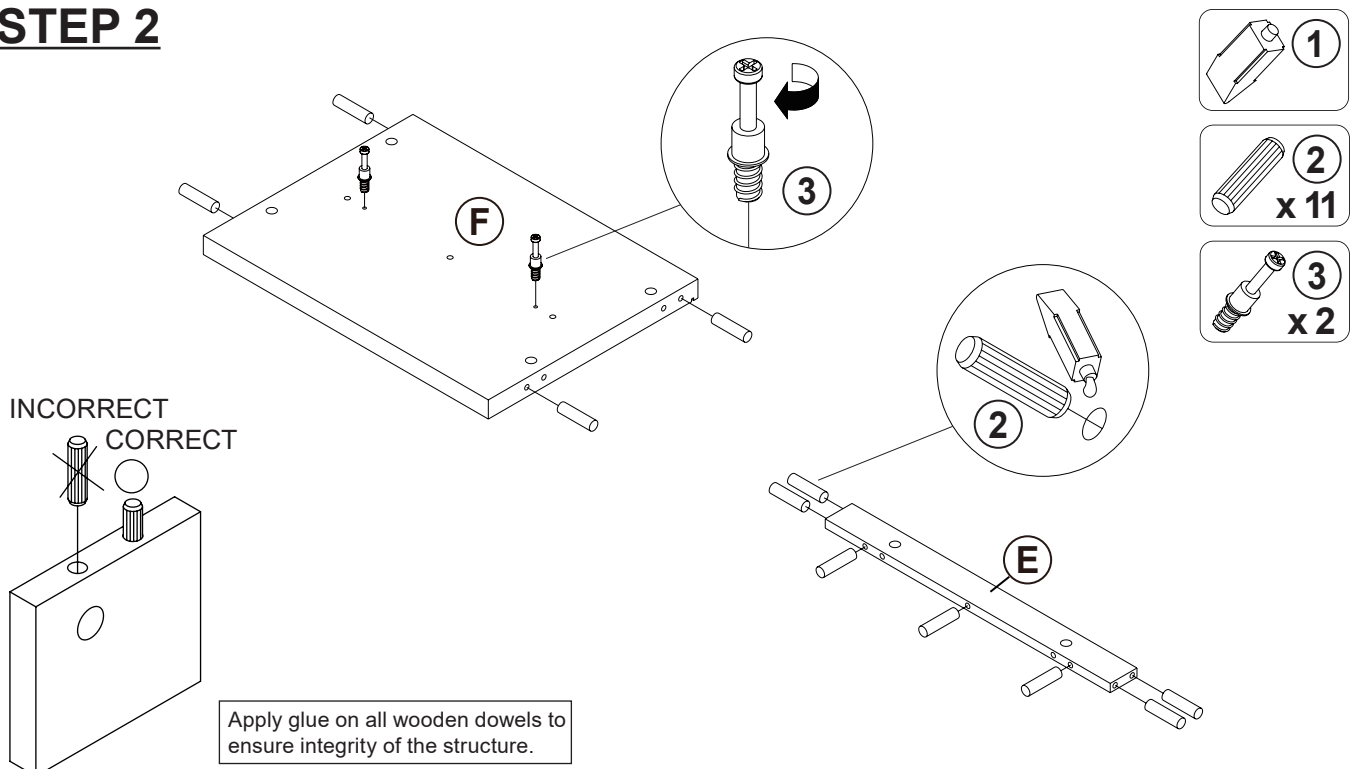


ITEM: **720224**

 STEP 3

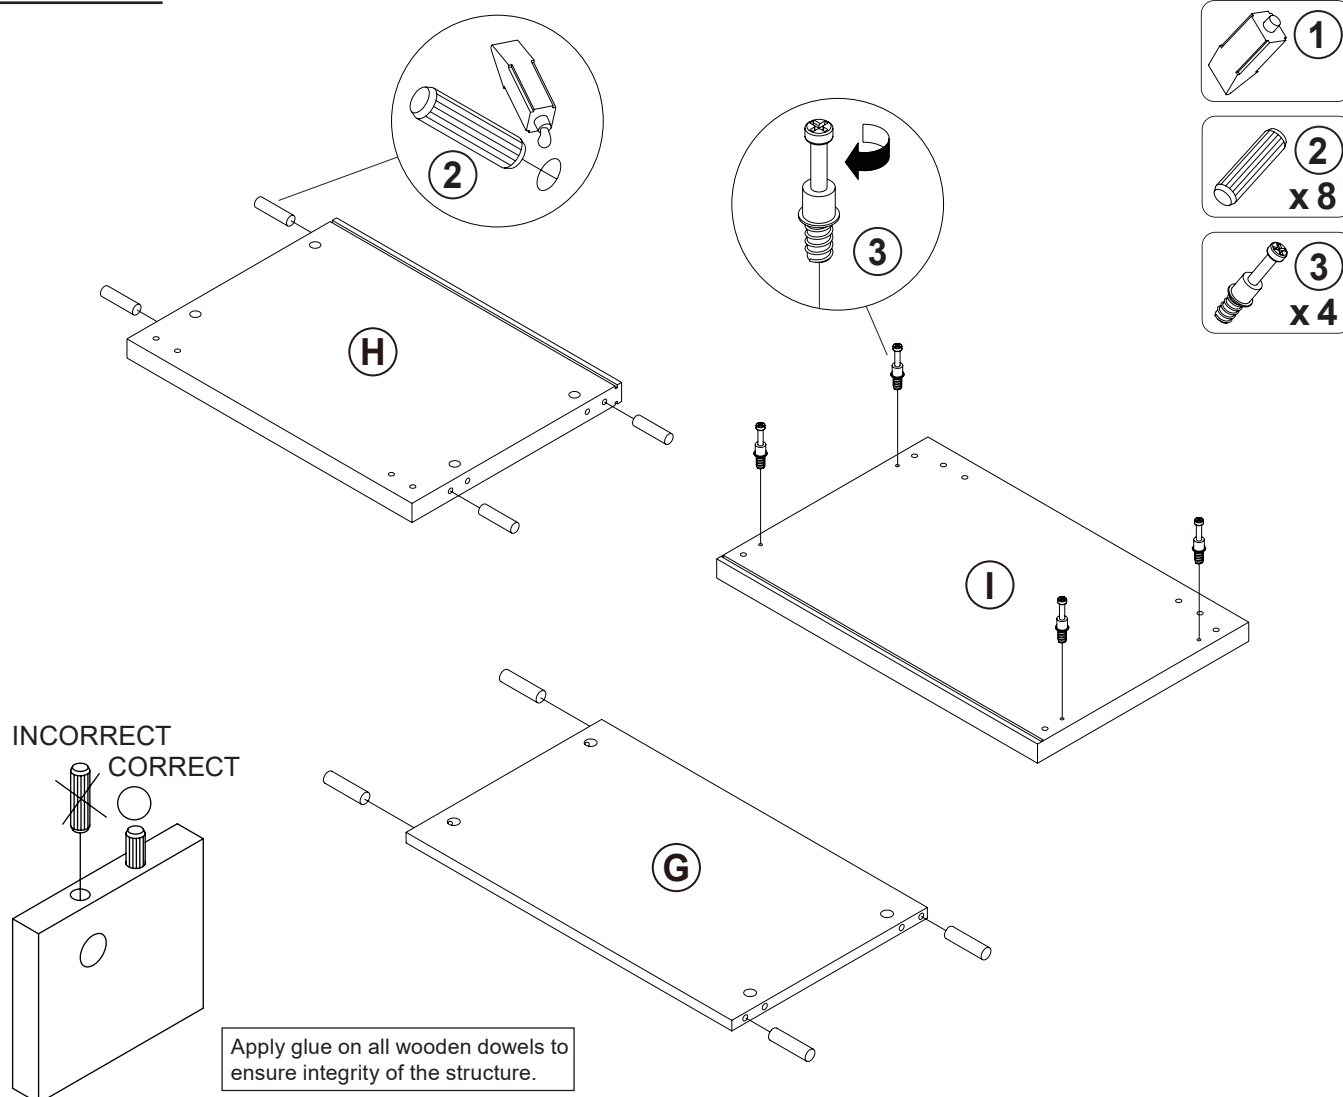


 
STEP 4

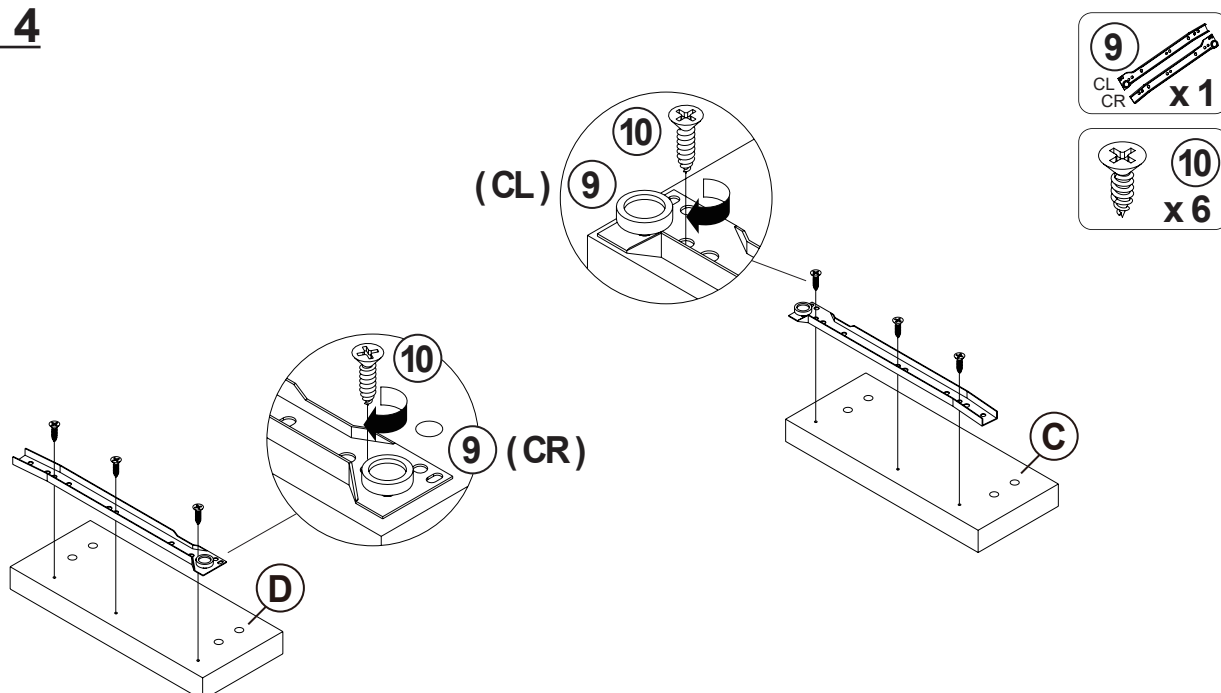



ITEM: **720224**

STEP 5

  COASTER
FINE FURNITURE

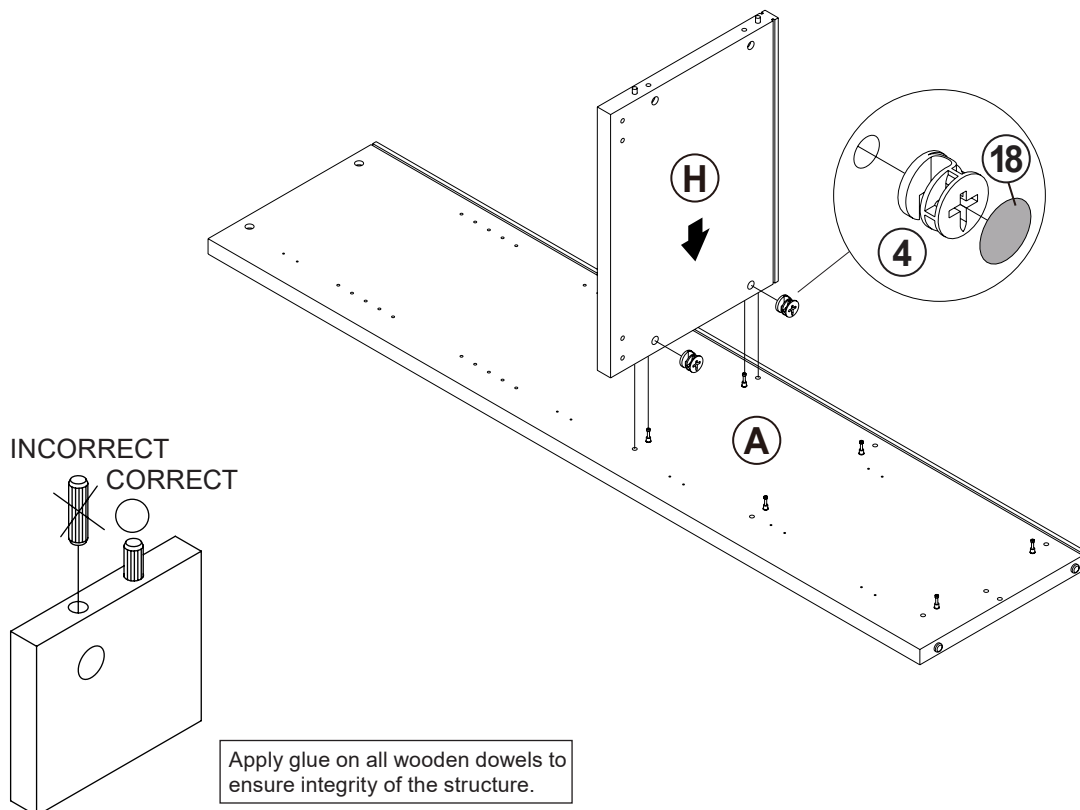

  STEP 6

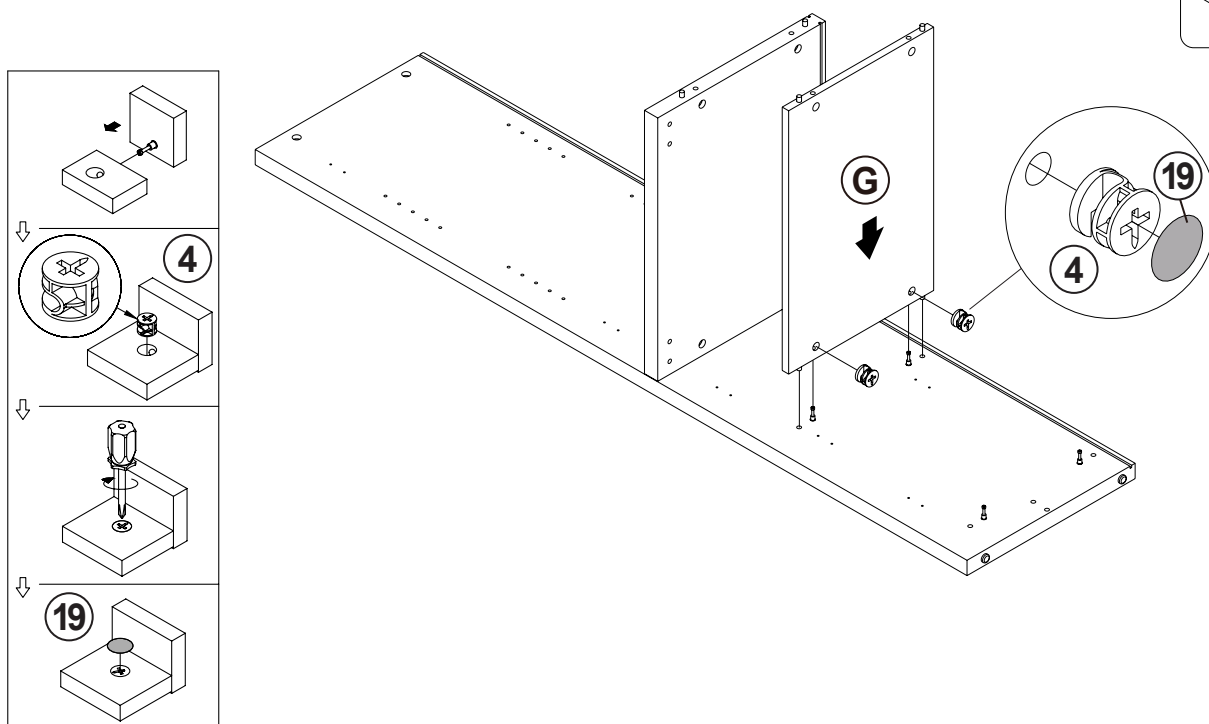


ITEM: **720224**


STEP 7







 
INCORRECT
CORRECT

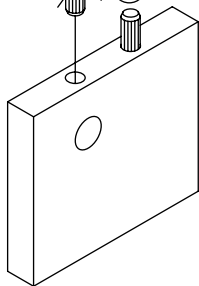


 
Apply glue on all wooden dowels to ensure integrity of the structure.

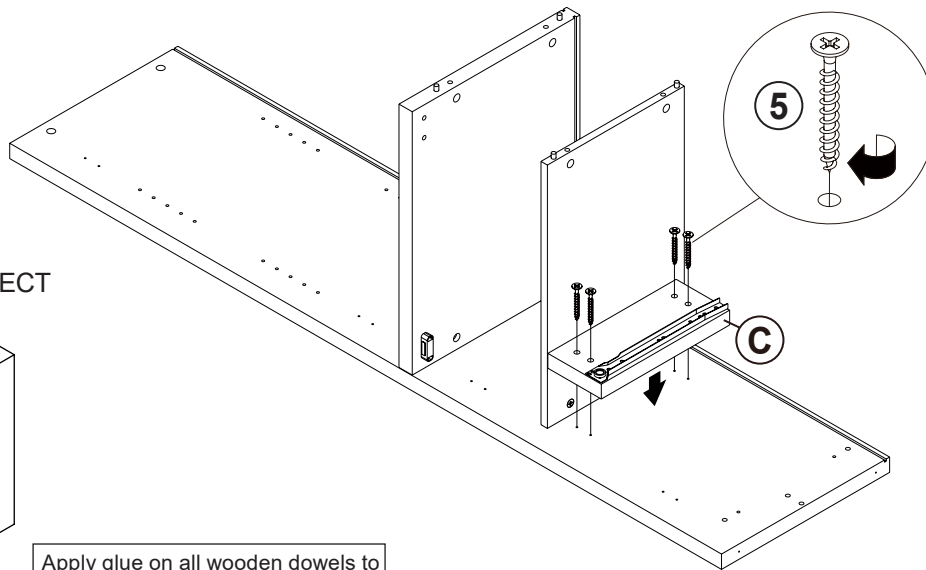

     STEP 8

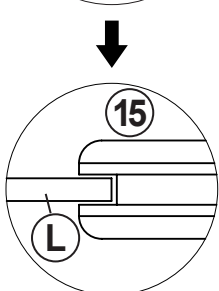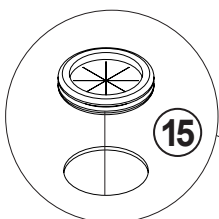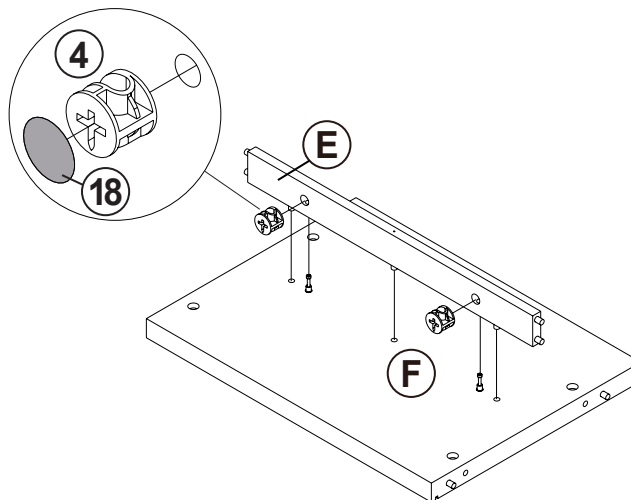




Section

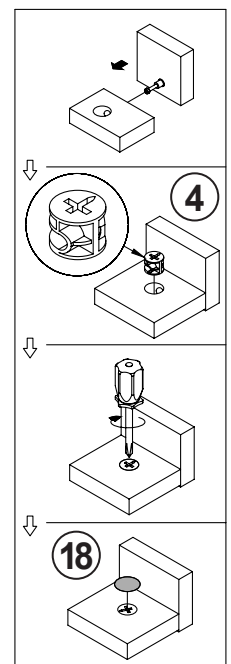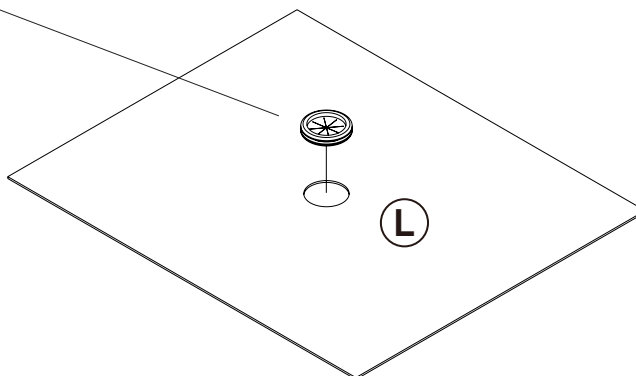  


ITEM: **720224**

STEP 9

   COASTER
FINE FURNITURE

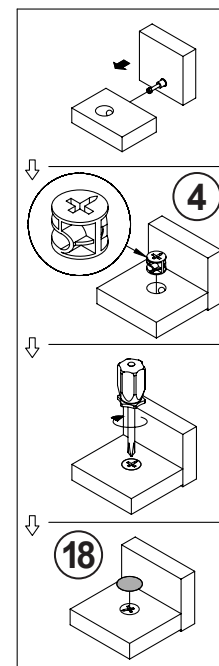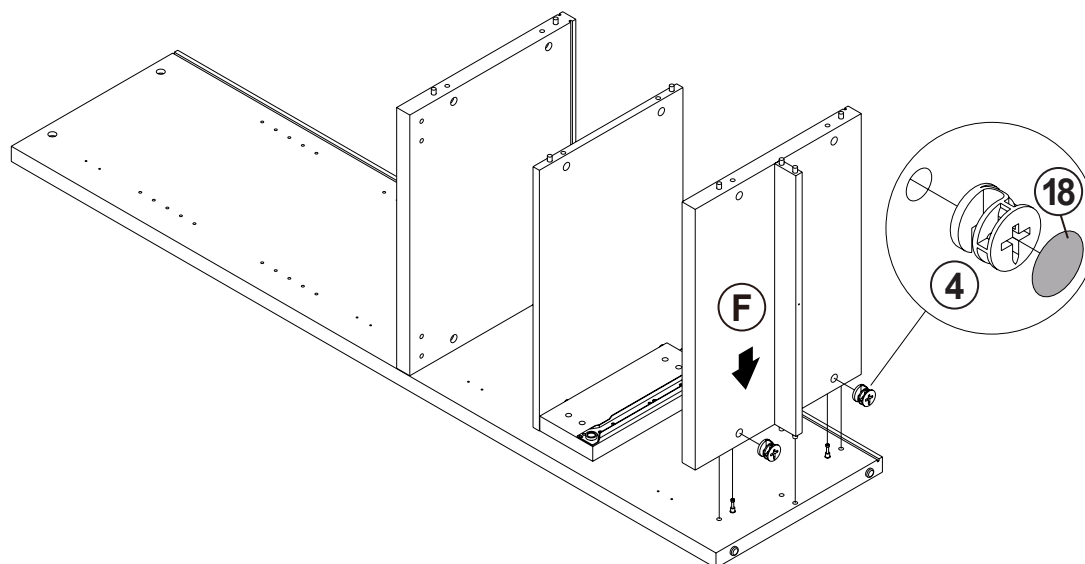

 
STEP 10

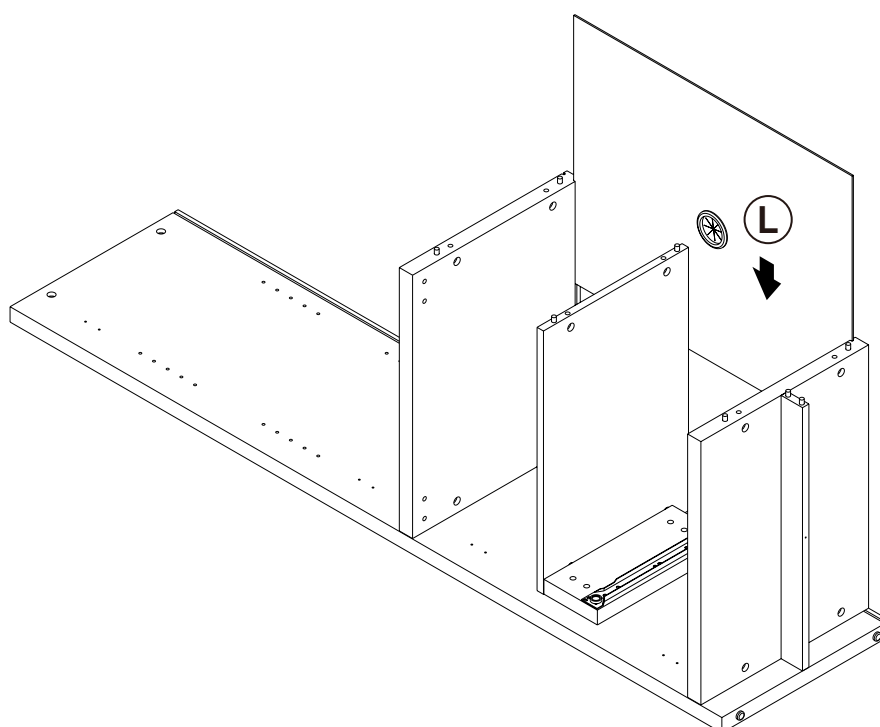


ITEM: **720224**

COASTER
FINE FURNITURE

 STEP 11

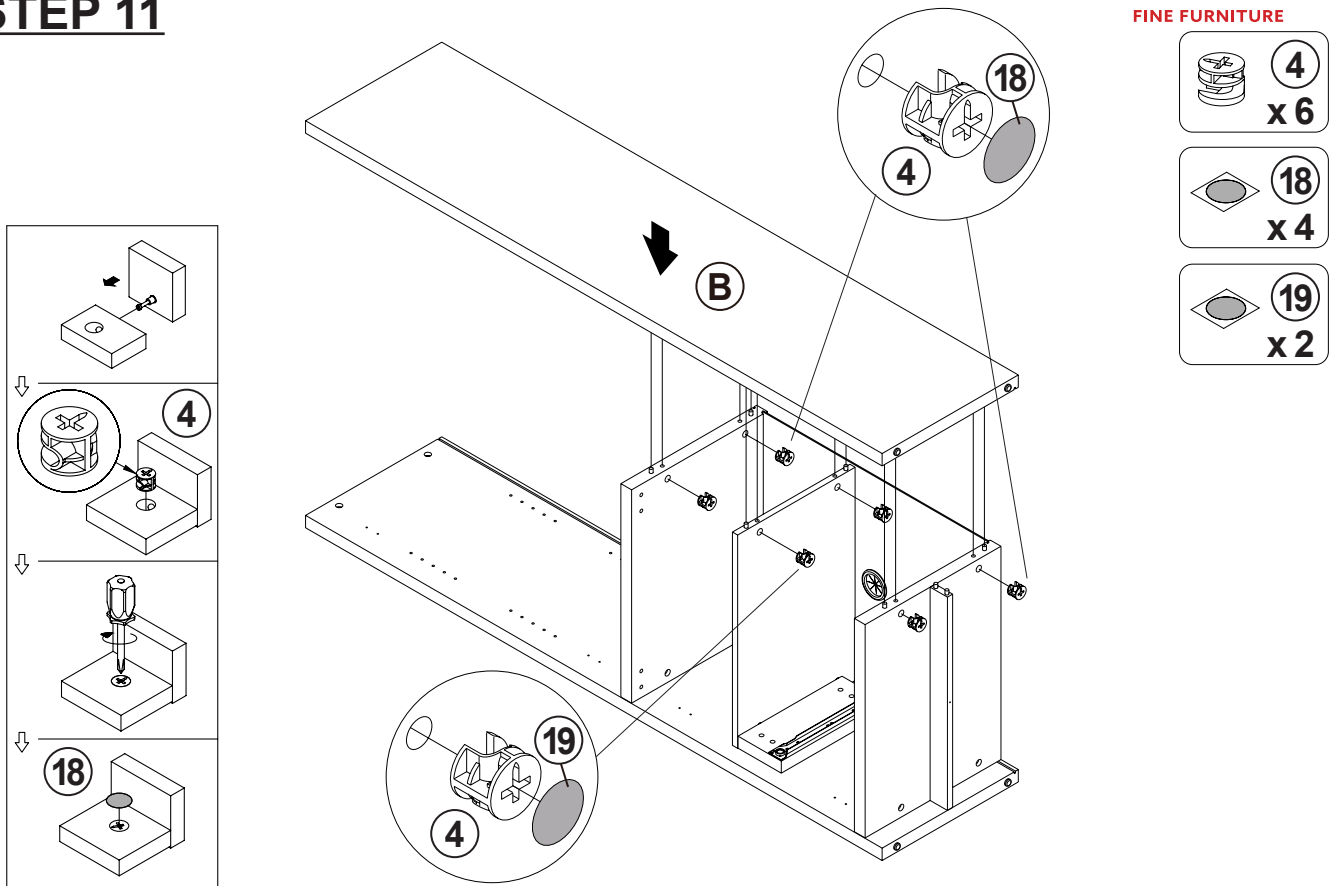


 
STEP 12

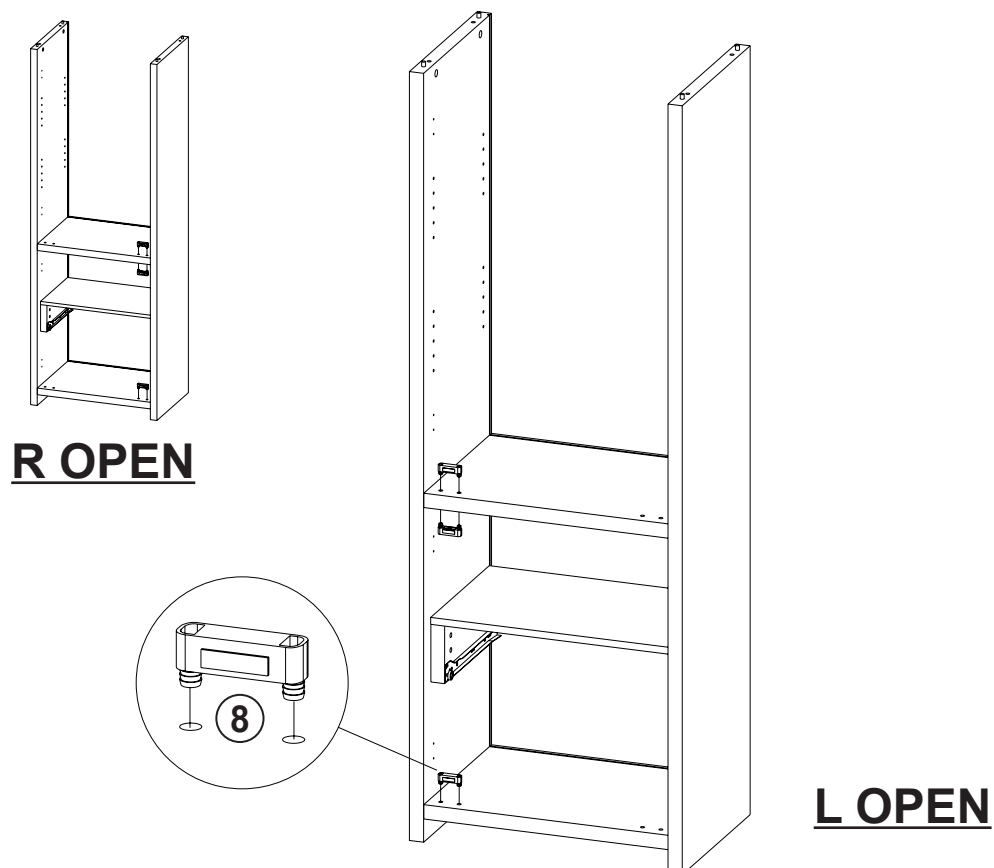


ITEM: **720224**

STEP 13

  COASTER
FINE FURNITURE

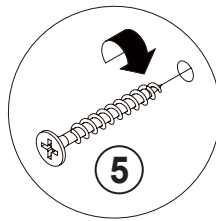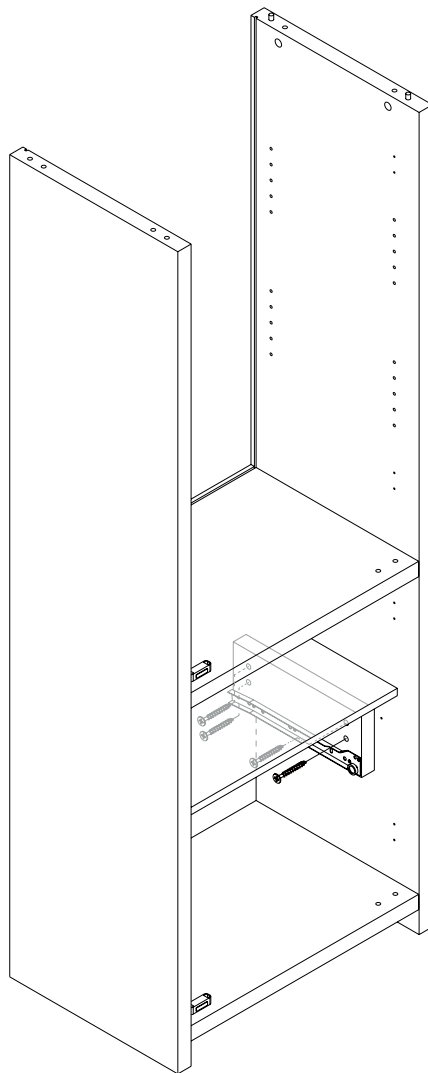




 
STEP 14

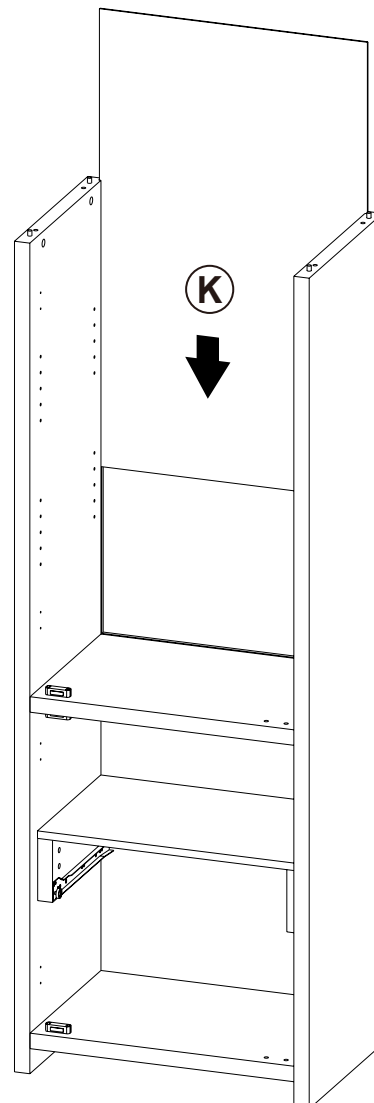


ITEM: **720224**

STEP 15

  
 
 
COASTER
FINE FURNITURE

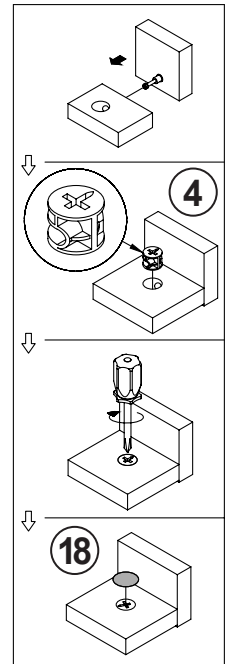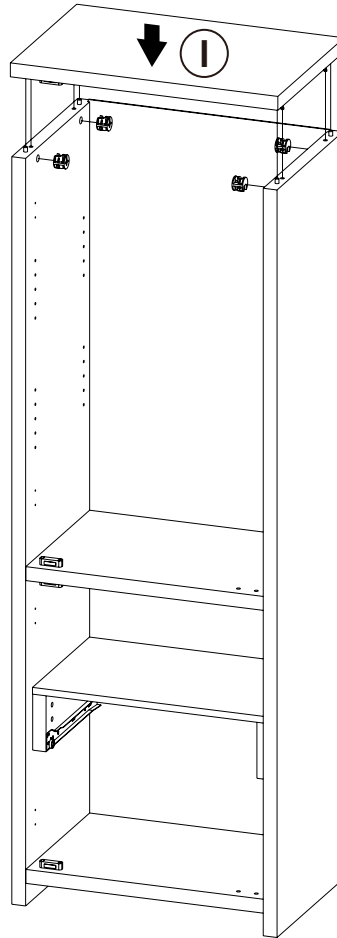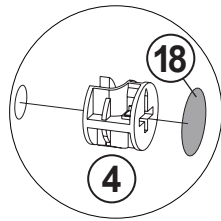

 STEP 16

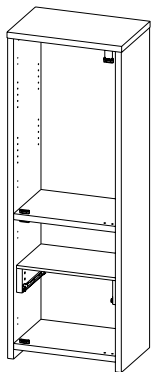

R OPEN

 
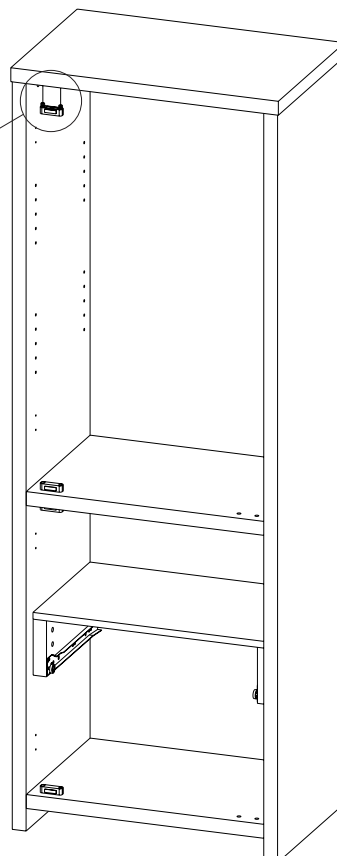 
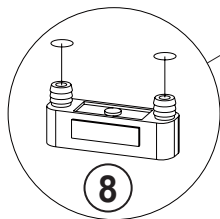 


L OPEN


ITEM: **720224**

STEP 17

   COASTER
FINE FURNITURE

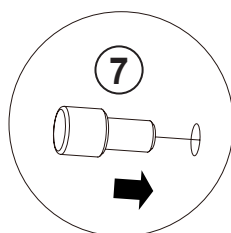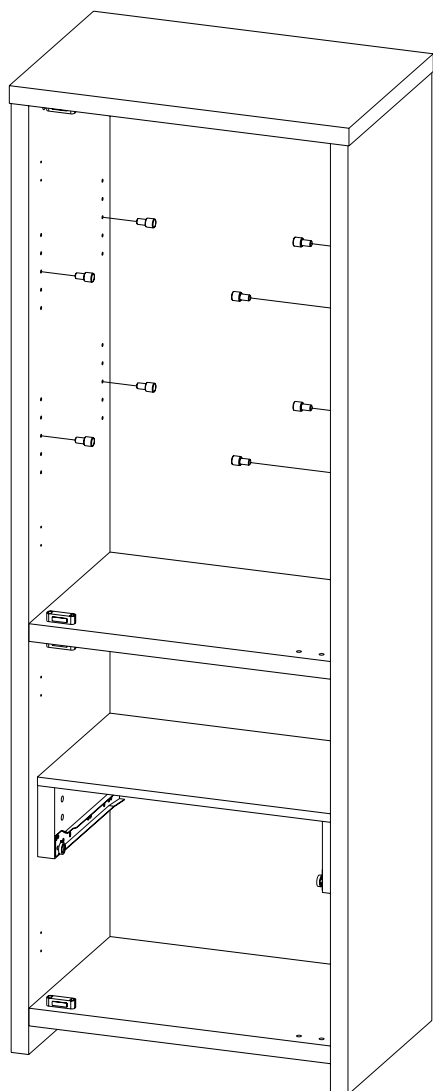


 STEP 18

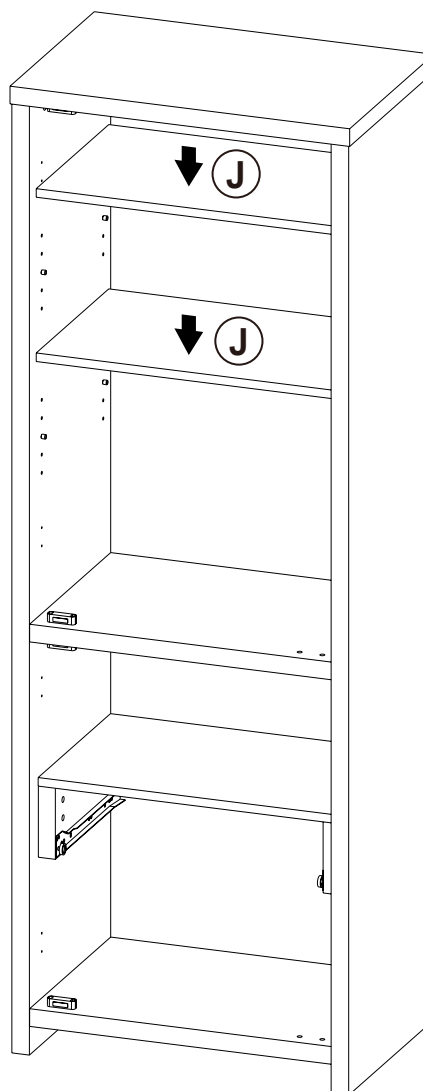


ITEM: 720224

 
STEP 19-1

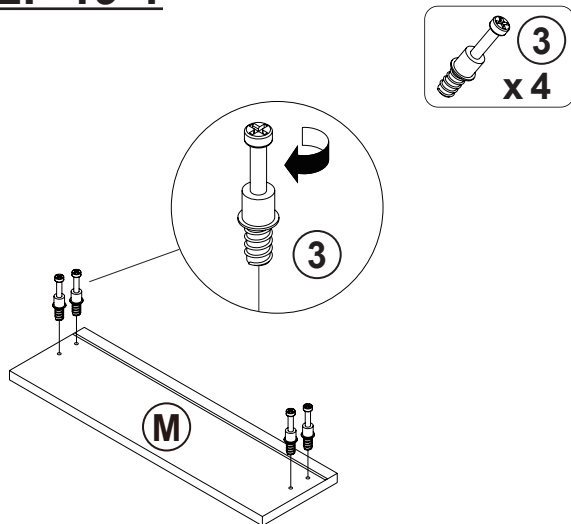

 
STEP 19-2

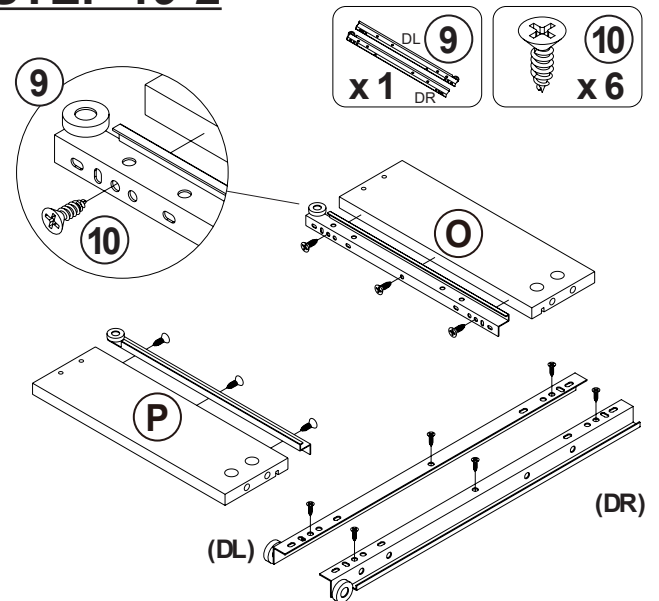

 
STEP 19-3

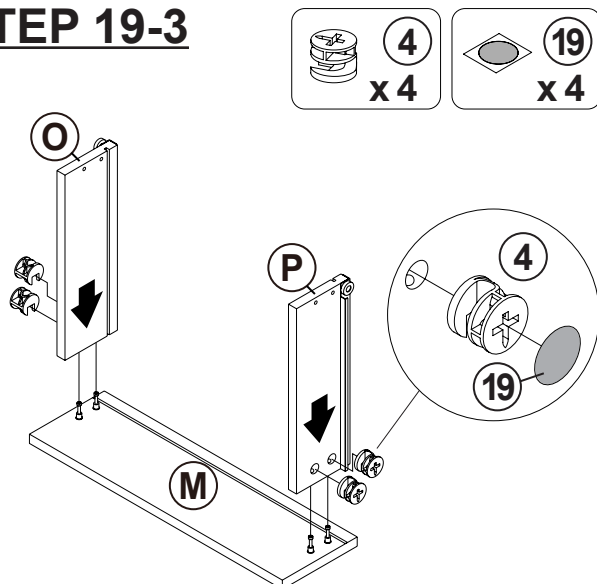

 STEP 19-4

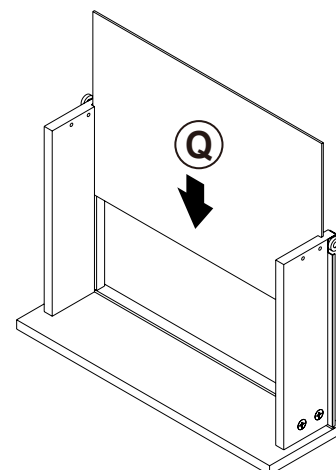


 STEP 19-5

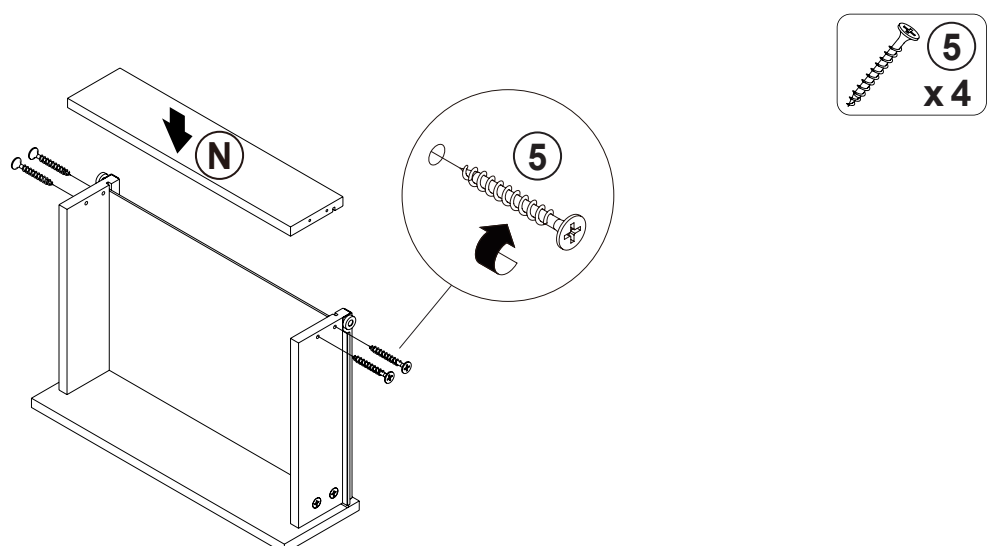


ITEM: **720224**

 
STEP 20

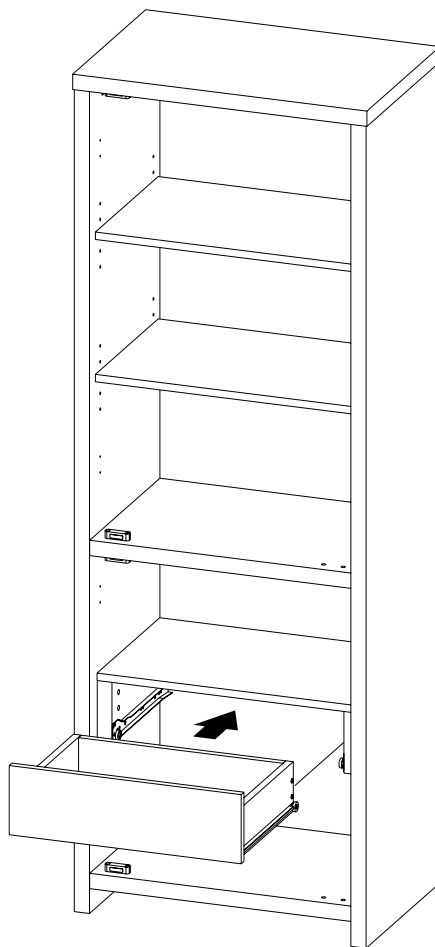

 
STEP 21

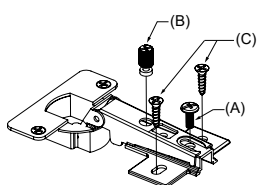



HORIZONTAL BY
SCREW A ADJUSTMENT

 


LATERAL BY
SCREW B ADJUSTMENT

 



VERTICAL BY
SCREW C ADJUSTMENT

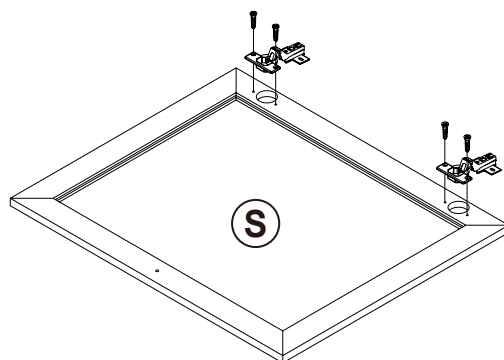  

S

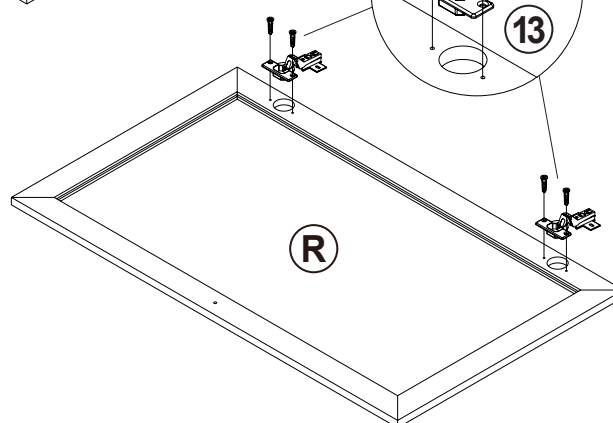 


R

  


ITEM: **720224**

COASTER
FINE FURNITURE

 STEP 22

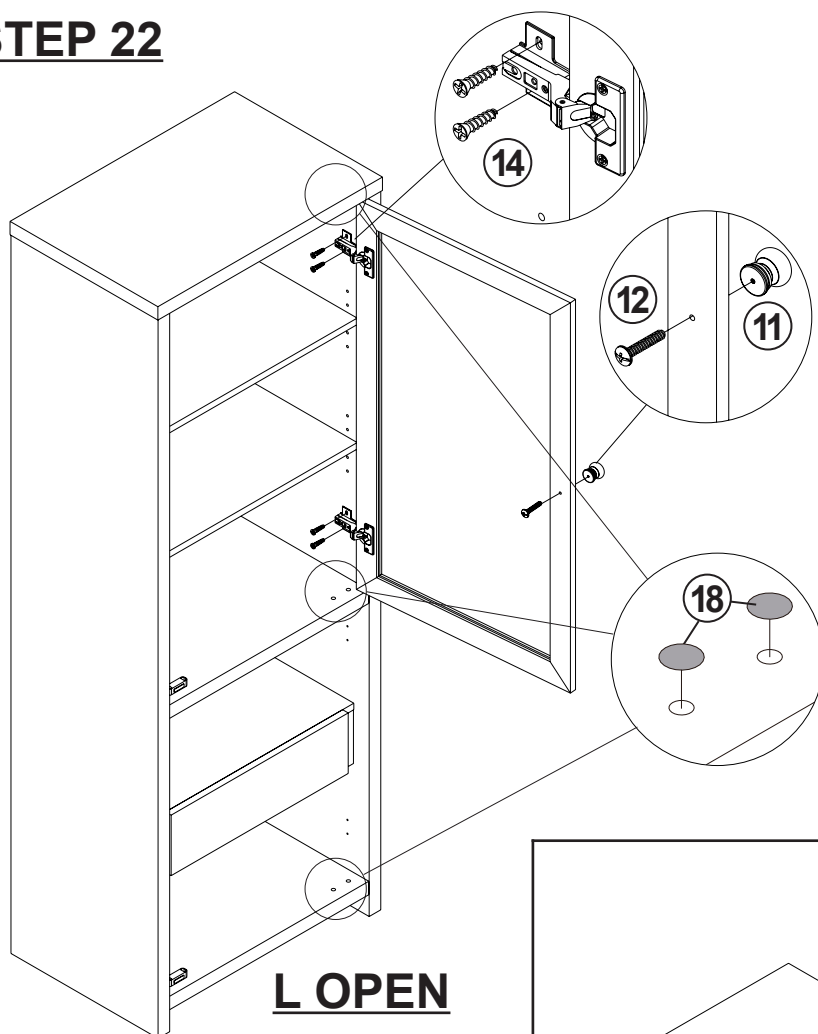




 
STEP 23

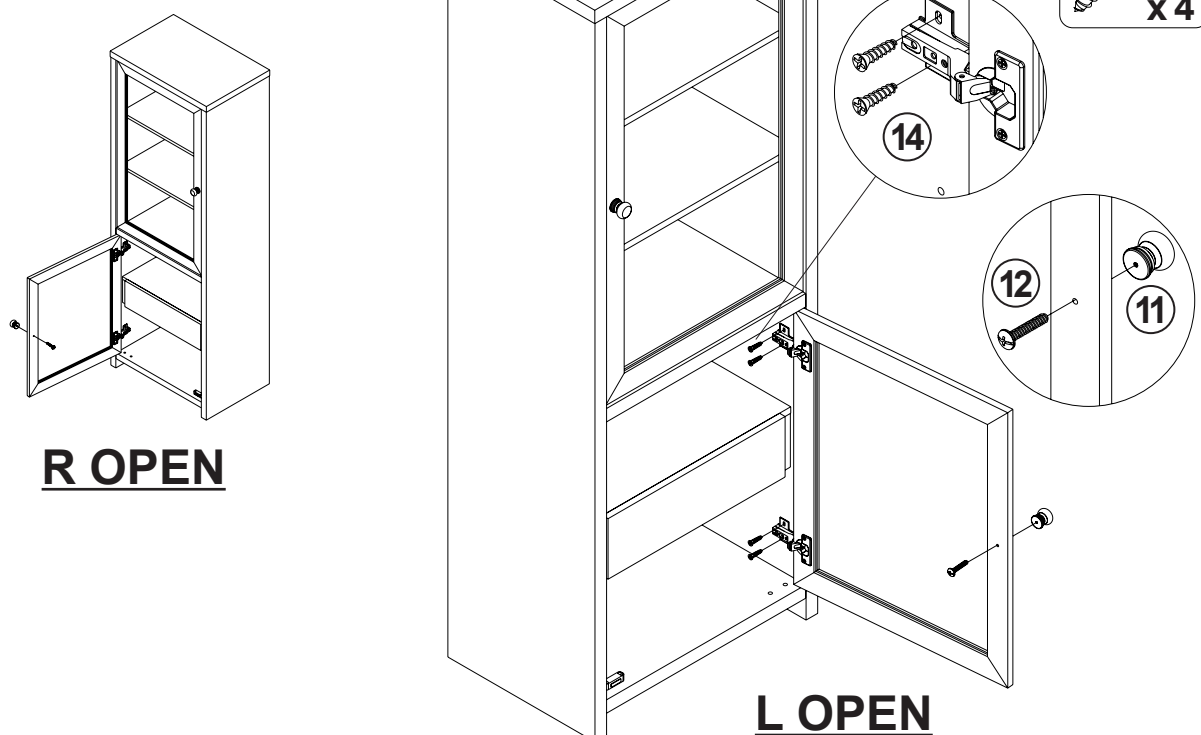

ITEM: **720224**

STEP 24

    COASTER
FINE FURNITURE

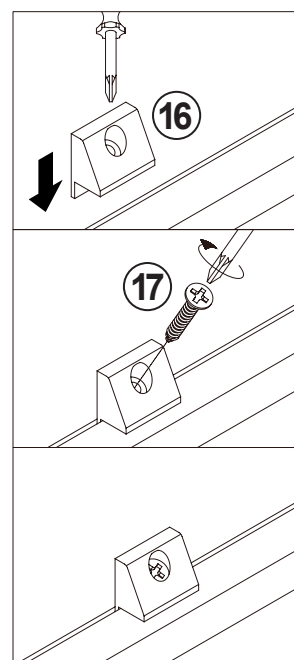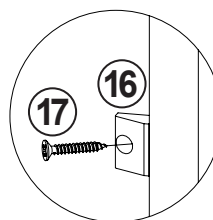
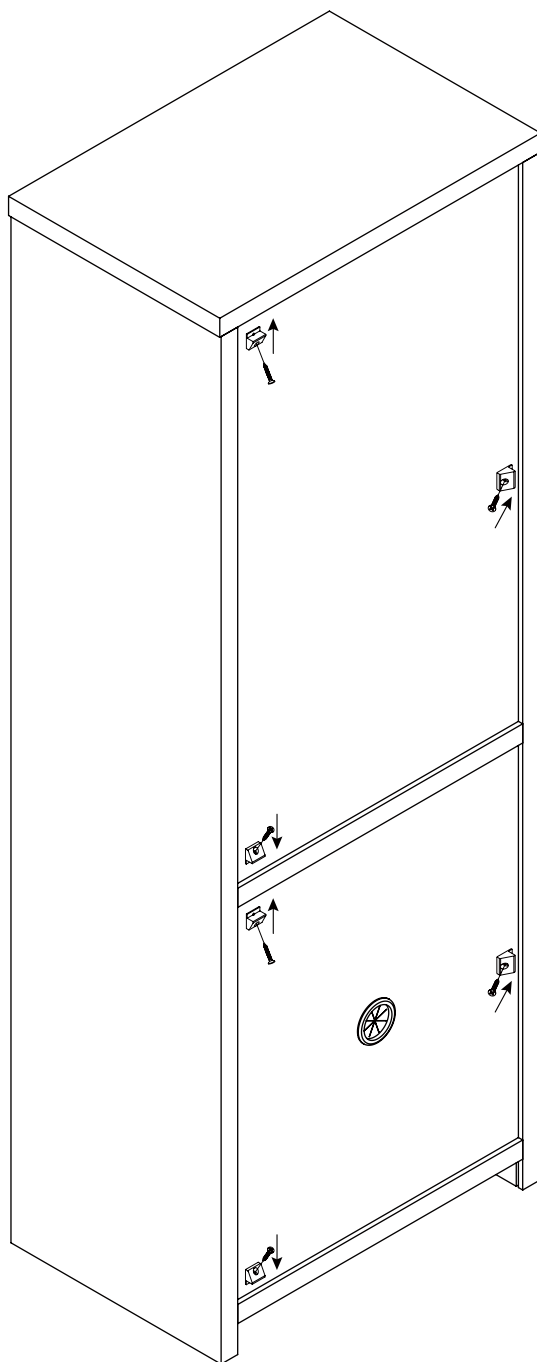



ITEM: **720224**

STEP 25


COMPLETE

   COASTER
FINE FURNITURE

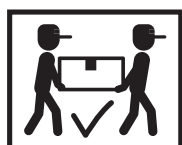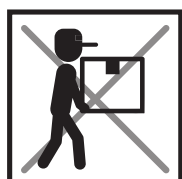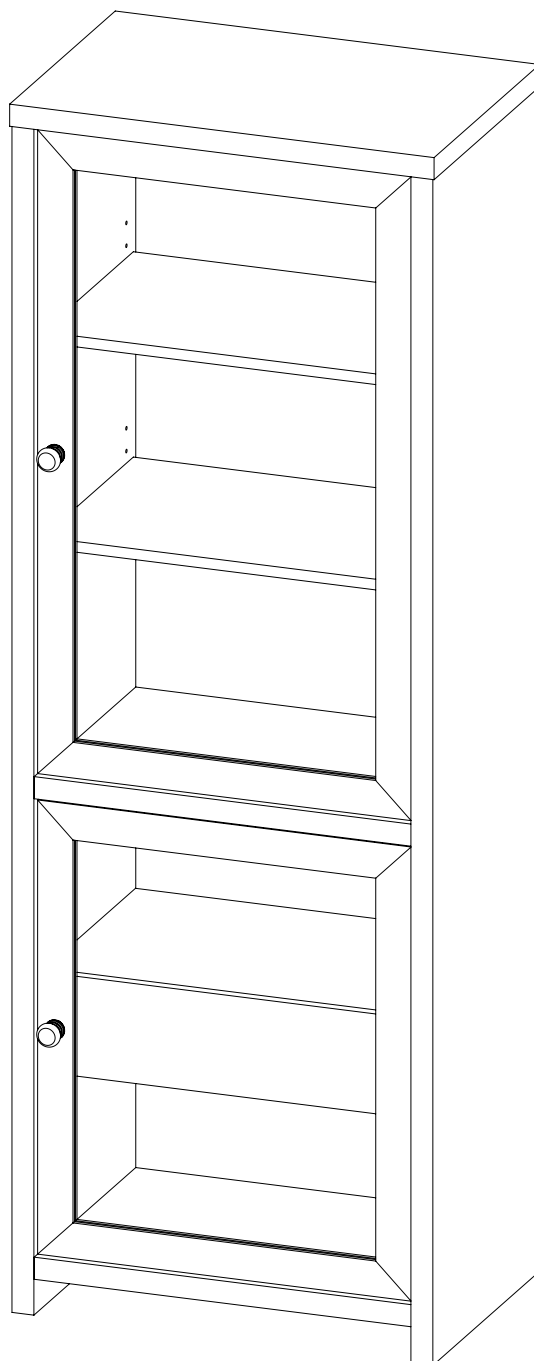

ITEM: 720224

 COASTER
FINE FURNITURE

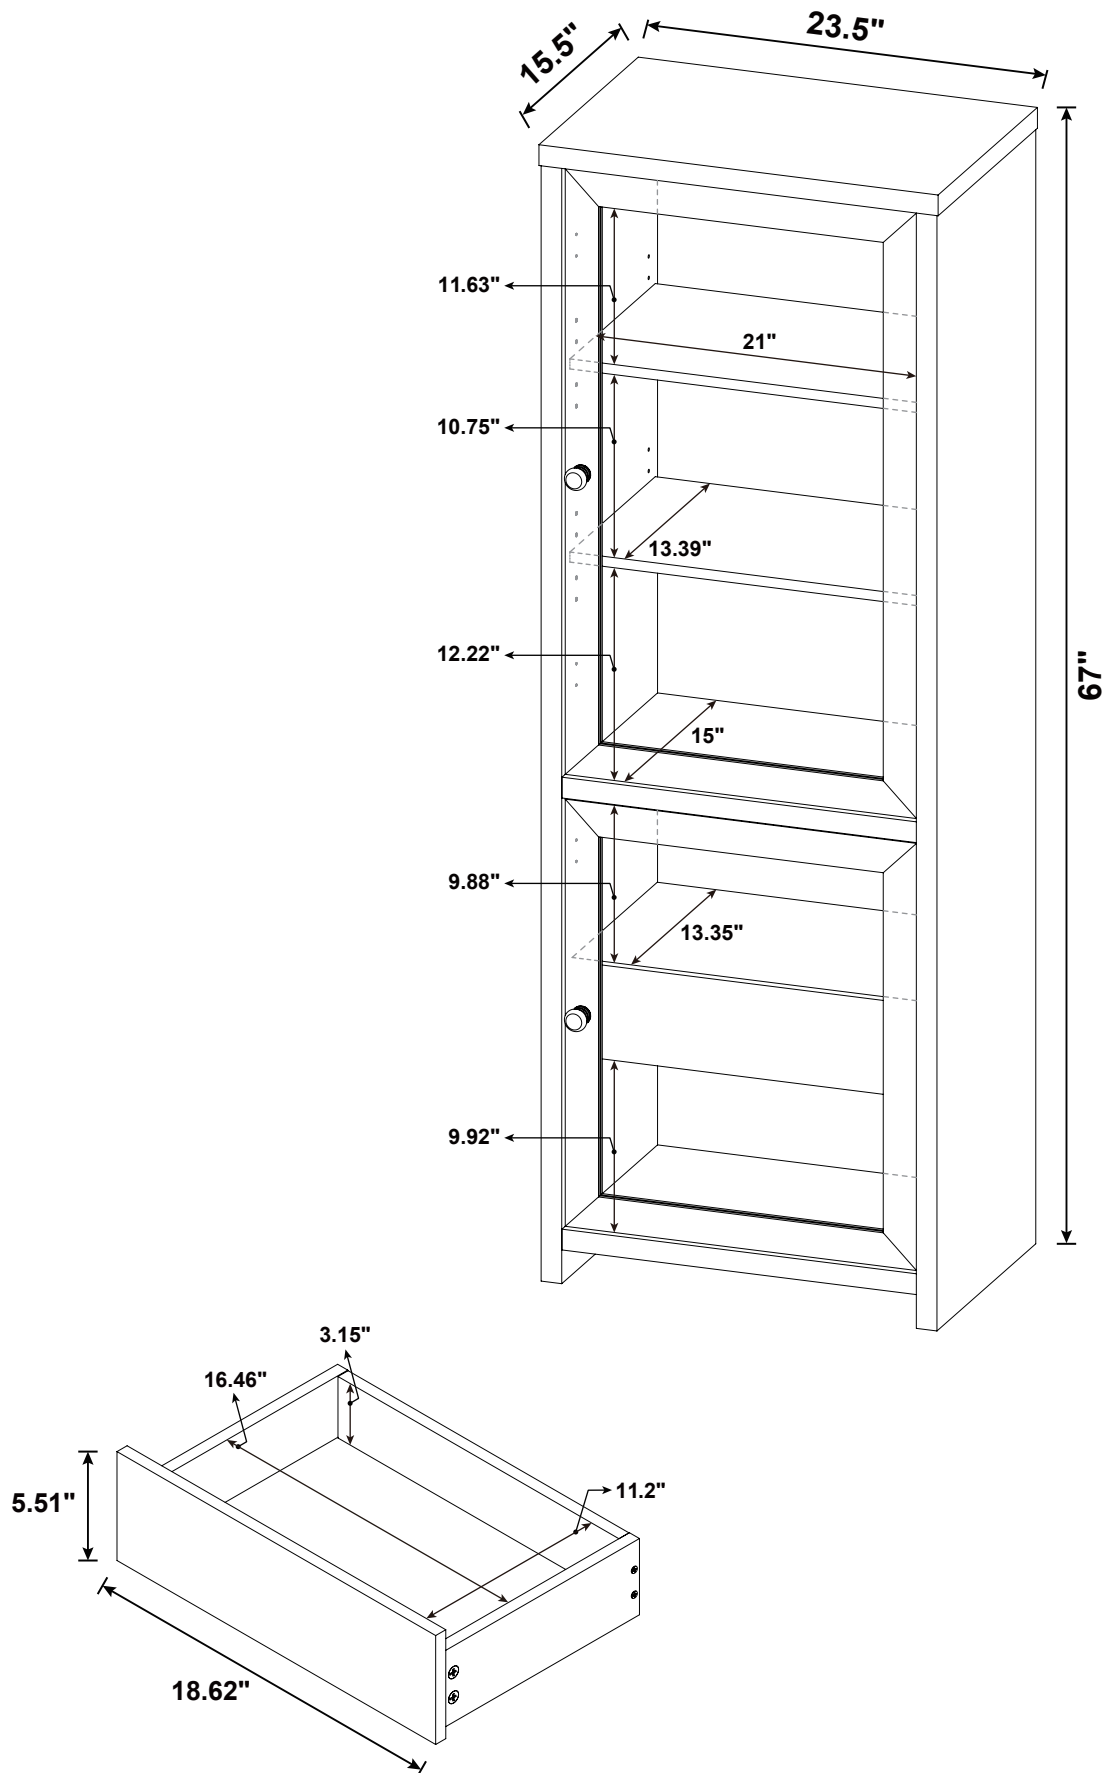

Note : Dimension tolerance $\pm 5\%$

ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

 
WARNING

Injury may result from tipping furniture.
 This restraint may protect against tipping furniture.
 Do not allow children to climb on furniture.
 This restraint is not a substitute for proper adult supervision.
 Failure to detach this restraint before moving the furniture may result in injury and damage.

This restraint must be screwed to a wood stud on the wall, using the long screw provided.


STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

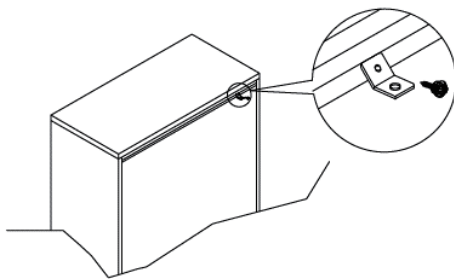



STEP 2

 Locate the wood stud on the wall, and secure the other bracket, 2 inches below the back of the unit.

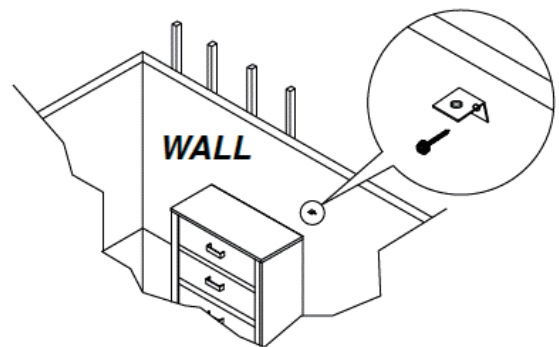

STEP 3

  Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end, and drag it through, until the slack is removed. Ensure that the strap is securely laced and locked.

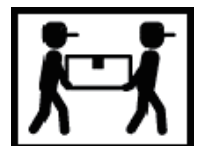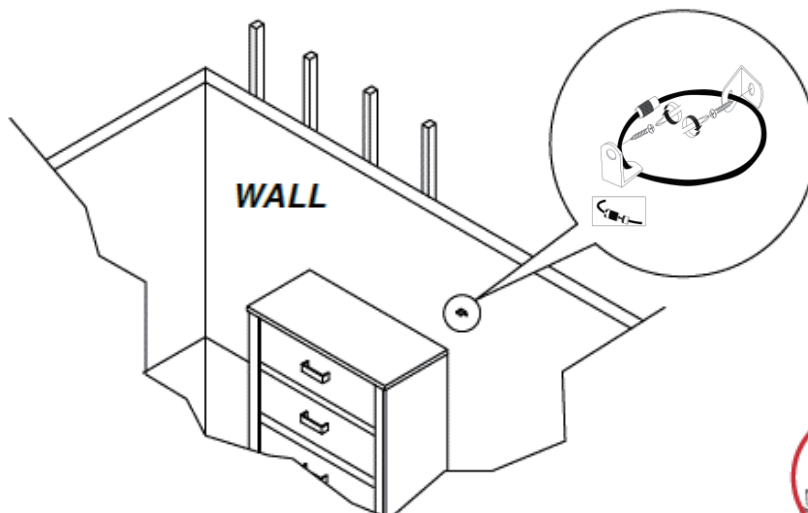

Note : Dimension tolerance $\pm 5\%$