

**DOWNTOWN
SIG-021-461**ASSEMBLY INSTRUCTIONS

PLAEASE UNPACK ALL PARTS AND CHECK AGAINST PARTS LIST ON THIS INSTRUCTION SHEET BEFORE DISCARDING PACKING AND CARTON!!

Assemble the shelf pins to the suitable location, open the glass shelf from carton box then put the glass shelf onto the shelf pin, as show in Diagram A


2)The touch latch maybe move during transition and cause the door not even, please adjust the head of touch latch if necessary as shown in Diagram B


***** NOTE KEEP THIS SHEET *****

In the unlikely event that you would need a replacement part for your furniture, please contact your local authorized Caracole International dealer. If you need replacement hardware quickly, it could be purchased from your local hardware store.

Part Description	DOWNTOWN	
	SIG-021-461	Part No.
Part Description	Part No.	QTY
Drawer Knob	SIG-021-461-5081	2
Glass Shelf	SIG-021-461-5028	1
Shelf Pin	SIG-021-461-5087	1
Piano Hinge	SIG-021-461-50324	2
Touch Latch	SIG-021-051-30401	2
Soft-Closing Drawer Guide	SIG-021-461-50424	1set
Adjustable Floor Glide	SIG-021-461-5075	4
Anti-tip Restraint	SIG-021-051-30157	1

RTA Hardware			
NO.	Hardware List	Q'ty	
A		shelf pin male clip	4

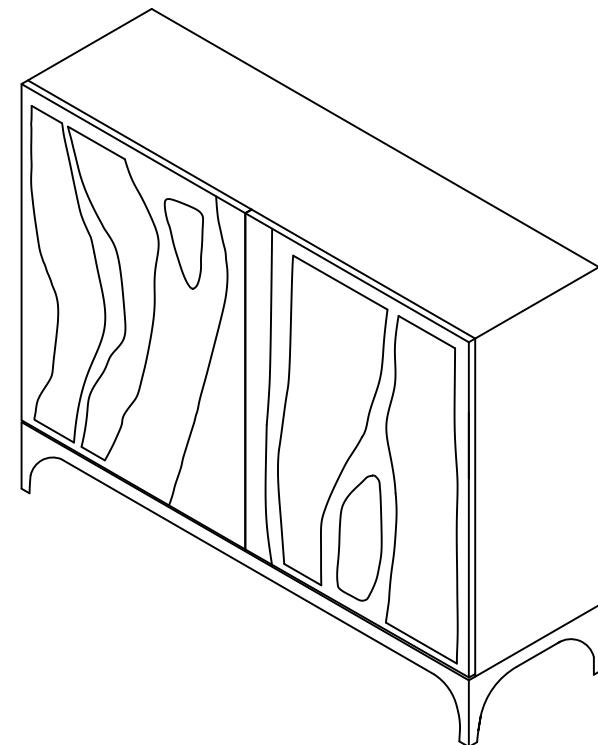

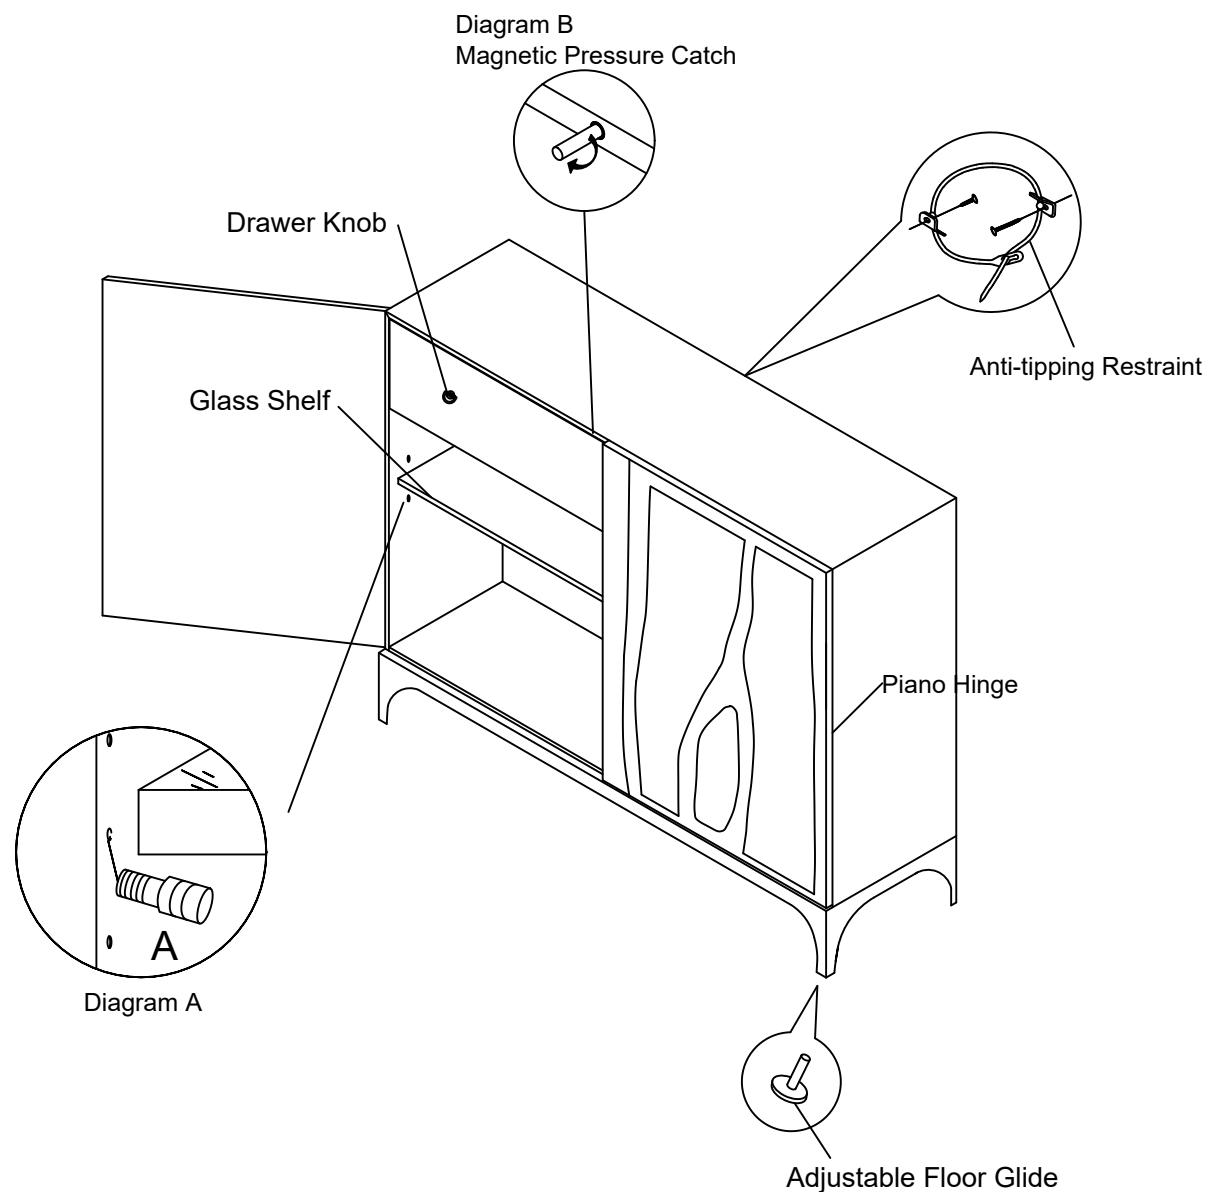



1) Adjust the gap from up and down that please push the plastic button then move front or back.



2) Adjust the end gap that please turn white gear.



3) Adjust the flatness of drawer front that please turn the yellow gear.