
 






 

Assembly instructions for Door Dresser / Mirror 163-110/121

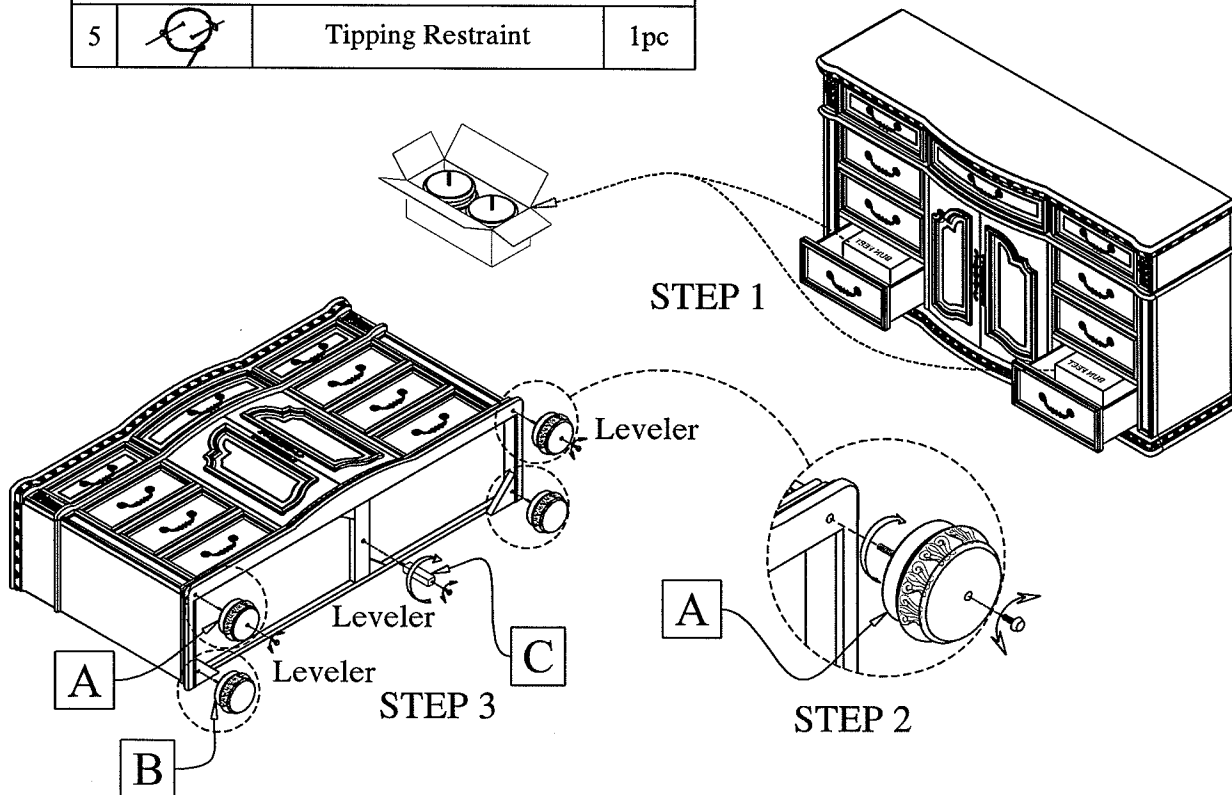
PAGE 1 OF 2

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Hardware Bag for Mirror (163-121)			
1		ALLEN KEY (1/4" x 2-1/4" x 7/8")	1pc
2		BOLT (Ø1/4 x 1-1/2" x 3/4")	8pcs
3		SPRING WASHER (Ø1/4" x Ø1/2" x 1/16")	8pcs
4		FLAT WASHER (Ø1/4" x Ø3/4" x 1/16")	8pcs
Hardware Bag for Door Dresser (163-110)			
5		Tipping Restraint	1pc

Parts List			
A		Bun Feet with Glide Nail And Leveler	2pcs
B		Bun Feet with Glide Nail	2pcs
C		Center Support Leg	1pc
D		Mirror Back Support Rail	2pcs



Assembly instructions for Door Dresser / Mirror 163-110/121

PAGE 2 OF 2

- Do not allow children to climb on furniture.
- Do not place television sets on top of chests, door chests and/or dressers.
- Please place heaviest objects in the lowest drawers.
- Please have no more than one drawer open at a time.

