

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

720224
MEDIA TOWER

ITEM:720224

ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!




















1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

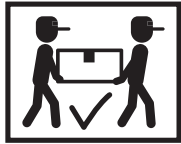

ASSEMBLY TIME

60 MINUTES

                   PARTS IDENTIFICATION

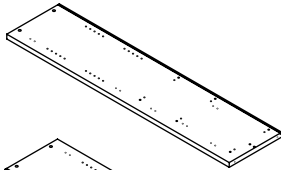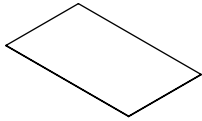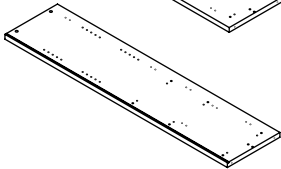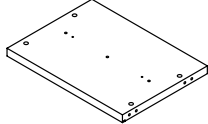
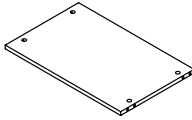
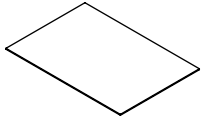
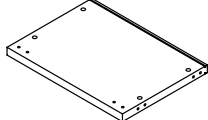
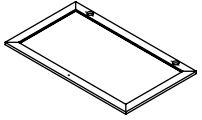
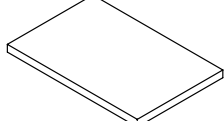

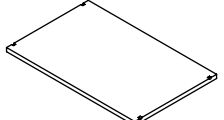
A	LEFT SIDE PANEL		1 PC	K	UPPER BACK PANEL		1 PC
B	RIGHT SIDE PANEL		1 PC	L	LOWER BACK PANEL		1 PC
C	LEFT SMALL DIVIDER PANEL		1 PC	M	DRAWER FRONT PANEL		1 PC
D	RIGHT SMALL DIVIDER PANEL		1 PC	N	DRAWER BACK PANEL		1 PC
E	LOWER FRONT TOP BAR		1 PC	O	DRAWER LEFT SIDE PANEL		1 PC
F	BOTTOM PANEL		1 PC	P	DRAWER RIGHT SIDE PANEL		1 PC
G	CROSS PANEL		1 PC	Q	DRAWER BOTTOM PANEL		1 PC
H	MIDDLE PANEL		1 PC	R	UPPER GLASS DOOR		1 PC
I	TOP PANEL		1 PC	S	LOWER GLASS DOOR		1 PC
J	ADJUSTABLE SHELF		2 PCS				

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:720224

        HARDWARE IDENTIFICATION

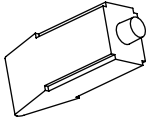Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	11	HANDLE		2 PCS
2	WOODEN DOWEL Ø8 x 30mm		23 PCS	12	HANDLE BOLT BLK		2 PCS
3	CAM BOLT Ø7 x 35.5mm SR		22 PCS	13	HINGE Ø35mm SR		4 PCS
4	CAM LOCK Ø15 x 12mm SR		22 PCS	14	HINGE SCREW Ø4x15mm SR		16 PCS
5	SCREW Ø 4.3x35mm SR		12 PCS	15	PLASTIC COVER Ø 52mm		1 PC
6	PLASTIC FEET Ø15mm		4 PCS	16	BACK PANEL SUPPORT		6 PCS
7	PIN FOR ADJUSTABLE SHELF Ø4.9x15mm SR		8 PCS	17	BACK PANEL SUPPORT SCREW Ø3 x 19mm SR		6 PCS
8	DOOR CATCH		4 PCS	18	STICKER-BK Ø20mm		4 PCS
9	RAIL L = 300mm BLK		1 PCS	19	STICKER Ø20mm		2 PCS
10	SCREW Ø3x12mm BLK		12 PCS				

 
Z9, Z11, Z13, Z15 not included in blister packaging.

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **720224**

STEP 1

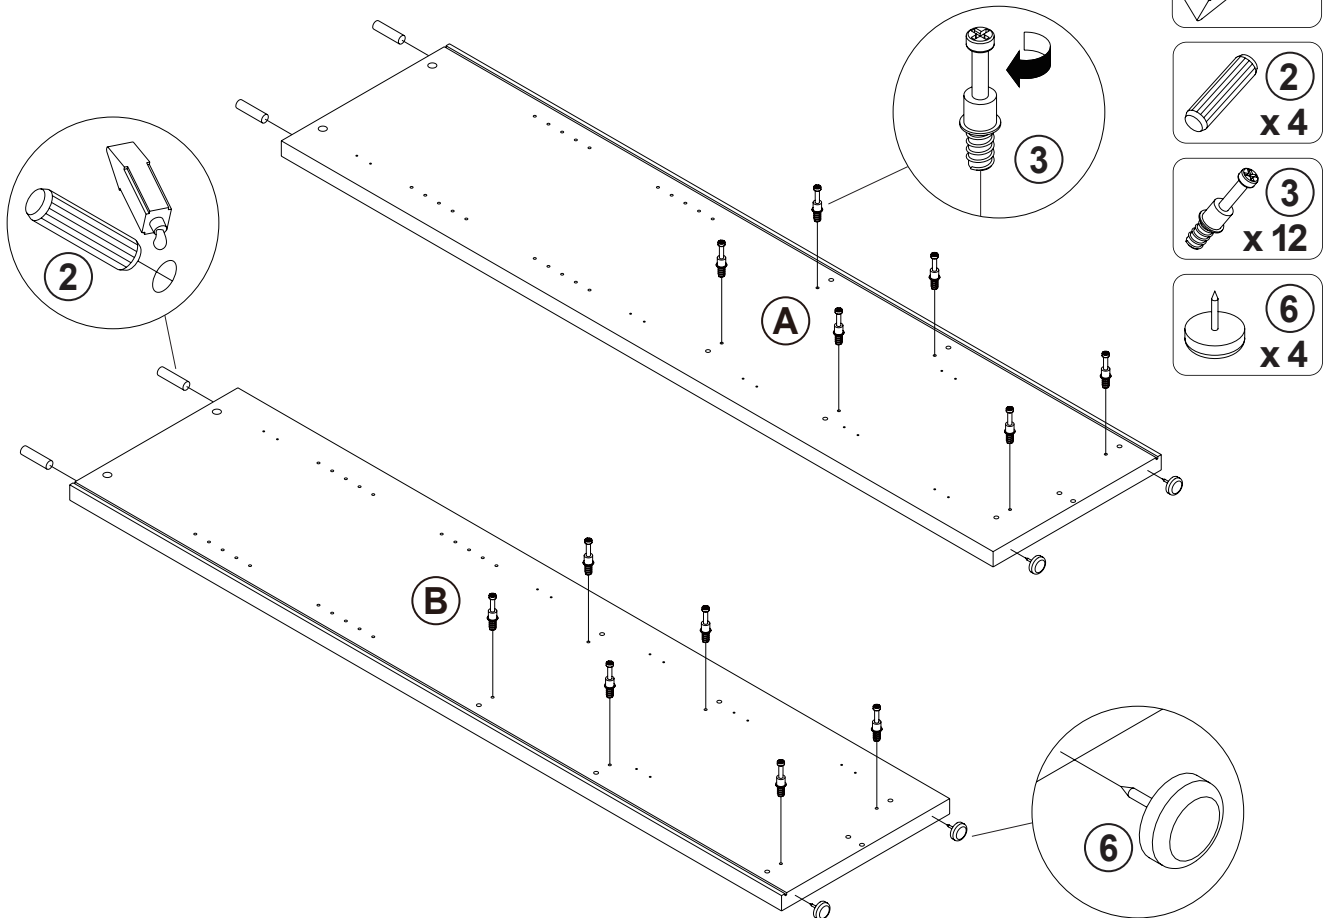


 STEP 2

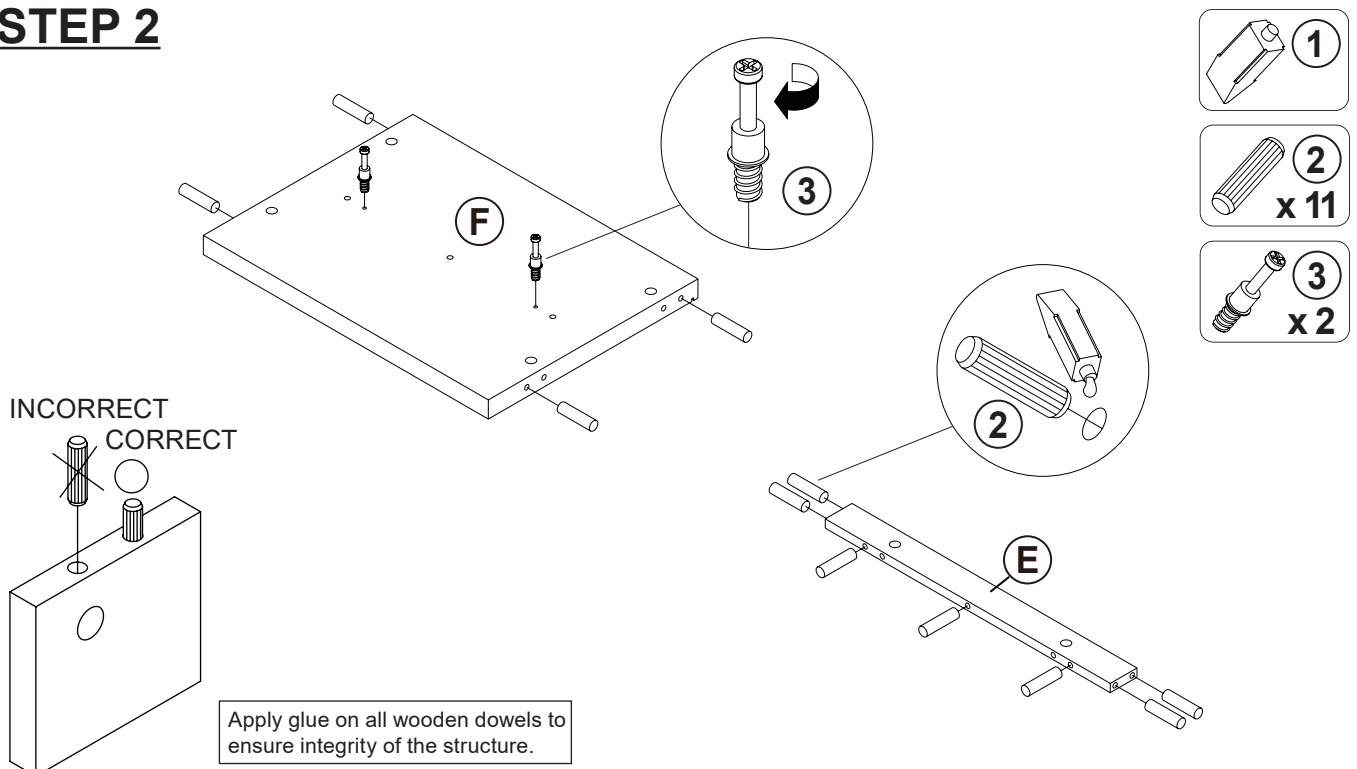


ITEM: 720224

 STEP 3

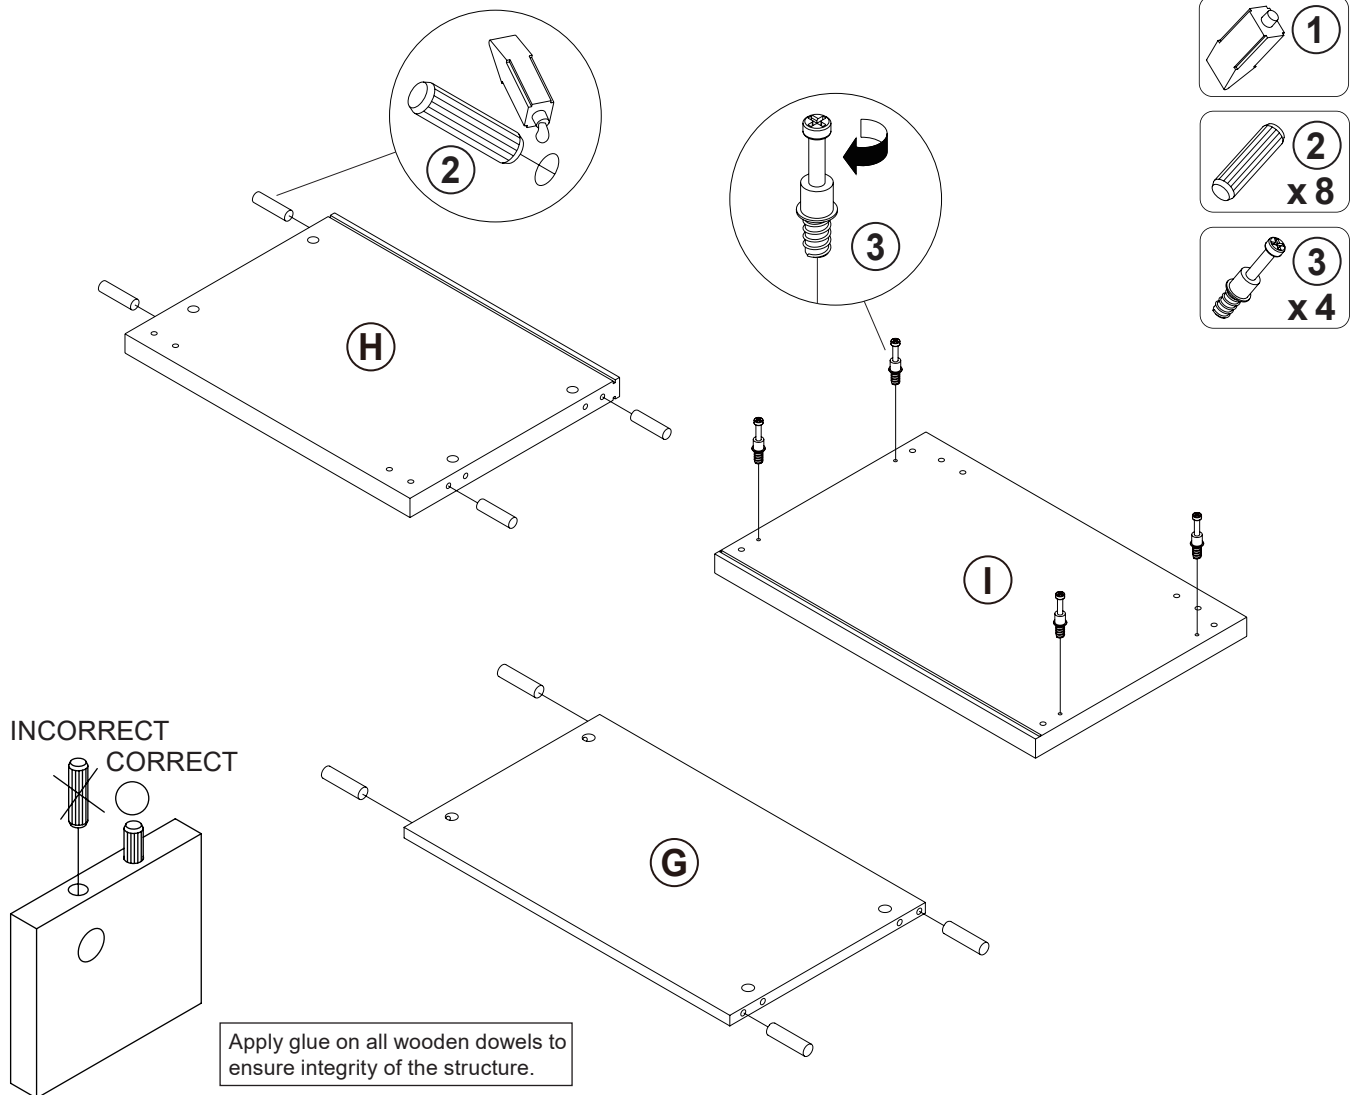


 
STEP 4

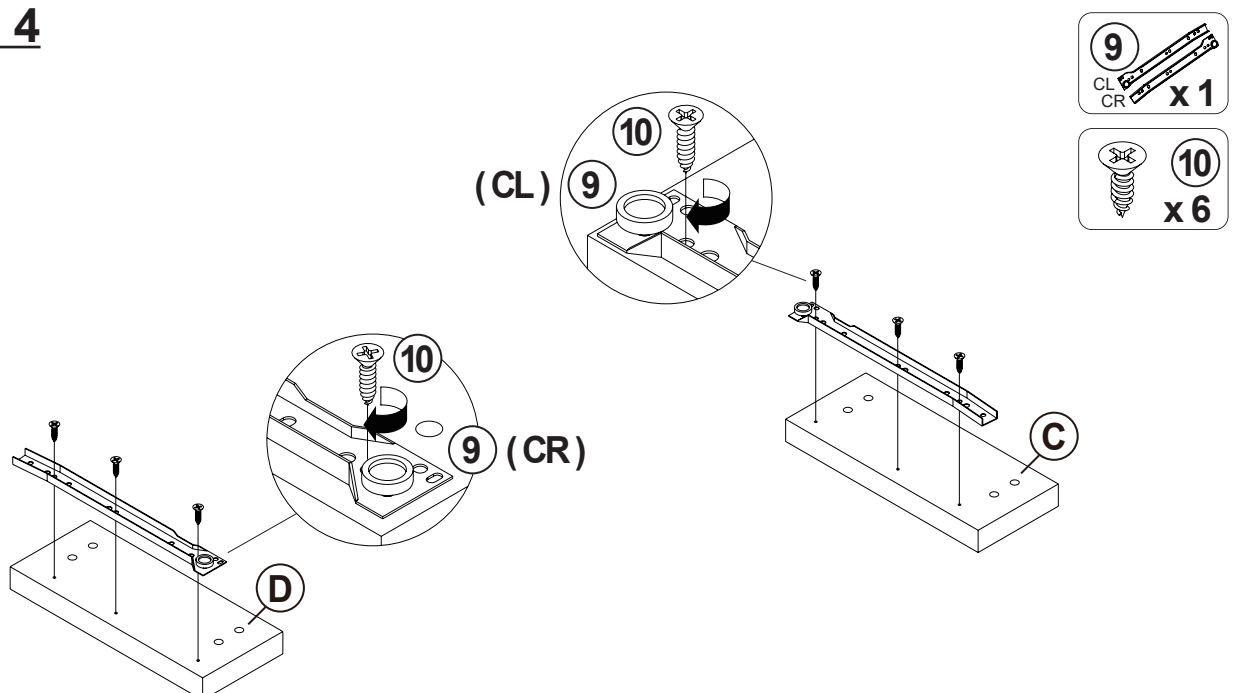



ITEM: **720224**

STEP 5

  COASTER
FINE FURNITURE

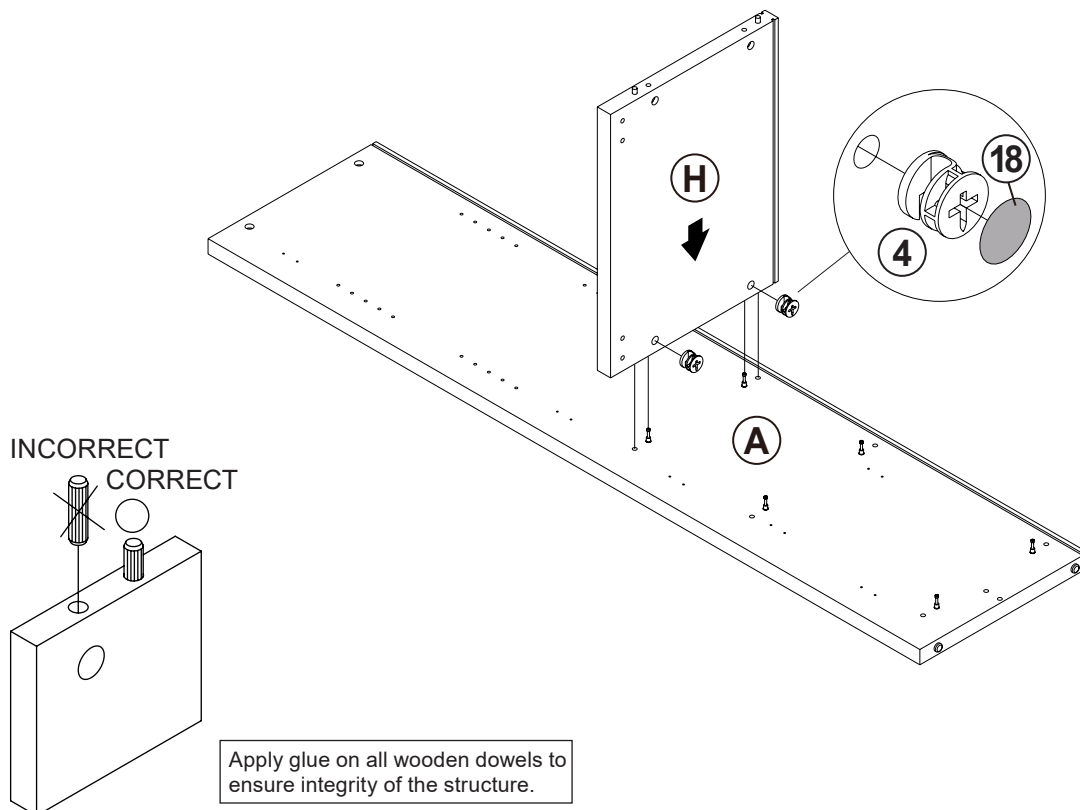


  STEP 6



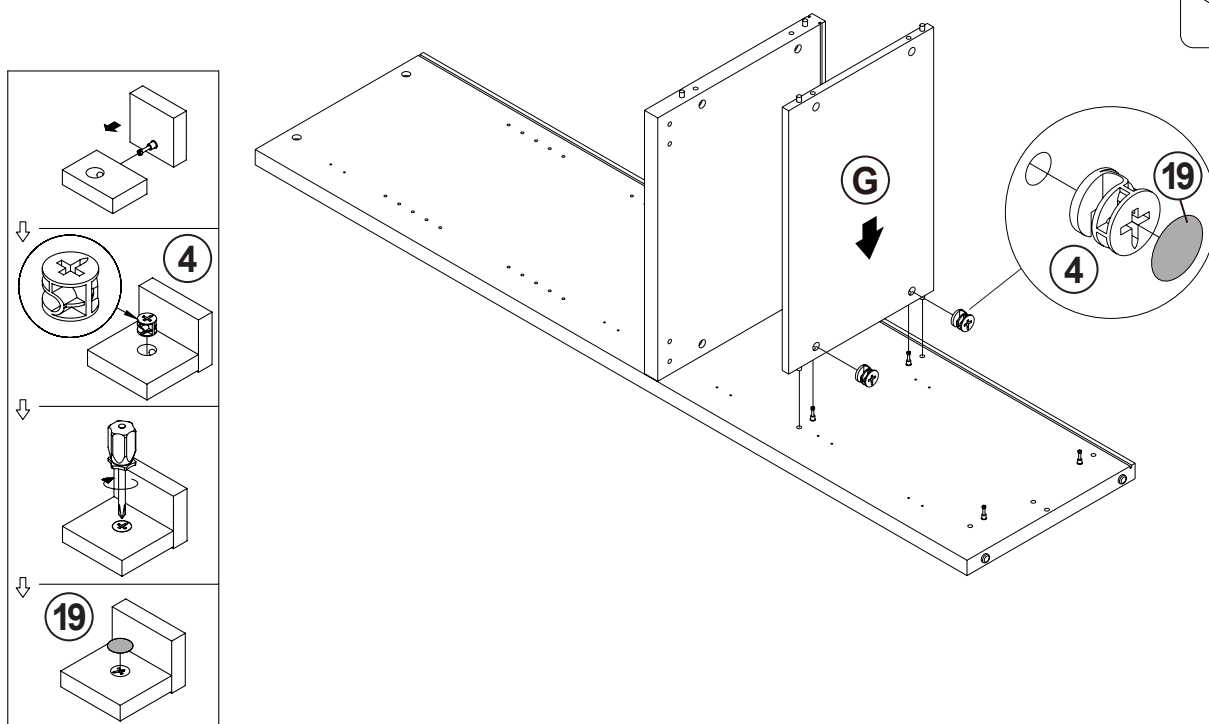



ITEM: **720224**

 STEP 7

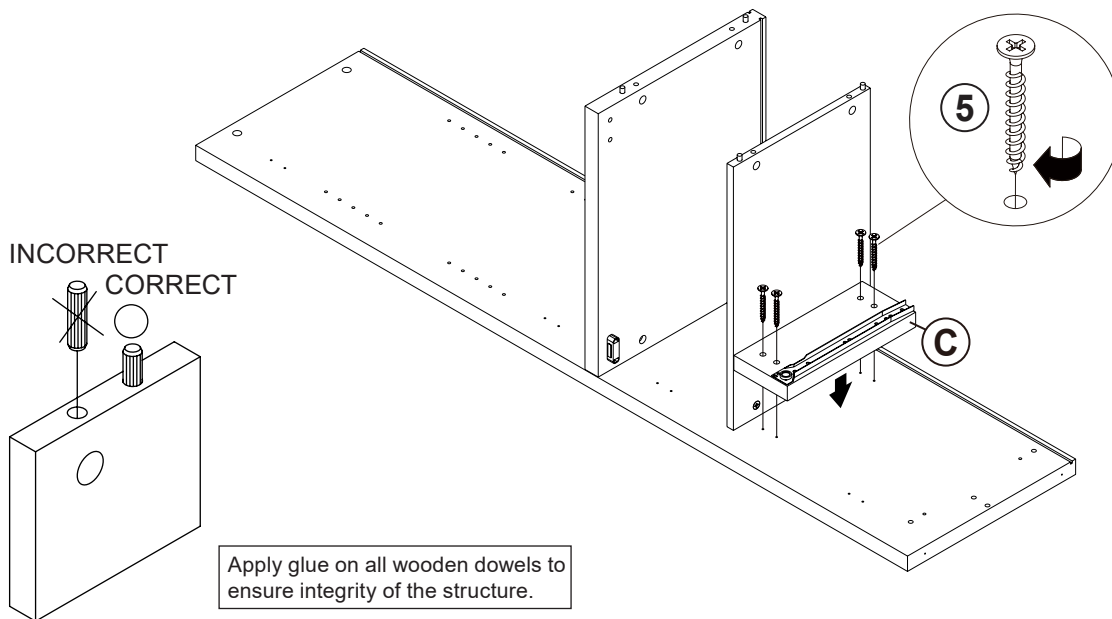

  
 
 
STEP 8

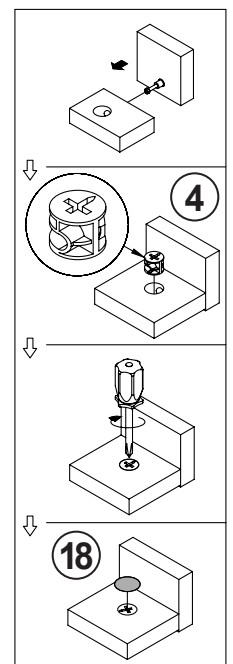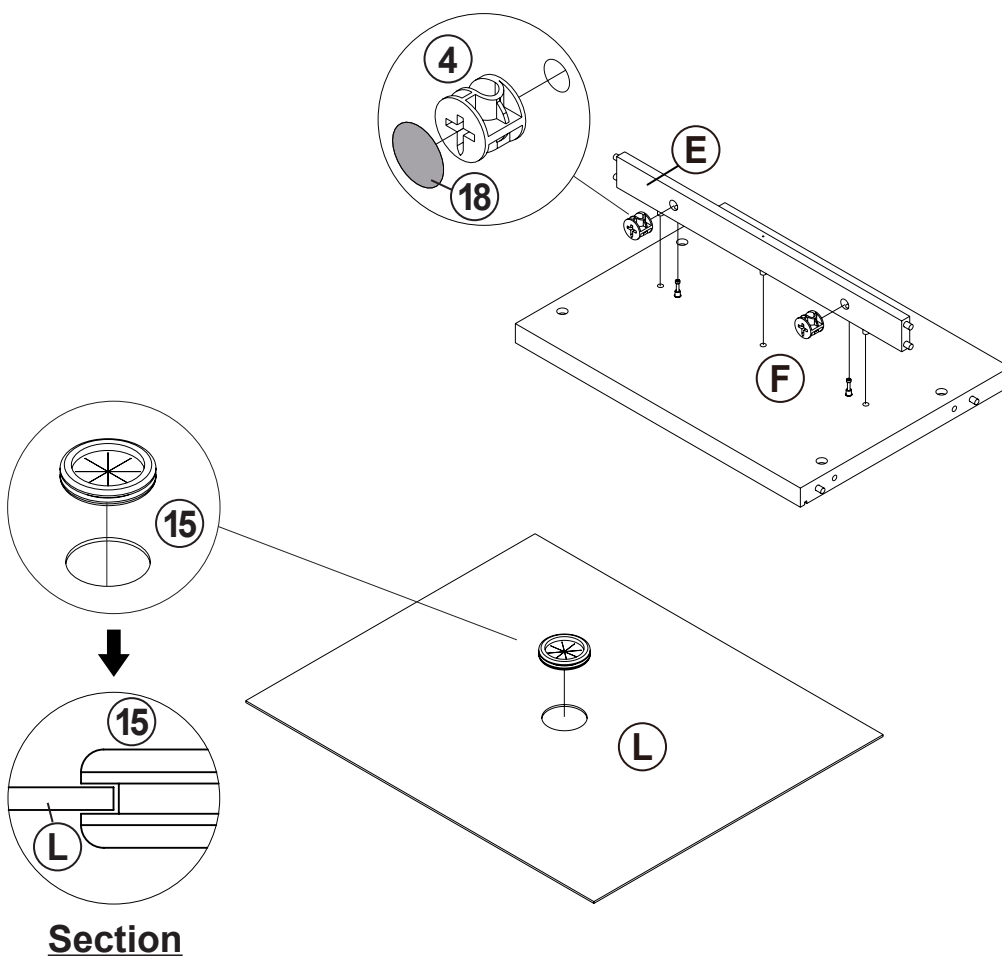


ITEM: **720224**

STEP 9

   COASTER
FINE FURNITURE

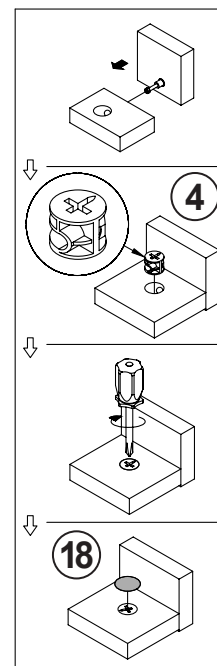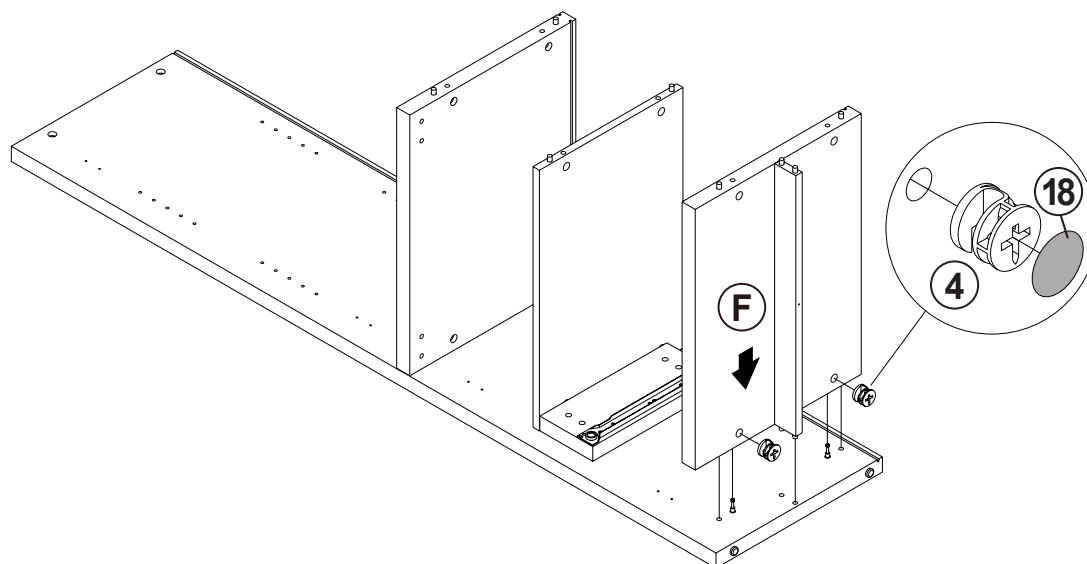

 
STEP 10

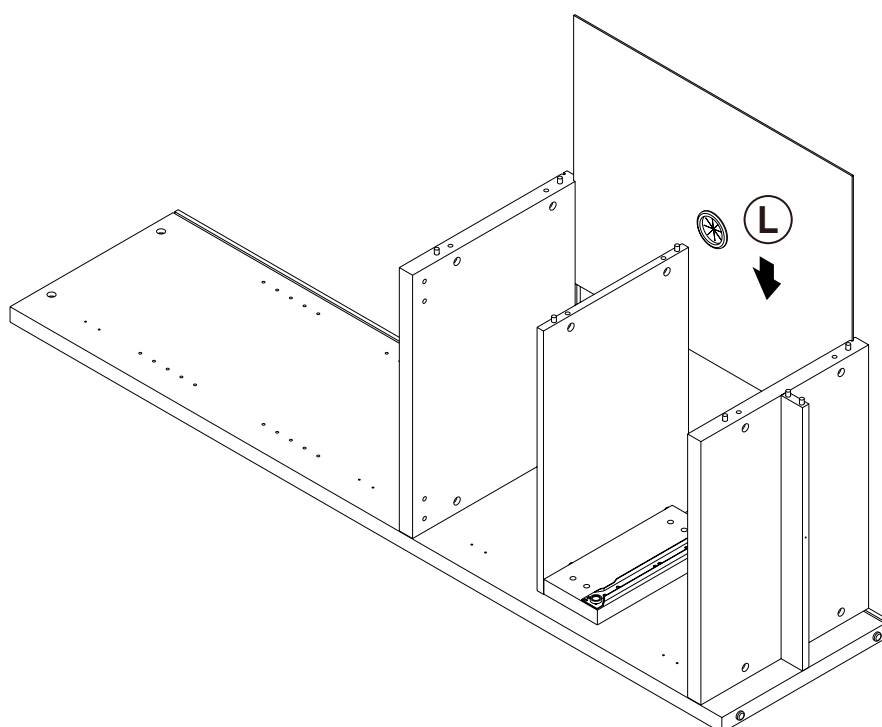


ITEM: **720224**

COASTER
FINE FURNITURE


 
STEP 11

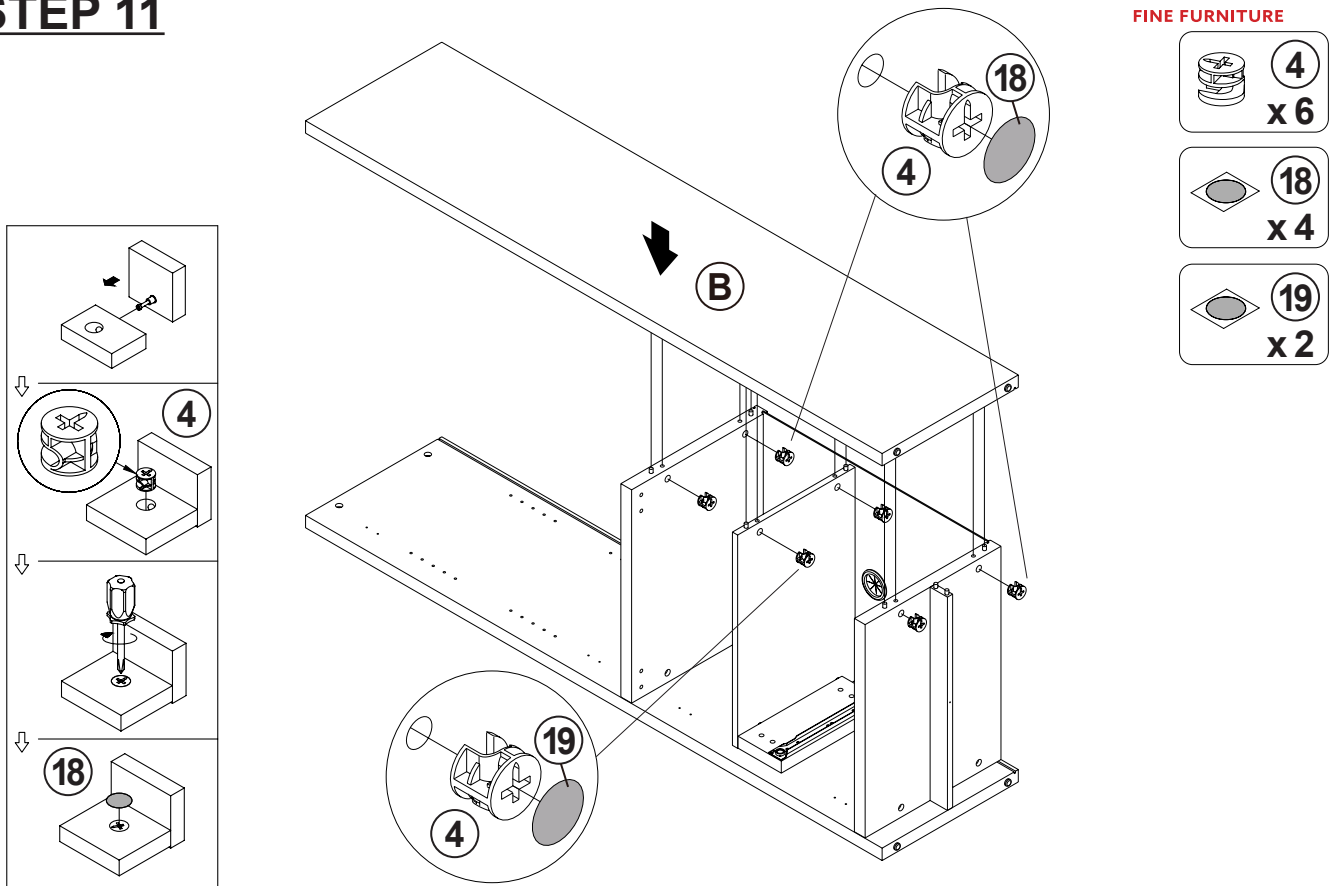

 
STEP 12

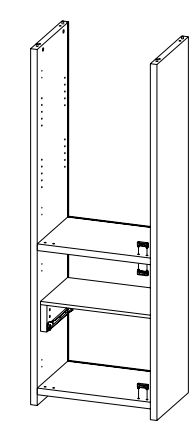

R OPEN

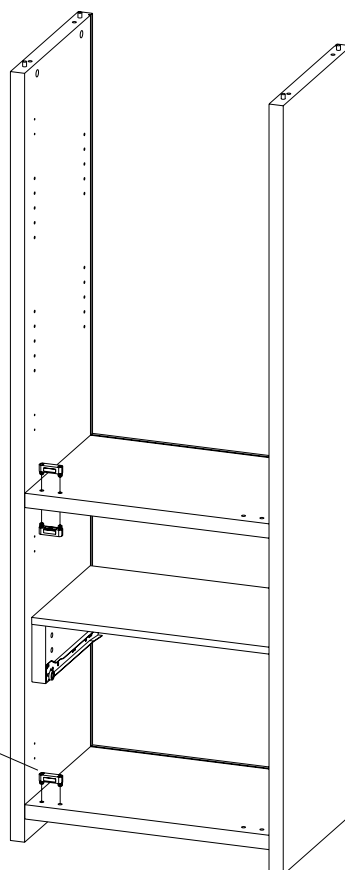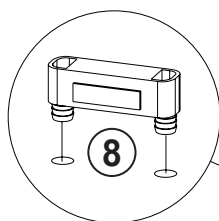  



L OPEN

 


ITEM: **720224**

STEP 13

  COASTER
FINE FURNITURE

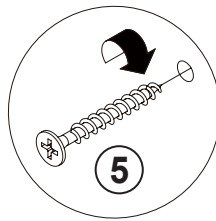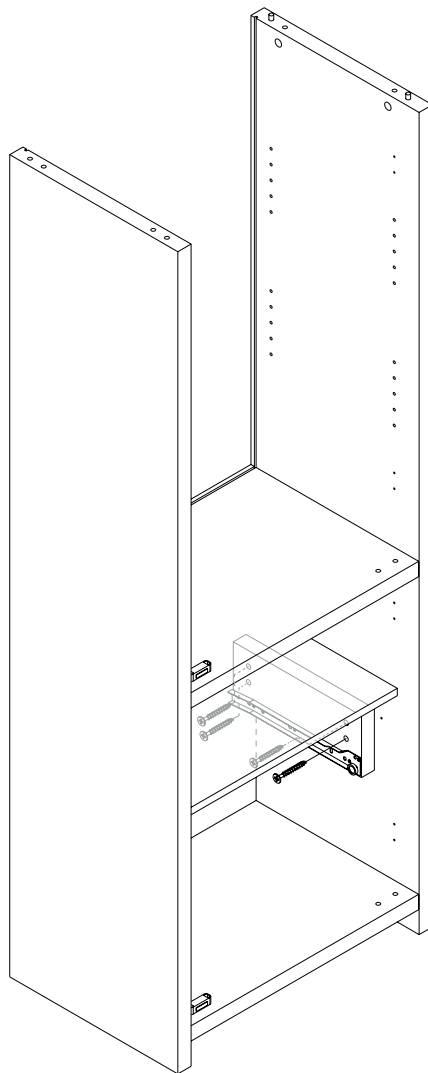




 
STEP 14

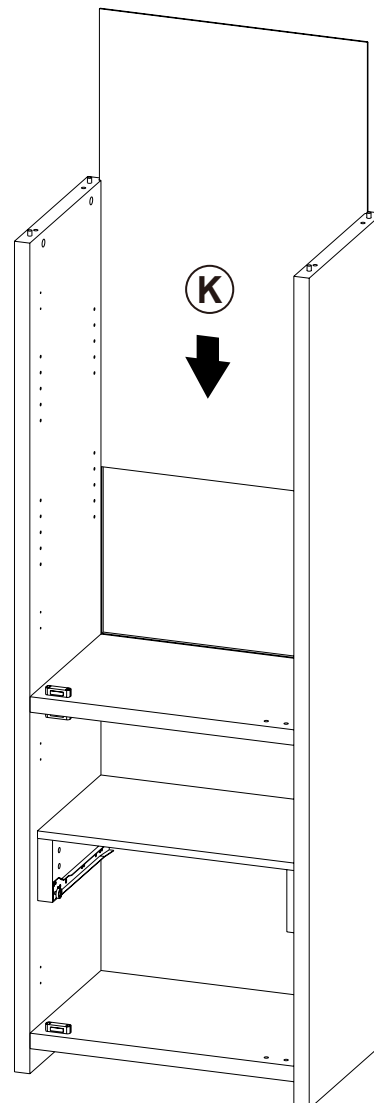


ITEM: **720224**

STEP 15

   
 
COASTER
FINE FURNITURE

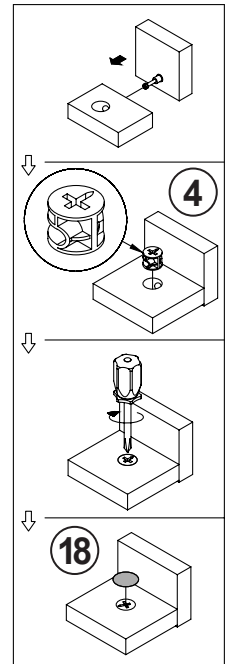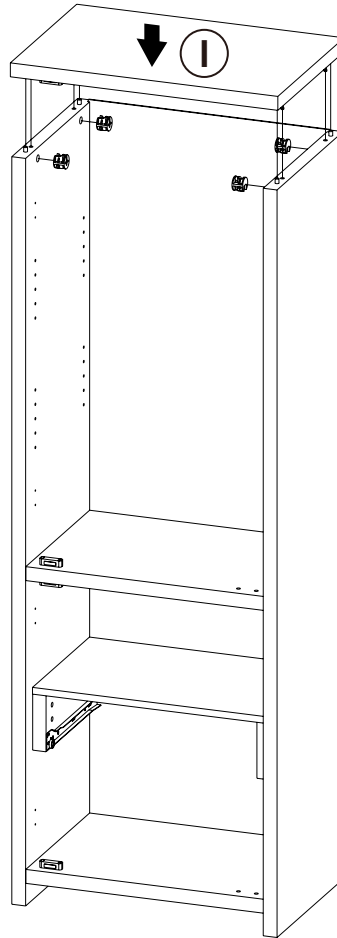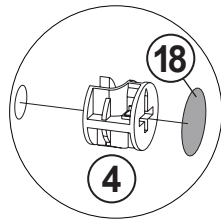

 
STEP 16

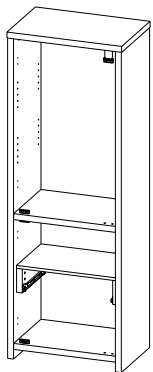

R OPEN

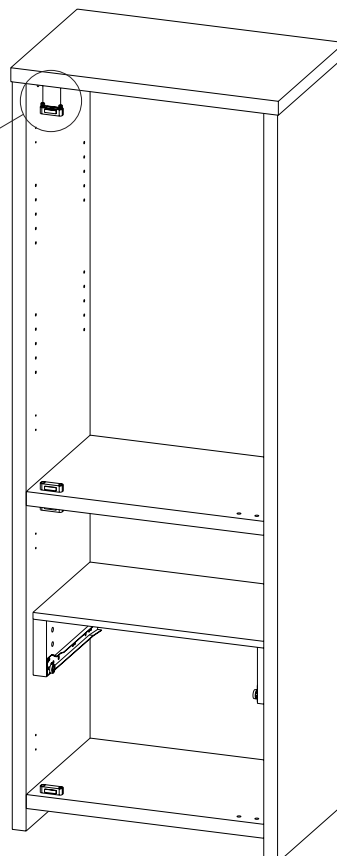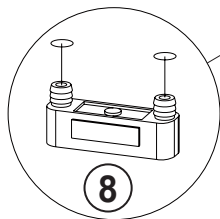  




L OPEN

 


ITEM: **720224**

STEP 17

   COASTER
FINE FURNITURE

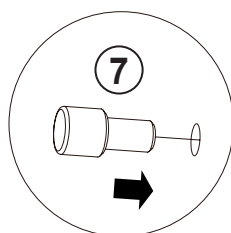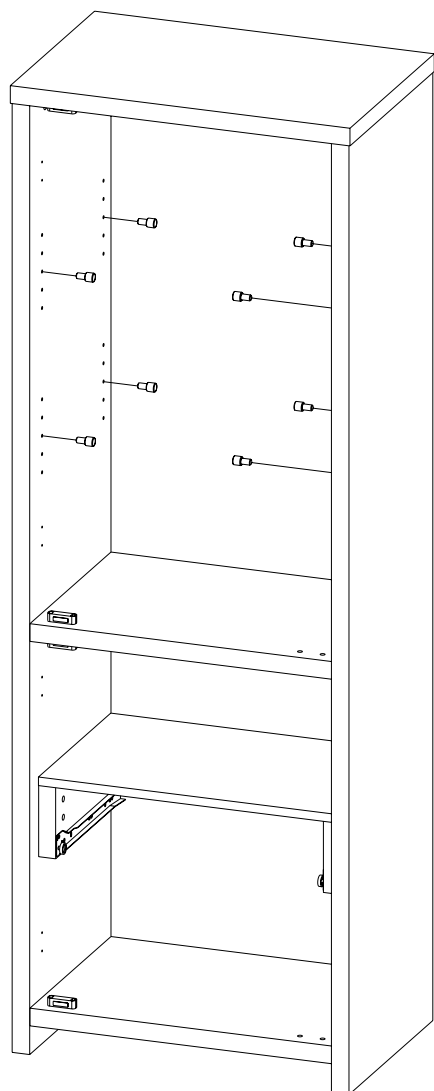


 STEP 18

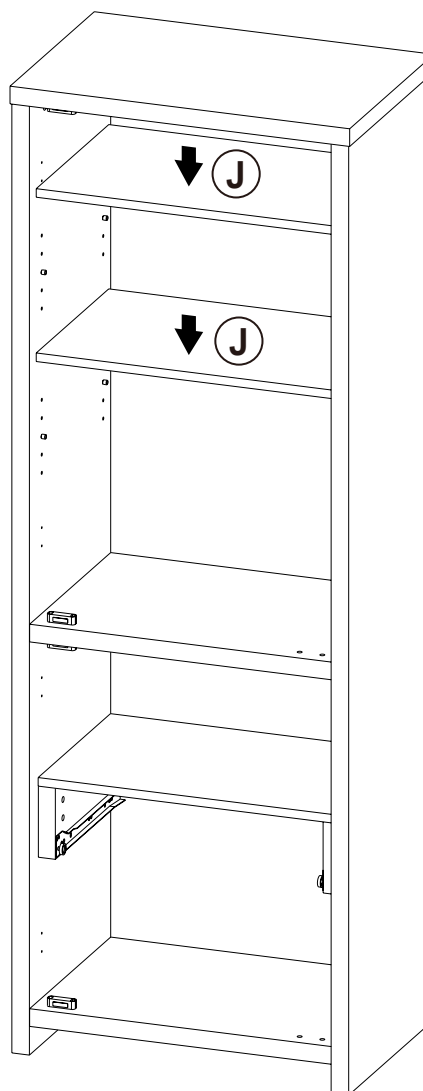


ITEM: **720224**

 
STEP 19-1

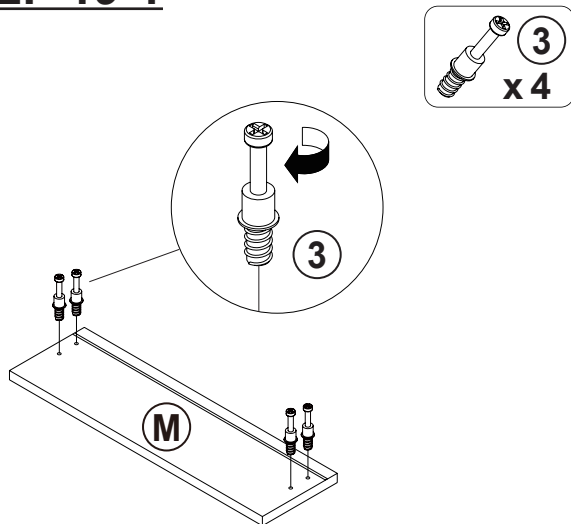

 
STEP 19-2

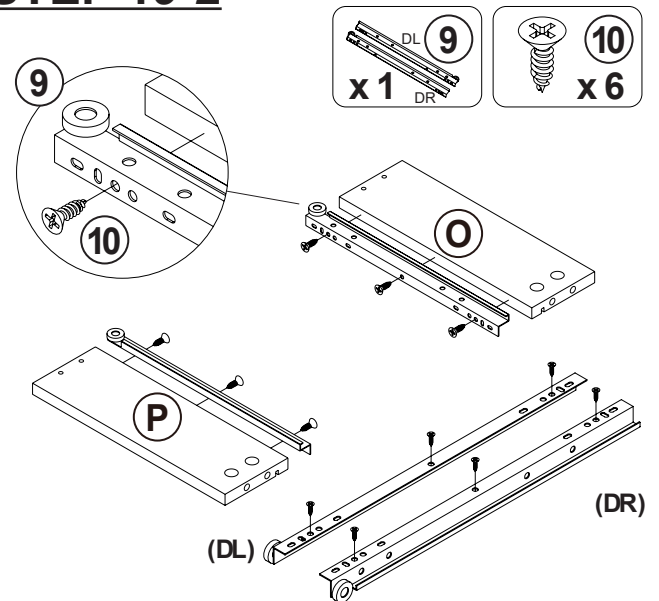

 
STEP 19-3

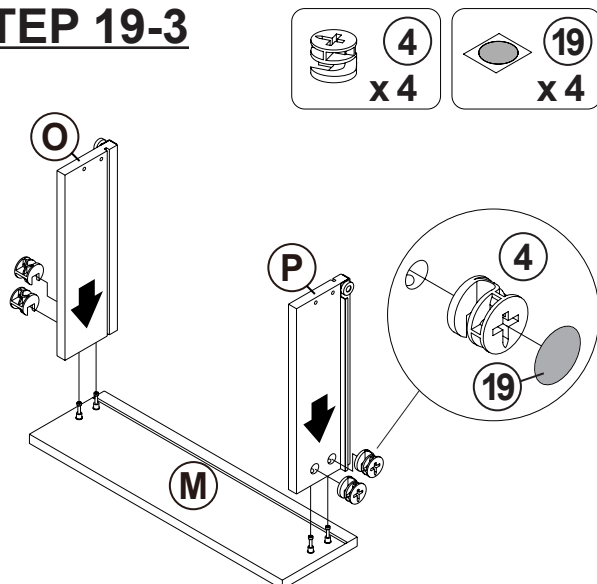

 STEP 19-4

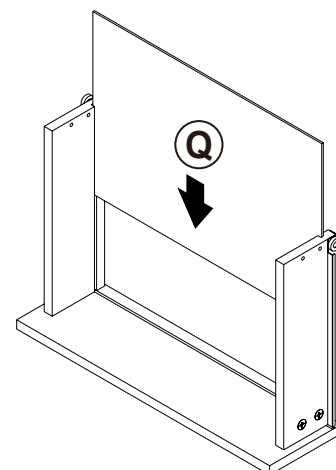


 STEP 19-5

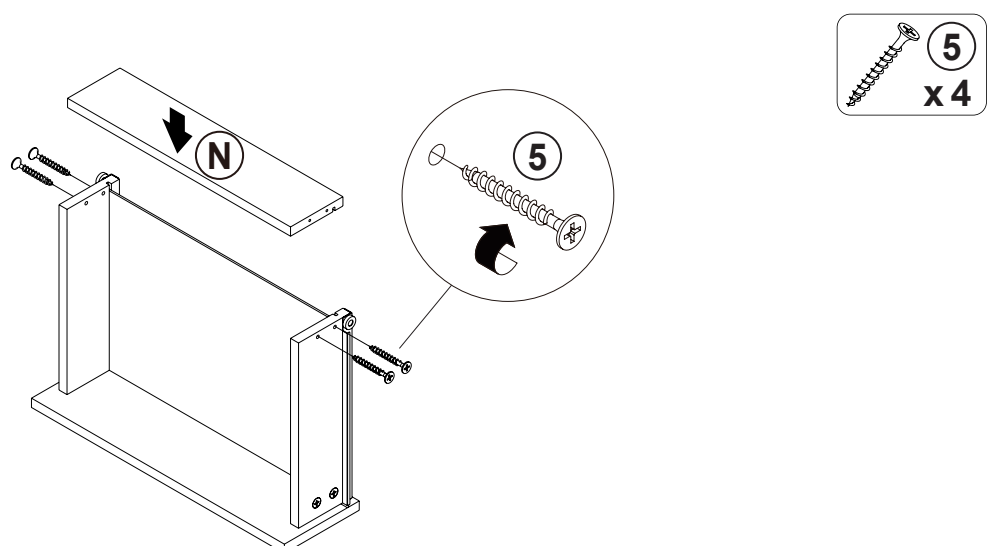


ITEM: **720224**

 
STEP 20

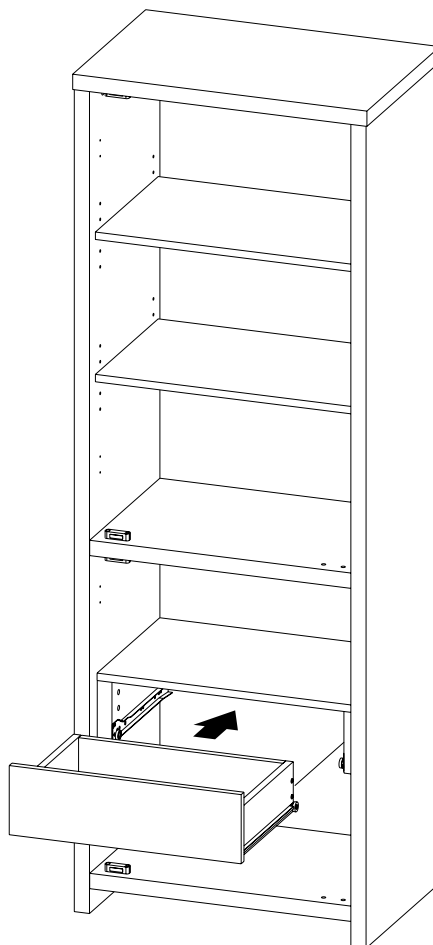

 
STEP 21

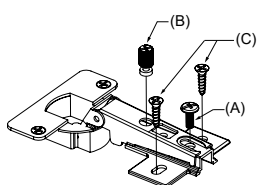



HORIZONTAL BY
SCREW A ADJUSTMENT

 


LATERAL BY
SCREW B ADJUSTMENT

 


VERTICAL BY
SCREW C ADJUSTMENT

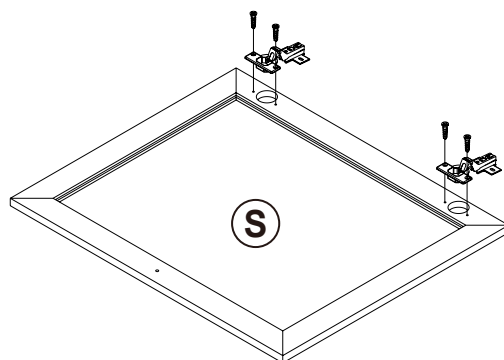  

S

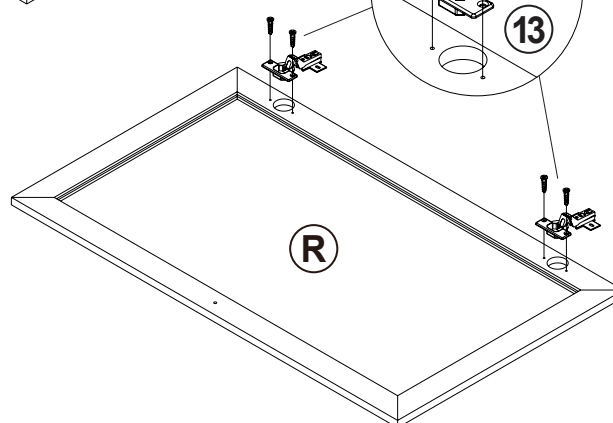 


R

 


ITEM: **720224**

COASTER
FINE FURNITURE

 STEP 22

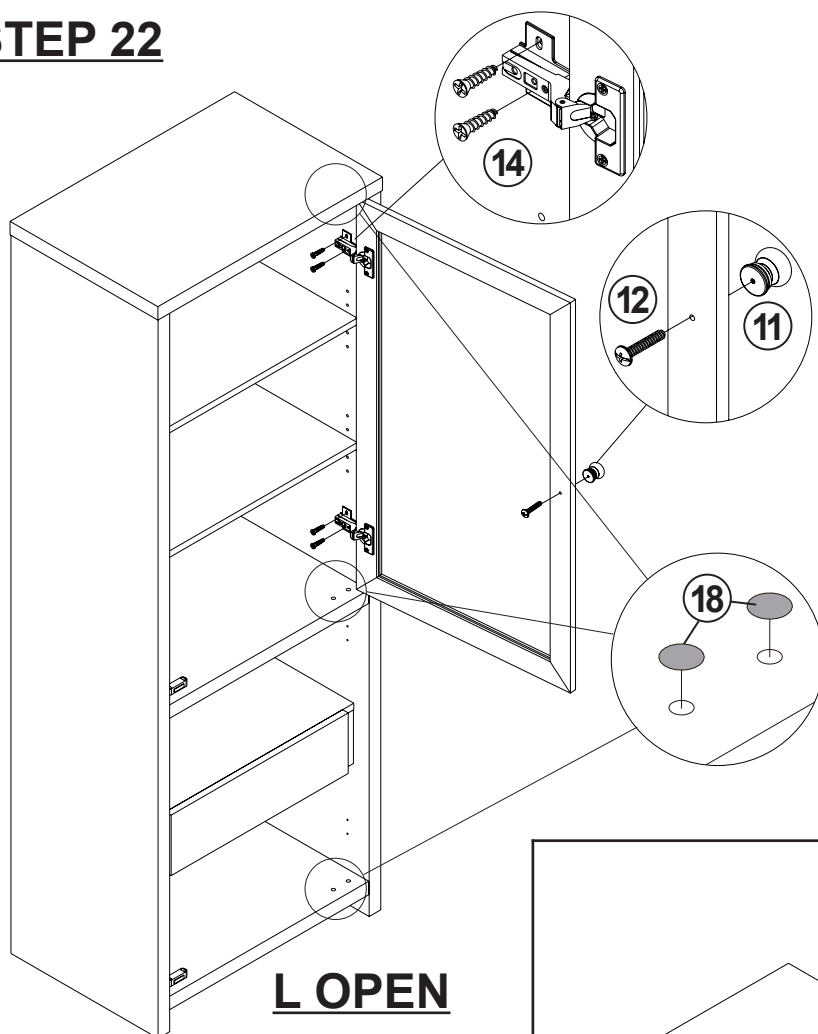



 
STEP 23

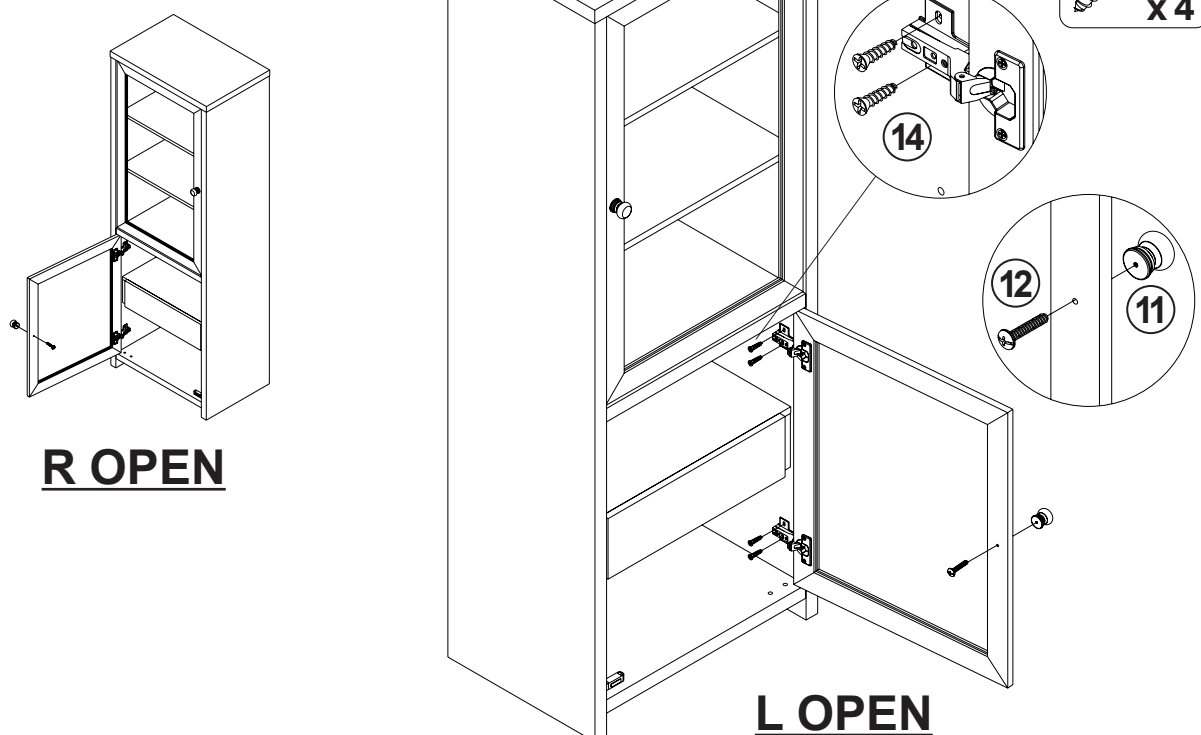

ITEM: **720224**

STEP 24

   COASTER
FINE FURNITURE

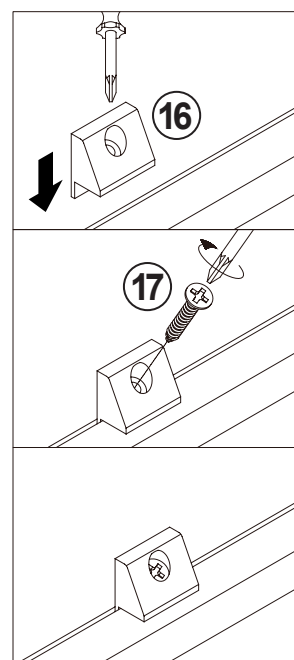
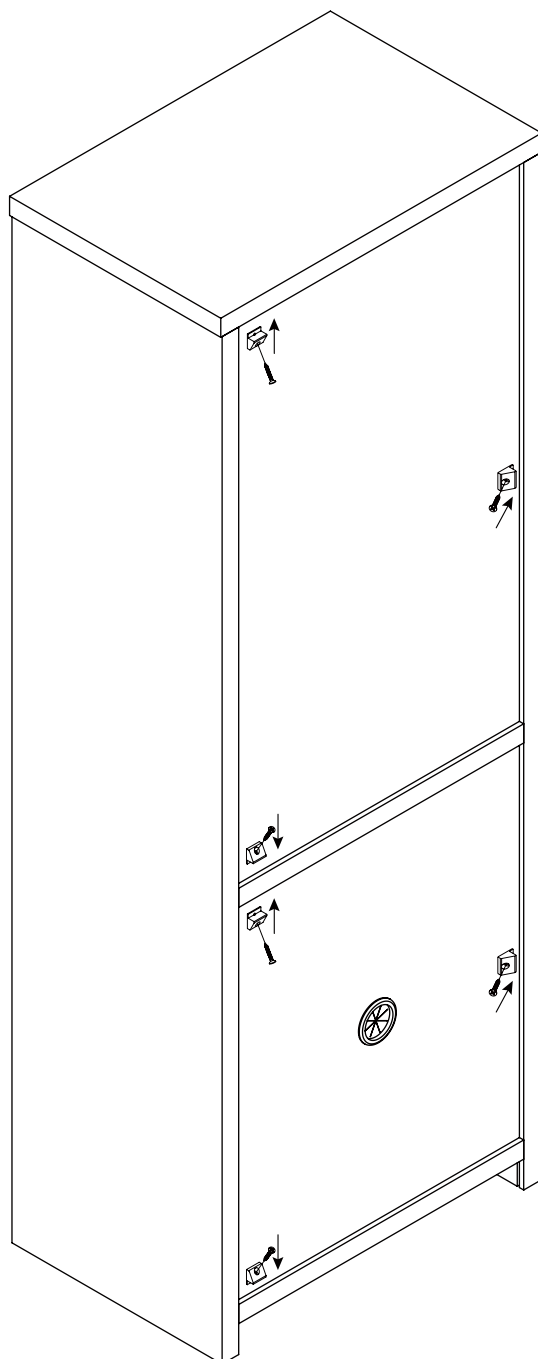



ITEM: **720224**

STEP 25


COMPLETE

   COASTER
FINE FURNITURE

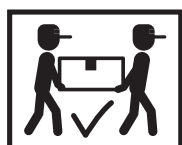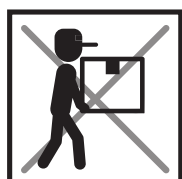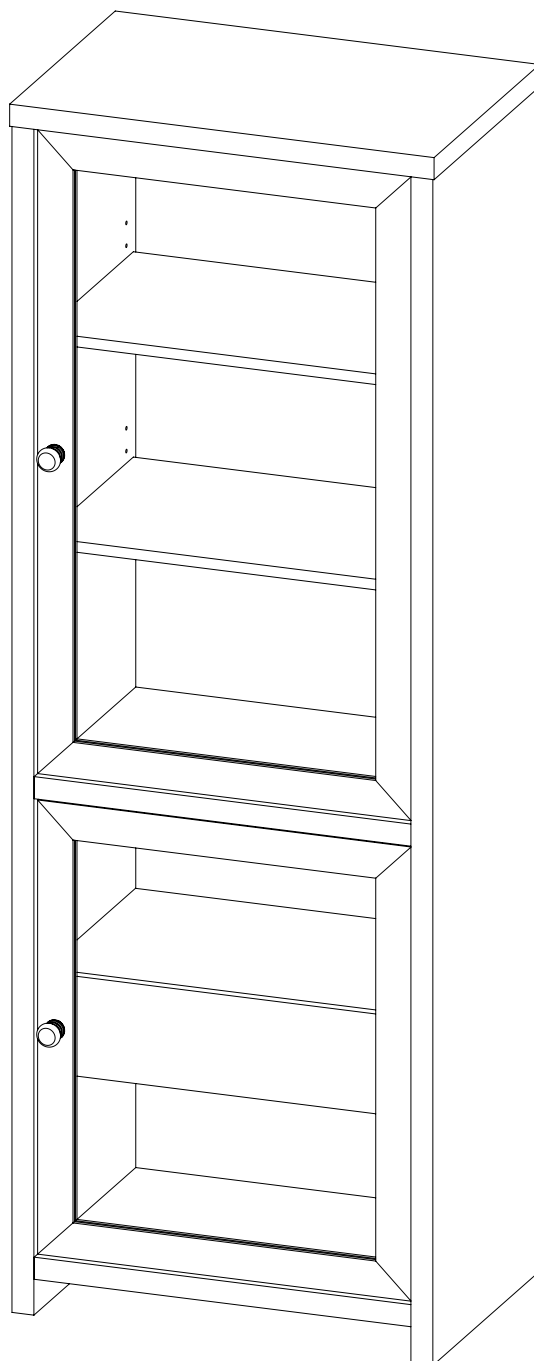

ITEM: 720224

 COASTER
FINE FURNITURE

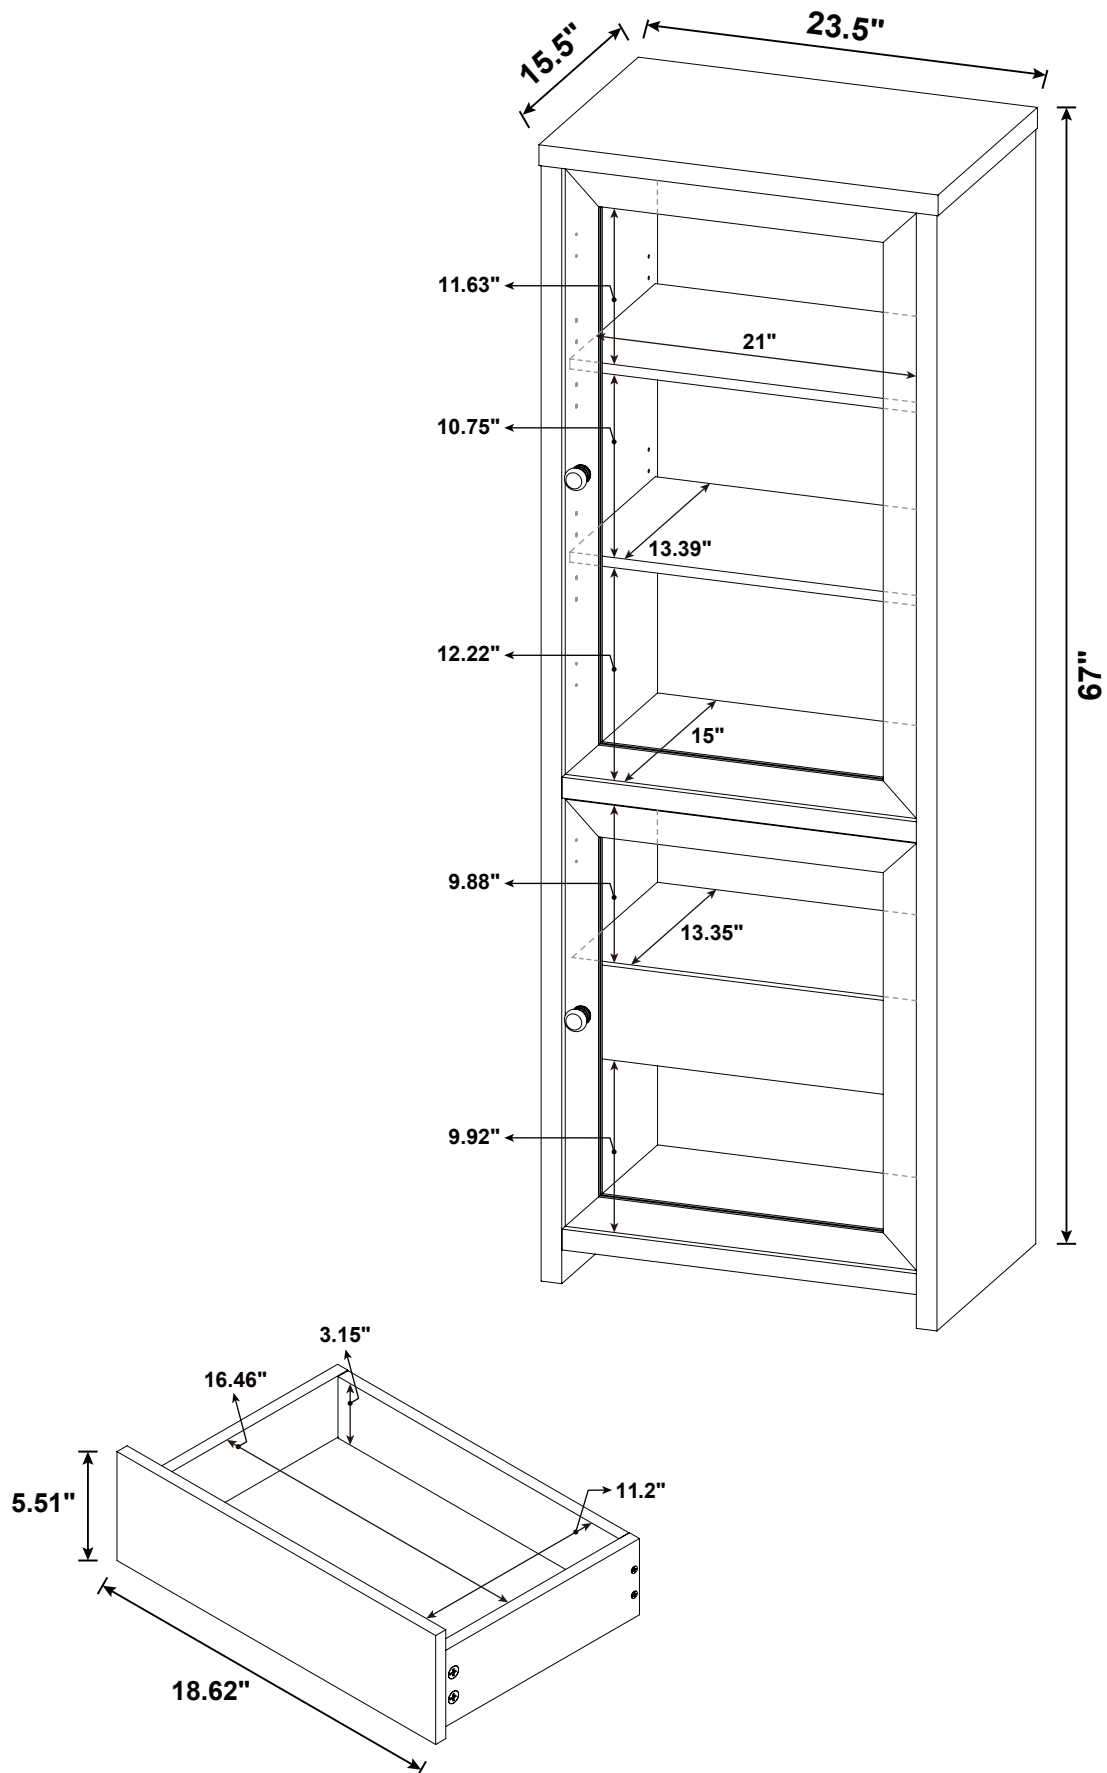

Note : Dimension tolerance $\pm 5\%$

ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

 
WARNING

Injury may result from tipping furniture.
 This restraint may protect against tipping furniture.
 Do not allow children to climb on furniture.
 This restraint is not a substitute for proper adult supervision.
 Failure to detach this restraint before moving the furniture may result in injury and damage.

This restraint must be screwed to a wood stud on the wall, using the long screw provided.


STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

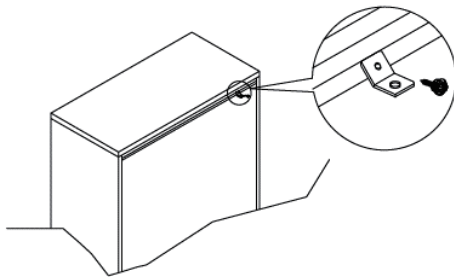


STEP 2

 Locate the wood stud on the wall, and secure the other bracket, 2 inches below the back of the unit.

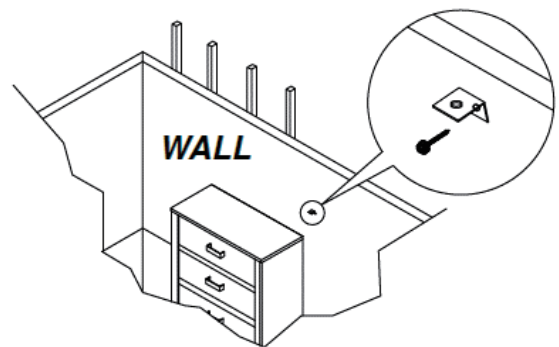

STEP 3

 Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end, and drag it through, until the slack is removed. Ensure that the strap is securely laced and locked.

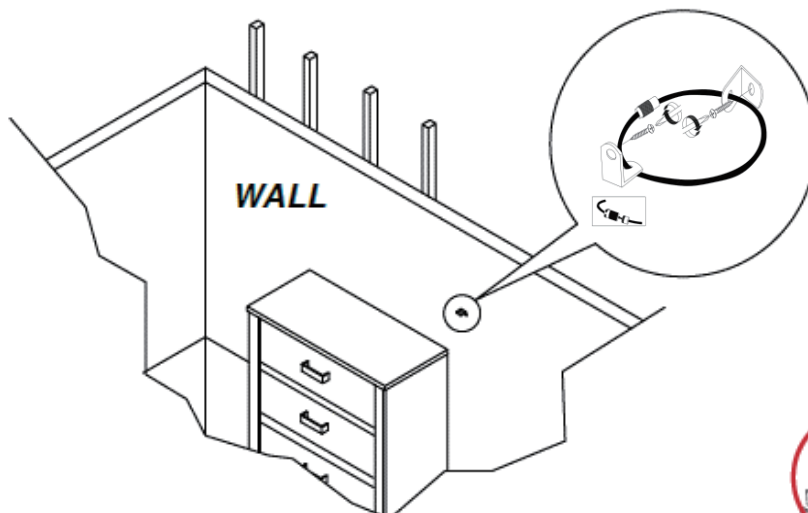

Note : Dimension tolerance $\pm 5\%$