

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

710543 *TV STAND*

REVISION 0 : 11/25/2024 REVISION 1 : 03/11/2025

PAGE 1 OF 9

COASTERFURNITURE.COM

ITEM: 710543

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.

2. Please check to see that all hardware and parts are present prior to start of assembly.

3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately. 2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

60 MINUTES

MAX TV SIZE: 85"

PARTS IDENTIFICATION

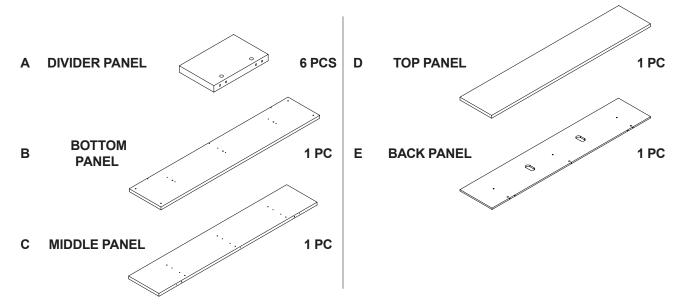

HARDWARE IDENTIFICATION

Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	5	LONG SCREW Ø 4.5x42mm SR	AULIUIU M	3 PCS
2	WOODEN DOWEL Ø8x30mm		30 PCS	6	BOLT Ø9.5x55mm SR	Management	15 PCS
3	CAM BOLT Ø7x35.5mm SR		15 PCS	7	FOOT Ø35xH19mm		7 PCS
4	CAM LOCK Ø15x12mm SR		15 PCS	8	STICKER Ø20mm		3 PCS

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **710543 STEP 1**









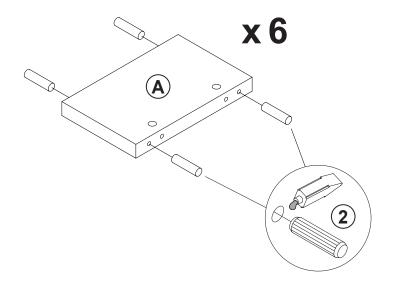

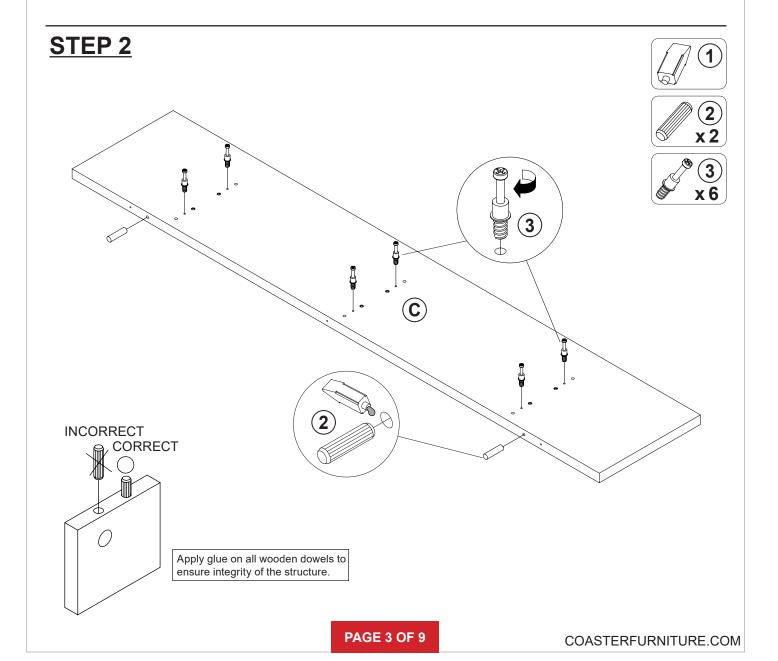

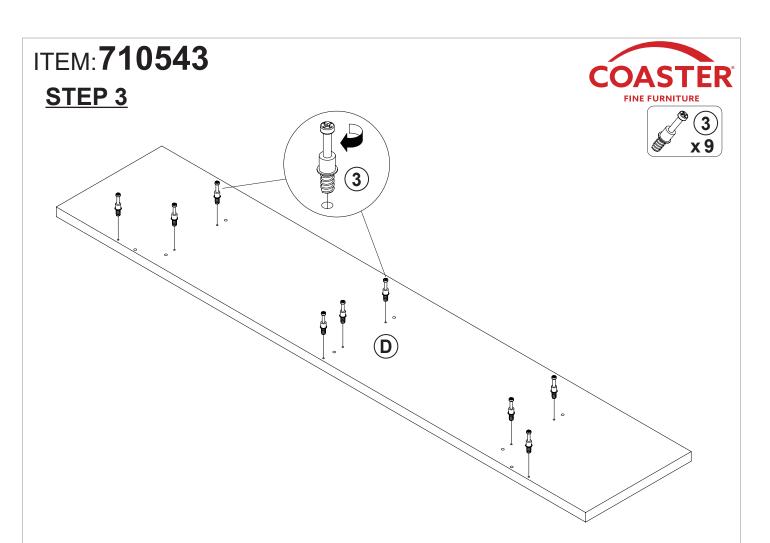


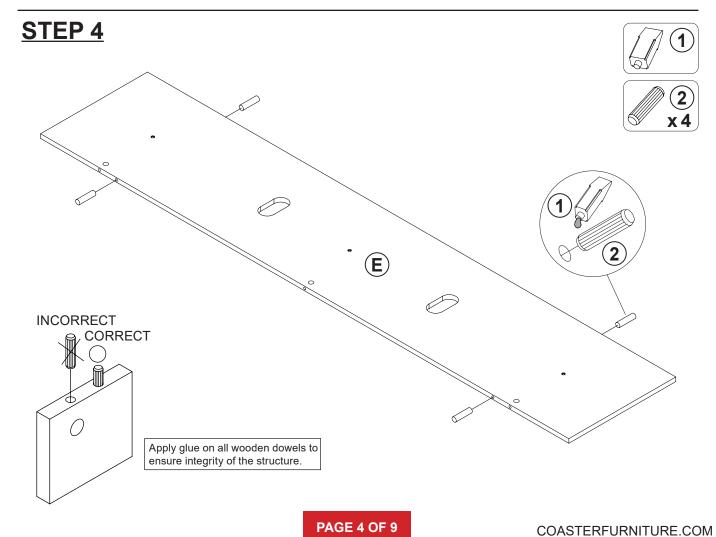


ITEM: **710543 STEP 5**





COASTERFURNITURE.COM

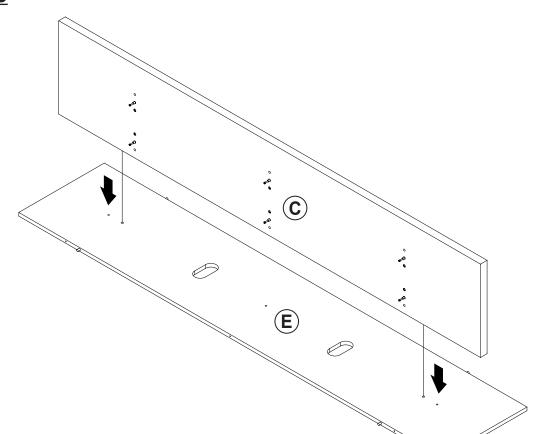



PAGE 5 OF 9

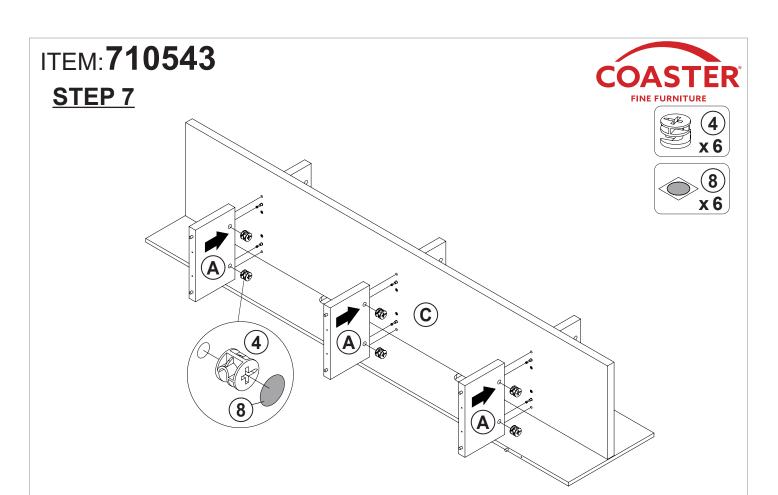

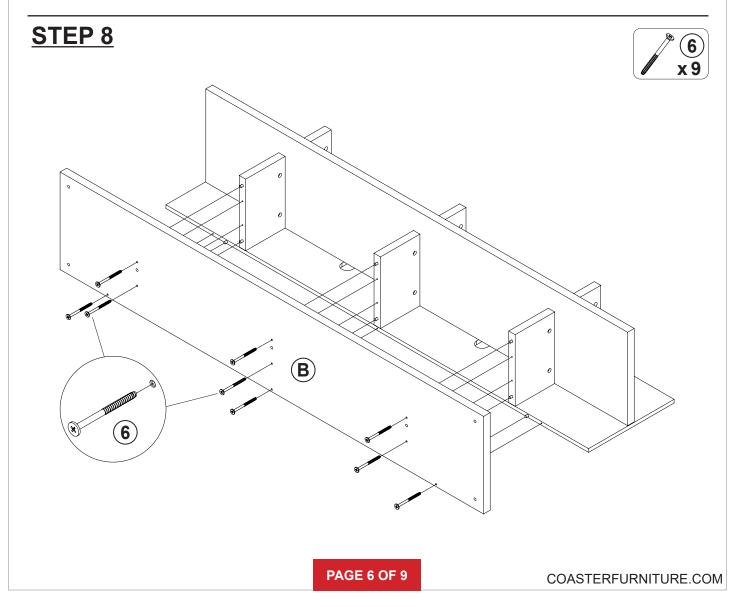


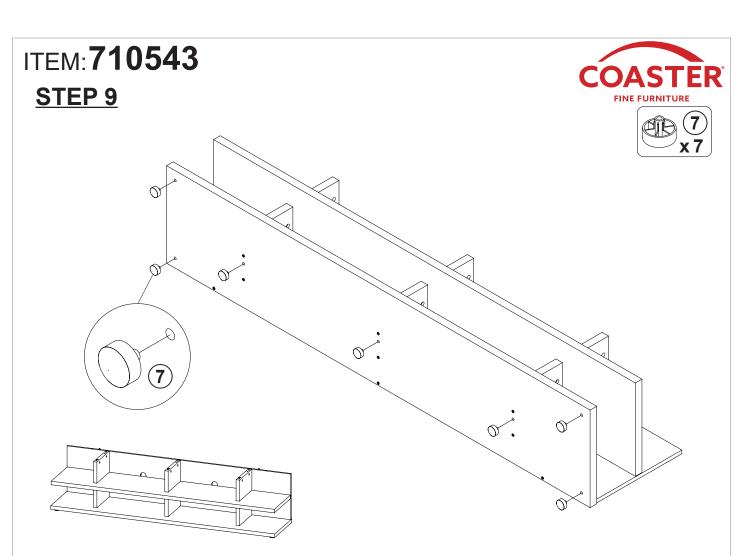

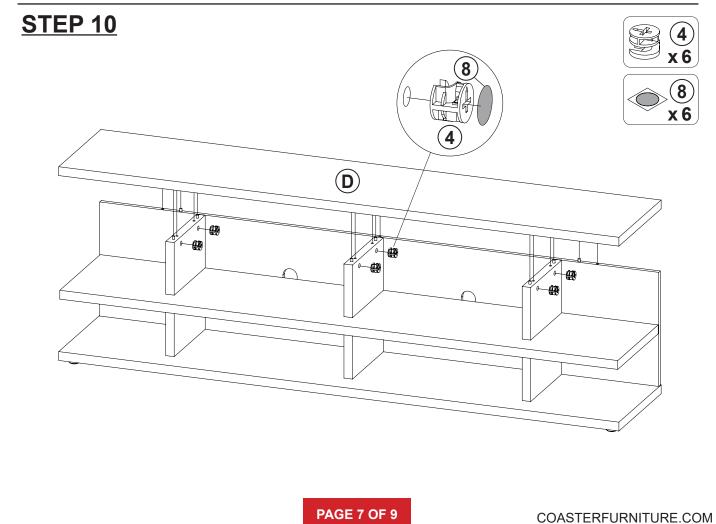

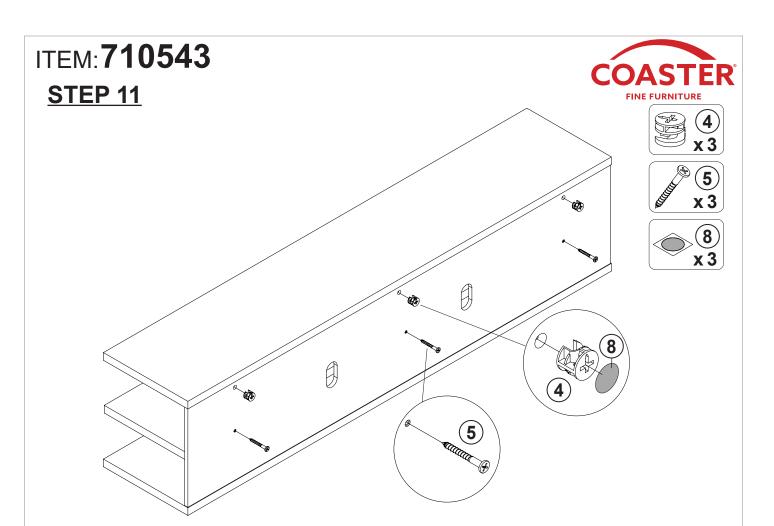


STEP 12 COMPLETE

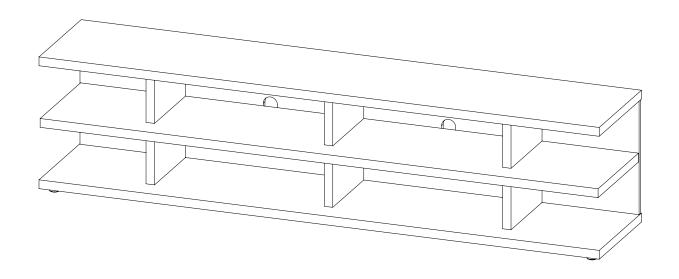

ITEM: 710543



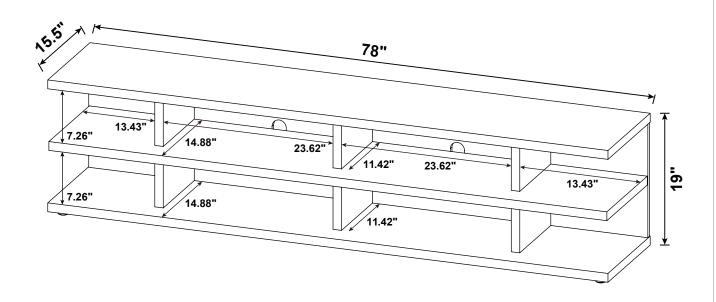

Note: Dimension tolerance ±5%