


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

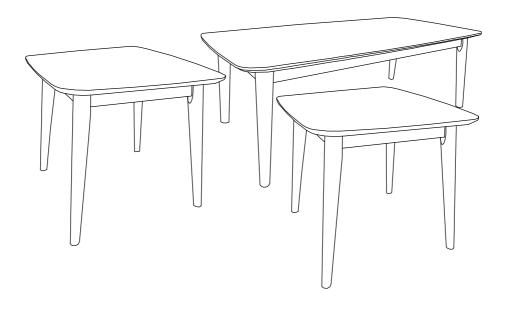

Fine Furniture for every stage of life

753524 *3Pc Occasional Set*

ITEM: 753524





ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

20 MINUTES

PARTS IDENTIFICATION

A	COFFEE TABLE TOP	1PC
В	COFFEE TABLE LEG	4PCS
С	END TABLE TOP	2PCS
D	END TABLE LEG	8PCS

HARDWARE IDENTIFICATION

1	ALLEN WRENCH (M4 x 63mm - BLK)	1PC
2	BOLT (M6 x 60mm - RBW)	24PCS
3	LOCK WASHER (1/4" - BLK)	24PCS
4	FLAT WASHER (5/16" - RBW)	24PCS


PAGE 2 OF 4

ITEM: **753524**

ASSEMBLY INSTRUCTIONS



COFFEE TABLE STEP 1

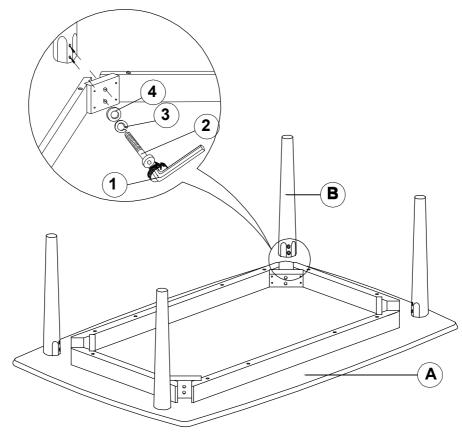

STEP 2 COMPLETE



PAGE 3 OF 4


ITEM: **753524**

ASSEMBLY INSTRUCTIONS



END TABLE

STEP 3

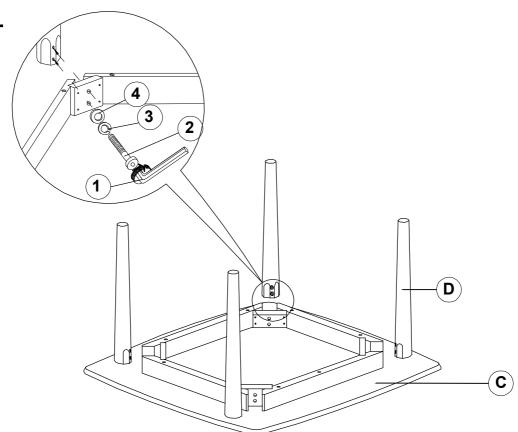



STEP 4 COMPLETE







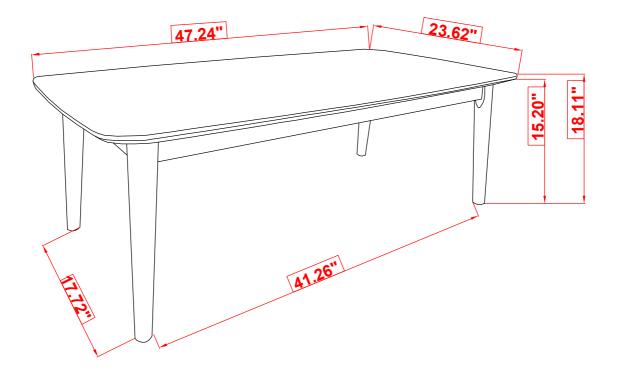

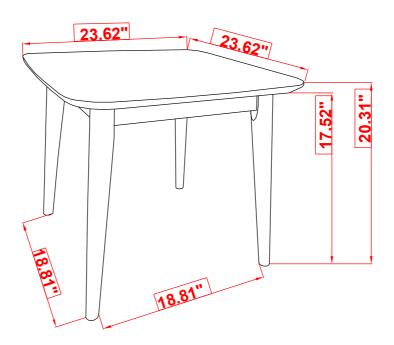

Note: Dimension tolerance ±5%