

ITEM #: GS640WMT/GS640CTB Grayson White Marble Top Counter Table 40" x 60 "x 36"H

Your furniture purchase is an investment. Here are a few tips to maximize the lifetime of your furniture with a minimal amount of effort. Properly caring for your furniture can help ensure that it looks great year after year.

Wood Furniture Maintenance:

- Always dust, wipe, and clean with the grain of the wood.
- Dust with a soft cloth. Dust will scratch the furniture surface if not removed properly.
- If a polished surface becomes foggy, rub it with a cloth dipped in a solution of one tablespoon vinegar to one quart of water. Rub softly with the grain until the surface is completely dry.
- Soap and water are not advisable for wood surfaces. Water can penetrate the finish and raise the grain on wood, causing damage.
- Remember to change dusting cloths frequently as dirty cloths may scratch your furniture's surface.

The Enemies of Wood:

- Moisture is wood's worst enemy. Liquid spills should be gently wiped up immediately. Coasters should be used under all beverages.
- Do not allow rubber or vinyl materials to lie on the furniture. Chemicals in rubber may leave a stain. Put a strip of felt or leather under accessories that have rubber or vinyl.
- Heat creates a chemical change in the furniture's finish, which result in a white spot. Use protective pads under hot dishes, appliances, etc.
- Sunlight's ultraviolet rays can damage the finish of furniture. Do not place furniture directly against a heater or radiator and do not place in the path of hot streams of air from central heating. This will cause extreme localized drying of the wood.

Marble top maintenance:

Marble stone has many natural characteristics including veining ,hairline cracks and colour variations ,which make up the stones beauty.

The surface of the marble on your table is machine polished to give it a sheen ,no chemical sealer or polish has been used, therefore the following protective measures apply to maintain the beauty of your marble:

Protect surface from scratching ,staining and etching by :

- *Keeping surface free of debris or sharp objects
- *Using place mats for all dishes, glasses & like items
- *Wipe up spills immediately ,acidic food and beverages can stain leaving a dull mark.
- *Avoid contact with chemicals (ie. inappropriate cleaning agents)
- *Clean with PH neutral products or those especially formulated for use on marble ,dull spots can be repaired by a specified marble polish or consult a marble technician for best results .

Caring for the Fabric on Upholstered Furniture:

- -Frequent vacuuming of the entire upholstered area will prevent dust from settling into the fibers.
- -Professional cleaning is always recommended for all upholstered pieces.
- -Do not use cleaning products containing brightening agents.




GS640WMT/GS640CTB

Assembly Instructions

*PUT ALL SCREWS IN LOOSELY AT FIRST.

Do not fully tighten bolts & screws until the entire item is completely assembled

Note: More than 2 people assemble required

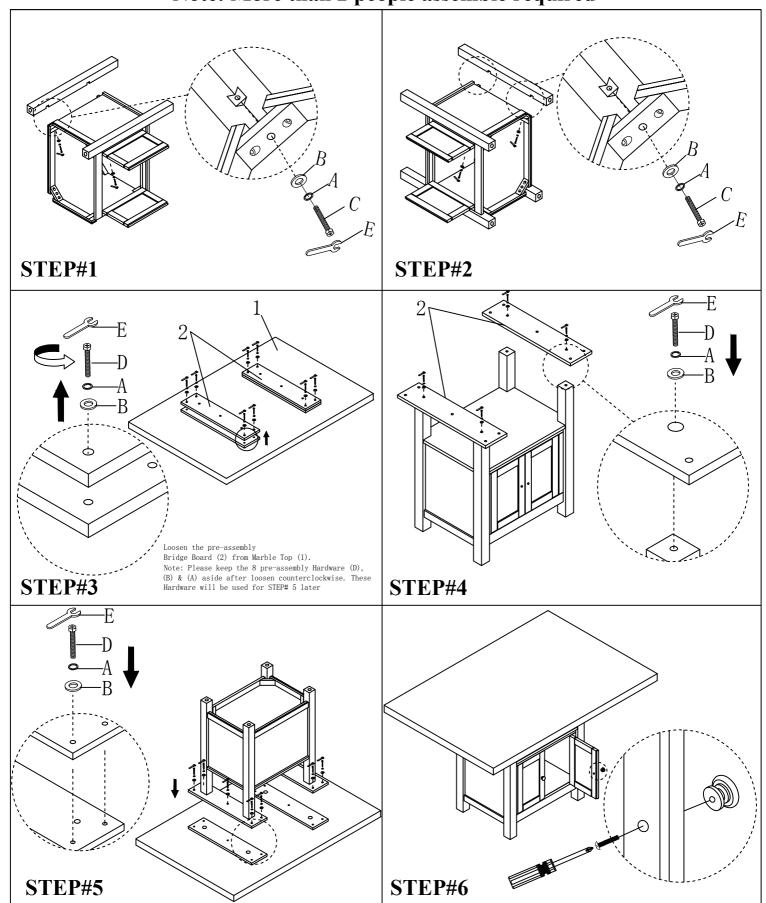


Hardware Pack #: PGS640CTBH

A	0	5/16"	22PCS
В		5/16"x19mm	22PCS
C		5/16"x2-1/2"	8PCS
D		5/16"x1-1/2"	14PCS
E		5/16"	1PC

WARNING

- MARBLE/GRANITE IS NON-STAIN RESISTANT AGAINST FOODS AND ACIDIC OR OILY LIQUID
- IF ACIDIC OR OILY LIQUID SPILLS OVER THE MARBLE/GRANITE TABLE TOP, PLEASE IMMEDIATELY USE A DAMP SPONGES AND DETERGENT OR TOOTHPASTE TO WIPE MARBLE/GRANITE TABLE TOP UNTIL IT IS CLEAN
- COMMON OILY SUBSTANCES: COOKING OIL, OLIVE OIL COMMON ACIDIC SUBSTANCES: KETCHUP, VINEGAR, GRAPE JUICE, LEMON JUICE
- MARBLE/GRANITE IS A NATURAL STONE PRODUCT. ANY VARIATIONS IN PATTERN, TEXTURE, AND COLOR ARE INHERENT IN THE MATERIAL AND ENHANCE THE NATURAL BEAUTY OF THE STONE.
- PLEASE DO NOT PLACE COLD OR HOT ITEMS DIRECTLY ON THE STONE

PARTS FOR GS640WMT/GS640CTB COMPLETE HARDWARE #: PGS640CTBH

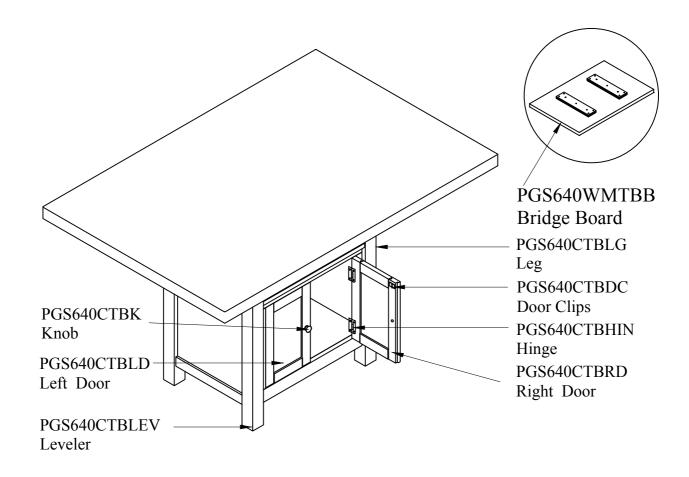

	PRODUCT DETAILS			
TOP	GUANG XI WHITE MARBLE WITH PW			
LEG	RUBBERWOOD			
MARBLE TOP THICKNESS	ARBLE TOP THICKNESS 55MM			
SIDE PANEL	ASH VENEER ON PB	ASH VENEER ON PB		
DOOR CLIP IRON				
EFT/RIGHT DOOR MDF+ASH VENEER+RUBBERWOOD		WOOD		
KNOB/HINGE	IOB/HINGE IRON			
BRIDGE BOARD	MDF	MDF		
LEVELER IRON+PLASTIC				
PRODUCT SIZE	40"x60"x36"H			
CARTON SIZE	GS640WMT:64.75"x44.75"x7"	GS640CTB:30"x22.25"x23"		
NET WEIGHT	GS640WMT:82.5KG/181.50LBS	GS640CTB:18.9KG/41.58LBS		
GROSS WEIGHT	GS640WMT:90KG/198.00LBS	GS640CTB:21.5KG/47.30LBS		
CU.FT.	GS640WMT:11.65'	GS640CTB:8.82'		

MADE IN CHINA



ITEM#:GS640CCG Grayson Counter Chair, Gray 20"x24.5"x41.5"H

Your furniture purchase is an investment. Here are a few tips to maximize the lifetime of your furniture with a minimal amount of effort. Properly caring for your furniture can help ensure that it looks great year after year.

Wood Furniture Maintenance:

- Always dust, wipe, and clean with the grain of the wood.
- Dust with a soft cloth. Dust will scratch the furniture surface if not removed properly.
- If a polished surface becomes foggy, rub it with a cloth dipped in a solution of one tablespoon vinegar to one quart of water. Rub softly with the grain until the surface is completely dry.
- Soap and water are not advisable for wood surfaces. Water can penetrate the finish and raise the grain on wood, causing damage.
- Remember to change dusting cloths frequently as dirty cloths may scratch your furniture's surface.

The Enemies of Wood:

- Moisture is wood's worst enemy. Liquid spills should be gently wiped up immediately. Coasters should be used under all beverages.
- Do not allow rubber or vinyl materials to lie on the furniture. Chemicals in rubber may leave a stain. Put a strip of felt or leather under accessories that have rubber or vinyl.
- Heat creates a chemical change in the furniture's finish, which result in a white spot. Use protective pads under hot dishes, appliances, etc.
- Sunlight's ultraviolet rays can damage the finish of furniture. Do not place furniture directly against a heater or radiator and do not place in the path of hot streams of air from central heating. This will cause extreme localized drying of the wood.

Marble top maintenance:

Marble stone has many natural characteristics including veining ,hairline cracks and colour variations ,which make up the stones beauty.

The surface of the marble on your table is machine polished to give it a sheen ,no chemical sealer or polish has been used, therefore the following protective measures apply to maintain the beauty of your marble:

Protect surface from scratching ,staining and etching by :

- *Keeping surface free of debris or sharp objects
- *Using place mats for all dishes, glasses & like items
- *Wipe up spills immediately ,acidic food and beverages can stain leaving a dull mark.
- *Avoid contact with chemicals (ie. inappropriate cleaning agents)
- *Clean with PH neutral products or those especially formulated for use on marble ,dull spots can be repaired by a specified marble polish or consult a marble technician for best results .


Caring for the Fabric on Upholstered Furniture:

- -Frequent vacuuming of the entire upholstered area will prevent dust from settling into the fibers.
- -Professional cleaning is always recommended for all upholstered pieces.
- -Do not use cleaning products containing brightening agents.



GS640CCG Assembly Instructions *PUT ALL SCREWS IN LOOSELY AT FIRST.


Do not fully tighten bolts & screws until the entire item is completely assembled

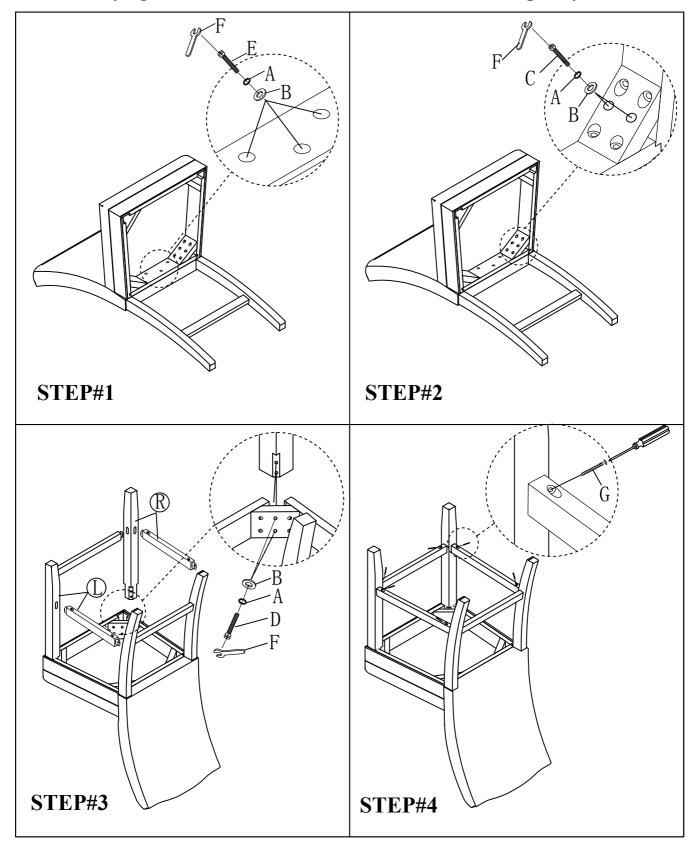

Hardware Pack #: PGS640CCGH

A	0	5/16"	11PCS
В		5/16"x22mm	11PCS
C		5/16"x3-1/2"	4PCS
D		5/16"x2-1/2"	4PCS
E		5/16"x2-1/4"	3PCS
F		5/16"	1PC
G		#8x2''	6PCS

PARTS FOR GS640CCG COMPLETE HARDWARE #: PGS640CCGH

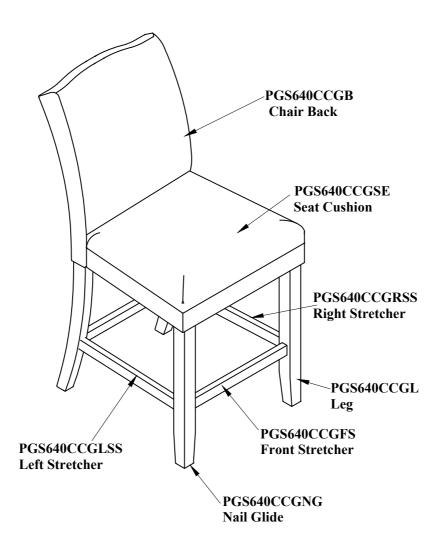

PRODUCT DETAILS		
BACK	RUBBERWOOD+FOAM+FABRIC	
SEAT BOX	RUBBERWOOD+FOAM+FABRIC	
LEG	RUBBERWOOD	
STRETCHER	RUBBERWOOD	
NAIL GLIDE	PLASTIC+IRON	
SEAT HEIGHT/DEPTH	25.5"/17.25"	
COLOR OF FABRIC	GREY	
PRODUCT SIZE	20"x24.5"x41.5"	
CARTON SIZE	42.5"x14"x19"	
NET WEIGHT	17.8KG/39.16LBS	
GROSS WEIGHT	21KG/46.2LBS	
CU.FT.	6.7'	



MADE IN CHINA

Steve Silver Company Dining Chairs

Assembly Troubleshooting Guide

The most important element of correct chair assembly is to tighten the bolts as directed. Prematurely tightening the bolts can lead to numerous issues and will lengthen the assembly time. Listed below are the most common issues in chair assembly and their easy solutions.

PROBLEM: Chair is unlevel.

Cause 1:

Unlevel chairs can occur if the bolts are fully tightened before all bolts are attached. There is a variance in the alignment of this chair to allow the chair to be assembled more easily.

Solution:

Loosen each bolt in the seat box (front legs, back corner blocks and back apron) until they are finger tight. Place the chair upright on the floor. Sit in the chair for about 30 seconds. Carefully turn the chair upside down and tighten each bolt. The chair will now be level.

Cause 2:

Unlevel chairs can occur if one or more of the floor glides are missing from the bottom of the chair leg.

Solution:

Request a set of floor glides from the e-mail address below.

PROBLEM: Bolts do not fit properly.

Cause:

This issue can occur when the bolts are tightened fully before all bolts are attached. There is a variance in the alignment of the bolts to allow the chair to be assembled more easily. Tightening the bolts prematurely can cause the holes for the other bolts to become slightly misaligned, causing the remaining bolts not to fit properly.

Solution:

Make sure each bolt in the seat box (front legs, back corner blocks and back apron) is loosened until finger tight. This will allow you to realign the holes, and the bolts will now fit properly.

Questions?

Please reach us at 800-344-7278 or ar@ssilver.com, and we will be happy to help you.



ITEM#:GS640CBG Grayson Storage Counter Bench,Gray 47"x17"x25.5"H

Your furniture purchase is an investment. Here are a few tips to maximize the lifetime of your furniture with a minimal amount of effort. Properly caring for your furniture can help ensure that it looks great year after year.

Wood Furniture Maintenance:

- Always dust, wipe, and clean with the grain of the wood.
- Dust with a soft cloth. Dust will scratch the furniture surface if not removed properly.
- If a polished surface becomes foggy, rub it with a cloth dipped in a solution of one tablespoon vinegar to one quart of water. Rub softly with the grain until the surface is completely dry.
- Soap and water are not advisable for wood surfaces. Water can penetrate the finish and raise the grain on wood, causing damage.
- Remember to change dusting cloths frequently as dirty cloths may scratch your furniture's surface.

The Enemies of Wood:

- Moisture is wood's worst enemy. Liquid spills should be gently wiped up immediately. Coasters should be used under all beverages.
- Do not allow rubber or vinyl materials to lie on the furniture. Chemicals in rubber may leave a stain. Put a strip of felt or leather under accessories that have rubber or vinyl.
- Heat creates a chemical change in the furniture's finish, which result in a white spot. Use protective pads under hot dishes, appliances, etc.
- Sunlight's ultraviolet rays can damage the finish of furniture. Do not place furniture directly against a heater or radiator and do not place in the path of hot streams of air from central heating. This will cause extreme localized drying of the wood.

Marble top maintenance:

Marble stone has many natural characteristics including veining ,hairline cracks and colour variations ,which make up the stones beauty.

The surface of the marble on your table is machine polished to give it a sheen ,no chemical sealer or polish has been used, therefore the following protective measures apply to maintain the beauty of your marble:

Protect surface from scratching ,staining and etching by :

- *Keeping surface free of debris or sharp objects
- *Using place mats for all dishes, glasses & like items
- *Wipe up spills immediately ,acidic food and beverages can stain leaving a dull mark.
- *Avoid contact with chemicals (ie. inappropriate cleaning agents)
- *Clean with PH neutral products or those especially formulated for use on marble ,dull spots can be repaired by a specified marble polish or consult a marble technician for best results .


Caring for the Fabric on Upholstered Furniture:

- -Frequent vacuuming of the entire upholstered area will prevent dust from settling into the fibers.
- -Professional cleaning is always recommended for all upholstered pieces.
- -Do not use cleaning products containing brightening agents.



GS640CBG Assembly Instructions *PUT ALL SCREWS IN LOOSELY AT FIRST.


Do not fully tighten bolts & screws until the entire item is completely assembled

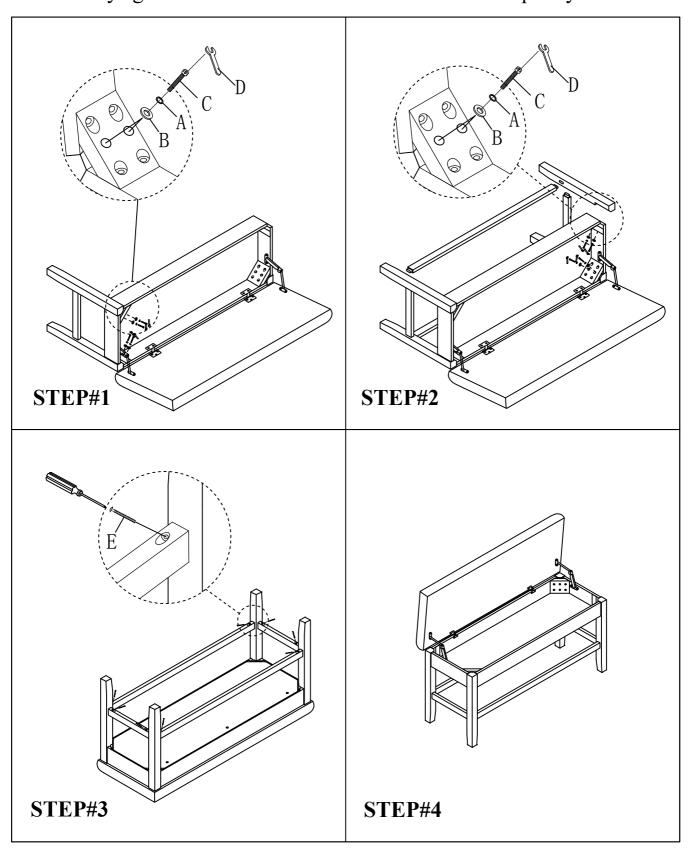

Hardware Pack #: PGS640CBGH

A	0	5/16"	8PCS
В		5/16"x22mm	8PCS
C		5/16"x2-1/2"	8PCS
D		5/16"	1PC
E		#8x2"	8PCS

PARTS FOR GS640CBG COMPLETE HARDWARE #: PGS640CBGH

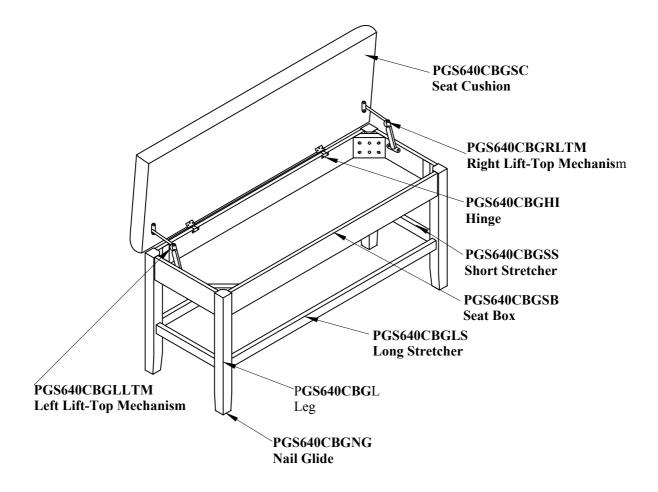

PRODUCT DETAILS		
SEAT BOX	ASH VENEER ON MDF	
LEG	RUBBERWOOD	
STRETCHER	RUBBERWOOD	
NAIL GLIDE	PLASTIC+IRON	
SEAT CUSHION	PW+MDF+FOAM+FABRIC	
LIFT-TOP MECHANISM	IRON	
HINGE	IRON	
SEAT HEIGHT/DEPTH	25.5"/17"	
COLOR OF FABRIC	GREY	
PRODUCT SIZE	47"x17"x25.5"	
CARTON SIZE	48.25"x18.25"x10.5"	
NET WEIGHT	18.8KG/41.36LBS	
GROSS WEIGHT	21KG/46.2LBS	
CU.FT.	5.29'	



MADE IN CHINA

Steve Silver Company Dining Chairs

Assembly Troubleshooting Guide

The most important element of correct chair assembly is to tighten the bolts as directed. Prematurely tightening the bolts can lead to numerous issues and will lengthen the assembly time. Listed below are the most common issues in chair assembly and their easy solutions.

PROBLEM: Chair is unlevel.

Cause 1:

Unlevel chairs can occur if the bolts are fully tightened before all bolts are attached. There is a variance in the alignment of this chair to allow the chair to be assembled more easily.

Solution:

Loosen each bolt in the seat box (front legs, back corner blocks and back apron) until they are finger tight. Place the chair upright on the floor. Sit in the chair for about 30 seconds. Carefully turn the chair upside down and tighten each bolt. The chair will now be level.

Cause 2:

Unlevel chairs can occur if one or more of the floor glides are missing from the bottom of the chair leg.

Solution:

Request a set of floor glides from the e-mail address below.

PROBLEM: Bolts do not fit properly.

Cause:

This issue can occur when the bolts are tightened fully before all bolts are attached. There is a variance in the alignment of the bolts to allow the chair to be assembled more easily. Tightening the bolts prematurely can cause the holes for the other bolts to become slightly misaligned, causing the remaining bolts not to fit properly.

Solution:

Make sure each bolt in the seat box (front legs, back corner blocks and back apron) is loosened until finger tight. This will allow you to realign the holes, and the bolts will now fit properly.

Questions?

Please reach us at 800-344-7278 or ar@ssilver.com, and we will be happy to help you.