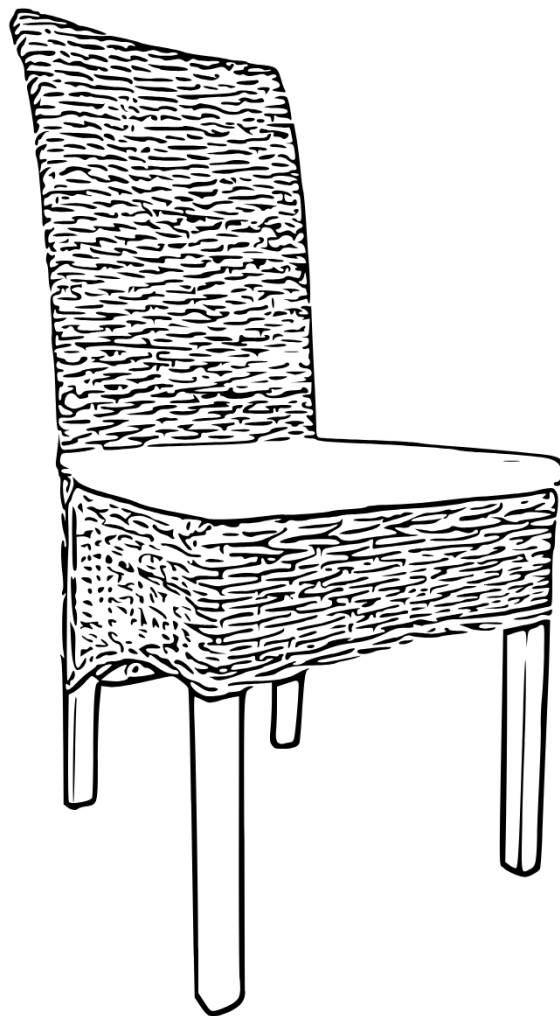


 
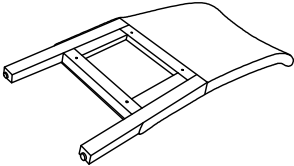
 
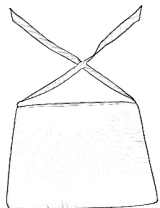
CROSLEY

FURNITURE

 
 
Dining Chair **CF503021**



PART LIST

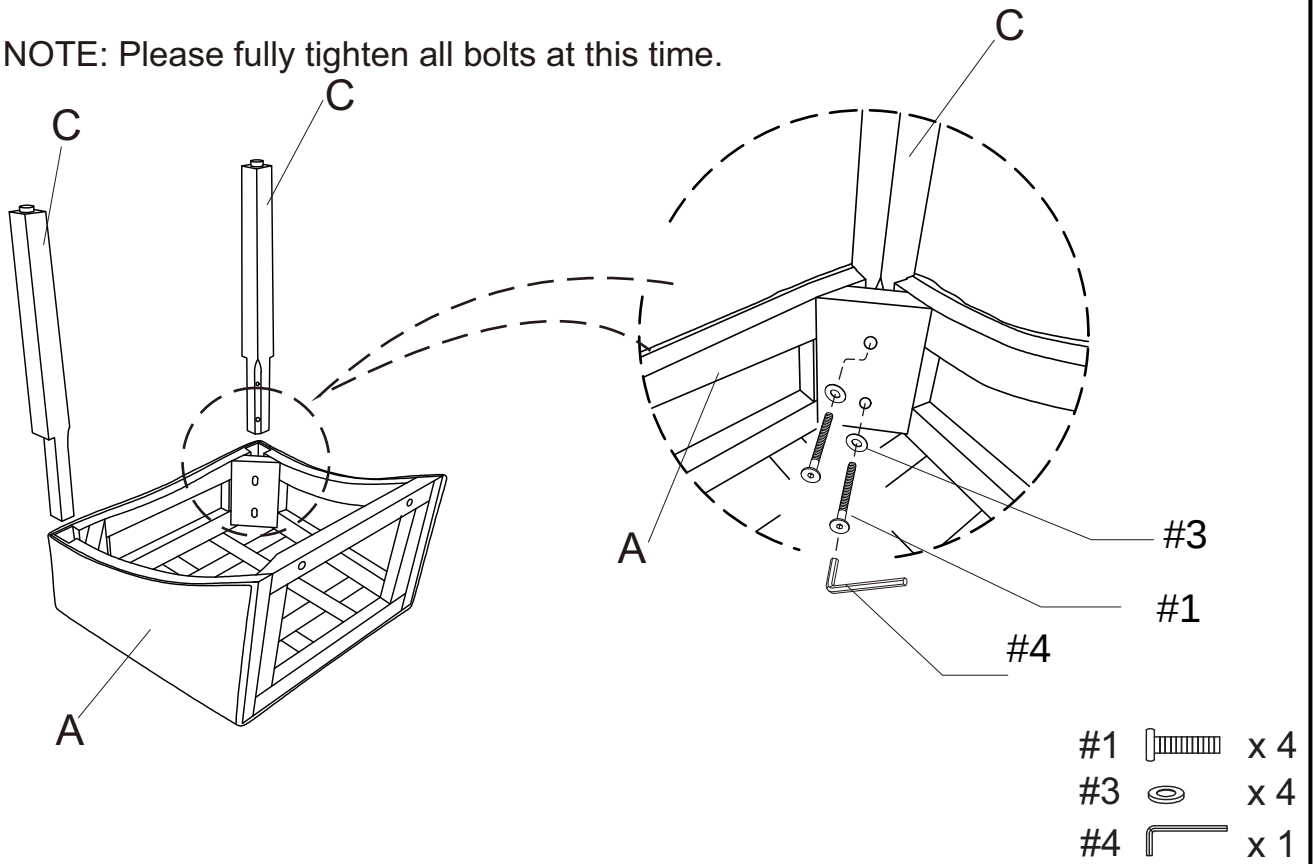
A 	B 	C 	D 
Seat Panel 2 PCS	Backrest 2 PCS	Front Leg 4 PCS	Cushion 2 PCS

HARDWARE LIST

1  1/4" x 2" L	2  1/4" x 1.1/2" L	3 	4 
Long Bolt 8 PCS (Extra 1)	Short Bolt 8 PCS (Extra 1)	Flat Washer 16 PCS (Extra 1)	Allen Wrench 1 PC

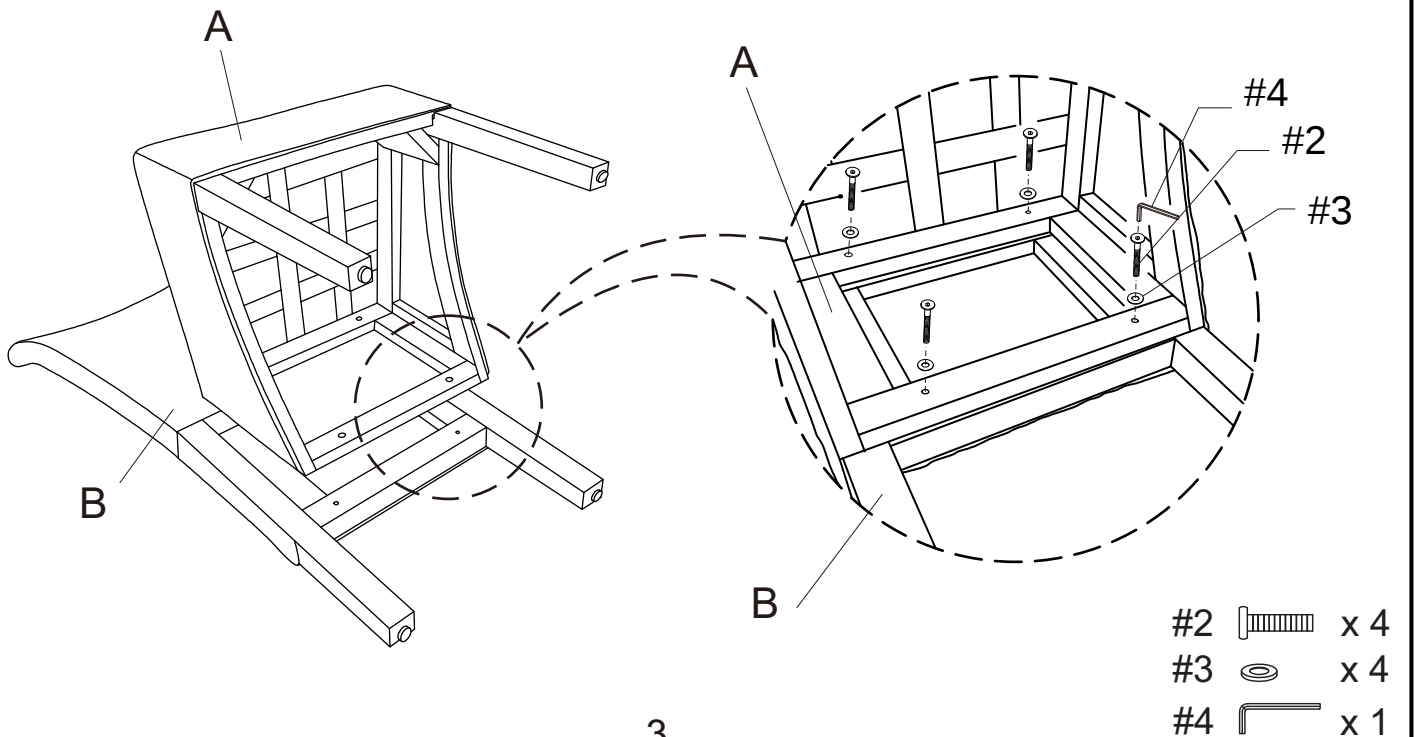
Step 1 : Carefully turn seat panel (part A) upside down on a flat, soft surface, such as carpet.
 Attach front legs (part C) to seat panel (part A) using long bolts (part #1), flat washers (part #3) and allen wrench (part #4).

NOTE: Please fully tighten all bolts at this time.

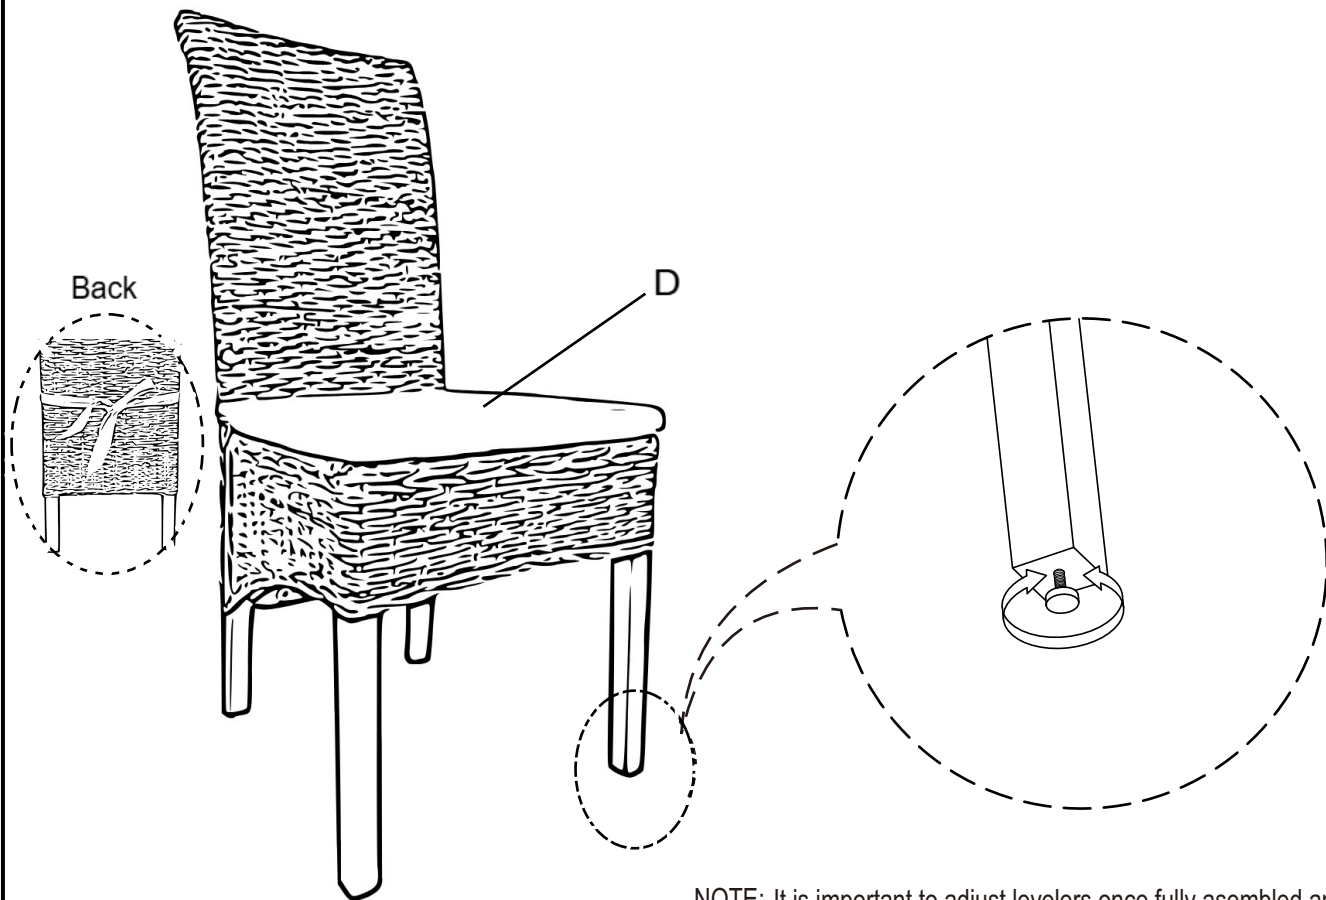


Step 2 : Lay backrest (part B) down on a flat, soft surface, such as carpet.
 Attach assembled unit (parts A & C) to backrest (part B) using short bolts (part #2), flat washers (part #3) and allen wrench (part #4)

NOTE: Please fully tighten all bolts at this time.



STEP 3 : Carefully turn unit upright. Tie cushion (part D) onto the seat. Repeat steps 1- 3 to assemble remaining chair.



NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.