

This microwave is equipped with a two-step Child Resistant implemented by all manufacturers of countertop microwave beverage items and to further reduce the potential risk of injury from microwave.

PLEASE READ INSTRUCTIONS THE MICROWAVE OVEN IS SHOWN



Step 1

CHILD RESISTANT TO OPEN THE DOOR

The door will automatically unlock.

1. Press either **Start** or **Cancel**.
2. Press the **Front** button.

model.


Note: Door will remain locked.

HOW TO DISARM

In some cases, it may be difficult to disarm the microwave if you do not have young children. This feature can be disabled.

1. Press and hold the **Start** button.
2. Press the **"9"** key.
3. Press the **"0"** key.

Express Cook

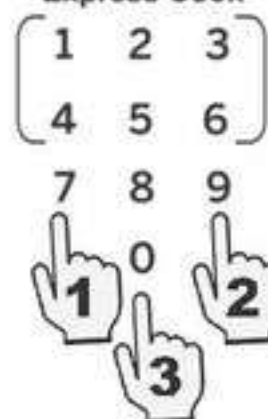

Step 2