

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

721037 End Table

REVISION 0 : 05/08/2017 REVISION 1 : 06/17/2019 REVISION 2 : 10/18/2019 REVISION 3 : 09/05/2023

PAGE 1 OF 4

COASTERFURNITURE.COM



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- Remove hardware from box and sort by size.
 Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

(• • • ⇗ 1PC TOP С **LEG** 4PCS **BOTTOM SHELF** 1PC


HARDWARE IDENTIFICATION

FLAT WASHER ALLEN WRENCH (\bigcirc) 1PC 8PCS 1 (Ø1/4" x 19MM - BLK) (4MM - BLK) WOOD DOWEL ALLEN BOLT 4PCS 2 8PCS (Ø8 x 40MM) (Ø1/4" x 2"= BLK) **LOCK WASHER** 3 8PCS (Ø1/4" - BLK)


ASSEMBLY INSTRUCTIONS

COASTER'


STEP 1

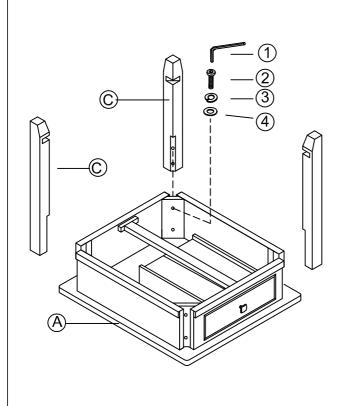

STEP 2

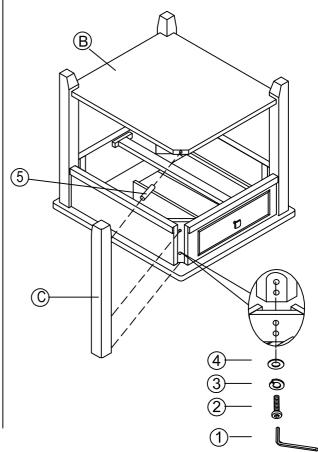


STEP 3 COMPLETE

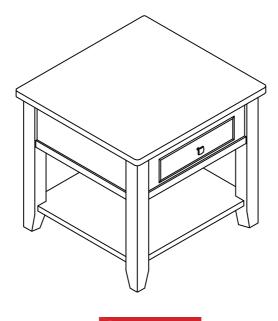

PAGE 3 OF 4





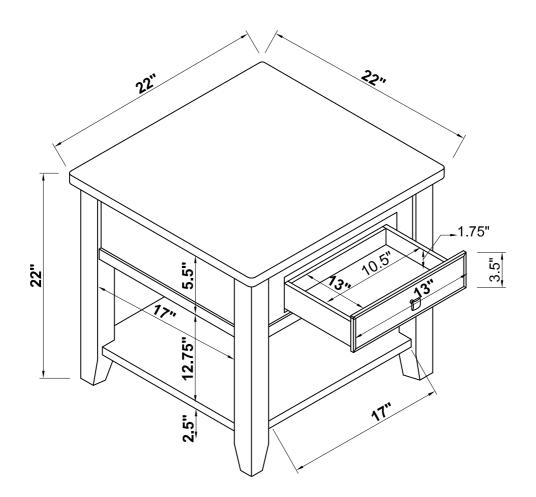

Note: Dimension tolerance ±5%



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

721038 Coffee Table

REVISION 0:05/08/2017 REVISION 1:06/17/2019 REVISION 2:10/18/2019 REVISION 3:09/05/2023

PAGE 1 OF 4

COASTERFURNITURE.COM



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- Remove hardware from box and sort by size.
 Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.


- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

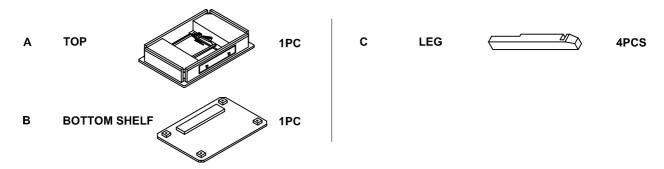

HARDWARE IDENTIFICATION

1	ALLEN WRENCH (4MM - BLK)		1PC	5	CASTER WITH LOCK (Ø 40MM - BLK)		2PCS
2	ALLEN BOLT (Ø1/4 x 2" - BLK)		8PCS	6	CASTER (Ø 40MM-BLK)		2PCS
3	LOCK WASHER (Ø1/4" -BLK)	0	8PCS	7	WRENCH (14MM -BLK)	5	1PC
4	FLAT WASHER (Ø1/4" x 19MM- BLK)		8PCS	8	WOOD DOWEL (Ø8 x 40MM)		4PCS


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ASSEMBLY INSTRUCTIONS


COASTER'

STEP 1

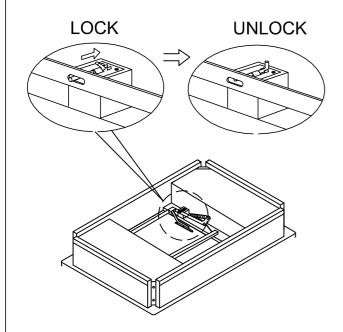


STEP 2

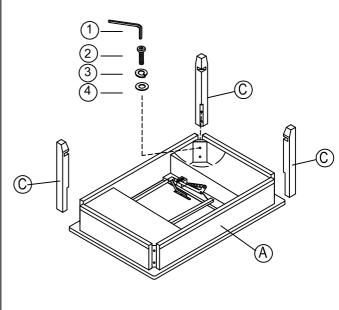

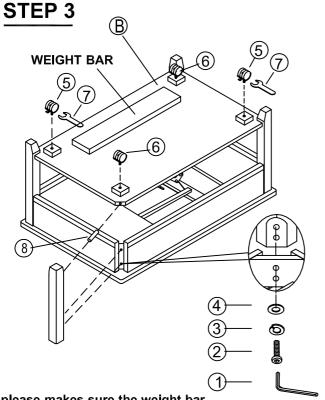

STEP 4
COMPLETE

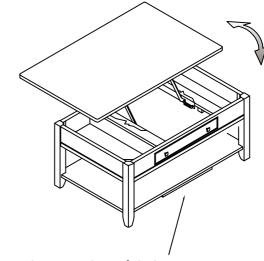

please makes sure the weight bar is located at the opposite of lift top direction. Do not assembled into wrong direction.


please makes sure the weight bar is located at the opposite of lift top direction.

Do not assembled into wrong direction.



COASTERFURNITURE.COM



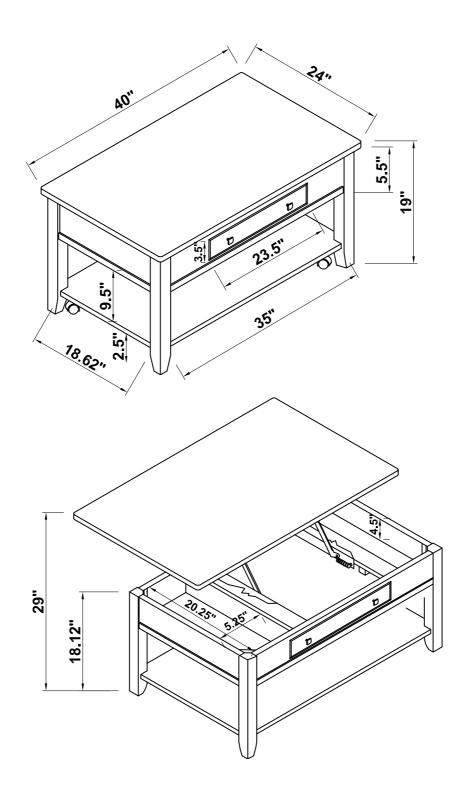

Note: Dimension tolerance ±5%