



1 Install the WattBox and connect to the Network

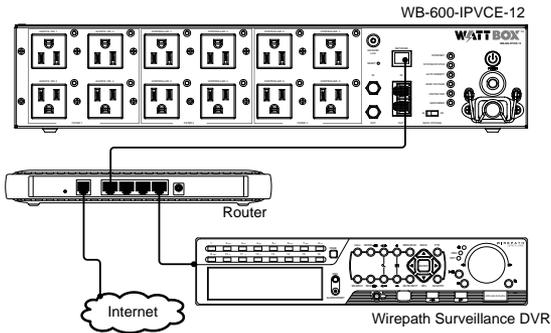


⚡ Do not power on the WattBox until connected to the network and the router is powered ON,

2 Install the WattBox Configuration Utility

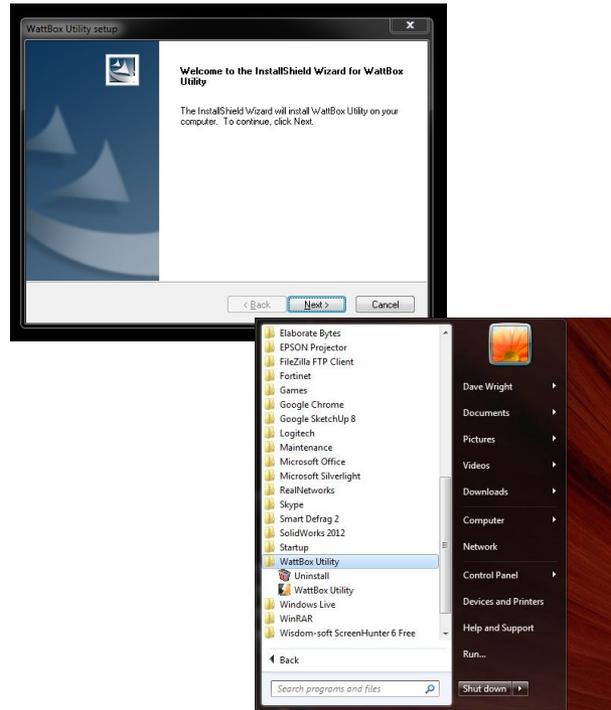


- ⚡ Installed Location on the PC:
Start>All Programs>WattBox Utility
- ⚡ Tip: Add the utility to the Start Menu / Taskbar or create a shortcut on the desktop for easy access

3 Update the WattBox to the Latest Firmware

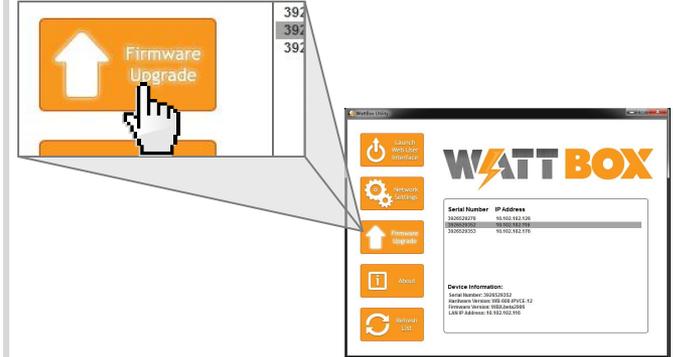


- ⚡ Download the latest firmware from www.SnapAV.com
- ⚡ To update multiple WattBox devices at the same time:
Hold down Ctrl while left clicking on the devices in the list.
- ⚡ Click on **Firmware Update**

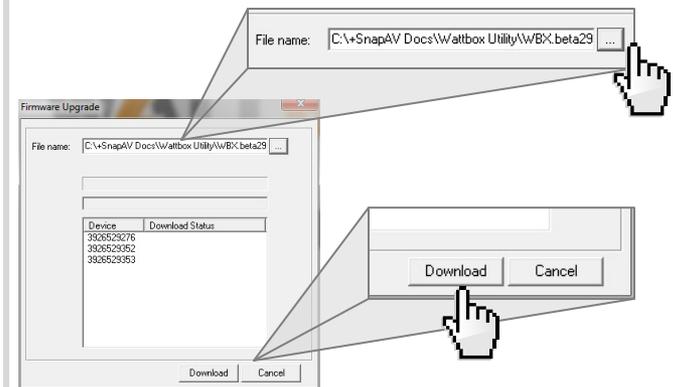


- ⚡ Click on the box to the right of file name to select a file to download
- ⚡ Navigate to the location where the firmware file was saved and click **Open**
- ⚡ Click on **Download** to start the download process

Do **NOT** power off the WattBox during the installation process

4 Configure for Static IP Address

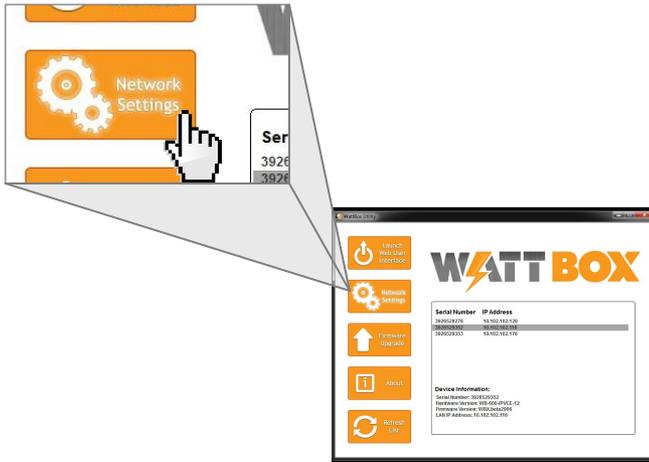


- ⚡ Select a WattBox from the device list
- ⚡ Click on **Network Settings**

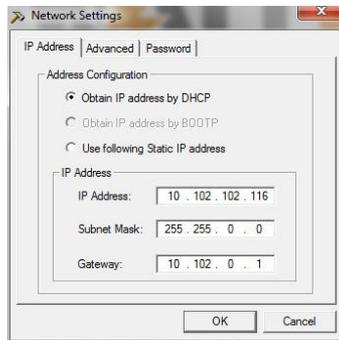

- ⚡ Select **Use Following Static IP Address**
- ⚡ Enter an available Static IP Address
- ⚡ Enter the Subnet Mask
- ⚡ Enter the Default Gateway (IP Address used to access the router)
- ⚡ Click on OK to save settings

5 Login to the WattBox

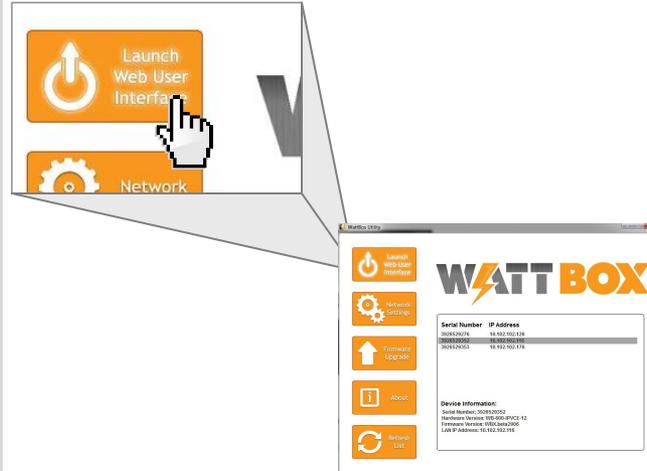


- ⚡ Select a WattBox IP address from the list
- ⚡ Click **Launch Web Browser**
- ⚡ The default browser will open with a login screen




- ⚡ The default browser will open with a login screen
- Default Username: admin
Default Password: none (Leave Blank)

6 Configure System Time

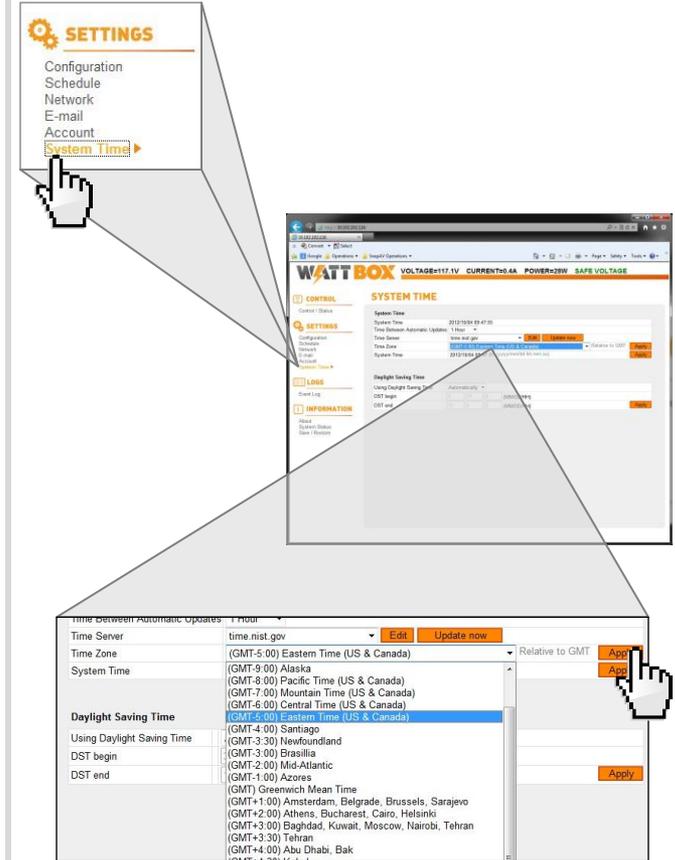

- ⚡ Click on **System Time** under Settings
- ⚡ Select the appropriate Time Zone and click apply next to **Time Zone**
- ⚡ The correct date and time will be automatically set, no other settings require changing for basic setup.

7 Change the Administrator Password

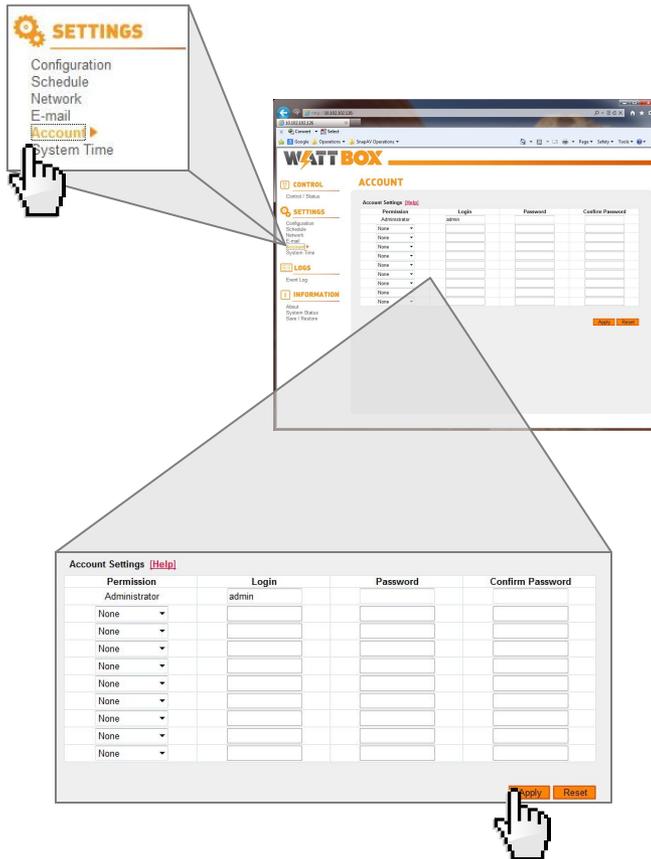

- ⚡ Click on **Account** under Settings
- ⚡ Change the Administrator Username and Password to prevent unwanted access to the WattBox.
- ⚡ Record the new Username and Password before clicking apply. This will be needed from this point forward to log into the WattBox.
- ⚡ Click on **Apply** to save the Settings

8 Configure Advanced Settings

Basic setup is now complete and the WattBox will function using the factory default settings for IP operation. To complete the installation, the following advanced settings can be configured.

- ⚡ Outlet Setup including names, control, and delay settings
- ⚡ Website and IP Addresses to trigger Auto Reboot of outlets
- ⚡ User accounts for access to control the WattBox by the customer
- ⚡ Outlet On and Off schedules
- ⚡ System Status Email Notifications
- ⚡ Save and Restore of System Settings

For details on how to configure these advanced settings, refer to the WB-IP Web Interface Manual located on the CD Rom or downloaded from www.SnapAV.com.

Reference Information

- ⚡ Contacting Technical Support
 - Phone: 866.838.5052
 - Email: TechSupport@snapav.com
- ⚡ Documents and Software on www.SnapAV.com or CD Rom
 - ⚡ WattBox IP Hardware Owner's Manuals
 - ⚡ WattBox Web Interface User's Manual
 - ⚡ WattBox Utility
 - ⚡ Latest Firmware for WattBox IP Products (Web Only)

WATT BOX™

IP Quick Start Guide

